



## User Manual

### DRS-100-3P-MOD-2T

#### DIN Rail Energy Meter for Direct Connected Three Phase Electrical Systems up to 100 Amps DUAL TARRIF

#### Warnings



Caution: Risk of Electric Shock

- During normal operation, voltages hazardous to life may be present at some of the terminals of this unit.
- At voltages below that specified in the Range of Use the meter may shut down. However, voltages hazardous to life may still be present at some of the terminals of this unit.
- Installation and servicing should be performed only by qualified, properly trained personnel abiding by local regulations.
- Ensure all supplies are de-energised before attempting connection or other procedures.
- Terminals should not be user accessible after installation and external installation provisions must be sufficient to prevent hazards under fault conditions.
- This unit is not intended to function as part of a system providing the sole means of fault protection - good engineering practice dictates that any critical function be protected by at least two independent and diverse means.
- The unit does not have internal fuses therefore external fuses must be used for protection and safety under fault conditions.
- Never open-circuit the secondary winding of an energized current transformer.
- This product should only be operated with the CT secondary connections earthed.
- If this equipment is used in a manner not specified by the manufacturer, protection provided by the equipment may be impaired.

#### Warnings

Important Safety Information is contained in the Maintenance section. Familiarize yourself with this information before attempting installation or other procedures. Symbols used in this document:



**Risk of Danger:** These instructions contain important safety information. Read them before starting installation or servicing of the equipment.



**Caution:** Risk of Electric Shock

## 1 Introduction

This document provides operating, maintenance and installation instructions. This unit measures and displays the characteristics of Single Phase Two Wire (1P2W), Three Phase Three Wire (3P3W) and Three Phase Four Wire (3P4W) networks. The measuring parameters include Voltage (V), Current (A), Frequency (Hz), Power (kW/KVA/KVAr), Power Factor (PF), Imported, Exported and Total Energy (kWh/kVArh). The unit also measures Maximum Demand Current and Power, this is measured over preset periods of up to 60 minutes.

It also comes with a complete comms capability with built in Pulse and RS485 Modbus RTU outputs, configuration is password protected.

This unit is 10(100)A direct connected. Configuration is password protected.

### 1.1 Unit Characteristics

The DRS-100-3P can measure and display:

- Phase to Neutral Voltage and THD% (Total Harmonic Distortion) of all Phases
- Line Frequency
- Current, Maximum Demand Current and Current THD% of all Phases
- Power, Maximum Power Demand and Power Factor
- Imported, Exported & Total Active Energy
- Imported, Exported & Total Reactive Energy

The unit has a Password-Protected set up menu for:

- Changing the Password
- System Configuration - 1P2W, 3P3W, 3P4W.
- Demand Interval Time
- Reset for Demand Measurements
- Pulsed Output Duration

### 1.2 RS485 Serial – Modbus RTU


RS485 serial port with Modbus RTU protocol to provide a means of remotely monitoring and controlling the Unit. Set-up screens are provided for setting up the RS485 port. Refers to section 4.8.

### 1.3 Pulse output

Two pulsed outputs that can be set for active (kWh) or reactive (kVArh) energy.

Pulsed output 2 is fixed at 400imp/kWh with 100ms pulse width. Active Energy.

## 2 Start Up Screens

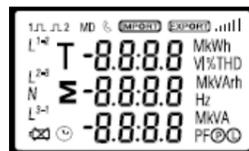

The first screen lights up all display segments and can be used as a display check.



The second screen indicates the firmware installed in the unit and its build number.

Please note: Values may vary from the numbers shown here.



The interface performs a self-test and indicates the result if the test passes.

\*After a short delay, the screen will display active energy measurements.

## 3 Measurements

The buttons operate as follows:



- V/A** Selects the Voltage and Current display screens. In Set-up Mode, this is the "Left" or "Back" button.
- MD** Select the Frequency and Power factor display screens. In Set-up Mode, this is the "Up" button.
- P** Select the Power display screens. In Set-up Mode, this is the "Down" button.
- E** Select the Energy display screens. In Set-up mode, this is the "Enter" or "Right" button.

### 3.1 Voltage and Current

Each successive press of the **V/A** button selects a new parameter:




Phase to neutral voltages.




Phase to Line voltages



Current on each phase.

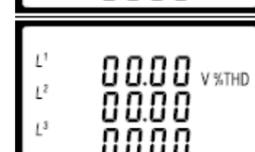

Voltage THD% per phase

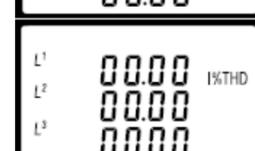

Current THD% per each phase.

### 3.2 Frequency and Power Factor and Demand


Each successive press of the **MD** button selects a new range:



Frequency and Power Factor (total).



Power Factor of each phase.

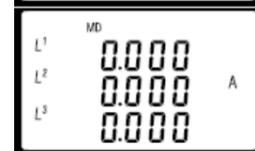

Maximum Current Demand.




Maximum Power Demand.

### 3.3 Power


Each successive press of the **P** button select a new range:




Instantaneous Active Power in kW.

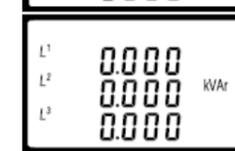

Instantaneous Reactive Power in kVAr.

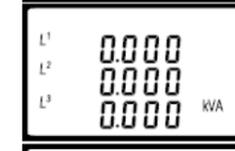

Instantaneous Volt-Amps in KVA.

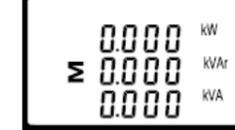

Total kW, kVArh, kVA.

### 3.4 Energy Measurements

Each successive press of the **E** button selects a new range:



Import active energy in kWh.



Export active energy in kWh



Tariff 1-2 active energy in kWh.



Total active energy in kWh.




Imported reactive energy in kVArh.



Exported reactive energy in kVArh.



Tariff 1-2 reactive energy in kVArh.

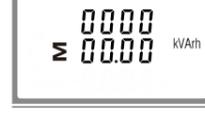

Total reactive energy in kVArh.


Please note the register is 9999999.9 display over two lines.

Date and Time can only be set via Modbus



## 4 Set Up

To enter set-up mode, press the  button for 3 seconds, until the password screen appears.

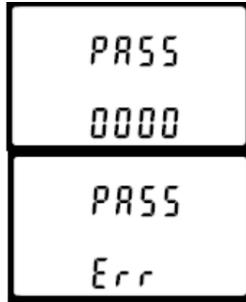

Setting up is password protected so you must enter the correct password (default '1000') before processing.

If an incorrect password is entered, the display will show: **PASS Err**

Once the correct password is entered, hold  for 1 second to enter the setup menu.

To exit the setup menu, press  repeatedly until the measurement screen is restored.

### 4.1 Set-up Entry Methods

Some menu items, such as password and Modbus address, require a four-digit number entry while others, such as supply system, require selection from a number of menu options.

CT ratio is not required. This product is directly connected.

#### 4.1.1 Menu Option Selection

- Use the  and  buttons to scroll through the different options of the set up menu.
- Press  to confirm your selection.
- If an item flashes, then it can be adjusted by the  and  buttons.
- Having selected an option from the current layer, press  to confirm your selection. The SET indicator will appear.
- Having completed a parameter setting, press  to return to a higher menu level. The SET indicator will be removed and you will be able to use the  and  buttons for further menu selection.
- On completion of all setting-up, press  repeatedly until the measurement screen is restored.

#### 4.1.2 Number Entry Procedure

When setting up the unit, some screens require the entering of a number. In particular, on entry to the setting up section, a password must be entered. Digits are set individually, from left to right. The procedure is as follows:

- The current digit to be set flashes and then can be adjusted using the  and  buttons.
- Press  to confirm each digit setting. The SET indicator appears after the last digit has been set.
- After setting the last digit, press  to exit the number setting routine. The SET indicator will be removed.

## 4.2 Communication

There is a RS485 port can be used for communication using Modbus RTU protocol. For Modbus RTU, parameters are selected from Front panel.

### 4.2.1 RS485 Address



From the set-up menu, use  and  buttons to select the address ID 1-247.

Press  button to enter the selection routine. The current setting will be flashing.

Use  and  buttons to choose Modbus address (001 to 247).

On completion of the entry procedure, press  button to confirm the setting and press  button to return the main set-up menu.

### 4.2.2 Baud Rate



From the set-up menu, use  and  buttons to select the Baud Rate option.

Press  to enter the selection routine. The current setting will flash.

Use  and  buttons to choose Baud rate 2.4k, 4.8k, 9.6k, 19.2k, 38.4k

On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.

### 4.2.3 Parity



From the set-up menu, use  and  buttons to select the parity option.


Press  to enter the selection routine. The current setting will flash.



Use  and  buttons to choose parity (EVEN / ODD / NONE (default)).

On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.

### 4.2.4 Stop bits

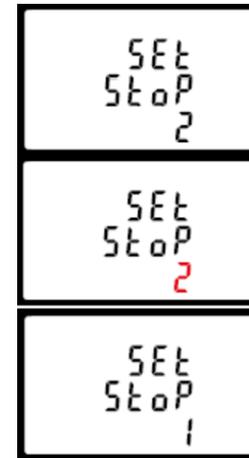

From the set-up menu, use  and  buttons to select the stop bit option.

Press  to enter the selection routine. The current setting will flash.

Use  and  buttons to choose stop bit (2 or 1).

On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.

## 4.3 Pulse Output

This option allows you to configure the pulse output. The output can be set to provide a pulse for a defined amount of energy active or reactive. Use this section to set up the relay pulse output—Units: kWh, kVArh.

Pulsed outputs can be configured for:  
Total kWh/kVArh, Import/Export kWh, Import/Export kVArh



From the set-up menu, use  and  buttons to select the Pulse output option.

Press  to enter the selection routine. The unit symbol will flash.

Use  and  buttons to choose kWh or kVArh.

On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.


### 4.3.1 Pulse rate

You can configure the pulse output to relate to a defined amount of imported or exported energy. This can also be set to use with active energy (kWh) or reactive energy (kVArh).

Please note there are limitations that need to be factored in when setting the pulsed output. This is based upon the relay output only being able to pulse 2 times in one second.

Pulse settings: 1 pulse per 0.01(10W) / 0.1(100W) / 1 (1kWh) / 10(10kWh) / 100(100kWh) / 1000 (1000kWh).

DFT= Default. Set as 1 (1kWh)

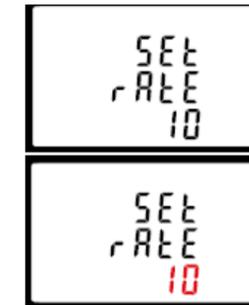

From the set-up menu, use  and  buttons to select the Pulse Rate option.

Press  to enter the selection routine. The current setting will flash. 0.01/0.1/1/10/100kWh/ kVArh per pulse.

Use  and  buttons to choose pulse rate. On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.

### 4.3.2 Pulse Duration (DIT)

The energy monitored can be active or reactive and the pulse width can be selected as 200, 100 or 60ms (Default).




From the set-up menu, use  and  buttons to select the Pulse width option.

Press  to enter the selection routine. The current setting will flash.

Use  and  buttons to choose pulse width. On completion of the entry procedure press  to confirm the setting and press  to return to the main set up menu.

### 4.4 Light Period (LP)

The light period is a programmable time (in minutes) that determines how long the display backlight remains on for before this goes into standby.

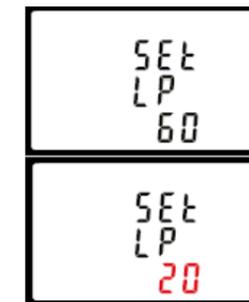

From the set-up menu, use the  and  buttons to select the reset option.

Press  to enter the selection routine. The dlt will flash. The options are 0/10/30/60/120 minutes.

Press  to confirm the setting and press  to return to the main set up menu.

#### 4.5 Supply System


The unit has a default setting of 3Phase 4wire (3P4). Use this section to set the type of electrical system.




From the set-up menu, use and buttons to select the system option. The screen will show the currently selected power supply.



Press to enter the selection routine. The current selection will flash.

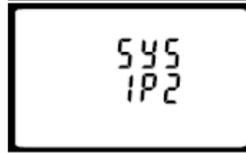

Use and buttons to select the required system option: 1P2(W), 3P3(W), 3P4(W).

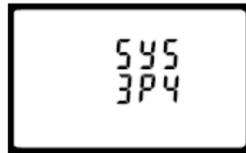


Press to confirm the selection. SET indicator will appear.

Press to exit the system selection routine and return to the menu. SET will disappear and you will be returned to the main set-up Menu.

#### 4.6 CLR

The meter provides a function to reset the maximum demand value of current and power.

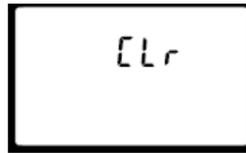

From the set-up menu, use and buttons to select the reset option.



Press to enter the selection routine. The dlt will flash.

Press to confirm the setting and press to return to the main set up menu.

#### 4.7 Change Password



Use the and buttons to choose the change password option.



Press the to enter the change password routine. The new password screen will appear with the first digit flashing.



Use and to set the first digit and press to confirm your selection. The next digit will flash. Repeat the procedure for the remaining three digits.




After setting the last digit, SET will show.



Press to exit the number setting routine and return to the Set-up menu. SET will be removed.

#### 4.8 DIT Demand Integration Time

This sets the period in minutes over which the current and power readings are integrated for maximum demand measurement. The options are: off, 5, 10, 15, 30, 60 minutes.

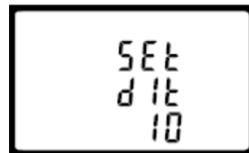

From the set-up menu, use and buttons to select the DIT option. The screen will show the currently selected integration time.



Press to enter the selection routine. The current time interval will flash.



Use and buttons to select the time required.



Press to confirm the selection. SET indicator will appear.

Press to exit the DIT selection routine and return to the menu.

### 5 Specifications

#### 5.1 Measured Parameters

The unit can monitor and display the following parameters of a single phase two wire (1p2w), three phase three wire (3p3w) or three phase four wire (3p4w) system.

##### 5.1.1 Voltage and Current

- Phase to neutral voltages 176 to 276V a.c. (not for 3p3w supplies).
- Voltages between phases 304 to 480V a.c. (3p supplies only).
- Continuous Overload voltage 120%
- Percentage total voltage harmonic distortion (THD%) for each phase to N (not for 3p3w

- supplies).
- Percentage voltage THD% between phases (three phase supplies only).
- Current 100A (Direct connected)
- Continuous Overload current 120%
- Current THD% for each phase.
- Burden <10VA (nom 2VA)

#### 5.1.2 Power factor and Frequency and Max. Demand

- Frequency in Hz
- Instantaneous power:
- Power 0 to 3600 MW
- Reactive power 0 to 3600 MVAR
- Volt-amps 0 to 3600 MVA
- Maximum demanded power since last Demand reset Power factor
- Maximum neutral demand current, since the last Demand reset (for three phase supplies only)

#### 5.1.3 Energy Measurements

- Imported/Exported active energy 0 to 9999999.9 kWh
- Imported/Exported reactive energy 0 to 9999999.9 kVArh
- Total active energy 0 to 9999999.9 kWh
- Total reactive energy 0 to 9999999.9 kVArh

#### 5.2 Measured Inputs

Voltage inputs through 4-way fixed connector with 2.5mm<sup>2</sup> to 25mm<sup>2</sup> stranded wire capacity. Single phase two wire(1p2w), three phase three wire(3p3w) or three phase four wire(3p4w) unbalanced. Line frequency measured from L1 voltage or L3 voltage.

#### 5.3 Accuracy

- Voltage 0.5% of range maximum
- Current 0.5% of nominal
- Frequency 0.2% of mid-frequency
- Power factor 1% of unity (0.01)
- Active power (W) ±1% of range maximum
- Reactive power (VAr) ±1% of range maximum
- Apparent power (VA) ±1% of range maximum
- Active energy (Wh) Class 1 IEC 62053-21
- Reactive energy (VArh) ±1% of range maximum
- Total harmonic distortion 1% up to 31st harmonic
- Response time to step input 1s, typical, to >99% of final reading, at 50 Hz.

#### 5.4 Interfaces for External Monitoring

Three interfaces are provided:

- RS485 communication channel that can be programmed for Modbus RTU protocol
- Relay output indicating real-time measured energy. (configurable)
- Pulse output 400imp/kWh (not configurable)

The Modbus configuration (baud rate etc.) and the pulse relay output assignments (kW/kVArh import/export etc.) are configured through the set-up screens.

#### 5.4.1 Pulse Output

Opto-coupler with potential free SPST-NO Contact (Contact range 5-27VDC / Max current input: Imin 2mA and Imax 27mA DC). The pulse output can be set to generate pulses to represent kWh or kVArh.

**Rate** can be set to generate 1 pulse per:

- 0.01 = 10 Wh/VArh
- 0.1 = 100 Wh/VArh
- 1 = 1 kWh/kVArh
- 10 = 10 kWh/kVArh
- 100 = 100 kWh/kVArh

**Pulse width** 200/100/60 ms.

#### 5.4.2 RS485 Output for Modbus RTU

For Modbus RTU, the following RS485 communication parameters can be configured from the set-up menu:

- Baud rate** 2400, 4800, 9600, 19200, 38400
- Parity** none (default) / odd / even
- Stop bits** 1 or 2
- RS485 network address** nnn – 3-digit number, 1 to 247

**Modbus™ Word order** Hi/Lo byte order is set automatically to normal as defined by IEEE 754. It cannot be configured from the set-up menu.

#### 5.4.3 Tariff Input

The energy can be measured for two tariffs. The tariff is changed by applying 230v to terminals 2T.

#### 5.5 Reference Conditions of Influence Quantities

Influence Quantities are variables that affect measurement errors to a minor degree. Accuracy is verified under nominal value (within the specified tolerance) of these conditions.

- Ambient temperature 23°C ±1°C
- Input waveform 50 or 60Hz ±2%
- Input waveform Sinusoidal (distortion factor < 0.005) (if AC) factor < 0.05
- Magnetic field of external origin Terrestrial flux

#### 5.6 Environment

- Operating temperature -25°C to +55°C\*
- Storage temperature -40°C to +70°C\*
- Relative humidity 0 to 95%, non-condensing Up to 3000m
- Altitude 10Hz to 50Hz, IEC 60068-2-6, 2g
- Warm up time 1 minute
- Vibration 30g in 3 planes
- Shock

\*Maximum operating and storage temperatures are in the context of typical daily and seasonal variation.

#### 5.7 Mechanics

- DIN rail dimensions 76 x 100 mm (WxH) per DIN 43880
- Mounting DIN rail (DIN 43880)
- Sealing IP51 indoor
- Material UL 94 V-0 Self-extinguishing

## 6 Installation and Maintenance

### 6.1 Installation notes

Units should be installed in a dry position, where the ambient temperature is reasonably stable and will not be outside the range -25 to +55°C.

Vibration should be kept to a minimum.

Preferably, mount the Integra so that the display contrast is not reduced by direct sunlight or other high intensity lighting.

### 6.2 Input Wiring and Fusing

Choose fuses of a type and with a breaking capacity appropriate to the supply and in accordance with local regulations.

A switch or circuit breaker allowing isolation of supplies to the unit must be provided where practical. In primary metering applications, ensure the supply is isolated before any maintenance on the product. Tampering with the product seals may contravene local laws.

### 6.3 Wire Size

Voltage and current terminal blocks will accept 2.5mm<sup>2</sup> to 25mm<sup>2</sup> stranded cable.


### 6.4 Maintenance

The front of the case should be wiped with a dry cloth only, using minimal pressure. If necessary wipe the rear case with a dry cloth.

No user serviceable parts.

## 7 Meter

### 7.1 Dimensions

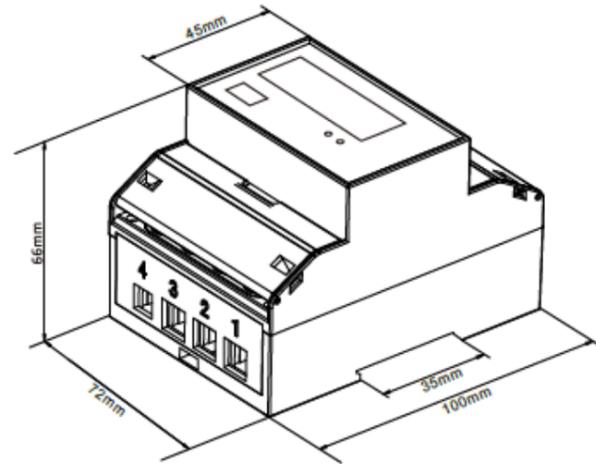


### 7.2 Appearance




## 8 Wiring Diagram


### 8.1 Single phase two wires

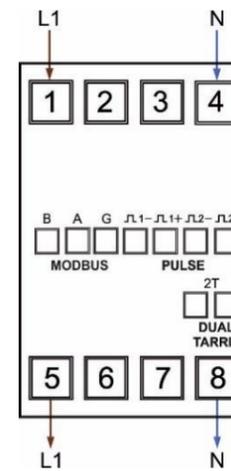

### 8.2 Three phase three wires

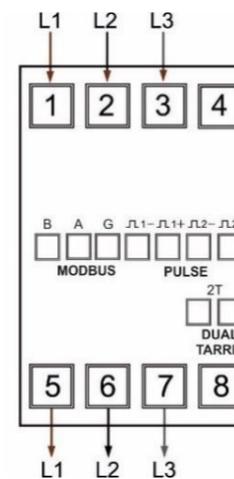


### 8.3 Three phase four wires

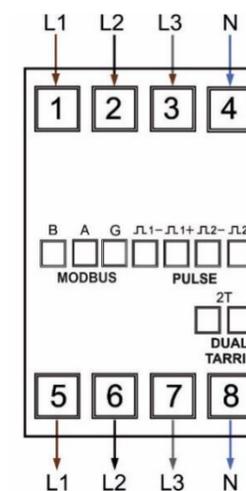


## 9.4 Additional Connections

### RS485

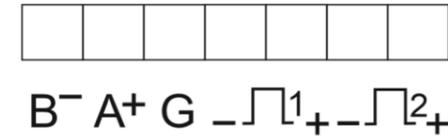

### 2 TARIFFS Control

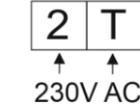

### Explanation of Symbols

- Refer to manual
- Danger of electric shock
- Do not discard

While TE has made every reasonable effort to ensure the accuracy of the information in this catalogue, TE does not guarantee that it is error-free, nor does TE make any other representation, warranty or guarantee that the information is accurate, correct, reliable or current. TE reserves the right to make any adjustments to the information contained herein at any time without notice. TE expressly disclaims all implied warranties regarding the information contained herein, including, but not limited to, any implied warranties of merchantability or fitness for a particular purpose. The dimensions in this catalogue are for reference purposes only and are subject to change without notice. Specifications are subject to change without notice. Consult TE for the latest dimensions and design specifications. TE connectivity (logo), TE (logo) and TE Connectivity are trademarks of the TE Connectivity Ltd. family of companies. Crompton is a trademark of Crompton Parkinson and is used by TE Connectivity under a licence. Other logos, product and company names mentioned herein may be trademarks of their respective owners

TE Energy – innovative and economical solutions for the electrical power industry: cable accessories, connectors & fittings, insulators & insulation, surge arresters, switching equipment, street lighting, power measurement and control.

Tyco Electronics UK Ltd

TE Energy  
Freebournes Road  
Witham, Essex CM8 3AH  
Phone: +44 (0)870 870 7500  
Fax: +44 (0)870 240 5289  
Email: [Crompton.info@te.com](mailto:Crompton.info@te.com)  
[www.crompton-instruments.com](http://www.crompton-instruments.com)



### DRS-100-3P-MOD-2T Poly Phase Energy Meter

3x230/400V AC - 0,5-10(100)A - 50/60Hz  
400IMP/kWh - EN50470-1/3 - IP51

CE Ⓢ Ⓜ Ⓡ Ⓢ Ⓣ Ⓥ Ⓦ Ⓧ Ⓨ Ⓩ 3K6

Refer to user manual for wiring configuration  
Manufactured by: Tyco Electronics UK Limited,  
Freebournes Road, Witham, Essex. CM8 3AH, UK.