

## Contents

<b>1. System requirements</b>	<b>4</b>
<b>2. Fundamental concepts</b>	<b>4</b>
<b>3. Compatible Devices</b>	<b>4</b>
<b>4. Languages available</b>	<b>5</b>
<b>5. Implementation</b>	<b>5</b>
5.1 Material required	5
5.2 Installation	5
5.3 Modification of the software's language	8
5.4 Communication port setting	9
5.5 Device firmware update	11
<b>6. Remote operation</b>	<b>16</b>
6.1 Configuration of EMS CX3 modules - "System configuration"	16
6.1.1 Read configuration from a local addressed system	17
6.1.2 Configuration of a remote addressed system	21
6.1.3 Remote configuration of a universal state or command module via configuration software	25
6.2 Editing a configuration	28
6.2.1 Configurable parameters of each module	29
6.2.2 Load shedding function	37
6.3 Link Function	40
6.4 View pages	57
6.5 Historical of alarms	59
<b>7. Off-line operation</b>	<b>60</b>
7.1 Import a configuration	60
7.2 Edit a configuration	61
7.3 Export a configuration	62

---

## 1. System requirements

### Hardware:

- Intel Core 2 Duo or AMD Athlon X2 processor
- 2GB of RAM
- 320MB of available hard-disk space
- USB port for connection to EMS CX<sup>3</sup> configuration devices

### Supported operating systems:

- Microsoft Windows XP (Professional) - Service Pack 3
- Microsoft Windows Vista - Service Pack 2
- Microsoft Windows 7 - Service Pack 3
- Microsoft Windows 10 – all Service Pack

### Installation and Display:

- on Computer

## 2. Fundamental concepts

The EMS Configuration software offers the possibility of configuring EMS CX<sup>3</sup> modules using a simple and intuitive procedure by the creation of a customized project based on personal needs and the actual system installed. The software also performs a check on the configuration, notifying any configuration errors.

**Note: EMS Configurator software is free. To be downloaded from the legrand “e-catalogue” web site. Once downloaded it will be useful for all remote configurations of EMS CX<sup>3</sup> modules**

## 3. Compatible devices

### Software version 1.05.00

- Range **EMS CX<sup>3</sup>**
  - Multifunction measuring devices:
    - Single-phase connection via Rogowski coil - Cat.No **4 149 19**
    - Three-phase connection via Rogowski coil - Cat.No **4 149 20**
    - Three-phase connection with CT - Cat.No **4 149 23**
  - State and Control modules:
    - Signalling Auxiliary Contact (CA + SD) - Cat.No **4 149 29**
    - Universal State Module - Cat.No **4 149 30**
    - State & Control Module for Latching relays and Contactors - Cat.No **4 149 31**
    - Universal Control Module - Cat.No **4 149 32**
  - Display and Configuration devices:
    - Mini configuration module (local display ) - Cat.Nos **4 149 36/37**
    - Modbus/EMS CX<sup>3</sup> interface - Cat.No **4 149 40**

## 4. Languages available

### Languages:


- 中国
- Deutsch
- English
- Español
- Français
- Français (Belgique)
- Ελληνικά
- Italiano
- Nederlands (Belgie)
- Nederlands
- Polski
- Portuguese
- Русский

## 5. Implementation


### 5.1 Material required

- Installation Kit (executable file “.exe”)
- A computer with a compatible operating system (XP, 7, etc.)


### 5.2 Installation

- Run the file  Legrand\_Energy\_management\_software\_Setup\_v.r.b.exe

The installation procedure starts

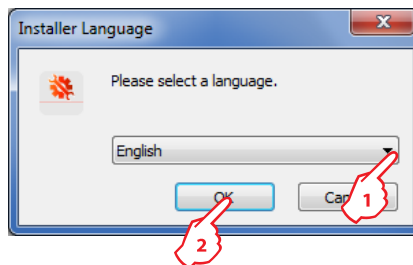


1. Choose the proper language
2. Click “OK”

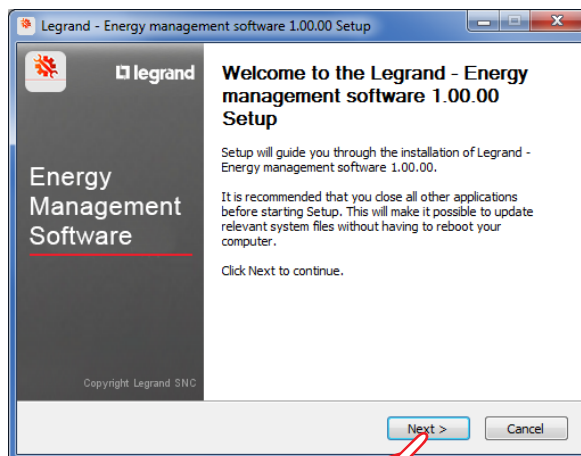


3. Click “Next”


The License agreement page appears

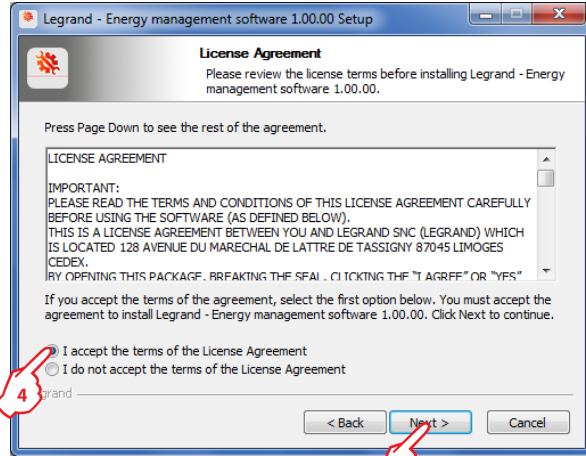


4. Click to declare to have read and accepted the contract
5. Click "Next"

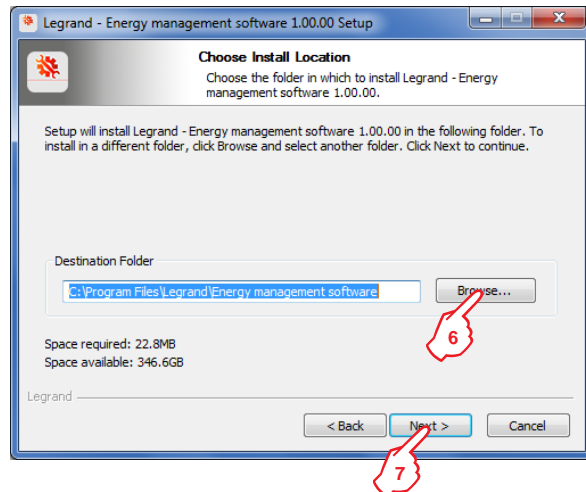

6. Click "Browse" to choose the installation folder
7. Click "Next"

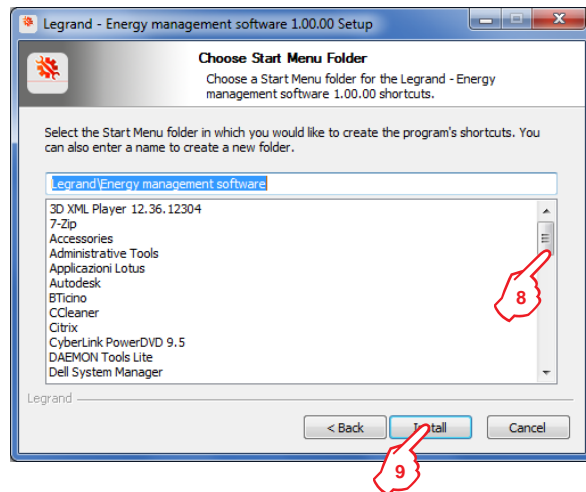

8. Choose a Folder for the Start menu (**default:** Legrand\Measure Software)
9. Click "Install"

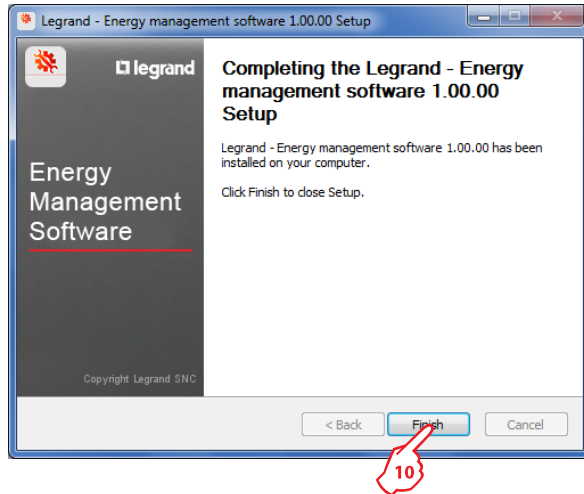


Installation completed


**10.** Click "Finish"

On the desktop of your computer are created two shortcuts:

- Energy management software:

 Legrand - Energy manager software


- EMS Configurator:

 Legrand - EMS configurator

In addition, when the software is installed, in the computer path "**C:\Users\UserName\Documents\Legrand EMS**", is created a folder called "Firmware Update" which contains files ".fwz"; these are files to be used to update the firmware of the EMS CX<sup>3</sup> modules according to the procedure described in §5.5 of this manual.


### 5.3 Modification of the software's language

- Procedure for changing language (if necessary)

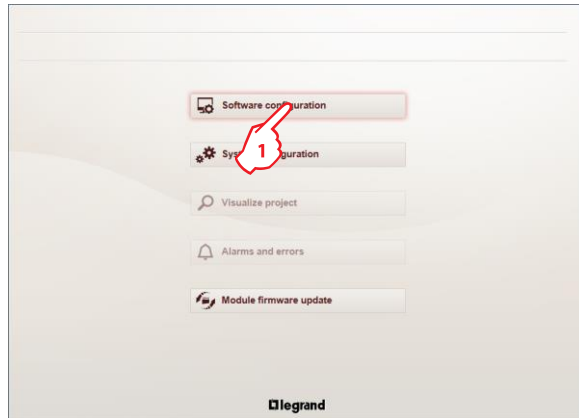

In the software's home page

1. Click "Software configuration"

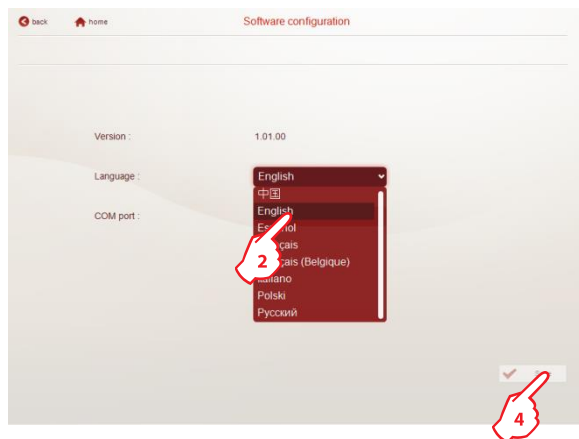


2. Choose the required language
3. Click "Save" to confirm




### 5.4 Communication port setting

To use the EMS Configuration software it is necessary to connect the computer to the system on the Modbus/EMS CX<sup>3</sup> interface or on the EMS CX<sup>3</sup> Mini configuration Module (local display)


– Procedure to configure the communication port (**This procedure is to perform only during the first connection to a Modbus/EMS CX<sup>3</sup> interface or an EMS CX<sup>3</sup> Mini configuration Module**).

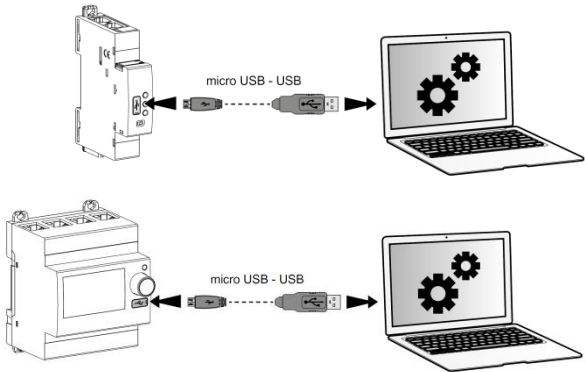

1. Use a USB cable, connecting it between the device's micro USB connector and the PC's USB port.
2. An automatic Drivers installation procedure runs.




At the end of the installation procedure, it is possible to check the port number assigned from the PC to the device in the "Computer management" window.

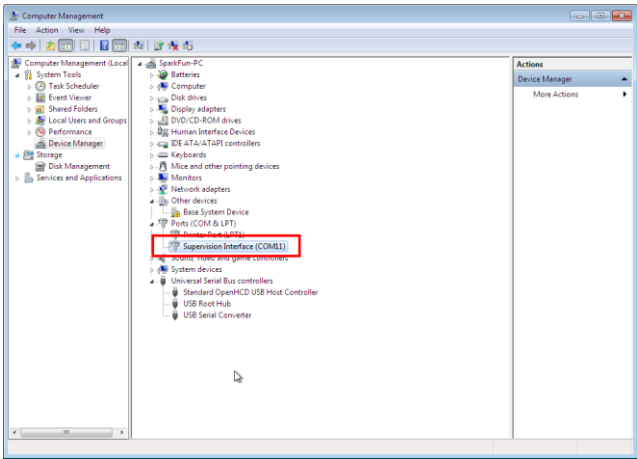


3. Run the EMS Configuration Software

In the software's home page

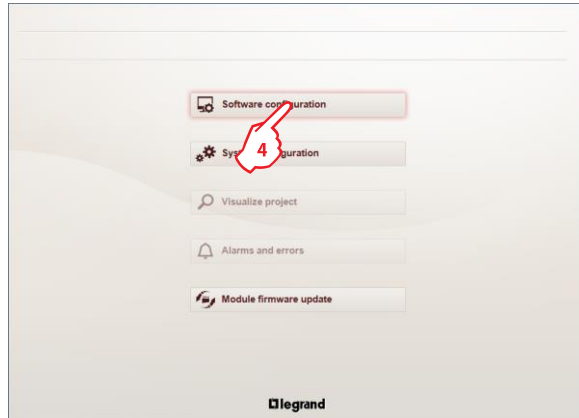

4. Click "Software configuration"

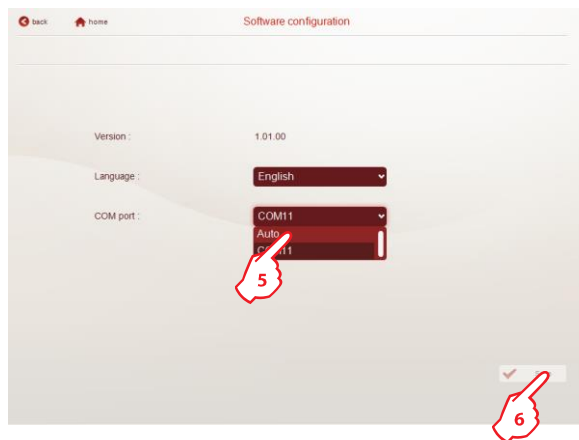

5. Choose the proper COM port

**Note:** Automatic detection of the COM port "Auto" is the default configuration.


6. Click "Save" to confirm

## 5.5 Device firmware update

This function allows you to update firmware embedded in each EMS CX<sup>3</sup> module with “.fwz” files copies on your computer during installation of the software.


**Note: modules update can be performed even before reading the configuration via USB**

In the software’s home page

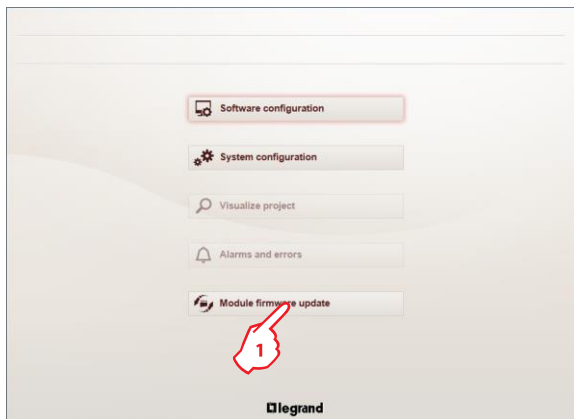


1. Click “Module firmware update”

A pop-up window appears

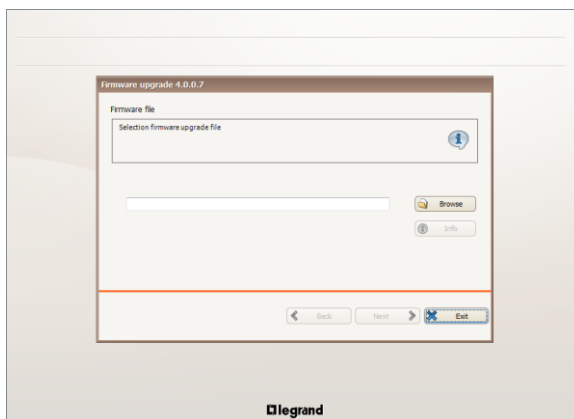


2. Click “Browse” to access the computer folder containing “.fwz” files (“C:\Users\UserName\Documents\Legrand EMS\Firmware Update” )

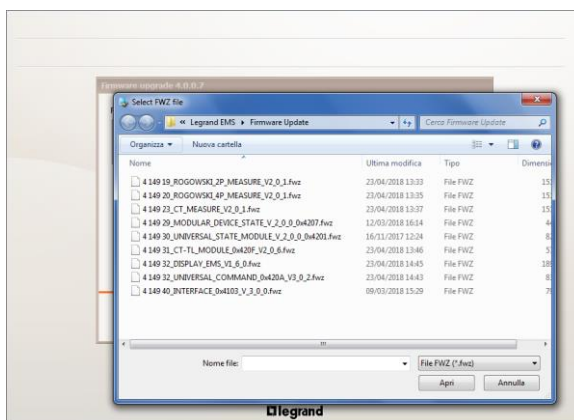


“Firmware Update” folder contains a file for each cat.no of EMS CX<sup>3</sup> range.  
name of the files is structured as shown:  
Cat.no\_Function\_Firmware-version.fwz  
example: 4 149 30\_UNIVERSAL\_STATE\_MODULE\_V\_2\_0\_0.fwz


**Note :** for two universal modules (4 149 30 and 4 149 32) the update file is related to one of the generic configurations of inputs (for 4 149 30) and outputs (for 4 149 32); therefore, for the update, universal module(s) to be updated must be configured as generic module(s) **with all diip-switches in position 0 (0000)**.

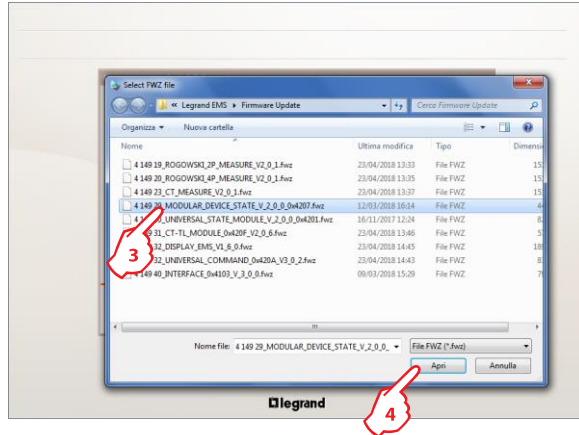


3. Select a file
4. Click “Open”

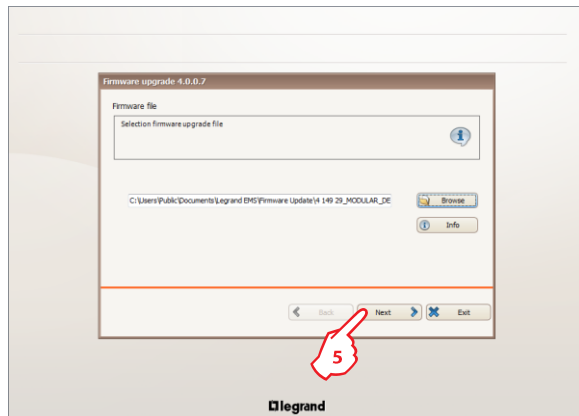

5. Click “Next”

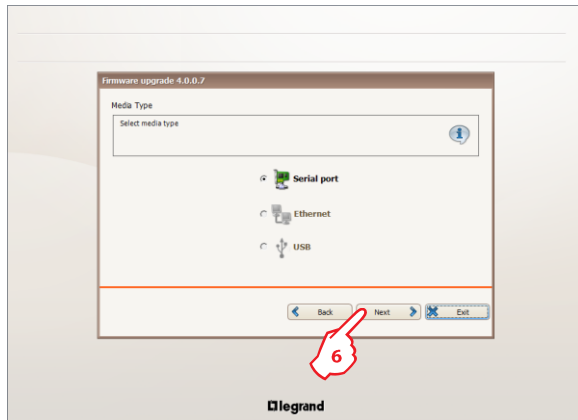


6. Click "Next" a second time

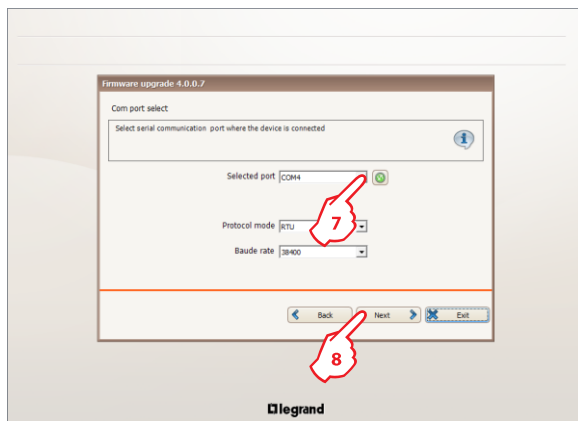


7. Modify the COM port, if necessary. (Procedure for COM port identification is described at § 5.4 of this manual)


8. Click "Next"

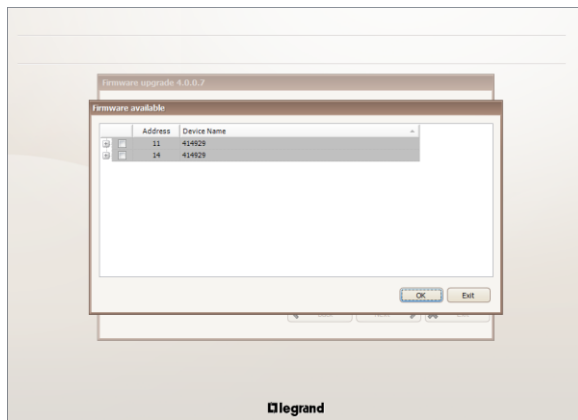

Software shows a list of all modules (with Cat.no and Address) for which the file ".fwz" is usable for the update.

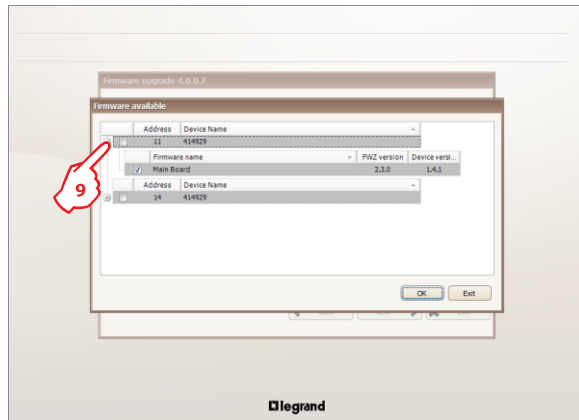

9. Clicking on “+”, are shown the details of the embedded firmware on each module of the list

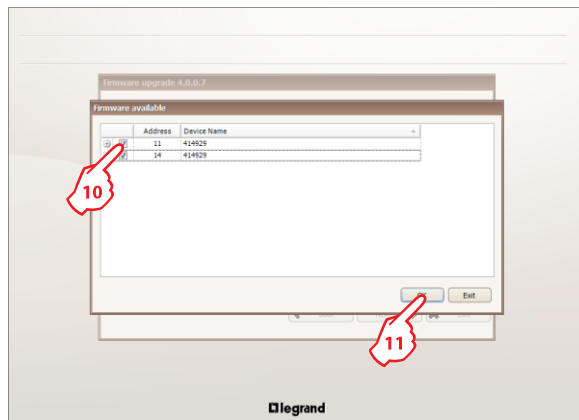



10. Select the module(s) to update

11. Click “OK” to start the procedure. A window shows the new firmware of the download progress..

**Note :**

- software updates the firmware of all selected modules, one module at a time without asking for any other confirmation from the user
- for all the time of the update of a module (*may be a few minutes*), multifunction LED on the front face of the device turns orange flashing.

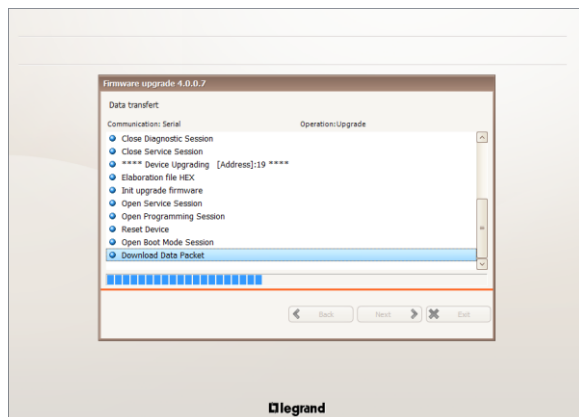

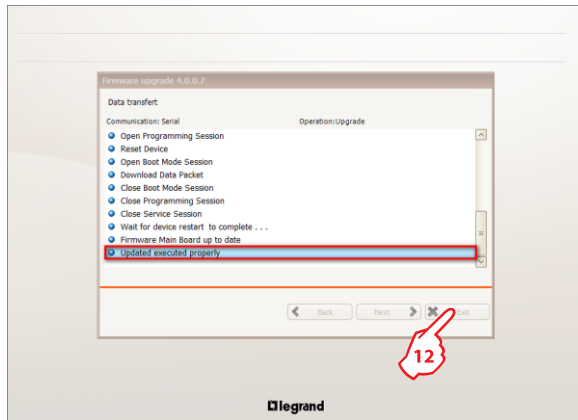


At the end of the update process, software provides a message with the result of the procedure.

**12.** Clicking "Exit" a list of devices with the result of the update is shown:

- green: update done correctly

- red : update completed with errors (in case of errors, restart the module's update procedure from the beginning. If the problem persists, contact Legrand support)

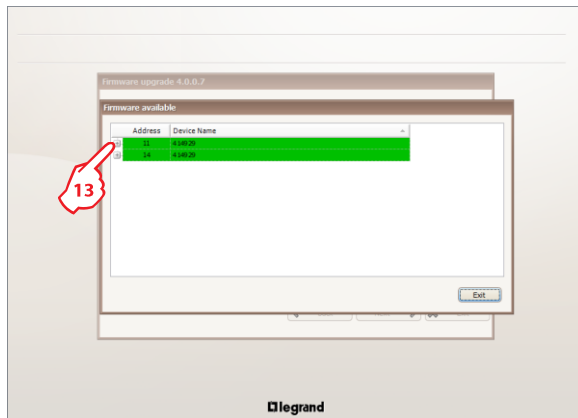


**13.** Clicking "+" the update details are shown

To end the procedure click "Exit"


## 6. Remote operation

### 6.1 Configuration of EMS CX<sup>3</sup> modules - "System configuration"

Run the EMS Configuration Software

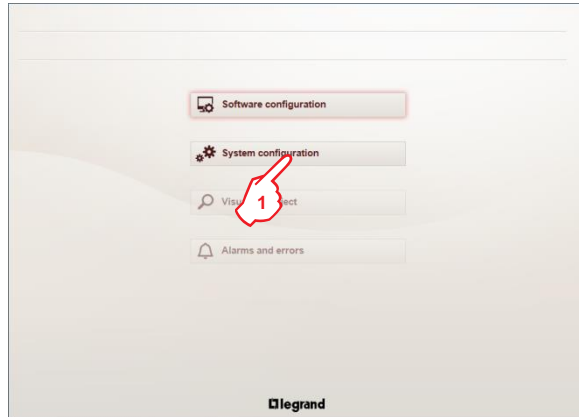

1. In the software's Home page Click "System configuration"  
System configuration page appears

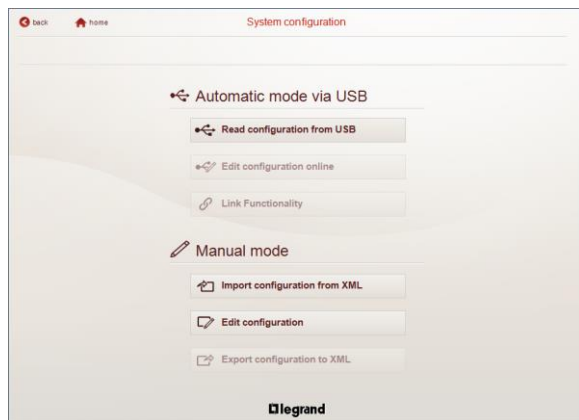


- Possible actions:
  - Read configuration from USB
  - Edit configuration
  - Link functions between modules to create automatic actions
  - Export (if necessary) the edited configuration
  - Import a previously saved configuration




### 6.1.1 Read configuration from a local addressed system

In the "System configuration" page

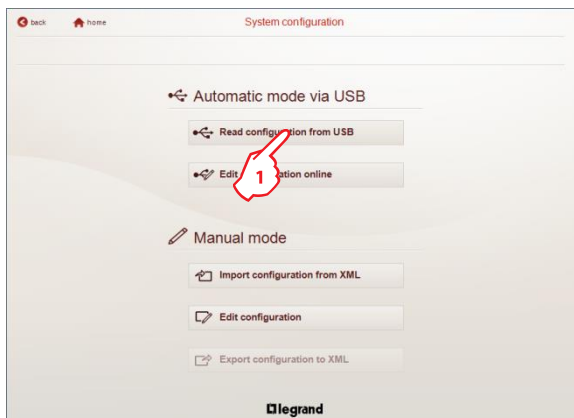


1. Click "Read configuration from USB"

A page with a table of reading results appears

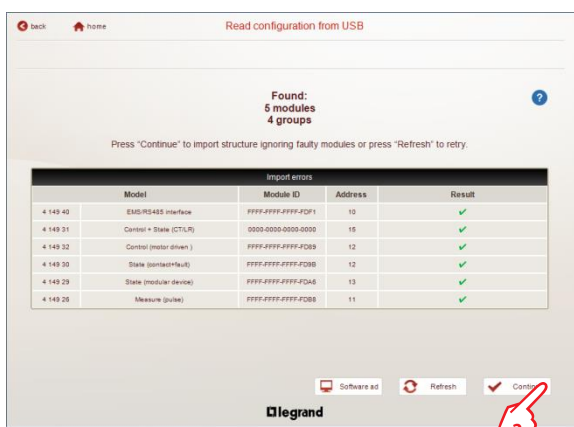


2. Click "Continue" to go to the edit page of the configuration read.

**Note:** if configuration software detects some mistakes (e.g. addressing, duplicated functions, etc.), error detail are shown in the table.

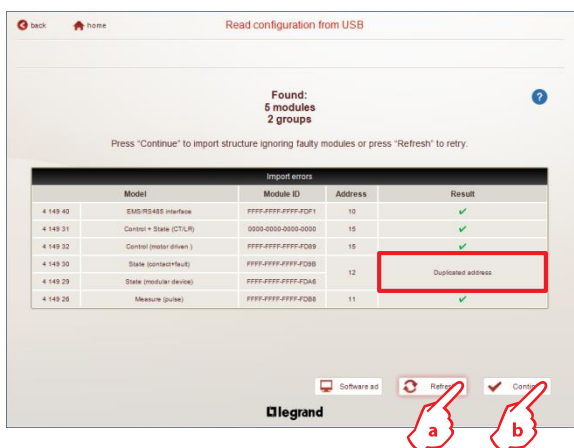

Correct the configuration according the indications then, **a.** click "Refresh". if the software no longer reports errors, **b.** click "Continue" to go to the edit page of the configuration read.

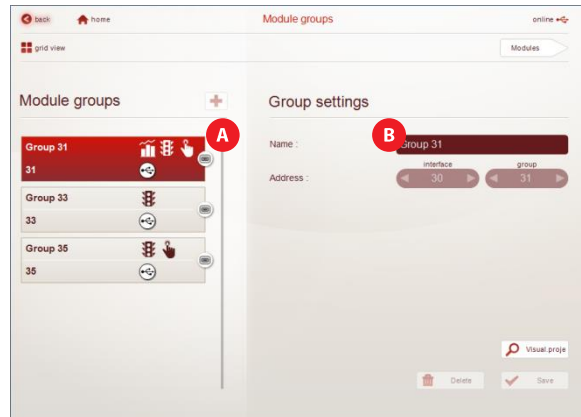


The page is divided into two sections:







section **A** is the “Read Groups” area.

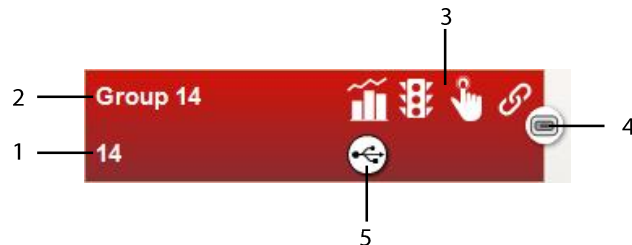**Note:** a Group is a set of several devices with the same address. A group is made with the purpose of grouping different functions, because they are related to the same electrical circuits. For example it is possible to assign the same address to a signalling auxiliary module (cat. no 4 149 29), an universal control module (cat. no 4 149 32), a measuring module, and so on. In this way on the supervision system the grouped function will be displayed as a unique “device” with all grouped functions.

section **B** shows the “Group Settings” area, where the configuration fields for the selected group are available.


## • Description of the group selection button




1. Address of the group
2. Name of the group (*name proposed by default - user editable parameter*)
3. Symbols of the functions associated to the group (*depending on the characteristics related to each EMS CX<sup>3</sup> module*)
  -  Measure
  -  State
  -  Command
  -  Link Function
4. Icon used to turn on the multifunction led button on the front face of all the EMS CX<sup>3</sup> modules included in the group
5. Communication status
  -  System connected via USB to a PC
  -  Communication error

• TO VIEW/CONFIGURE THE EMS CX<sup>3</sup> DEVICES CHARACTERISTICS UNDER A GROUP

In the Module groups page

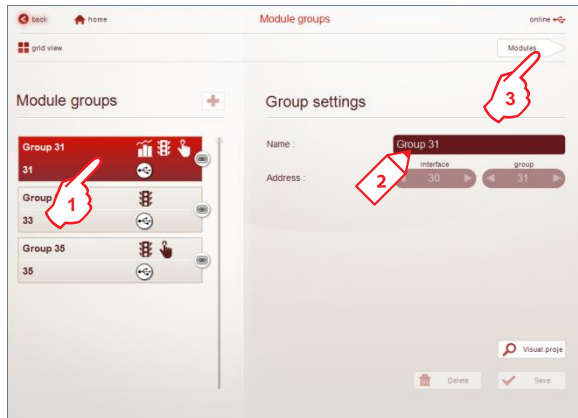

1. Select a Group
  2. Rename the Group (if necessary)
  3. Click "Modules" to view/configure the devices characteristics
- Modules settings page appears

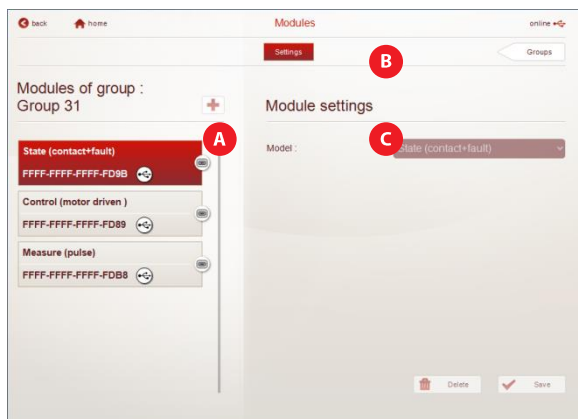

The page is divided into three sections:


section **A** shows the modules under the selected group with their characteristics and icons

section **B** is the area where is possible to select two pages:

- Settings: display page of the base configuration of the selected module
- Advanced (if present): page dedicate to configure whole or some settings of the selected module. **Note:** this page change according to the module type, local DIP switch configuration, etc...

section **C** shows the basic and advanced settings fields of the selected module

• Description of the device selection button

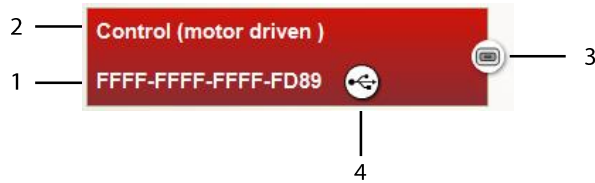

1. Identification number of the module (univocal code that identifies the module)
2. Module function
3. Icon used to turn on the multifunction led on the front face of the module
4. Communication status




System connected via USB to a PC




Communication error

**Note:** Whenever you make a modification to the system (adding/removing a module, change of address, change of configuration by DIP switches, etc ...) must repeat the reading procedure of the configuration from USB



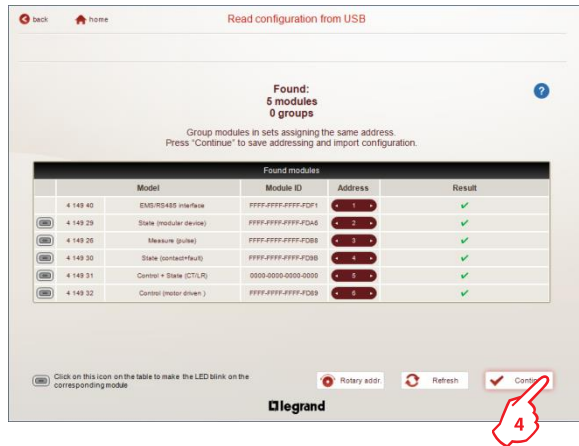

4. Click "Continue" to go to the edit page of the configuration read.

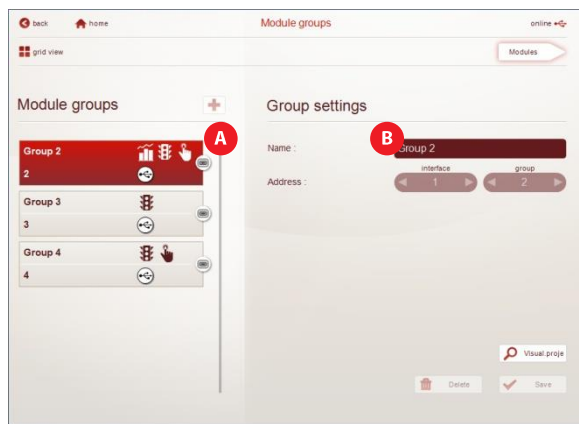


The page is divided into two sections:

section **A** is the "Read Groups" area.

**Note:** a Group is a set of several devices with the same address. A group is made with the purpose of grouping different functions, because they are related to the same electrical circuits. For example it is possible to assign the same address to a signalling auxiliary module (cat. no 4 149 29), an universal control module (cat. no 4 149 32), a measuring module, and so on. In this way on the supervision system the grouped function will be displayed as a unique "device" with all grouped functions.



section **B** shows the "Group Settings" area, where the configuration fields for the selected group are available.

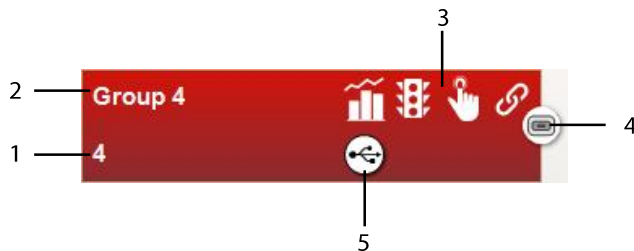• **Description of the group selection button**




1. Address of the group
2. Name of the group (*name proposed by default - user editable parameter*)
3. Symbols of the functions associated to the group (*depending on the characteristics related to each EMS CX3 module*)

-  Measure
-  State
-  Command
-  Link Function


4. Icon used to turn on the multifunction led button on the front face of all the EMS CX<sup>3</sup> modules included in the group
5. Communication status
  -  System connected via USB to a PC
  -  Communication error

• **TO VIEW/CONFIGURE THE EMS CX<sup>3</sup> DEVICES CHARACTERISTICS UNDER A GROUP**

In the Module groups page

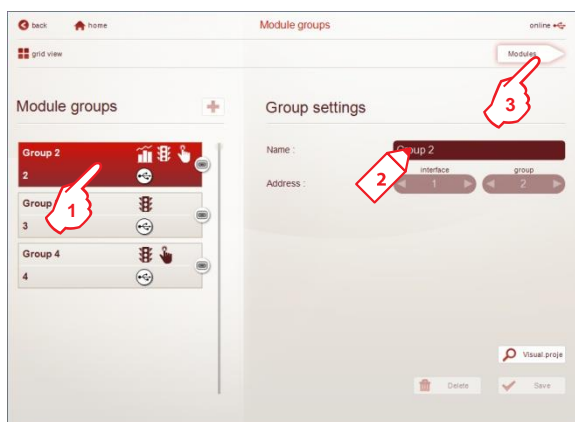

1. Select a Group
2. Rename the Group (if necessary)
3. Click "Modules" to view/configure the devices characteristics  
Modules settings page appears

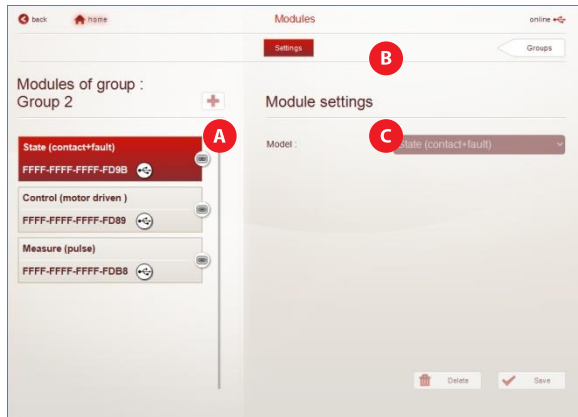

The page is divided into three sections:


section **A** shows the modules under the selected group with their characteristics and icons

section **B** is the area where it is possible to select two pages:



- Settings: display page of the base configuration of the selected module
- Advanced (if present): page dedicated to configure whole or some settings of the selected module. **Note:** this page changes according to the module type, local DIP switch configuration, etc...

section **C** shows the basic and advanced settings fields of the selected module
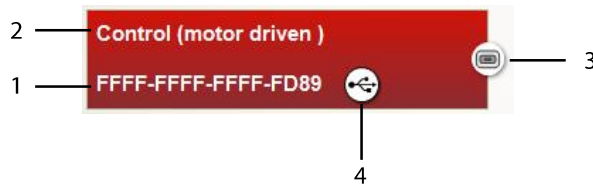
#### • Description of the device selection button



1. Identification number of the module (univocal code that identifies the module)
2. Module function
3. Icon used to turn on the multifunction led on the front face of the module
4. Communication status

-  System connected via USB to a PC
-  Communication error

**Note:** Whenever you make a change to the system (adding/removing a module, change of address, change of configuration by DIP switches, etc ...) must repeat the reading procedure of the configuration from USB



## 6.1.3 Remote configuration of a universal state or command module via configuration


Universal State (4 120 30) and Command (4 120 32) modules can be configured in two ways:

- Locally, setting the dip-switches on the side of the module
- Remotely, via configuration software leaving the dip-switches in "0000" position (factory configuration)

**Note:** this procedure applies in the same way for a system locally or virtually addressed.

Procedure for remote configuration of modules.


1. Install and wire modules according to the function they must perform in the installation (for wiring diagram refer to the Technical Data Sheet of each module).
2. Access the configuration software

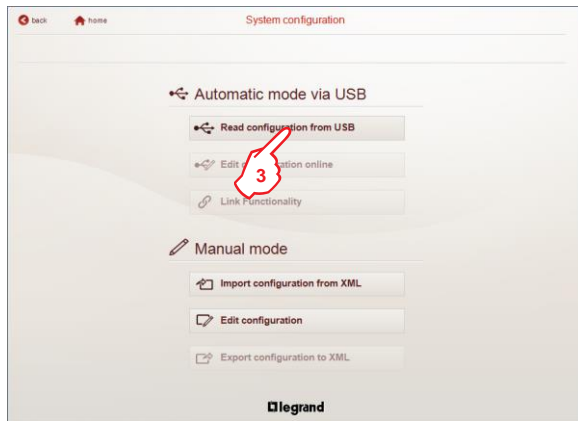


3. In "System configuration" page click "Read configuration from USB"

The page with the reading results table is displayed.

Beside the description of each universal module (state or command) with dip-switches in "0000" position appears the icon "●" and in the "Result" field appears the text "Configurable function"

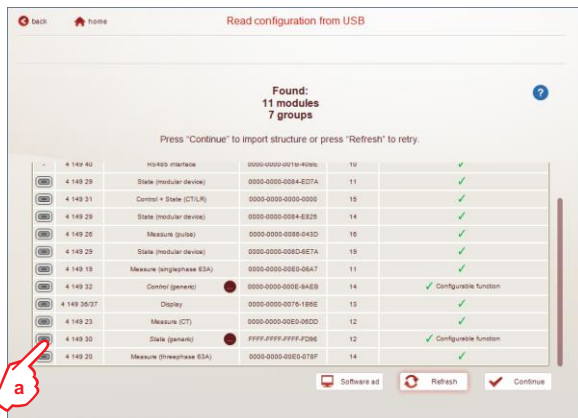


**Note:** to identify clearly a module in a row, **a.** click on the icon to turn on the multifunction led on the front face of the module

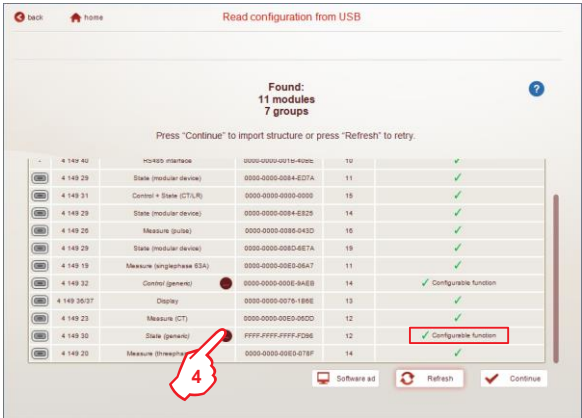


4. Click on icon "...". A pop-up window appears

The window shows all the possible configurations that can be assigned to the selected module.


- For universal state module (4 149 30) possible configurations are:

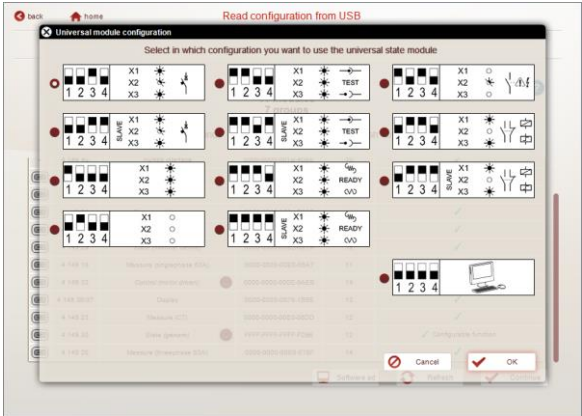


- For universal command module (4 149 32) possible configurations are :

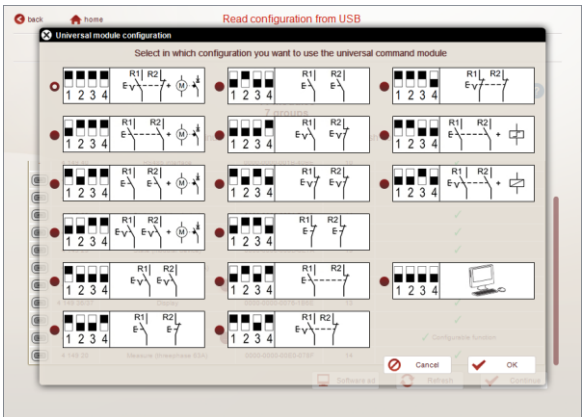

To complete the configuration:

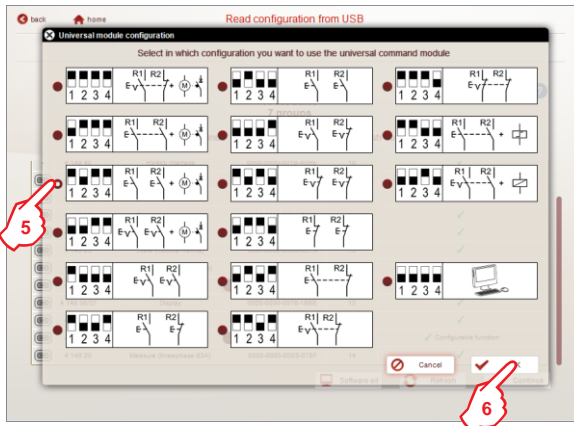

5. Select the appropriate configuration
6. Click "OK" to confirm.

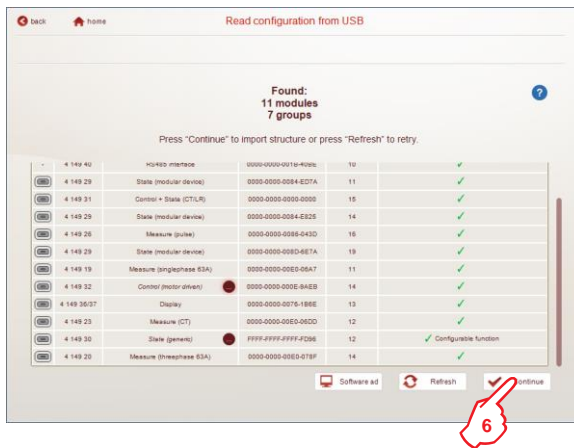

Perform the configuration of other configurable modules present in the system (modules for which appears the icon "●" and the text "Configurable function"), then 7. click "Continue" to complete programming access the edit page of the configuration read (use of this part is described on pages 13 to 15 of this Manual).

**Note:** to modify the configuration of an already configured module, it is necessary to return the module to the factory settings by pressing the multifunction button on the front face until the LED becomes steady red (approximately 20 seconds), then repeat the reading procedure via USB and assign a new configuration to the module.

The only exception is if the configuration chosen is the one with all dip-switches in 0000 position




In this case, simply repeat the configuration reading procedure via USB and assign a new configuration to the module without returning it to factor settings.

## 6.2 Editing a configuration online


Function used to change settings of Groups and Modules once the reading of a configuration from USB is already done and there are still settings to edit.

In the "System configuration" page

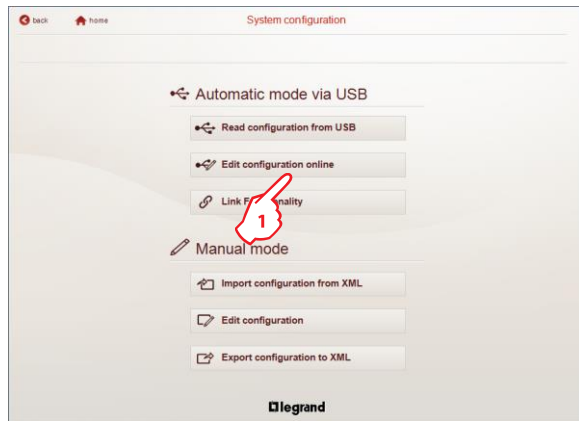


1. Click "Edit configuration online"

The Configuration software redirect the user directly to the Modules group page

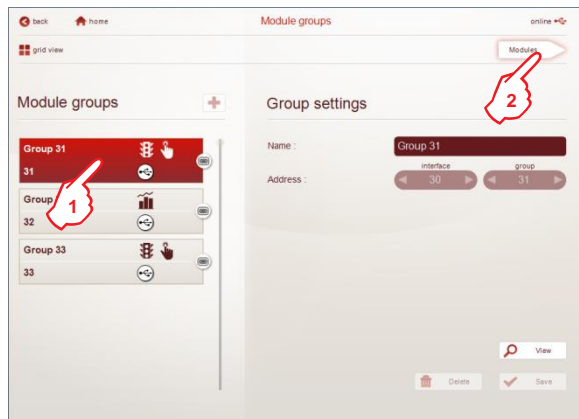

1. Select a Group

2. Click "Modules" to view/configure the devices characteristics

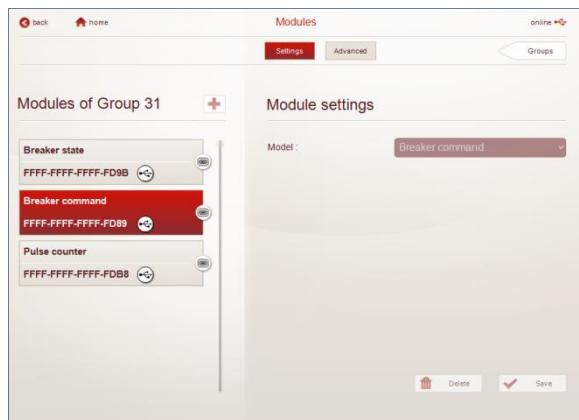

**Note:** use these two pages as shown in the pages 13-15 and 17-19 of this document

## 6.2.1 Configurable parameters of each module

This section of the manual describes in detail the configurable parameters of each module



- **Single-phase measuring module with closed Rogowski sensor** (Cat.No 4 149 19)  
Configurable parameters:

### Module settings

---

Network : 2P ▼

Current versus : Upstream of tore/CT ▼

It is possible to set:

- Supply: current direction through the measuring rogowski coil sensor

- **Three-phase measuring module with closed Rogowski sensors** (Cat.No 4 149 20)

Configurable parameters:



### Module settings

---

Network : 3P+N ▼

Current versus : Upstream of tore/CT ▼

It is possible to set:

- Network: Three-phase network with or without neutral conductor
- Supply: current direction through the measuring rogowski coil sensor

- **Measuring module, connected via current transformers** (Cat.No 4 149 23)

Configurable parameters:



### Module settings

---

Network : 3P+N ▼

Current versus : Upstream of tore/CT ▼

Current transformer ratio : 1

It is possible to set:

- Network: Single-phase, Three-phase network with or without neutral conductor
- Supply: current direction through the measuring current transformer
- Current transformer ratio: obtained by dividing "Primary Current of CT" / 5A (e.g. 800A / 5A, CT ratio = 160)



• **Pulse concentrator** (Cat.No 4 149 26)

Configurable parameters:

### Module settings

Pulse input 1	Pulse input 2	Pulse input 3
Weight :		10.00
Unit :		Wh ▾

For each pulse input it is possible to set:

- Weight of the pulse in input (e.g. each impulse = 10.00)
- Unit: measurement unit of the pulse in input. Possible values: pulses, Wh, kWh, MWh, varh, kvarh, Mvarh, VAh, kVAh, MVAh, m3, km3, Mm3, Nm3, kNm3, MNm3, J, kJ, MJ, cal, kcal, g, kg, t.

**Note:** default configuration for the three inputs: 10 Wh/imp



• **Universal signalling module** (Cat.No 4 149 30)

- Generic input

DIP Switches combinations:

<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X1	<input type="radio"/>
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	X2	<input type="radio"/>
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X3	<input type="radio"/>
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X1	<input checked="" type="radio"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	X2	<input checked="" type="radio"/>
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	X3	<input checked="" type="radio"/>

Configurable parameters:



For each input it is possible to set:

- Name

- Active state: "ON" or "OFF"

ON: input is activated when the contact closes (normally open contact in input)

OFF: input is activated when the contact opens (contact normally closed in input)

- Breaker state (Open, Close, Tripped)

DIP Switches combination:

<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	X1	<input checked="" type="radio"/>	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	X2	<input checked="" type="radio"/>	
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	X3	<input checked="" type="radio"/>	

- General tipped

DIP Switches combination:

<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	X1	<input type="radio"/>	
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	X2	<input checked="" type="radio"/>	
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	X3	<input type="radio"/>	

- Breaker position (Inserted, Drown-out, Test)


DIP Switches combination:

<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X1	<input checked="" type="radio"/>	
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	X2	<input checked="" type="radio"/>	TEST
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	X3	<input checked="" type="radio"/>	

• **Universal signalling module** (Cat.No 4 149 30) *(continued)*


- Spring state (Charged/Discharged, Ready to close)

DIP Switches combination:




- Contact/Latching relay state

Following DIP Switches combination:



Configurable parameters:

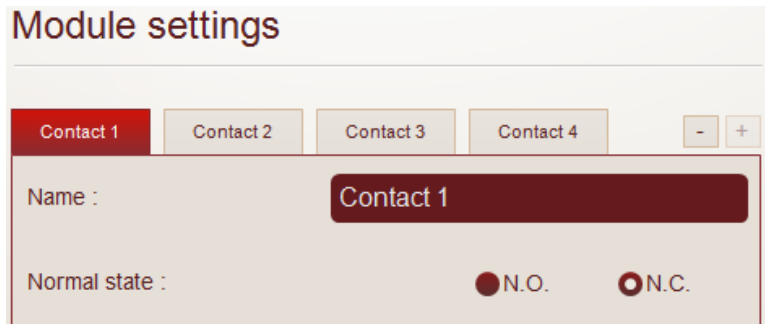

It is possible to set:

- Number of the contacts of the associated Contactor or Latching relay. Possible to add or remove contacts (via "+" or "-" button)
- Name of each contact
- Normal state of each contact: Normally Open (N.O.) or Normally Closed (N.C.)

**Legend:**

- Steady LED
- Blinking LED
- LED off






• **Control and state reporting module** (Cat.No 4 149 31)

DIP Switches combination table:

	1	2	3	4

Configurable parameters:

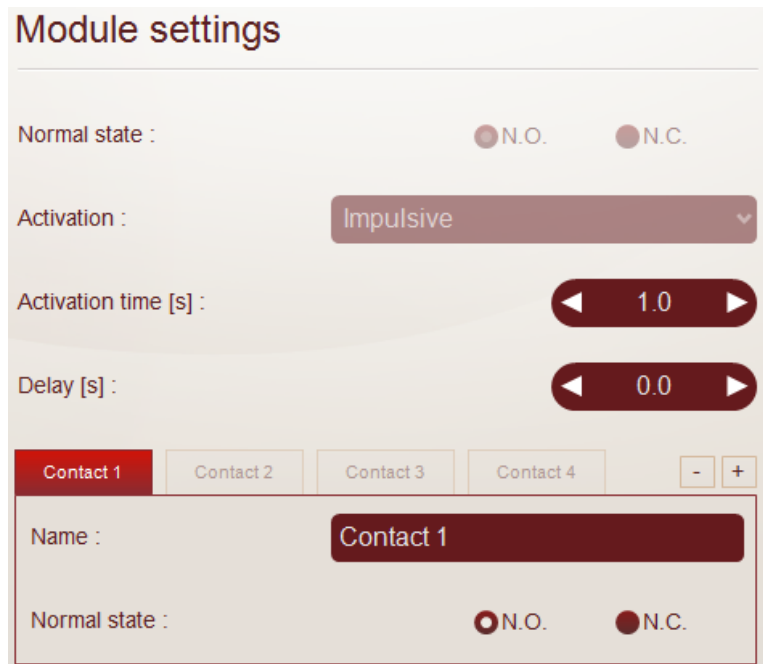

It is possible to set:


- Activation time (only for configurations for Latching relays)
- Delay: time between sending a command and the output activation
- Number of the contacts of the associated Contactor or Latching relay. Possible to add or remove contacts (via "+" or "-" button)
- Name of each contact
- Normal state of each contact: Normally Open (N.O.) or Normally Closed (N.C.)



• **Universal control module** (Cat.No 4 149 32)

- Generic output

DIP Switches combinations:

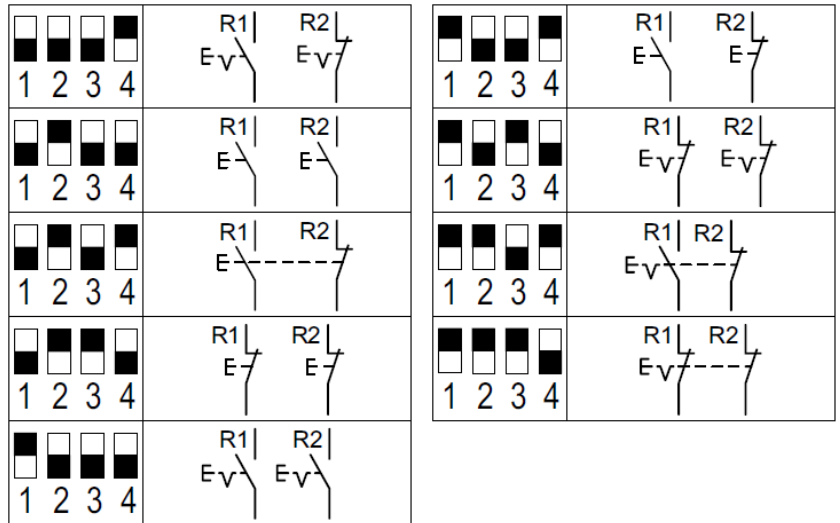

Configurable parameters:

### Module settings

Output 1
Output 2

Name : Output 1

Normal state :  N.O.  N.C.

Interlocked outputs :

Activation : Impulsive ▼

Activation time [s] : ◀ 1.0 ▶

Delay [s] : ◀ 0.0 ▶


For each output it is possible to set:

- Name
- Normal state : Normally Open (N.O.) or Normally Closed (N.C.)
- A flag to interlock the two outputs: pressing one of the two buttons or sending a command both outputs are activated
- Activation: Impulsive or Maintained command
- Activation time (only if the command is impulsive)
- Delay: time between pressing one of the two buttons or sending a command and the output activation

• **Universal control module** (Cat.No 4 149 32) (continued)

- Breaker command

DIP Switches combination:

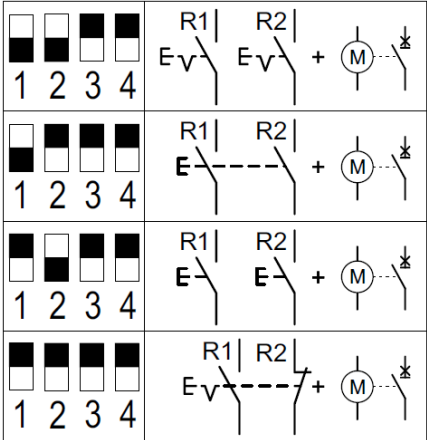

Configurable parameters:

**Module settings**

Open | Close

Normal state :  N.O.  N.C.

Activation : Impulsive

Activation time [s] : 1.0


Delay [s] : 0.0

- For each output it is possible to set:
- Activation time
  - Delay: time between pressing one of the two buttons or sending a command and the output activation


• **Universal control module** (Cat.No 4 149 32) *(continued)*

- Contactor command

DIP Switches combination:

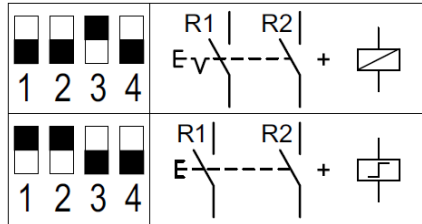

Configurable parameters:

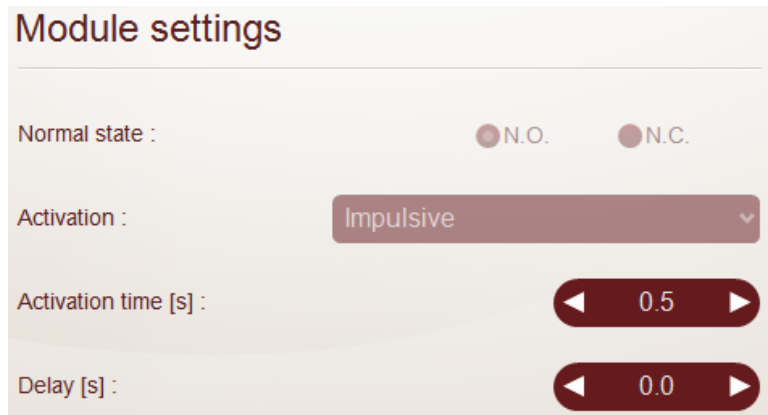

It is possible to set:

- Activation time (only for the configuration for Latching relays)
- Delay: time between pressing one of the two buttons or sending a command and the output activation



## 6.2.1 Load shedding function

**Allows to carry out automatically load shedding in case of the power demand of a circuit exceed a preset threshold (in kW).**


Function is implementable using following EMS CX<sup>3</sup> modules:

- Universal Control module (cat. No **4 149 32**) using the default configuration (DIP switches in 0000 position)
- Multifunction measurement modules (cat. nos **4 149 19/20/23**)

### • Procedure to set the different parameters

**1.** Assign the same address to the EMS CX<sup>3</sup> modules (Universal control module and Multifunction measurement module) that you want to link together


In the "Module groups" page of the software

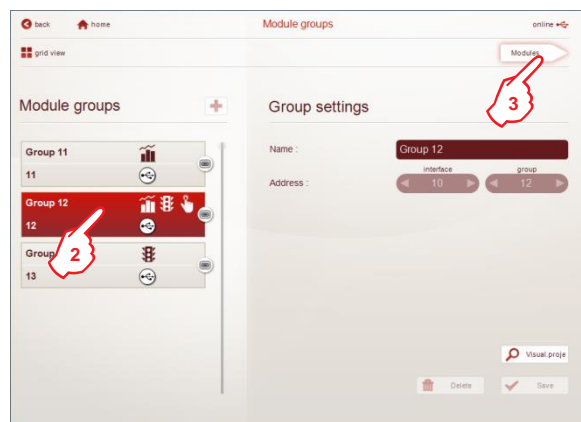

**2.** Select the group containing the Universal control module and the Multifunction measurement module

**3.** Click "Modules" to view/configure the devices characteristics

Modules settings page appears

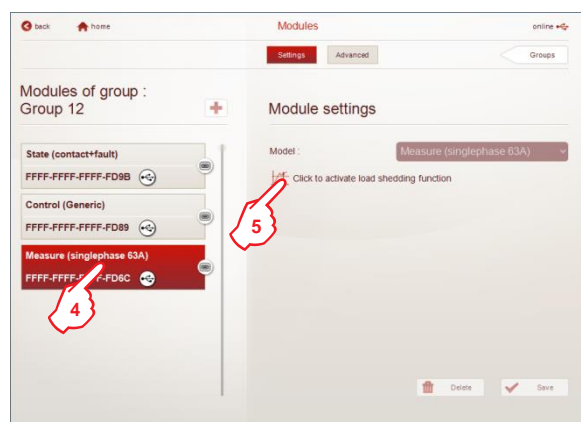


**4.** Select the Multifunction measurement module

**5.** Click to activate the load shedding function

*For more details, see diagram in page 39*

A set of additional parameters are shown

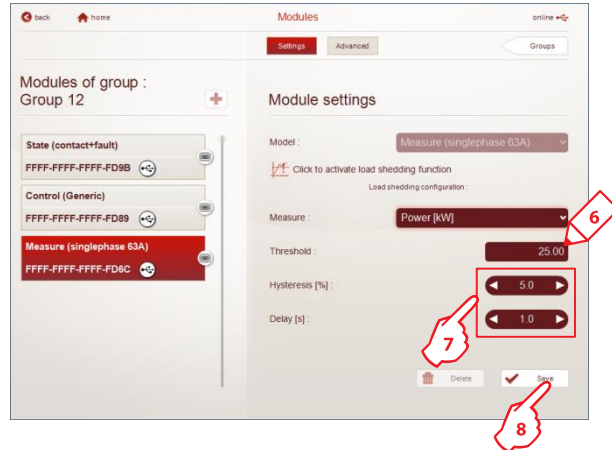


**6.** Set the threshold: value of Total active power (kW) above which procedure starts.

**7.** Assign the other control parameters:

- Hysteresis: value expressed in % of the threshold under which the alarm is over and the disconnected loads are restored (default value 5%).
- Alarm delay (s) - (default value 0s):  
during the activation of an alarm: is the waiting time between the threshold point and the alarm on the EMS bus  
during the de-activation of an alarm: is the waiting time between the hysteresis point and the alarm is deactivation on the EMS bus

**8.** Click "Save" to confirm

In the Module settings page of the Universal control module

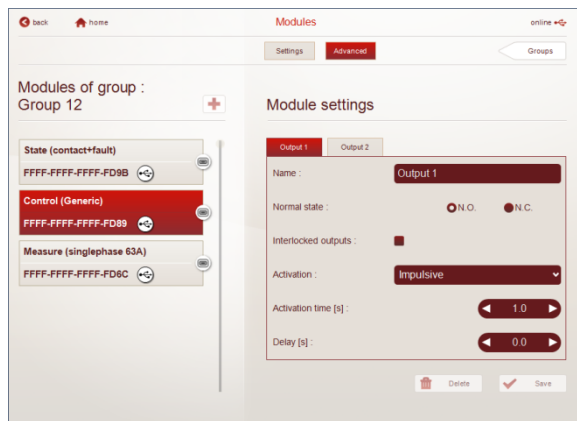


Set following parameters:

- Normal state: is the rest position of the relay; normally open (NO) or normally closed (NC).
- The flag to interlock the two outputs: pressing one of the two buttons or sending a command both outputs are activated
- Activation: impulsive or maintained
- Activation time (s): used for the impulsive work method; represents the time in which the relay remains in the working position.
- Activation delay (s): waiting time between alarm is declared on the EMS bus and the load(s) is (are) disconnected by the universal control module (default value 0s)

**For more details, see diagram in page 39**

Load shedding diagram

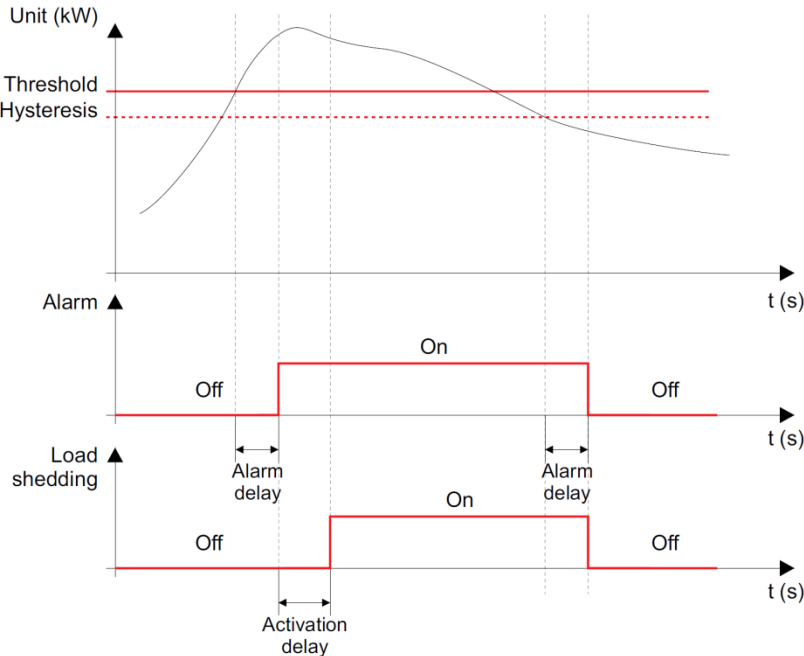

### 6.3 Link Functionality

This function allows you to link two EMS CX<sup>3</sup> modules to create automatic actions that, once programmed, can run independently without a connection to a manager is needed.

The basic rule is the link between an event (circuit breaker that trip, a threshold exceeded, etc.) and an action accordingly (signaling, opening of a circuit by motorized control or contactor, etc.).

Possible associations are:


Event generator	Action module		
	Command: 4 149 32	State + Command: 4 149 31	State: 4 149 30
Measure: 4 149 19/20/23	✓	✓	✓ Only with "Generic" configurations
State: 4 149 29/30	✓	✓	✗ Standard configuration
State + Command: 4 149 31	✓	✓	✗ Standard configuration

**Note:**


- association can only be of type 1 to 1 (1 event and 1 action).
- modules already associated can not be used for other associations.




In the software's Home page

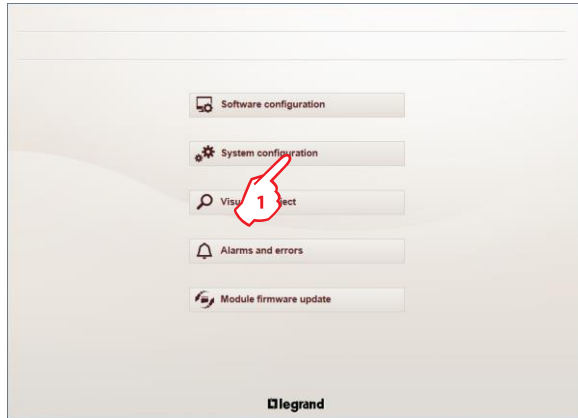

1. Click "System configuration"

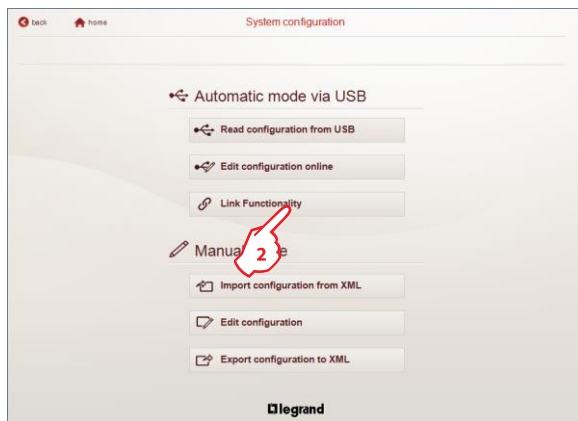


2. Click "Link Functionality"

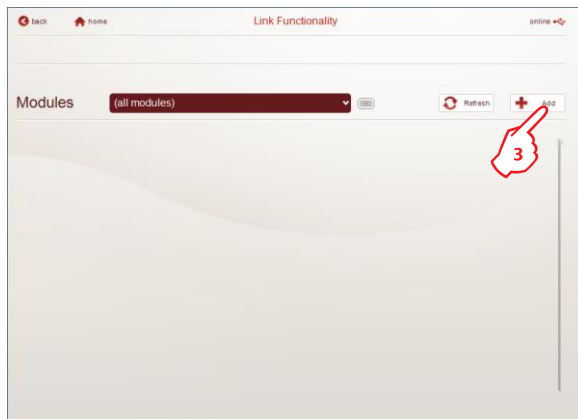

3. Click "Add"

The page to create links between modules is displayed.

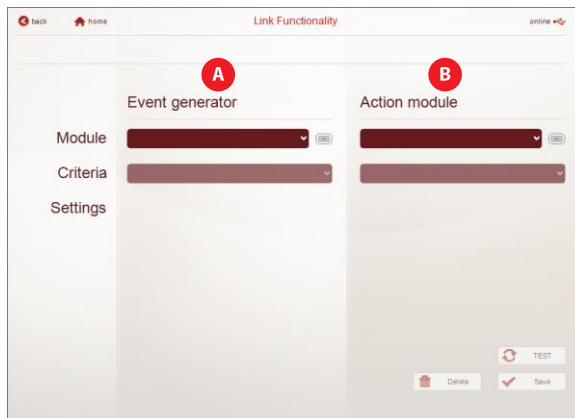

The page is divided into three sections:


section **A** is the area where it is possible to:

- select the module that generates the event
- assign to the module the criteria of the event generation (e.g. trip of a circuit-breaker, etc.) and the additional parameters, if available (e.g. for the measuring module it is possible to select the electrical quantity, to set the threshold, the hysteresis and the delay of the activation of the event).
- choose whether the event also generates an alert (for measurement modules, and universal state modules with generic configurations).

section **B** is the area where it is possible to:

- select the module that performs the action
- assign to the module the criteria of the action (e.g. opening or closing of a breaker, etc.) and the additional parameters, if available (e.g. for a command module configured as "Breaker command" it is possible to set activation time and activation delay time for each output).

#### Procedure to create links between EMS CX<sup>3</sup> modules

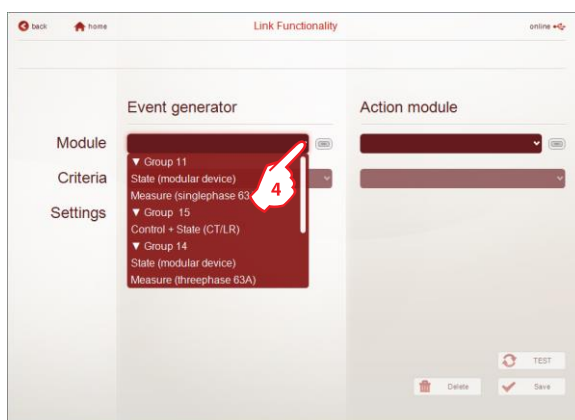

**4.** Click to select the event generator module.

**Note:**

- the devices list is filtered by "Groups"
- only modules that can generate an event are listed:
  - measure modules (4 149 19/20/23), state modules (4 149 29/30) and Command + State module (4 149 31) [see following pages for details]

Depending on the configuration and model type, possible criteria that can be selected are different:



- **Single-phase measuring module with closed Rogowski sensor up to 63 A** (Cat.No 4 149 19) and **Measuring module, connected via current transformers** (Cat.No 4 149 23) set as 1P

Settings:

Event generator	
Module	Measure (singlephase 63A)
Criteria	Event
Settings	Measure : Power P ↑ Threshold [kW] : 100,00 Hysteresis [%] : 5,0 Delay [s] : 1,0
Alert :	Generate alarm : <input type="checkbox"/>

Criteria:

- Event (fixed parameter)

Parameters:

- Measure : V1↑, V1↓, I1↑, P1↑, S1↑, f↑, f↓, PF↓

**Note:**

↑ = Maximum threshold

↓ = Minimum threshold

For the active power (P) and for power factor (PF) it is possible to set also negative values as a threshold value.

- **Threshold:** value above or below which the “action/alert procedure” is activated.
- **Hysteresis :** value expressed in % of the threshold under which the alarm is over and the disconnected loads are restored (*default value 5%*).
- **Alarm delay (s) - (default value 1 s):**

during the activation of an alarm: is the waiting time between the threshold point and the alarm on the EMS bus

during the de-activation of an alarm: is the waiting time between the hysteresis point and the alarm is deactivation on the EMS bus;

- **Alert:** select whether you want the event also generates an alert. If the field is selected, configuration software gives the possibility to type a message which will be used for the identification of the alert type (see below).

Alert :	Generate alarm : <input checked="" type="checkbox"/>
	Message : Exceeded threshold



- **Three-phase measuring module with closed Rogowski sensor up to 63 A** (Cat.No 4 149 20) and **Measuring module, connected via current transformers** (Cat.No 4 149 23) set as 3P

Settings:

Event generator	
Module	Measure (threephase 63A) <input type="button" value="⊞"/>
Criteria	Event <input type="button" value="⊞"/>
Settings	Measure : <input type="button" value="Power P ↑"/>
	Threshold [kW] : <input type="text" value="100,00"/>
	Hysteresis [%] : <input type="button" value="◀ 5,0 ▶"/>
	Delay [s] : <input type="button" value="◀ 1,0 ▶"/>
Alert :	Generate alarm : <input type="checkbox"/>

Criteria:

- Event (fixed parameter)

Parameters:

- Measure : U12↑, U12↓, U23↑, U23↓, U31↑, U31↓, I1↑, I2↑, I3↑, IN↑, P↑, P1↑, P2↑, P3↑, S↑, S1↑, S2↑, S3↑, f↑, f↓, PF↓

**Note:**

↑ = Maximum threshold

↓ = Minimum threshold

For the active power (P) and for power factor (PF) it is possible to set also negative values as a threshold value.


- Threshold: value above or below which the "action/alert procedure" is activated.
- Hysteresis : value expressed in % of the threshold under which the alarm is over and the disconnected loads are restored (default value 5%).
- Alarm delay (s) - (default value 1 s):

during the activation of an alarm: is the waiting time between the threshold point and the alarm on the EMS bus

during the de-activation of an alarm: is the waiting time between the hysteresis point and the alarm is deactivation on the EMS bus;

- Alert: select whether you want the event also generates an alert. If the field is selected, configuration software gives the possibility to type a message which will be used for the identification of the alert type (see below).

Alert :	Generate alarm : <input checked="" type="checkbox"/>
	Message : <input type="text" value="Exceeded threshold"/>

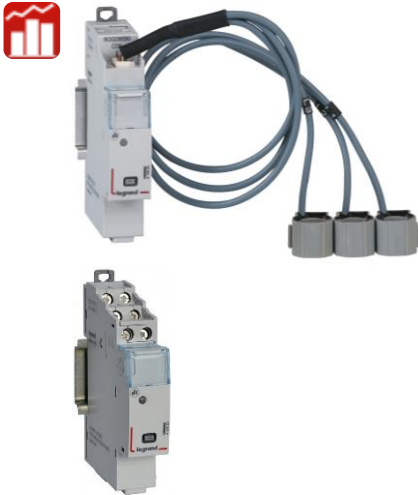

- **Three-phase measuring module with closed Rogowski sensor up to 63 A** (Cat.No 4 149 20) and **Measuring module, connected via current transformers** (Cat.No 4 149 23) set as 3P+N

Settings:

Event generator	
Module	Measure (threephase 63A)
Criteria	Event
Settings	Measure : Power P ↑ Threshold [kW] : 100,00 Hysteresis [%] : 5,0 Delay [s] : 1,0
Alert :	Generate alarm : <input type="checkbox"/>

Criteria:

- Event (fixed parameter)

Parameters:

- Measure: V1↑, V1↓, V2↑, V2↓, V3↑, V3↓, U12↑, U12↓, U23↑, U23↓, U31↑, U31↓, I1↑, I2↑, I3↑, IN↑, P↑, P1↑, P2↑, P3↑, S↑, S1↑, S2↑, S3↑, f↑, f↓, PF↓

**Note:**

↑ = Maximum threshold

↓ = Minimum threshold

For the active power (P) and for power factor (PF) it is possible to set also negative values as a threshold value.

- Threshold: value above or below which the “action/alert procedure” is activated.
- Hysteresis : value expressed in % of the threshold under which the alarm is over and the disconnected loads are restored (default value 5%).
- Alarm delay (s) - (default value 1 s):

during the activation of an alarm: is the waiting time between the threshold point and the alarm on the EMS bus

during the de-activation of an alarm: is the waiting time between the hysteresis point and the alarm is deactivation on the EMS bus;

- Alert: select whether you want the event also generates an alert. If the field is selected, configuration software gives the possibility to type a message which will be used for the identification of the alert type (see below).

Alert :	Generate alarm : <input checked="" type="checkbox"/>
	Message : Exceeded threshold



• **Signalling Auxiliary Contact CA + SD** (Cat.No 4 149 29)

Event generator

Module: State (modular device)

Criteria: Open

Settings

Criteria :

- Open, Close, Tripped



• **Universal signalling module - 3 LEDs** (Cat.No 4 149 30)

- Generic input

Dip-switch configurations :

1	2	3	4	
				X1 <input type="radio"/>
1	2	3	4	X2 <input type="radio"/>
				X3 <input type="radio"/>
				X1
1	2	3	4	X2
				X3

Settings:

Event generator

Module: State (generic)

Criteria: Input 1

Settings: Normal state:  N.O.  N.C.

Alert: Generate alarm:

Criteria:

- Input 1, Input 2 or Input 3 (**Only 1 input can be used with Link Functionality**)

Parameters:

- Normal state of contact : Normally open (N.O.) or Normally closed (N.C.)

- Alert: select whether you want the event also generates an alert.

If the field is selected, configuration software gives the possibility to set:

- a message which will be used for the identification of the alert type.

- Alarm state: "ON" or "OFF"

ON: alert is activated when the contact closes (normally open contact in input)

OFF: alert is activated when the contact opens (contact normally closed in input)

- Time for alert activation (s): waiting time between changing state of the input and activating the alarm on the bus. (see below)

Alert :

Generate alarm:

Message: Alarm on Input 1


Alarm state:  ON  OFF

Time for alert activation [s]: 0,0


• **Universal signalling module – 3 LEDs** (Cat.No 4 149 30) *(continued)*

- Breaker state (Open, Close, Tripped)

Dip-switch configurations :



Settings:

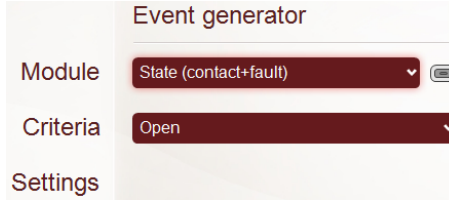


Criteria:


- Open, Close or Tripped

- General tripped

Dip-switch configurations :



Settings:

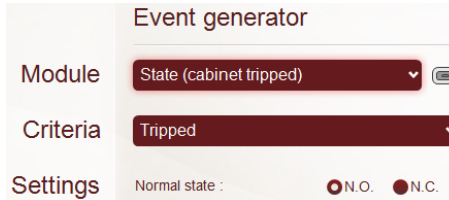

Criteria:

- Tripped


Parameters:

- Normal state of contact : Normally open (N.O.) or Normally closed (N.C.)


• **Universal signalling module – 3 LEDs** (Cat.No 4 149 30) *(continued)*

- Breaker position (Inserted, Drown-out, Test)

DIP Switches combination:



Settings::

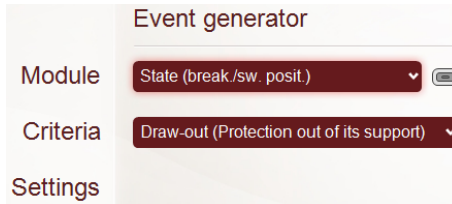


Criteria:


- Inserted, Drown-out or Test

- Spring state (Charged/Discharged, Ready to close)

DIP Switches combination:



Settings:

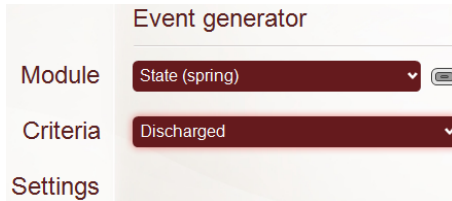

Criteria


- Charged/Discharged or Ready to close




• **Universal signalling module – 3 LEDs** (Cat.No 4 149 30) *(continued)*

- Contactor/Latching relay state

DIP Switches combination:



Settings:

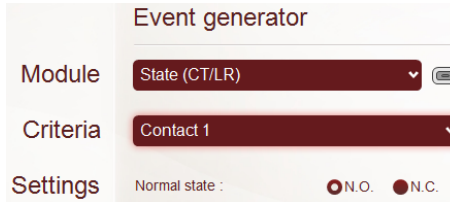

Criteria:

- Contact 1, Contact 2, Contact 3 or Contact 4

Parameters:

- Normal state of each contact: Normally Open (N.O.) or Normally Closed (N.C.)

**Note:** all these configurations can be realized with universal signalling module (Cat.No 4 149 30) with micro-switches in position 0000 by specializing the module with the configuration software (see § 6.1.3)



• **Control and state reporting module** (Cat.No 4 149 31)

Settings:




Criteria:

- Contact 1, Contact 2, Contact 3 or Contact 4

Parameters:

- Normal state of each contact: Normally Open (N.O.) or Normally Closed (N.C.)


Once the event generator module has been set (e.g. a signalling module 4 149 30 CA + SD with criteria "Tripped"), the "action module" must be selected

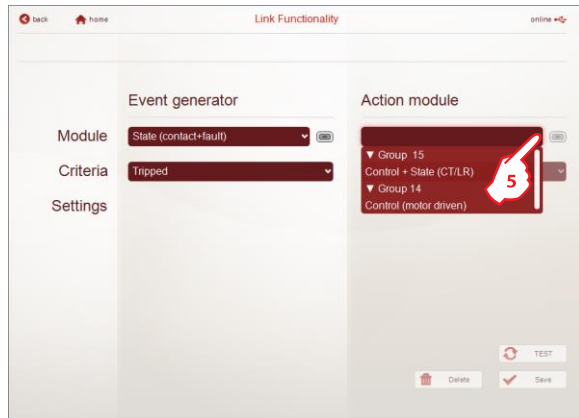

5. Click to select the action module.

**Note:**

- the devices list is filtered by "Groups"
- only modules that can generate an action are listed:
  - Control modules (4 149 32), signalling modules (4 149 30) and Control and state reporting modules [see following pages for details]

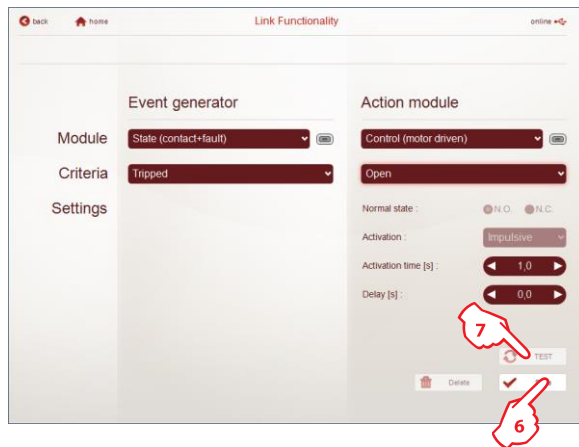

6. Click "Save" to confirm

7. It is possible to test the action as a result of the event by clicking on the "Test" button.

**Note:** for safety reasons, before testing the automation process, the software asks for confirmation.

Depending on the configuration and model type, possible criteria that can be selected are different:



• **Control and state reporting module** (Cat.No 4 149 31)

Settings:

### Action module

Control + State (CT/LR) ▼ ☰

Open ▼

Normal state :       N.O.     N.C.

Activation :            Impulsive ▼

Activation time [s] :    ◀ 0,5 ▶

Delay [s] :              ◀ 0,0 ▶

Criteria:

- Open, Close, Open/Close or Close/Open

Parameters:


- Activation time (only for configurations for Latching relays)
- Delay: time between sending a command and the output activation




• **Universal control module** (Cat.No 4 149 32)

- Generic output

• DIP Switches combinations:

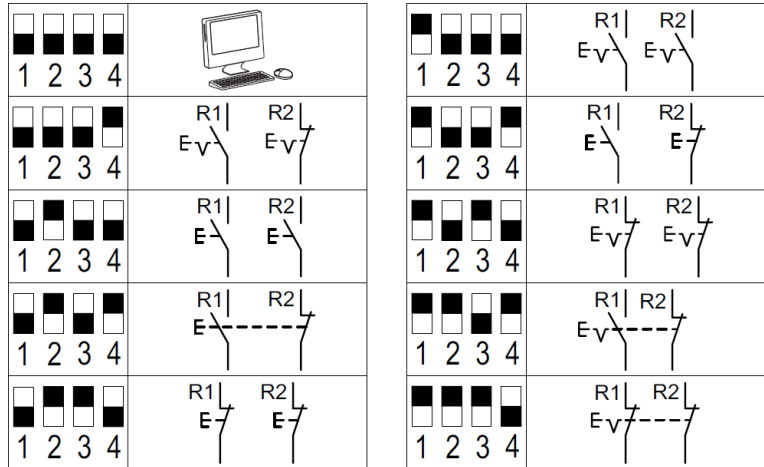

Settings:

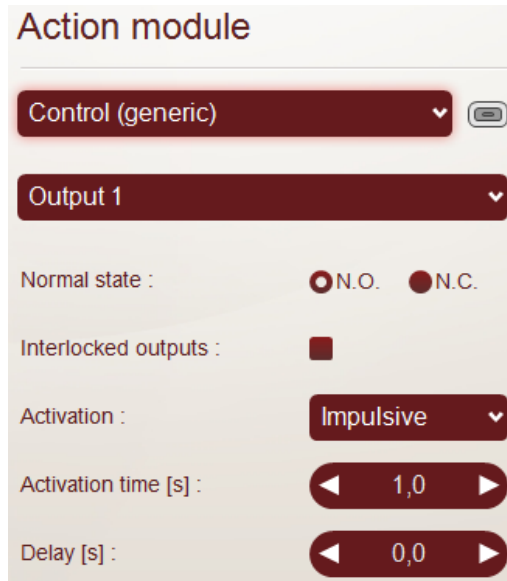

Criteria:

- Output1 or Output 2


Parameters:

- Normal state : Normally Open (N.O.) or Normally Closed (N.C.)
- A flag to interlock the two outputs: pressing one of the two buttons or sending a command both outputs are activated
- Activation: Impulsive or Maintained command
- Activation time (only if the command is impulsive)
- Delay: time between pressing one of the two buttons or sending a command and the output activation

• **Universal control module** (Cat.No 4 149 32) (continued)

- Breaker command

DIP Switches combination:

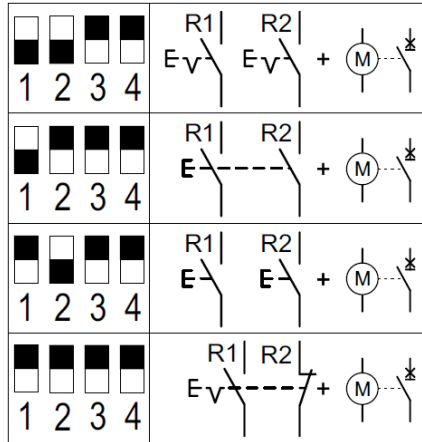

Settings:

### Action module

Control (motor driven) ▼
☰

Open ▼
▼

Normal state :  N.O.  N.C.

Activation : Impulsive ▼

Activation time [s] : ◀ 1,0 ▶

Delay [s] : ◀ 0,0 ▶

Criteria:

- Open, Close, Open/Close or Close/Open


Parameters:

- Activation time (only for the configuration for Latching relays)
- Delay: time between pressing one of the two buttons or sending a command and the output activation


• **Universal control module** (Cat.No 4 149 32) (*continued*)

- Contactor command

DIP Switches combination:

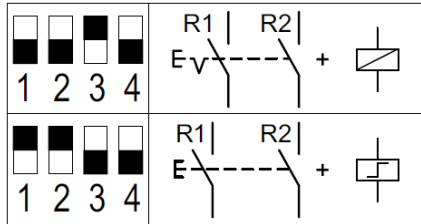

Settings:

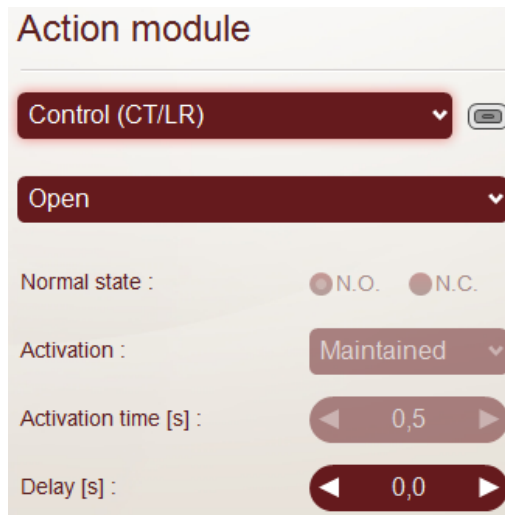

Criteria:

- Open, Close, Open/Close or Close/Open

Parameters:

- Activation time (only for the configuration for Latching relays)
- Delay: time between pressing one of the two buttons or sending a command and the output activation

**Note:** all these configurations can be realized with universal control module (Cat.No 4 149 32) with micro-switches in position 0000 by specializing the module with the configuration software (see § 6.1.3)



• **Universal signalling module - 3 LEDs** (Cat.No 4 149 30)


**Note:** this module can be used as “action module” only if the “event generator” module is a measuring module (4 149 19/20/23)

- Generic input

Dip-switch configurations:

<table border="1"> <tr> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> </tr> <tr> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>1</td> <td>2</td> <td>3</td> <td>4</td> </tr> </table>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	1	2	3	4							
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																
1	2	3	4																
<table border="1"> <tr> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> </tr> <tr> <td><input checked="" type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>1</td> <td>2</td> <td>3</td> <td>4</td> </tr> </table>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	1	2	3	4	<table> <tr> <td>X1</td> <td><input type="radio"/></td> </tr> <tr> <td>X2</td> <td><input type="radio"/></td> </tr> <tr> <td>X3</td> <td><input type="radio"/></td> </tr> </table>	X1	<input type="radio"/>	X2	<input type="radio"/>	X3	<input type="radio"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																
1	2	3	4																
X1	<input type="radio"/>																		
X2	<input type="radio"/>																		
X3	<input type="radio"/>																		
<table border="1"> <tr> <td><input checked="" type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> </tr> <tr> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>1</td> <td>2</td> <td>3</td> <td>4</td> </tr> </table>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	1	2	3	4	<table> <tr> <td>X1</td> <td><input checked="" type="radio"/></td> </tr> <tr> <td>X2</td> <td><input checked="" type="radio"/></td> </tr> <tr> <td>X3</td> <td><input checked="" type="radio"/></td> </tr> </table>	X1	<input checked="" type="radio"/>	X2	<input checked="" type="radio"/>	X3	<input checked="" type="radio"/>
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																
1	2	3	4																
X1	<input checked="" type="radio"/>																		
X2	<input checked="" type="radio"/>																		
X3	<input checked="" type="radio"/>																		

Settings:

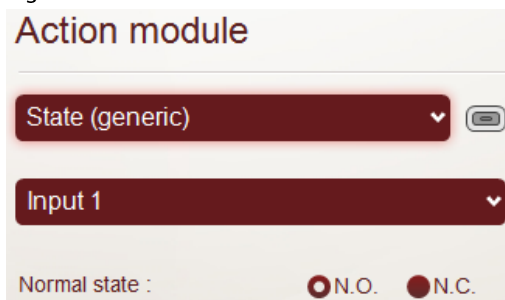

Criteria:

- Input 1 (activation of the red LED), Input 2 (activation of the orange LED) or Input 3 (activation of the green LED)

Parameters:

- Normal state of contact : Normally open (N.O.) or Normally closed (N.C.)

**Note :**

- **It is not necessary to wire 4 149 30 module’s inputs for use it in this configuration.** Selected LED is switched on or off (according to the configured normal state of contact) by the electronic board of the module itself.


- all these configurations can be realized with universal signalling module (Cat.No 4 149 30) with micro-switches in position 0000 by specializing the module with the configuration software (see § 6.1.3)

## Display of created links

Once the creation process is completed, all created links are listed in the “Link Function” page:


- on the left, modules that generate events
- on the right, modules that generate actions in response to the events

Each module is indicated with its name, function and identification number.

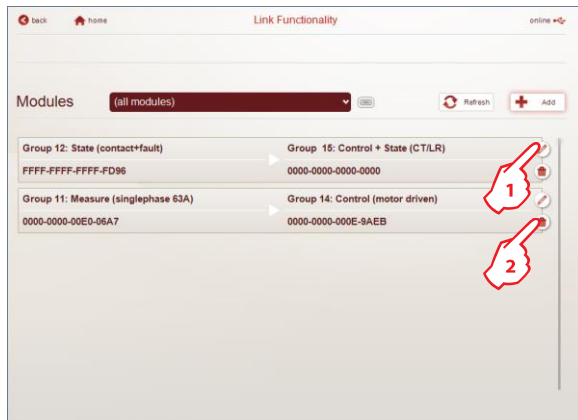

In this page it is possible to


1. Edit a configuration or
2. Delete a configuration

At the same time, the symbol  appears in the device selection button to indicate that there is one or more modules configured with the Link function




## 6.3 View pages

In the software's Home page

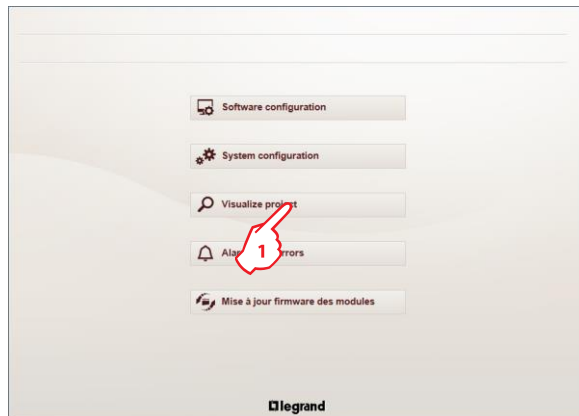

1. Click "Visualize project"

Devices display page appears

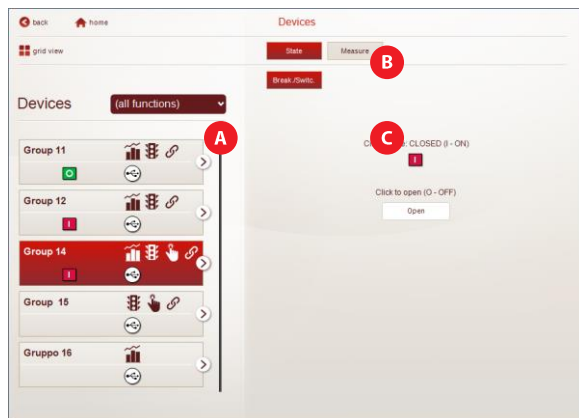

The page is divided into three sections:

section **A** shows the Devices (each device is a group of EMS CX<sup>3</sup> modules with different functions) with their characteristics and status icons.


It is possible to filter Device list per function: State, Command, Measure or "all functions"(default)







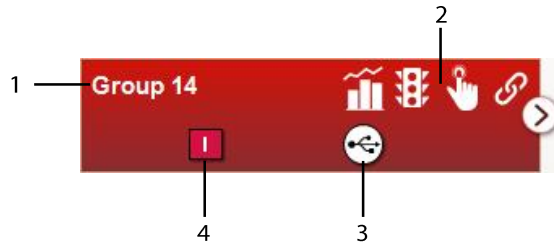


section **B** is the area where is possible to select several pages (according to the functions present in a Device):

- State: display of devices status, control buttons... for each EMS CX<sup>3</sup> Device/ Group of devices
- Measure: display of the quantities measured by a device:
  - Electricity measuring devices: Energy, Power, Voltages / Currents / Frequency, THD and Harmonics
  - Pulse Collector module: Energy, Water and Gas consumptions

section **C** shows the values measured by the selected device, status and command button(s)


• Description of the device selection button



1. Name of the group
2. Symbols of the functions associated to the group (*depending on the characteristics related to each EMS CX3 module*)
  -  Measure
  -  State
  -  Command
  -  Link Function
3. Communication status
  -  System connected via USB to a PC
  -  Communication error
4. This symbol appears only if in the group is present the state function related to a protection device and shows the circuit-breaker state:
  -  Open
  -  Closed
  -  Tripped


## 6.4 Historical of alarms

In the software's Home page

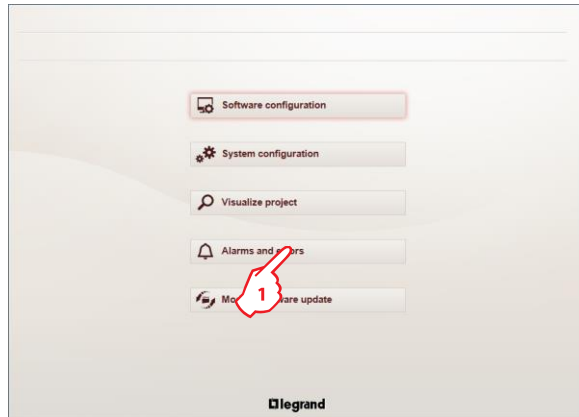

1. Click "Alarms and errors"

Alarms and errors display page appears

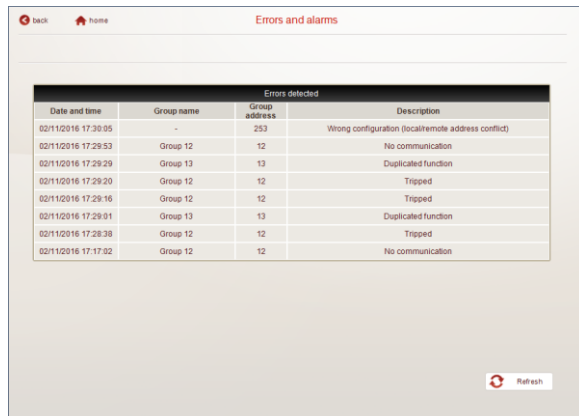


Page shows the last 20 errors (occurred during the configuration steps or during the operation of the system) with following details:

- Data & Time of the error
- Group name
- Group address
- Description of error cause

## 7. Off-line operation


### 7.1 Import a configuration

In the Software's home page

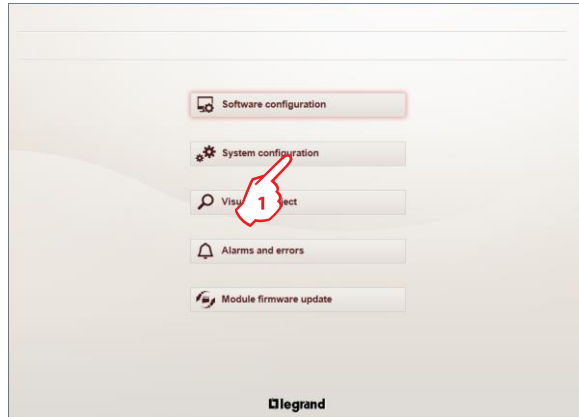


1. Click "System configuration"

System configuration page appears

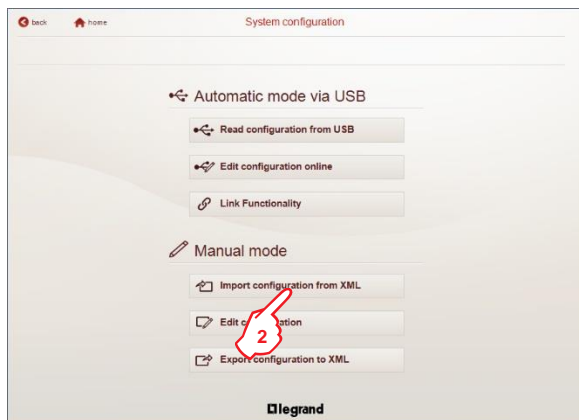

2. Click "Import Configuration from XML"


A pop-up window appears

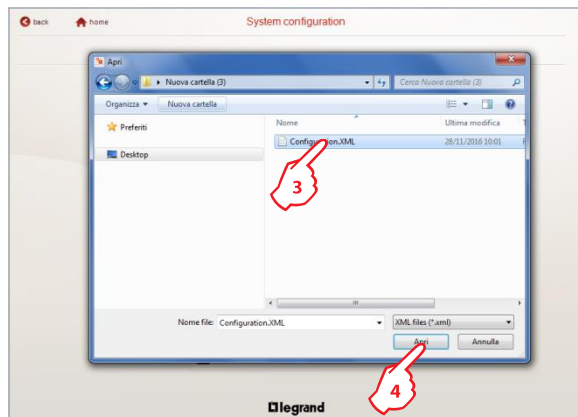

3. Select the file to import (e.g. Configuration.XML), then 4. click "Open"  
Configuration is ready to be edit


## 7.2 Edit a configuration

In the System configuration page

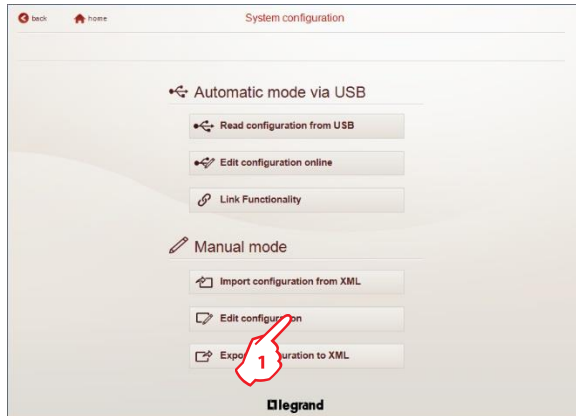

1. Click "Edit configuration"

Edit page of the imported configuration appears

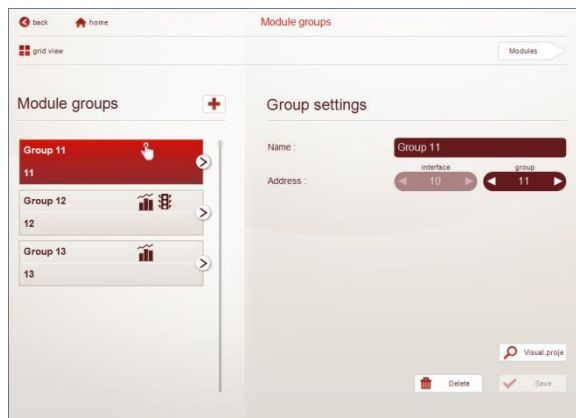


In this page it is possible to edit Groups parameters (Names, Address) and modules parameters (according the modules type under a group parameters are different). It is also possible to add new groups or duplicate an existing group using the Add button " + "

**Note:** at the end of each modification click "Save" to confirm changes.


### 7.3 Export a configuration

In the System configuration page

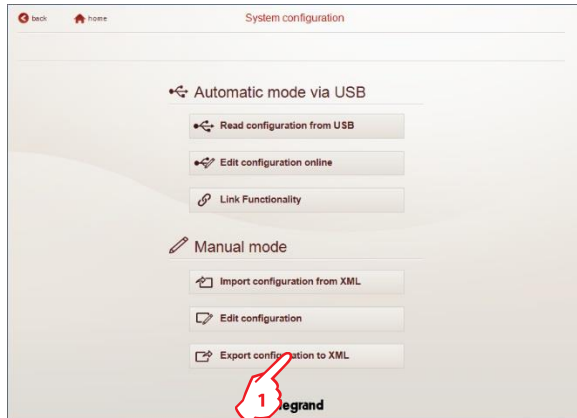

1. Click "Export configuration"

A pop-up window appears

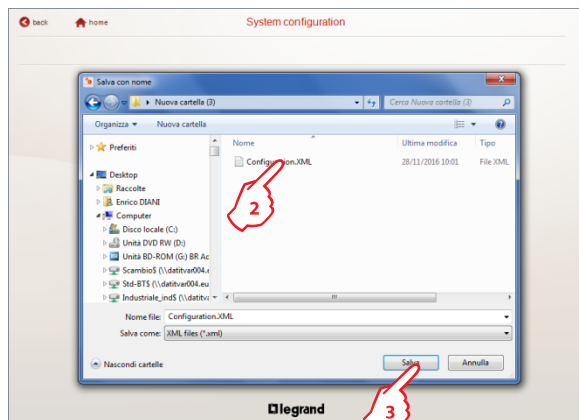

3. Select the where to save file, then 3. click "OK"

Configuration is saved on your computer





LEGRAND  
Pro and Consumer Service  
BP 30076  
87002 LIMOGES CEDEX FRANCE  
[www.legrand.com](http://www.legrand.com)