

# LANtest User Manual

## MODELS:

256550 LANtest

256551 LANtest Kit. (Includes master box and remote unit)

## INTRODUCTION

LANtest is a newly designed and very practical tester that can easily read the correct pin configuration of 10Base-T cable, 10Base-2 cable, RJ45/RJ11 modular cables, 258A, TIA-568A/568B and Token Ring cable etc. by comparing one transmitting end to the corresponding receiving end. With the remote kit it can test cable installed far away either on wall plate or patch panel. It is easy to verify the cable continuity, open, short and cross-connect. It's affordable, so you can benefit the most.


## FEATURES:

- Can test the correct pin configuration of 10Base-T, 10Base-2 Ethernet cable, RJ45/RJ11 modular cables, 258A, TIA-568A/568B and Token Ring cable etc.
- Easy to read cable status and verify cable continuity, open short and miswire.
- With remote kit it can remotely test cable far away either on wall plate or patch panel.
- Can test the grounding.
- Features with auto or manual scan.



Picture 1.

## PRODUCT PROFILE:

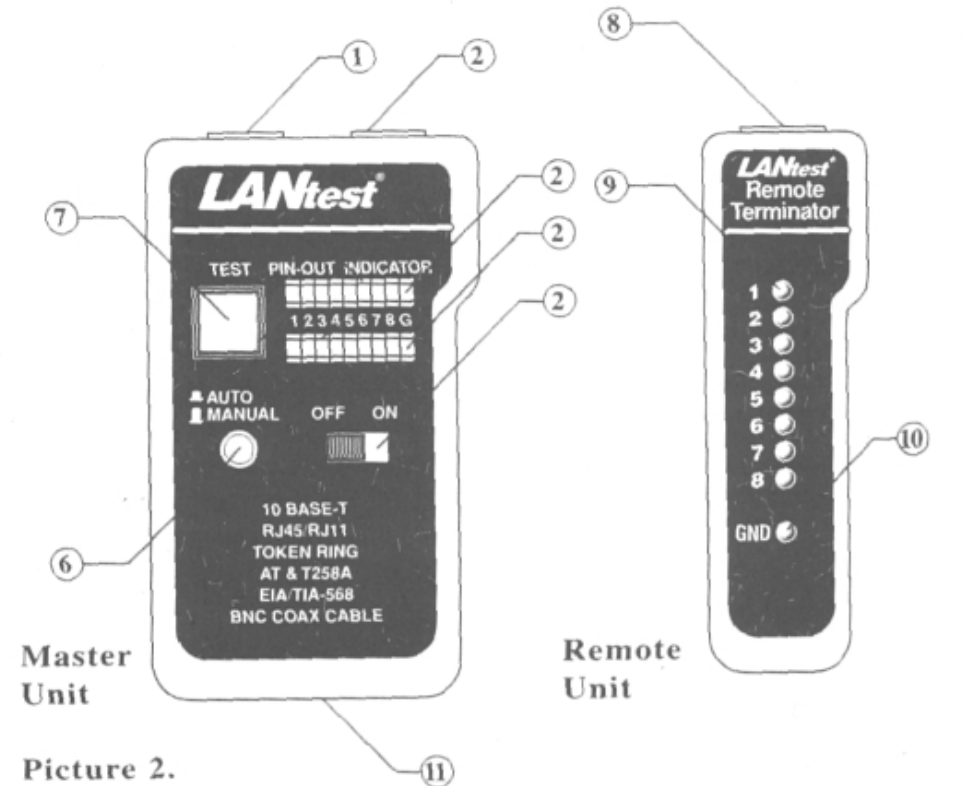

Picture 2.

1. RJ45 JACK
2. RJ45 JACK
3. LED DISPLAY FOR SOURCING END (JACK 1)
4. LED DISPLAY FOR RECEIVING END (JACK 2)
5. POWER SWITCH
6. LED SCANNING MODE SWITCH
7. TEST SWITCH FOR MANUAL SCAN
8. RJ45 JACK
9. LED DISPLAY FOR RECEIVING END (SAME AS JACK 2)
10. GROUND LED FOR RECEIVING END
11. BATTERY COMPARTMENT (9V)

## OPERATION:

### I.. Loopback Test

#### 1. 10Base-T Cable Test

1.1. Plug one end of tested cable on sourcing of RJ45 jack (Marked with '▲') and another end of tested cable on remaining receiving RJ 45 jackz.


1.2. Slide power switch on, the upper row LEDs will start to scan in seqence if the Auto/Manual switch is set on Auto mode, or the LED will light on pin 1 if the Auto/Manual switch is set on Manual mode.

**Note:** You have to make sure the battery power is sufficient. If battery fails to the power, the LEDs will be dimmed or hold up or no light, and the test result will be incorrect.

1.3. Chose the Auto/Manual switch to be Auto scan mode or Manual scan mode by pressing the Auto/Manual switch.


1.4. In this moment the corresponding LED indicators of another row of LED will light up simultaneously.

1.5. Read out the result of LED display. It tells you the pin configuration status of the tested cable. If you fail to read the result in the first run of LED scan, you may read it again in the second run of LED scan, or use the manual mode and press the test switch one by one until you read the result out. Please refer to picture 3.

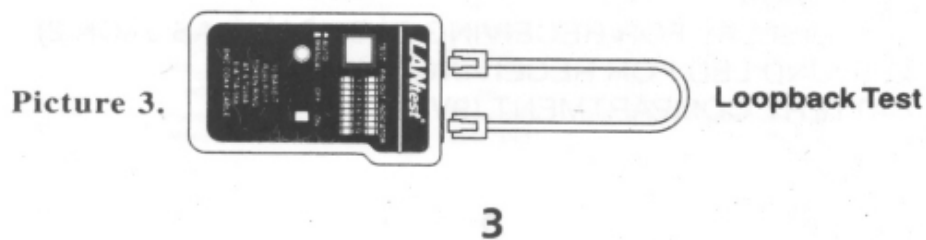

### 2. Modular Cable test

Please follow up the procedures of 10Base-T Cable Test. However, the LED display should be read as picture 4.

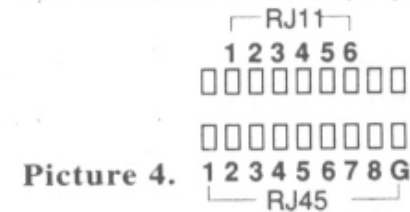

### 3. 10Base-2 Cable Test


3.1. Plug the two attached BNC adaptor cables on both RJ45 jacks, then connect the tested cable both ends on BNC adaptor cables.

3.2. As to the remaining procedures you may refer to 10Base-T cable test from step 1.2. to 1.5.

**Note:** 1. The center pin of BNC should be read on LED 1 and shielding pin of BNC should be read on LED 2. Please refer to Picture 5.



2. As the 10Base-2 cable has only two wires, we suggest you to read the result of LED scan by manual mode.

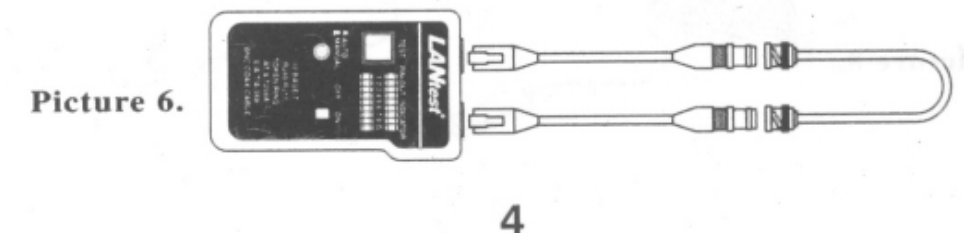


## II. Remote Test

1. Plug one end of tested cable on the sourcing RJ45 jack (Marked with '▲') of master unit and another end on the receiving RJ45 jack of remote unit. If the tested cable has already installed on the patch panel or wall plate, you may use the adaptor cable to solve the connector gender problem. Please refer to picture 7, 8.


2. Now, set the Auto/manual switch on Auto mode if you work test alone.

3. Read the test result from LED display on remote unit.

**Note:** The LED display on remote unit was scanned in sequence corresponding to the sourcing end of master unit.

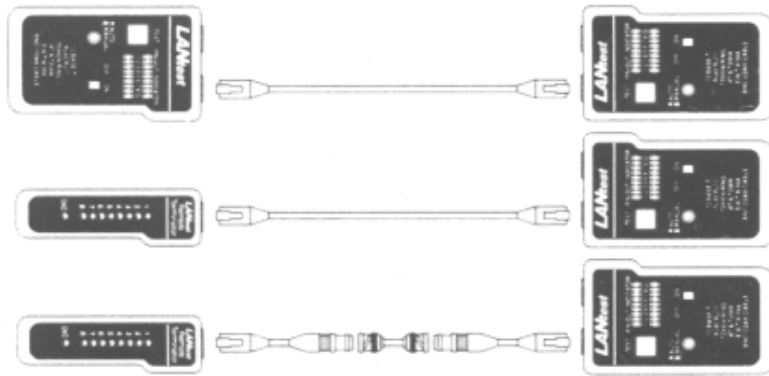

Picture 7.

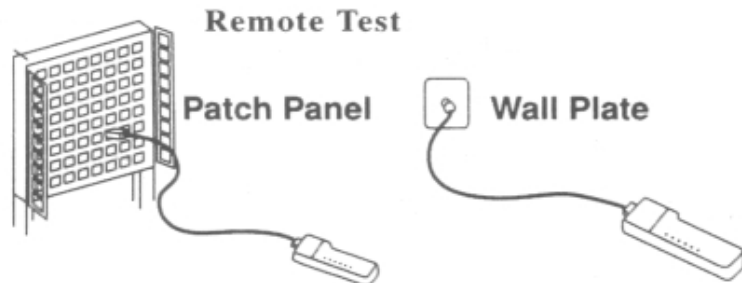

Picture 8.

## Test Result

1. Continuity: 

1	2	3	4	5	6	7	8	G
■	■	■	■	■	■	■	■	■

 Pin 2 is continued

2. Open: 

1	2	3	4	5	6	7	8	G
□	□	□	□	□	□	□	□	□

 Pin 2 is opened

3. Short: 

1	2	3	4	5	6	7	8	G
■	■	■	■	■	■	■	■	■

 Pin 2 and Pin 3 are shorted

4. Miswire: 

1	2	3	4	5	6	7	8	G
□	□	■	□	□	□	□	□	□

 Pin 3 and Pin 6 are miswired

## Warning:

1. Please don't operate the tester in live circuit because it may damaged the tester.
2. If you will not use the tester for a long time, take off the battery from battery compartment.

# Multi-Network Cable Tester Pro


## User Manual

253451

Multi-Network Cable Tester Pro

### INTRODUCTION

This series cable tester are specified to quickly test by auto scanning the wires continuity, missing and polarization of thin Ethernet (BNC), 10Base-T (UTP/STP), AT&T 258A, TIA 568A/B, Token Ring etc. By using the attached remote terminator, you can easily test the cable whatever before or after the cables installed. It is easy access and quickly check up.

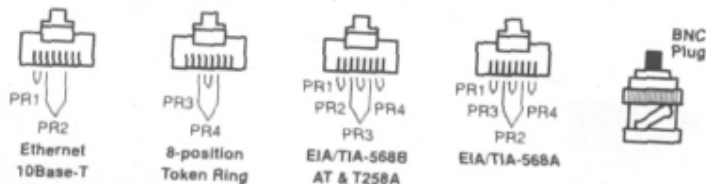

### OPERATION:

#### I. Test for Coaxial Cable (BNC)

1. Plug one end of tested cable to BNC socket of master unit and plug another end of tested cable to the BNC socket of remote terminator. (See Picture 1)



Picture 1

2. Slide the power switch on. The power LED will flash to show it is working properly.

3. As soon as the power switch was slid on, the LEDs of BNC Test will display the tested results. (See Picture 2).



Picture 2


#### II. Test for 10Base-T, AT&T 258A, EIA/TIA 568A/B, Token Ring Cable

1. Plug one end of tested cable to the RJ45 jack of the master unit and plug another end of tested cable to the RJ45 jack of remote terminator. (See Picture 3).



Picture 3

2. Slide the power switch on, the power LED will flash to show it is working properly.
3. As soon as the power was switched on, the LEDs on master unit will start to scan one by one. ( See Picture 4).

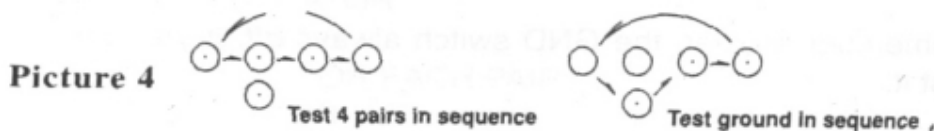


Picture 4

4. If the cable is OK, the LEDs on the master corresponding to each pair and ground LED will be lighted up GREEN. If the LED lighted up green first and red after (mix. Up) or it is unlight, the cable is bad.

### III. Remote Test


When the cable was installed on the patch panel or wall plate, you may use the attached adaptor cable and adaptor to change the gender of remote terminator. (See Picture 5).

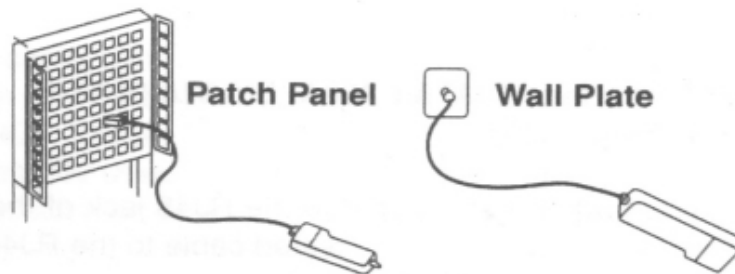

Picture 5

#### Warning:

1. Don't use this tester in live circuit because it may be damaged by higher voltage.
2. Please make sure the battery power is sufficient. If the Battery power is low, the LEDs will be dimmed, or be held up, or no light, If the battery power is low, the test results will be incorrect.
3. Remember to keep the GND switch always off, if you don't test it.
4. Remember to take the battery off from the battery compartment if the tester will not be used for a long time.

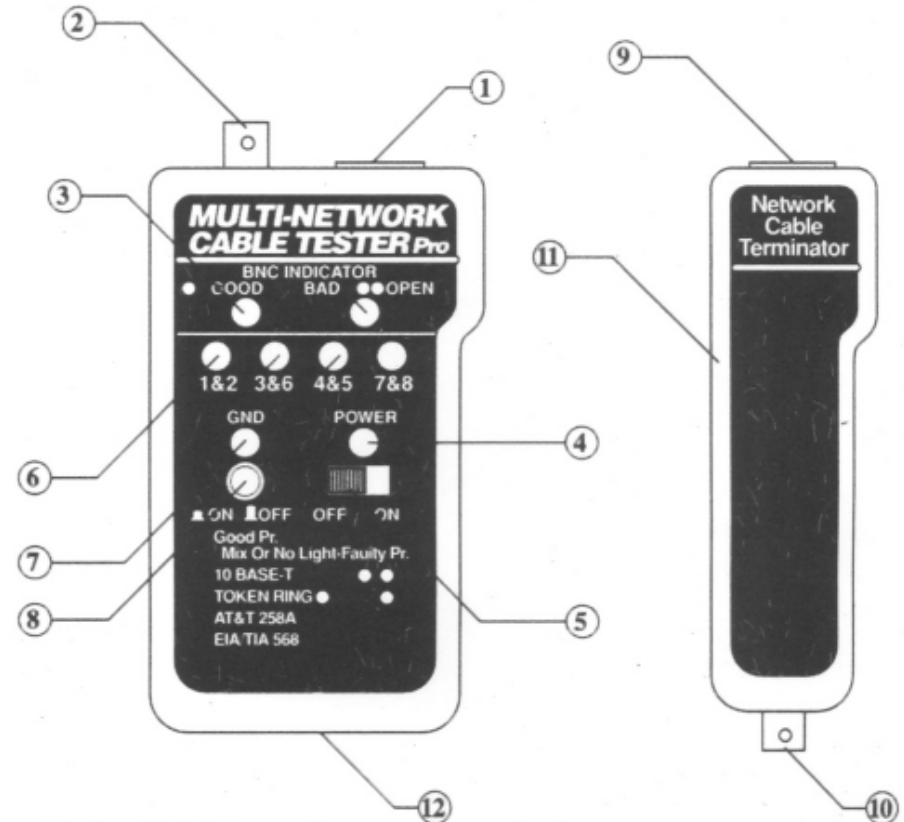

1. RJ45 JACK
2. BNC CONNECTOR
3. BNC INDICATOR
4. POWER INDICATOR
5. POWER SWITCH
6. LED DISPLAY FOR EACH PAIR
7. GND INDICATOR
8. GND SWITCH
9. RJ45 JACK
10. BNC CONNECTOR
11. REMOTE TERMINATOR BOX
12. BATTERY COMPARTMENT(9V)