

1900 Series

Models PR1902/4, PR1905/6, PR1912/4 & PR1915/6

Parallel Rigid Arm, Non-Hold Open and Hold Open

Installation Instructions


ACCENTRA

ASSA ABLOY


- Read these instructions before proceeding with the installation.
- Make sure that the door opens the full angle desired and latches without any binding action or interference.
- Select the type of installation from the following illustrations:

NOTE: For special applications, a separate door and frame preparation template is packed with these instructions. Use this instruction sheet for installation sequence and closer adjustments only.

Standard Frame Mount See page 3

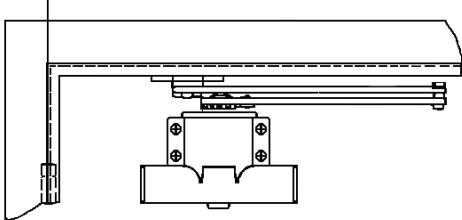


With 293S Block

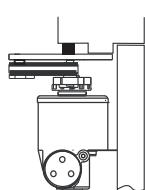


or


293S and 891 Blocks

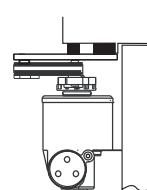

Narrow Frame Mount See page 4

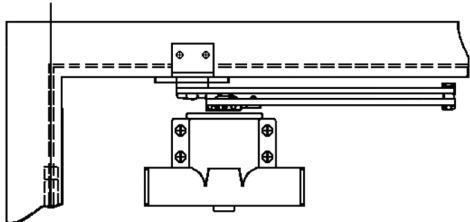


With 890 Bracket

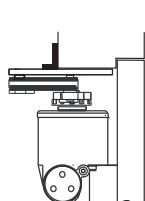


or


890 Bracket and 891 Block

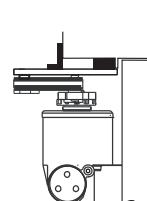


Flush Frame Mount See page 5

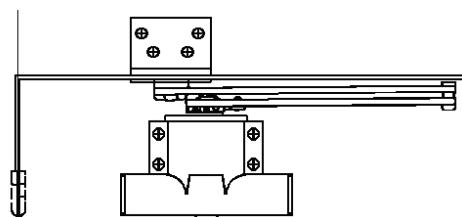

With 293L Bracket

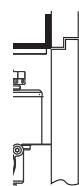

Hold Open Arm

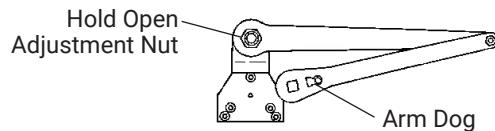

⚠ WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

⚠ WARNING

Attention Installer: Any retrofit or other field modification to a fire rated opening can potentially impact the fire rating of the opening, and ASSA ABLOY makes no representations or warranties concerning what such impact may be in any specific situation. When retrofitting any portion of an existing fire-rated opening, or specifying and installing a new fire-rated opening, please consult with a code specialist or local code official (Authority Having Jurisdiction) to ensure compliance with all applicable codes and ratings.


855-557-5078 x 2 • www.accentra-assaabloy.com

Copyright © 1980, 2009, 2024, ASSA ABLOY ACCENTRA™ Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

80-9319-0060-010 Rev 3 05/24

Experience a safer
and more open world


Determining Hand of Door

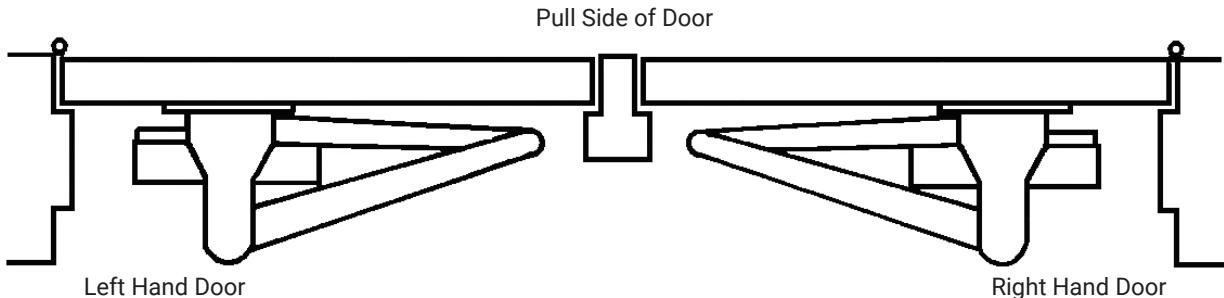


Reversing Closer Hand

To Reverse Closer Hand:


1. Remove main arm screw, arm assembly, ratchet, and top cover.
2. Lift out spring using screwdriver wedged between coils.
3. Reverse spring and re-assemble to required hand.
4. Rotate shaft to required hand.
5. Replace cover and insert ratchet, lining up slot with inner hook on spring.

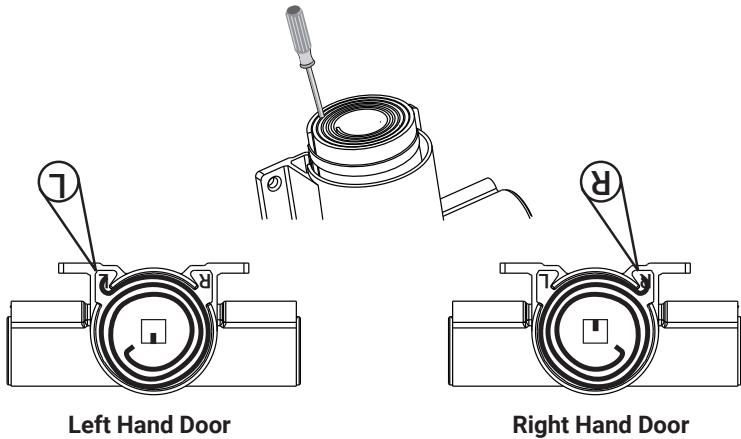



Indexing of Main Arm

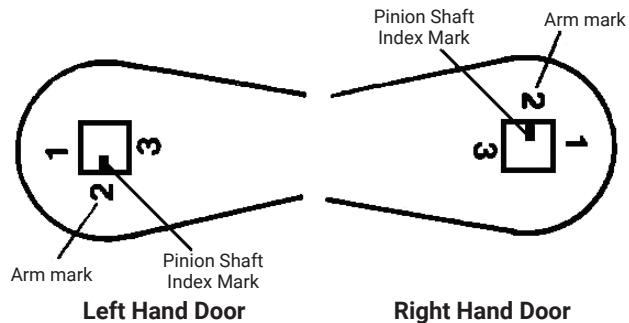

Standard Frame Installation

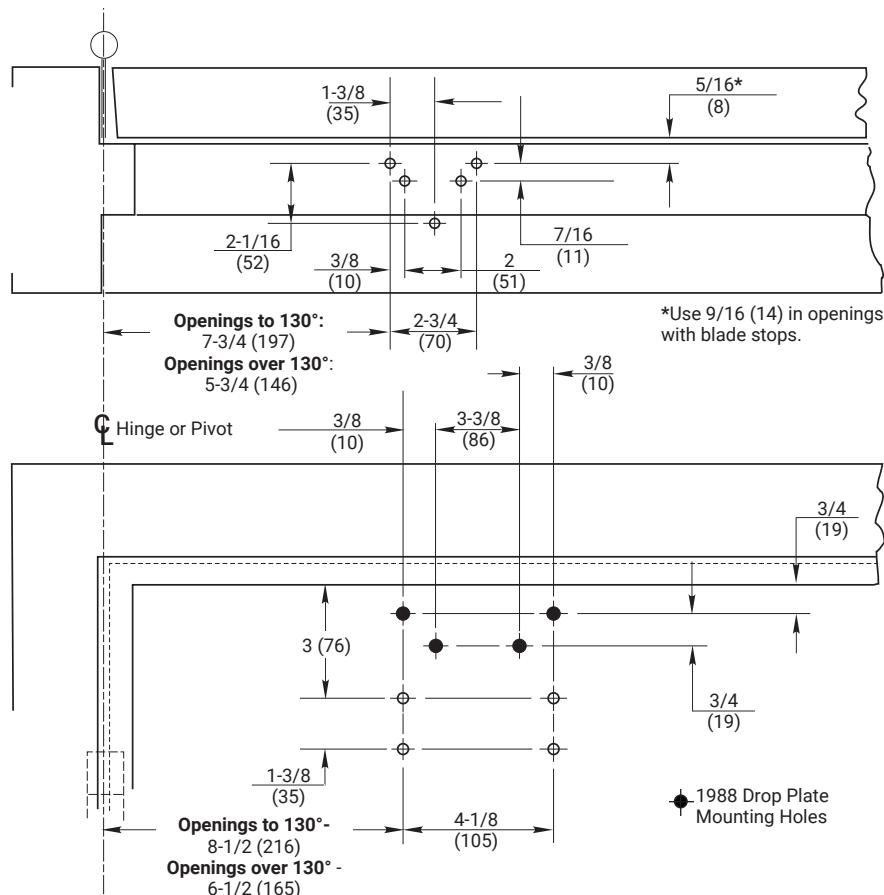

*Use 9/16 (14) in openings with blade stops.

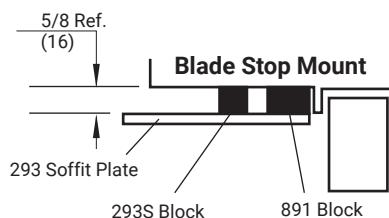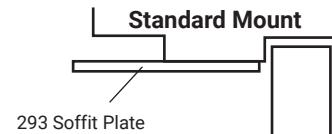

NOTES:

- Left Hand Door shown
- Same dimension apply for Right Hand Door, measured from centerline of pivot point.
- Do not scale drawing.
- Dimensions shown in inches (mm).


Preparation for Fasteners			
Fasteners	Application	Door or Frame	Drill-Sizes
Sex nuts and bolts	Closer, Drop Plate	Hollow Metal	9/32" (7mm) through; 3/8" (9.5mm) door face opposite of closer
		Aluminum or Wood	3/8" (9.5mm) through
#14 x 1-1/4" (32mm), type "A" Sheet Metal screws	Soffit Plate, 6190 Bracket	Wood	3/16" (4.3mm)
		Aluminum	7/32" (5.5mm)
1/4"-20 Machine Screw		Metal	Drill: #7 (0.201" dia) Tap: 1/4"-20

Installation Sequence

- From the template above, select the angle of opening desired. Locate and mark four (4) holes on the door for the closer body or 1988 drop plate, if used. Locate and mark five (5) holes on frame header for mounting soffit plate.
- Prepare the door and frame for fasteners (see "Preparation for Fasteners" above).
- Mount the drop plate, if used. Install the closer body to the door or fasten the closer body to the drop plate.
- Following the main arm indexing illustrations on page 2, place the main arm onto the closer pinion shaft. Install and tighten the main arm screw with a 1/2" wrench.
NOTE: Do not engage the arm dog into closer ratchet at this time.
- Open the door and attach the soffit plate to the frame header.
NOTE: Depending on the type of application, use shim blocks if needed.

● Go to Closer Adjustment Information on page 6.

Narrow Frame Installation

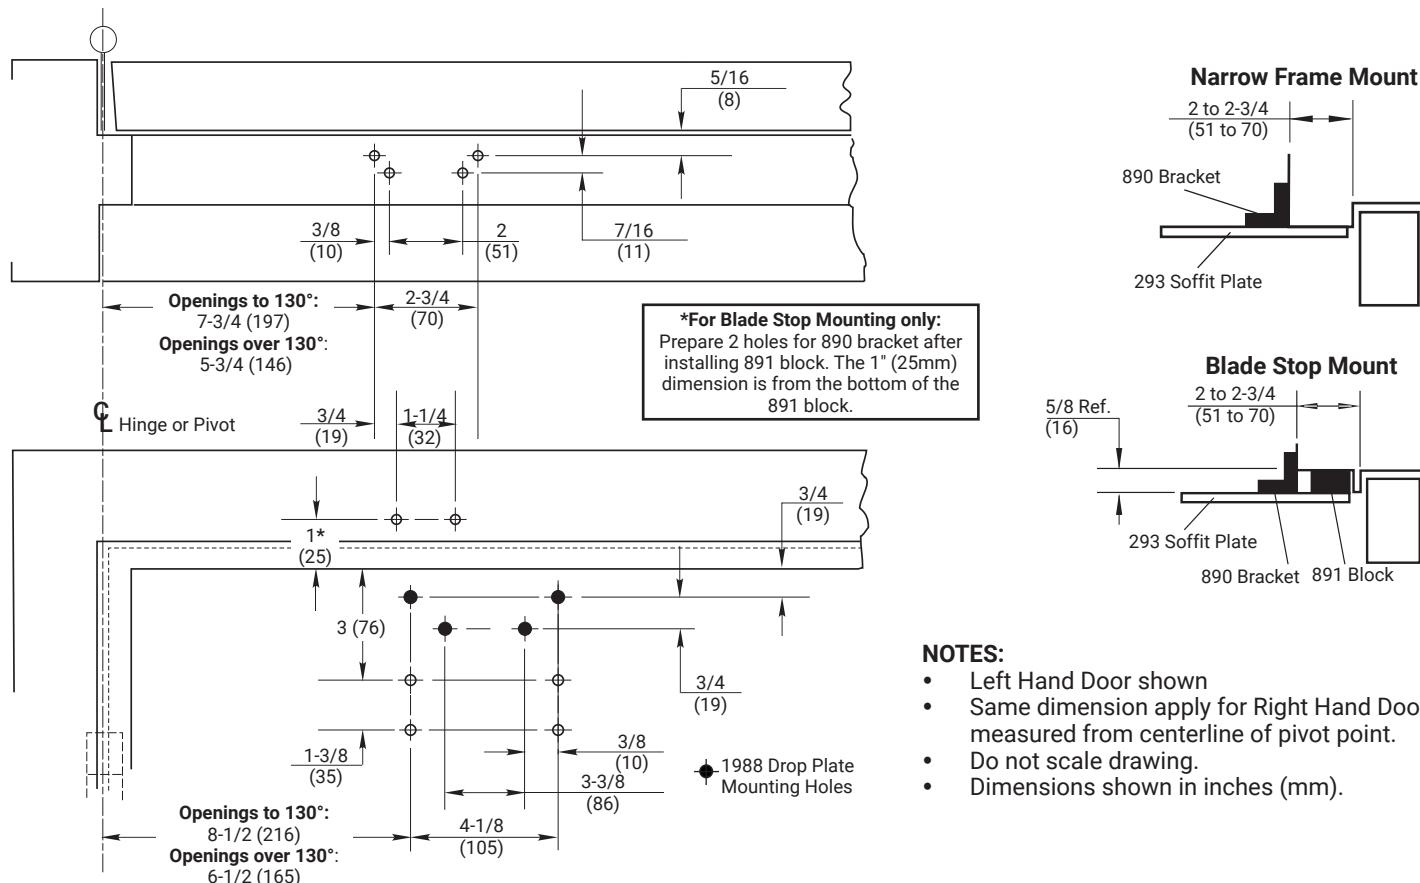

NOTES:

- Left Hand Door shown
- Same dimension apply for Right Hand Door, measured from centerline of pivot point.
- Do not scale drawing.
- Dimensions shown in inches (mm).


Preparation for Fasteners			
Fasteners	Application	Door or Frame	Drill-Sizes
Sex nuts and bolts	Closer, Drop Plate	Hollow Metal	9/32" (7mm) through; 3/8" (9.5mm) door face opposite of closer
		Aluminum or Wood	3/8" (9.5mm) through
#14 x 1-1/4" (32mm), type "A" Sheet Metal screws	Soffit Plate, 6190 Bracket	Wood	3/16" (4.3mm)
		Aluminum	7/32" (5.5mm)
1/4"-20 Machine Screw		Metal	Drill: #7 (0.201" dia) Tap: 1/4"-20

Installation Sequence

- From the template above, select the angle of opening desired. Locate and mark four (4) holes on the door for the closer body or 1988 drop plate, if used. Locate and mark six (6) holes on frame face and header for arm mounting. Measurements on header are taken from the frame face.
- Prepare the door and frame for fasteners (see "Preparation for Fasteners" above).
- Mount the drop plate, if used. Install the closer body to the door or fasten the closer body to the drop plate.
- Following the main arm indexing illustrations in on page 2, place the main arm onto the closer pinion shaft. Install and tighten the main arm screw with a 1/2" wrench.
NOTE: Do not engage arm dog into closer ratchet at this time.
- Open the door and attach the soffit plate and bracket to the frame header.
NOTE: Depending on type of application, use shim blocks if needed.

● Go to Closer Adjustment Information on page 6.

Flush Frame Installation

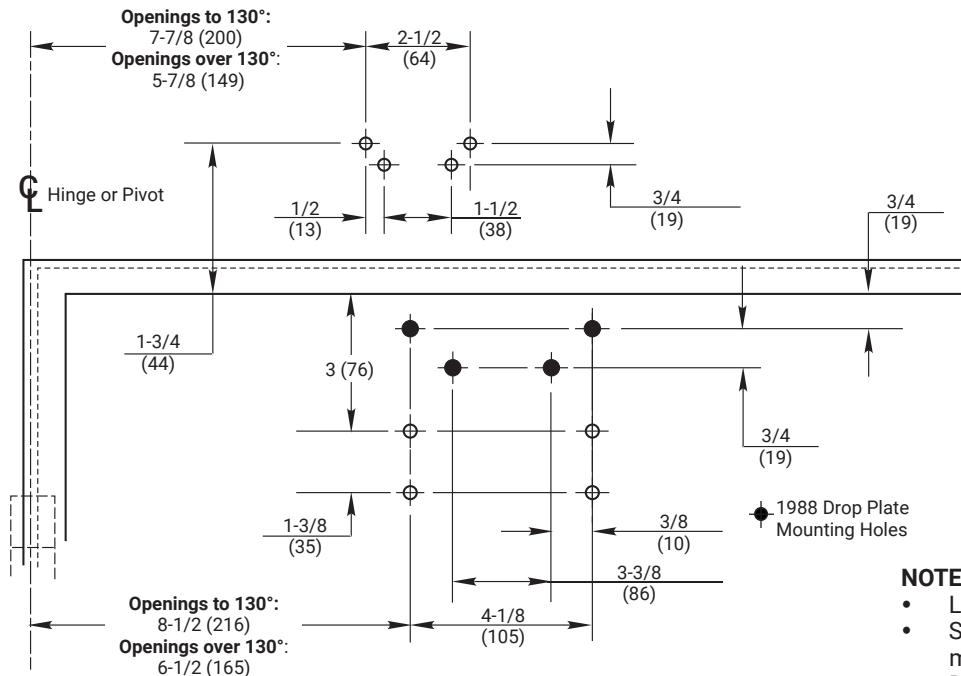

NOTES:

- Left Hand Door shown
- Same dimension apply for Right Hand Door, measured from centerline of pivot point.
- Do not scale drawing.
- Dimensions shown in inches (mm).

Preparation for Fasteners			
Fasteners	Application	Door or Frame	Drill-Sizes
Sex nuts and bolts	Closer, Drop Plate	Hollow Metal	9/32" (7mm) through; 3/8" (9.5mm) door face opposite of closer
		Aluminum or Wood	3/8" (9.5mm) through
#14 x 1-1/4" (32mm), type "A" Sheet Metal screws	Soffit Plate, 6190 Bracket	Wood	3/16" (4.3mm)
		Aluminum	7/32" (5.5mm)
		Metal	Drill: #7 (0.201" dia) Tap: 1/4"-20

Installation Sequence


1. From the template above, select the angle of opening desired. Locate and mark four (4) holes on the door for the closer body or 1988 drop plate, if used. Locate and mark four (4) holes on frame face for "L" bracket.
2. Prepare the door and frame for fasteners (see "Preparation for Fasteners" above).
3. Mount the drop plate, if used. Install the closer body to the door or fasten the closer body to the drop plate.
4. Following the main arm indexing illustrations on page 2, place the main arm onto the closer pinion shaft. Install and tighten the main arm screw with a 1/2" wrench.
NOTE: Do not engage the arm dog into closer ratchet at this time.
5. Open the door and attach "L" bracket to frame header. Fasten the soffit plate to "L" bracket.

● Go to Closer Adjustment Information on page 6.

Adjustments


Closing Tension

Place wrench (packed with door closer) on ratchet as shown. Swing wrench toward hinge to wind spring between 3 to 10 notches, engage dog in ratchet. Increase or decrease spring power to suit conditions.

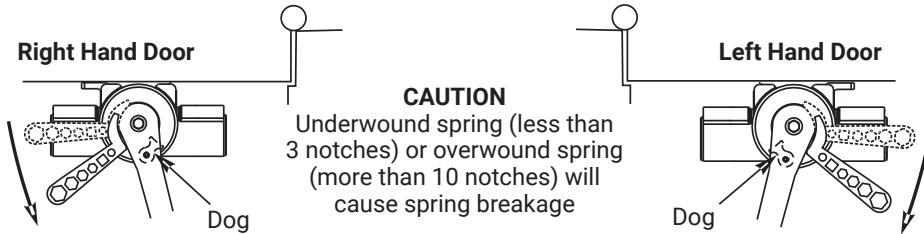

Hold Open Adjustment

Open the door to the angle of hold open desired and tighten the hold open adjustment nut with the wrench supplied.

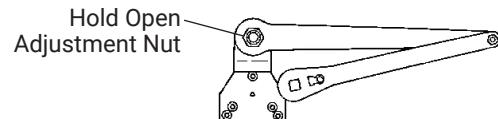

Parallel Arm Closer Adjustment:

Closing Speed: Controlled by the regulating valve on the end of the closer farthest from the hinge.

Sweep Speed: Controls the door's speed in the sweep speed range, shown above. Full 360° clockwise turns decreases the sweep speed. Full 360° counter-clockwise turns increases the sweep speed.

Latch Speed: Controls the door's speed in the latch range, shown above. A partial turn, up to a maximum of 1/2 turn (180°) in either direction determines the latch speed.

Backcheck: Controlled by the regulating valve on the end of the closer closest to the hinge. Backcheck cushions or slows the door opening speed near the end of the opening cycle. Full 360° clockwise turns increases resistance to opening. Full 360° counter-clockwise turns decreases resistance to opening.

NOTE: If backcheck is encountered extremely early in the opening cycle, rotate the valve 1/2 turn (180°) to eliminate early opening resistance.

CAUTION: To avoid damage to the closer, never fully close the backcheck regulating valve.

(Use 1/8" Hex Wrench for these adjustments)

