

Important Safety Information for Wall Bars

Remember! Only sensible use of the wall bars guarantees safety.

It is recommended that exercises and play take place on a surface protected by an appropriate mat.

The manufacturer is not liable for damages resulting from thoughtless use of the set.

Do Not!

- Allow children to use the set unsupervised by adults.
- Allow children to tinker independently with the set's components, such as ropes, rings, etc.
- Allow more than one person to use the set at the same time.

Guidelines for Safe Use of the Set

Guardian, remember that you are responsible for the child playing on the set. You set the boundaries for how far the child can go.

Dress the child in comfortable clothing, preferably shoes with non-slip soles. Avoid clothing with elements that could snag on the set's components.

Before each use, check that all components of the set are functional, properly fitted, and securely fastened.

Remember that children like to experiment, so do not leave them unsupervised.

PARTS LIST		
POSITION	QTY	PARTS NAME
1	1	lower right wall bar side rail
2	1	upper right wall bar side rail
3	1	upper left wall bar side rail
4	1	lower left wall bar side rail
5	8	dowel nut
6	8	M6x22 flat head screw
7	24	rubber washer
8	9	rung 782mm
9	24	rung screw
10	6	angle bracket
11	24	flat head philips screw
12	3	rung 716mm
13	1	left side adjustable bar
14	1	right side adjustable bar

ATTENTION!

This set is intended for home and school use.

Assembly must be carried out in accordance with these assembly instructions. After mounting the wall bars to the wall and all its components, you must perform checking procedures for each element.

ASSEMBLY INSTRUCTIONS

Carefully unpack all components.

Important! Do not attach the angle brackets before the rails are fully assembled.

1. Start assembly with the wooden side rails - refer to Figure 1. First, you need to assemble the bottom and top rails to form a single unit.

2. Fasten the rails using M6 flat head screws and Ericson nuts. Once the rails are assembled, attach the angle brackets to them - refer to Figure 2.

3. Insert rubber washers into the holes for the rungs - these prevent the rungs from rotating - refer to Figure 3.


Next, place the rungs into the holes in the rails and securely fasten them with screws. Remember that overtightening can strip the screw or tear out the thread. Therefore, you need to do this with care. After tightening the screws, place the second wooden rail onto the rungs and screw it on in the same manner.

The entire set should be mounted to the wall using expansion anchors. You'll need to purchase these separately, choosing them to match the type and material of your wall.

We recommend expansion anchors no shorter than 10cm in length and no less than 12mm in diameter.

Even though there are two holes in each angle bracket, you only need to use one expansion anchor per angle bracket.

Remember, after mounting the set to the wall, you must check that the fastening is sufficiently strong!

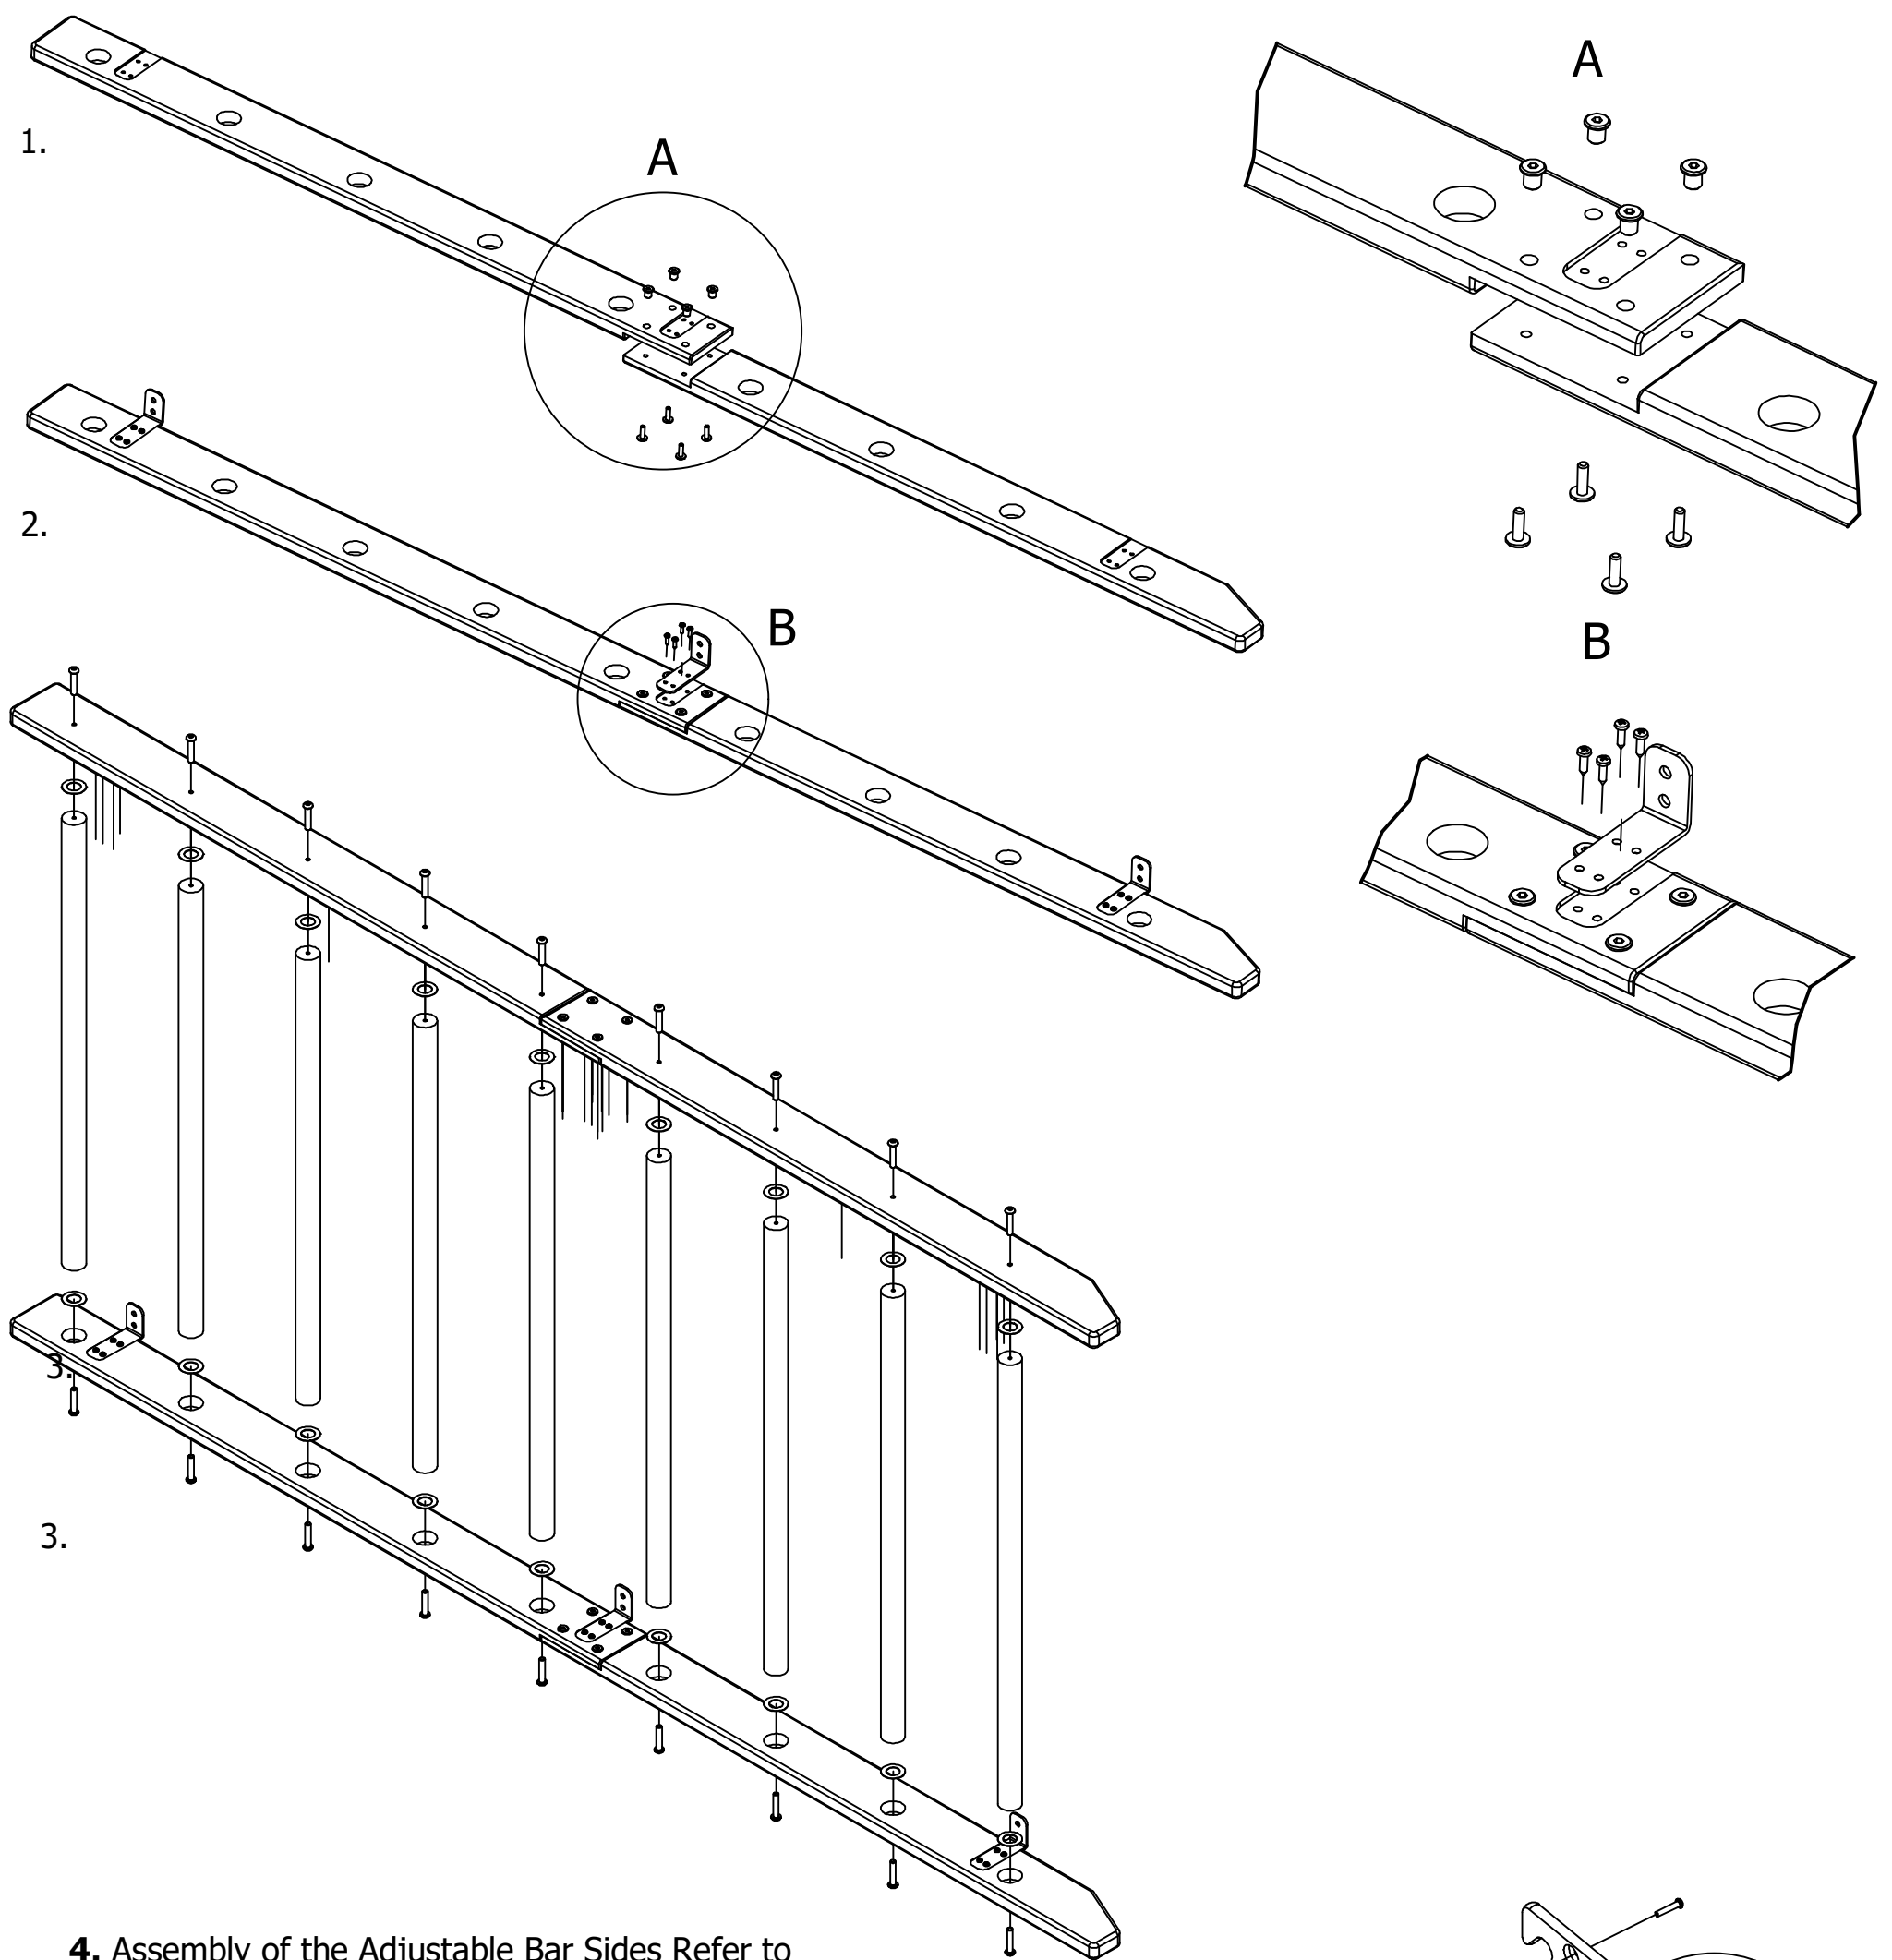

4. Assembly of the Adjustable Bar Sides Refer to Figure 4.

Start by placing rubber washers in the holes for the rungs.
Insert the rungs and assemble them using screws.
After this step, attach the second plywood side piece and fasten it in the same way.

This assembled unit can then be placed onto the wall bar rungs at your desired height.

Remember to check that everything is secure and stable after each adjustment.

Depending on the set's accessories, additional elements such as ropes, rings, or swings should be installed according to their specific instructions.

