

To add and delete users in card and PIN mode ([3] [1] [#])	
To add a card and PIN user (The PIN is any four digits between 0000 - 9999 with the exception of 1234 which is reserved.)	Add the card as for a card user Press [1] to exit from the programming mode Then allocate the card a PIN as follows: [*] [Read Card] [1234 #] [PIN #] [PIN #]
To change a PIN in card and PIN mode (Method 1) Note that this is done outside programming mode so the user can undertake this themselves	[*] [Read Card] [Old PIN #] [New PIN #] [New PIN #]
To change a PIN in card and PIN mode (Method 2) Note that this is done outside programming mode so the user can undertake this themselves	[*] [ID number#] [Old PIN #] [New PIN #] [New PIN #]
To delete a Card and PIN user just delete the card	[2] [User ID] [#]

To add and delete card users by Manager cards	
To add card user by ManagerAdd Card	[Manager add card] [Read card] [Manager add card] Cards can be added continuously.
To delete card user by ManagerDelete Card	[Manager delete card] [Read Card] [Manager delete card] Cards can be deleted continuously.

To unlock the door	
For a PIN user	Enter the [PIN] then press [#]
For a card user	[Read card]
For a card and PIN user	[Read card] then enter [PIN #]

10.2 Door Relay, Door Open Detection, Alarm, Facility Code Settings

Door relay time setting	
Door relay time setting	[4] [0-99] [#] The door relay time is between 0-99 seconds, the factory default setting is 5 seconds.

Door Open Detection	
<i>Door Open Too Long (DOTL) warning.</i> When used with an optional magnetic contact or built-in magnetic contact of the lock, if the door is opened normally, but not closed after 1 minute, the inside buzzer will beep automatically to remind people to close the door and continue for 1 minute before switching off automatically. <i>Door Forced Open warning.</i> When used with an optional magnetic contact or built-in magnetic contact of the lock, if the door is forced open, or if the door is opened after 120 seconds of the electro-mechanical lock not closed properly, the inside buzzer and alarm output will both operate. The Alarm Output time is adjustable between 1-3 minutes with the default being 1 minute	

To disable door open detection (Factory default setting)	[6] [0] [#]
To enable door open detection	[6] [1] [#]

Keypad Lockout & Alarm Output options. If there are 10 invalid cards or 10 incorrect PIN numbers in a 10 minute period either the keypad will lockout for 10 minutes or the alarm will operate, depending on the option selected below


Normal status: No keypad lockout or alarm	[7] [0] [#] (Factory default setting)
Keypad Lockout	[7] [1] [#]
Alarm Output	[7] [2] [#]
Alarm Output time	
To set the alarm output time (1-3 minutes) Factory default is 1 minute	[9] [1-3] [#]

To remove the alarm	
To reset the Door Forced Open warning	[Read valid card] or [Master Code #]
To reset the Door Open Too Long warning	Close the door or [Read valid card] or [Master Code #]
To set the facility code	
To set the facility code of W1-B/W3-B (This operation might be required when W1-B/W3-B is acting as wiegand reader and connecting to multi-door controller)	[8] [Facility code] [#] [Repeat Facility code] [#] Facility Code can be any number between 1-255 (Default: 0)

11. Interconnecting Two Devices

11.1 W1-B/W3-B Operating as a Wiegand Output Reader

In this mode the W1-B/W3-B supports a Wiegand 26 bit output so the Wiegand data lines can be connected to any controller which supports a Wiegand 26 bits input. See

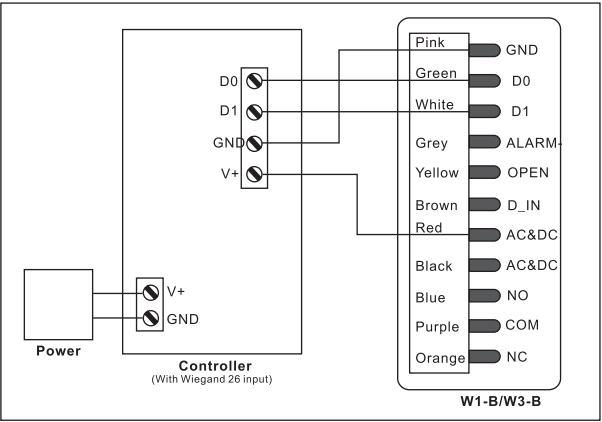

Transmission Format:

◆ 1: Keypad Transmission

The Reader will transmit the PIN data when it receives the last key (#) press after PIN code.

Format: Facility Code + PIN Code

(Facility code is any digits between 0-255, factory default is 0; PIN code is any 4 digits between 0000-9999)

Example: Facility code: 1

PIN code: 5678

Press 5678 #, then the output format will be: 00105678

◆ 2: Proximity Card Transmission


The Reader will transmit the card data when it reads the Card.

Format: Card Number (the last 8 digits of Card Number)


Remarks: No matter the card or PIN is valid or invalid, the data will be transmitted

11.2 W1-B/W3-B operating as a Controller

In this mode the W1-B/W3-B supports a Wiegand 26 bits input so an external Wiegand device with a 26 bits output can be connected to the Wiegand input terminals on the W1-B/W3-B. Either an ID card reader (125KHz) or an IC card reader (13.56MHZ) can be connected to the W1-B/W3-B. Cards are required to be added at the external reader, except where an external EM reader is used, in this case cards can be added at either reader or controller. See figure 2.

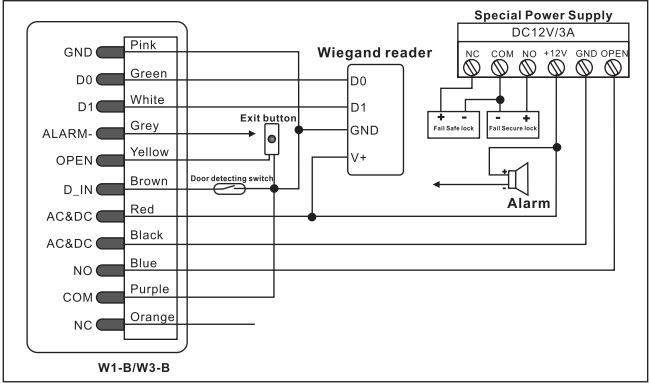

Waterproof Keypad/Reader/Controller

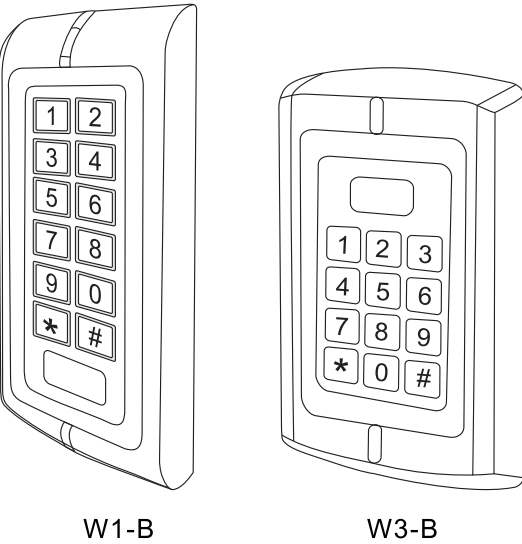

User Manual

1. Packing list

Name	Quantity	Remark
Digital Keypad W1-B/W3-B	1	
User Manual	1	
Screw Driver	1	
Rubber Bungs	4	6*27mm, used for fixing
Self Tapping Screws	4	3.5*27mm, used for fixing
Manager Card	2	Manager Add Card & Manager Delete Card

Please ensure that all the above contents are correct. If any are missing please notify the supplier of the W1-B/W3-B.

2. Description

(W1-B&W3-B are in the same function, only different in shape.)

W1-B/W3-B is a single door multifunction access controller or a Wiegand output keypad or card reader. It is suitable for mounting either indoor or outdoor in harsh environments. It is housed in a strong, sturdy and vandal proof zinc alloy electroplated case.

The electronics are fully potted so the W1-B/W3-B is waterproof and conforms to IP68. The W1-B/W3-B supports up to 2500 users in either a Card, 4 digits PIN, or a Card + PIN option. The inbuilt card reader supports EM 125KHz frequency card/Tag. The W1-B/W3-B has many extra features including block enrollment, wiegand 26 bits interface, and backlit keypad...etc.

These features make the W1-B/W3-B an ideal choice for door access not only for small shops and domestic households but also for commercial and industrial applications such as factories, warehouses, laboratories, banks and prisons.

3. Features

- Waterproof, conforms to IP68
- Strong zinc alloy electroplated anti-vandal case
- Full programming from the keypad
- 2500 users, supports Card, PIN, Card + PIN
- PIN length:4 digits; card type: 125KHz EM card
- Can be used as a stand alone keypad
- Programmable one relay output
- Backlight keypad
- Wiegand 26 bits input & output
- Programmable facility code
- Adjustable door output time, alarm time, door open time
- Block enrollment, can enroll maximum 2500 consecutive card within 3 minutes
- Very low power consumption (60Ma)
- Fast operating speed, <20ms with 2500 users


- Easy to install and program
- Built in light dependent resistor (LDR) for anti tamper
- Built in buzzer
- Red, yellow and green LED display the working status
- 12-24V DC/12-18V AC
- Two- year warranty

4. Specifications

Operating Voltage	12-24V DC/12-18V AC	Operating Humidity	5%- 95% RH
User Capacity	2500	Environment	Conforms to IP68
Keypad	12 keys, 2 x 6 digits(W1-B)	Adjustable DoorRelaytime	0-99 seconds
	12 keys, 3 x 4 digits(W3-B)	Adjustable Alarm Time	0-3 minutes
Card Type	EM 125 KHz card/Tag	Wiegand Interface	Wiegand 26 input & output
Card Reading Distance	3-6 cm	Wiring Connections	Electric Lock,Exit Button, DOTL, ExternalAlarm
Active Current	<80mA	Dimensions	L135 x W58 x H26 mm(W1-B) L128 x W62 x H28 mm(W3-B)
Idle Current	≤40mA		
Lock Output Load	Max 2A		
Alarm Output Load	Max 20A		
Operating Temperature	-40°C~60°C	Net Weight	550 g
		Gross Weight	700 g

5. Installation



- Remove the back cover from the keypad using the supplied security screwdriver
- Drill 4 holes on the wall for the screws and 1 hole for the cable
- Fix the back cover firmly on the wall with 4 flat head screws
- Thread the cable through the cable hole
- Attach the keypad to the back cover

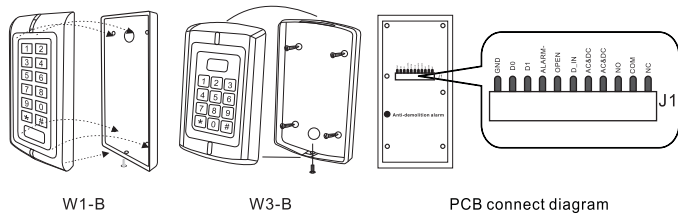

6. Wiring

Colour	Function	Description
Green	D0	Wiegand Output D0
White	D1	Wiegand Output D1
Grey	Alarm -	Alarm Negative
Yellow	OPEN	Request to Exit Button
Brown	D_IN	Door Contact
Red	AC&DC	12-24V DC/12-18V AC Power Input
Black	AC&DC	12-24V DC/12-18V AC Power Input
Blue	NO	Relay NO
Purple	COM	Relay COM
Orange	NC	Relay NC
Pink	GND	W1-B/W3-B Negative


Connection Diagram

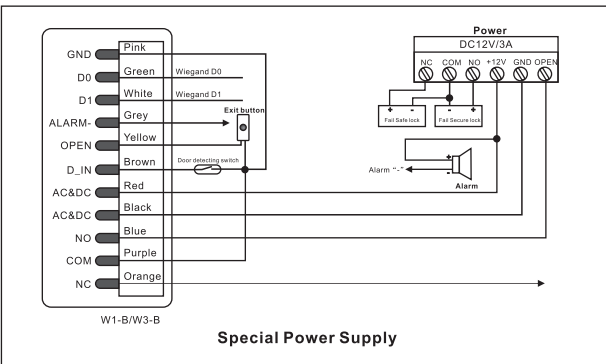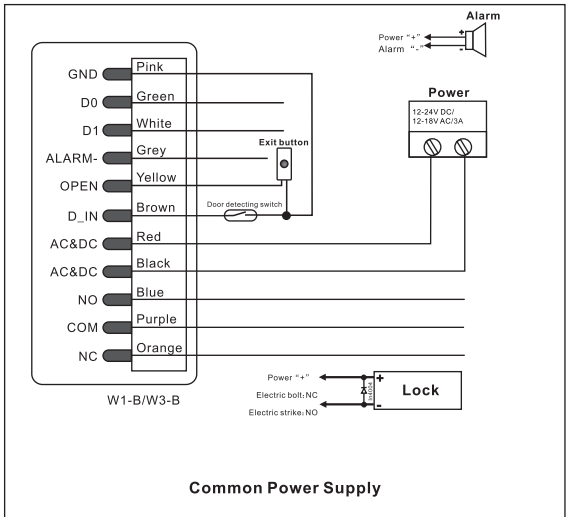

Notes:

Connect the negative pole of the lock to NC is for Fail safe lock.
Connect the negative pole of the lock to NO is for Fail secure lock.

7. To Reset to Factory Default

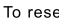To reset to factory default, power off, press  , hold it and power on, release it until hear two beeps and the LED shines in orange, then read any two EM cards, the LED will turn in red, means reset to factory default setting successfully. Of the two EM cards read, the first one is Manager Add card, the second one is Manager Delete card.

Remarks: Reset to factory default, the user's information is still retained.

8. Anti Tamper Alarm



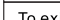








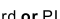


The W1-B/W3-B uses a LDR (light dependent resistor) as an anti tamper alarm. If the keypad is removed from the cover then the tamper alarm will operate.

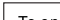
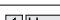
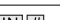






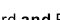



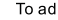

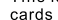






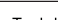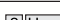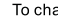



9. Sound and Light Indication

Operation Status	Red Light	Green Light	Blue Light	Buzzer
Power on	Bright	-	-	Short Ring
Stand by	Bright	-	-	-
Press keypad	-	-	-	Short Ring
Operation successful	-	Bright	-	Short Ring
Operation failed	-	-	-	3 Short Ring
Enter into programming mode	Bright	-	-	Short Ring
In the programming mode	-	-	Bright	-
Exit from the programming mode	Bright	-	-	Short Ring
Open the door	-	Bright	-	Short Ring
Alarm	Bright	-	-	Alarm

10. W1-B/W3-B Detailed Programming Guide

10.1 User Settings

To enter the programming mode	 Master code  #
To exit from the programming mode	 #
Note that to undertake the following programming the master user must be logged in	
To change the master code	 New code  # New code  # The master code is any 6 digits
Setting the working mode:	
Set valid card only users	  # Entry is by Card only
Set valid card and PIN users	  # Entry is by Card and PIN together
Set valid card or PIN users	  # Entry is by either Card or PIN (default)
To add and delete users in either card or PIN mode   # (Default setting)	

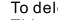To add a PIN user	 User ID number  # PIN  # The ID number is any number between 1 - 2500. The PIN is any four digits between 0000 - 9999 with the exception of 1234 which is reserved. Users can be added continuously without exiting from programming mode as follows:  User ID No  1  # PIN  #
To delete a PIN user	 User ID number  # Users can be deleted continuously without exiting programming mode
To change the PIN of a PIN user (Note:This step must be done out of programming mode)	 ID number  # Old PIN  # New PIN  #
To add a card user (Method 1) This is a fast way to enter cards using ID number auto generation.	 Read Card  # Cards can be added continuously without exiting programming mode
To add a card user (Method 2) This is the second way to enter cards using User ID Allocation. In this method a User ID is allocated to a card. Only one user ID can be allocated to a single card.	 ID Number  # Card  #
To add card user (Method 3) Add a series cards users Block Enrollment	 ID number  # 8 digits Card number  # Card quantity  # Card quantity is between 1-2500. The 8 digits card number is the last 8 digits on the card. Maximum 2500 cards can be enrolled at a stretch within 3 minutes.
To delete card user by read card Note: Users can be deleted continuously without exiting from programming mode	 Read Card  #
To delete card users by user ID This option can be used when a user has lost their card	 User ID  #