

DVR Digital Video Recorder 8CH H.264 VGA CBVS D1 HDMI

User Manual



BUY ON
www.cablematic.com

Content

1	Overviews.....	3
1.1	Description	3
1.2	Installation environment	3
2	Installation	4
2.1	Preparation.....	4
2.2	Installation	4
3	Functional Specification.....	5
3.1	Log-in page	5
3.2	Wizard	5
3.3	Device Manager	6
3.3.1	Search IP in LAN and Add	6
3.3.2	Add Group.....	7
3.3.3	Add devices manually	7
3.3.4	Close window.....	8
3.4	Monitoring	9
3.4.1	View	10
3.4.2	other features	11
3.5	Playback.....	12
3.6	Record Settings	13
3.6.1	Storage settings	13
3.6.3	Record settings	13
3.7	Log	14
3.8	Alarm info	14
3.9	Device Config	15
3.9.1	Network.....	16
3.9.1.1	Set device's IP	16
3.9.1.2	PPPOE	16
3.9.1.3	Email	16
3.9.1.4	FTP	17
3.9.1.5	RTSP	24
3.9.1.6	Cloud	25
3.9.1.7	DDNS.....	25
3.9.1.8	DAS	25
3.9.2	Encode	27
3.9.3	Camera parameters.....	27
3.9.4	System	28
3.9.5	Version info	28
3.9.6	Exception handling.....	29
3.9.7	video detect	29
3.9.8	Disk manager.....	30
3.9.9	Record config	30
3.10	Alarm config	30
3.11	Tour	31
3.12	System Config	32
3.13	Extensions	32

1 Overviews

1.1 Description

VMS is a newly developed client software for our products . The suppressible toolbar, succinct GUI and rich functionality make it a very intelligent and user-friendly monitoring management software which can be used in various scenes.。

VMS support talk with device, instantaneous screenshots

VMS support multiple video preview at the same time.

VMS support intelligent tour plans to displace manual operations.

You can easily search video files that not only recorded in PC (Local side) but also recorded in devices.

Different alarm features meet customer's every need.

The further extensions---"My cloud" and "Maps" will make it more convenient for practical application.

1.2 Installation environment


Operating system:	Windows system(it would support Mac and Linux system in subsequent version)
CPU:	Above 2.4GHz
Memory:	Above 1GB
Graphics:	Discrete graphics

- In theory the preview number is $64 * 4$. The actual preview number is limited by the properties of the server, the resolution of devices (bit rate) ,network bandwidth etc.

2 Installation


2.1 Preparation

When installing the VMS, it would prompt you to install Visual C++ 2008 first. This is to ensure your PC has installed all library files the VMS needs. So if you see the following pop-up notification, please click yes to install it.

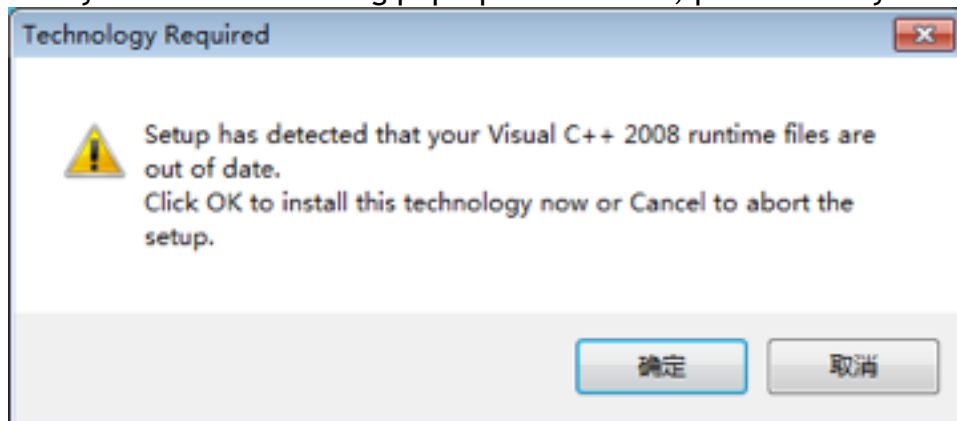

2.2 Installation

After installing Visual C++ 2008, choose language and start installing the software.

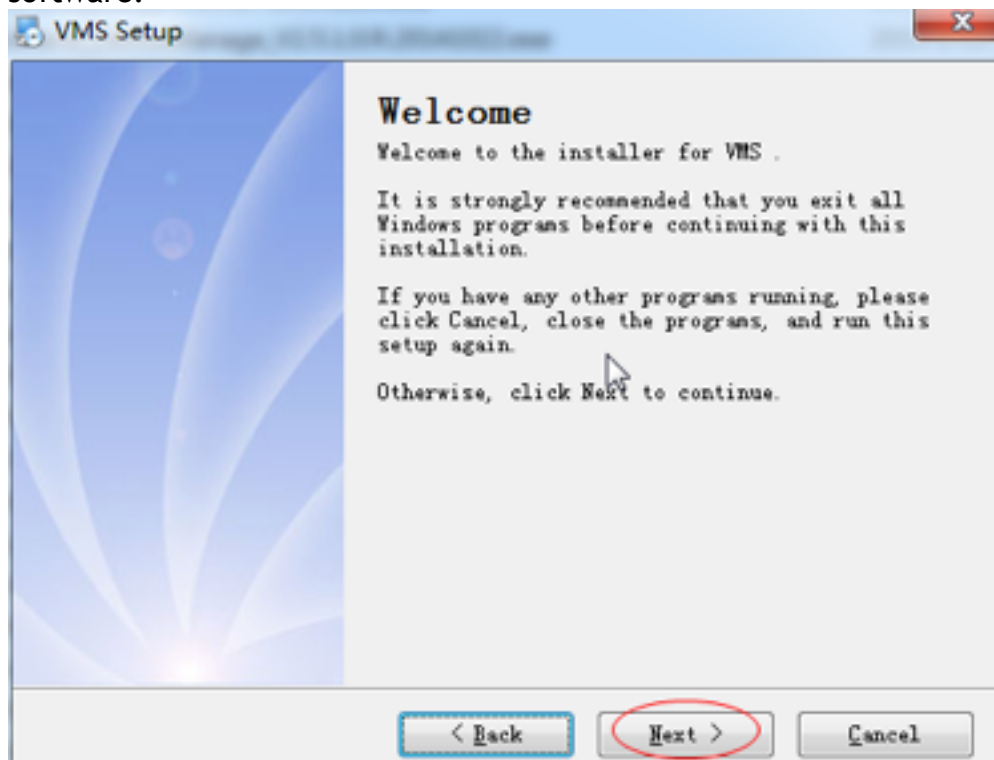

Double click the shortcut icon on the desktop:



3 Functional Specification

3.1 Log-in page


Start VMS:

Input user name and password, click OK.

3.2 Wizard

There is a configuration wizard when you open the software for the first time. It is to select a way to add devices:


- | | |
|----------------------------|---|
| Add devices automatically: | auto add devices (in the same LAN) to VMS. |
| Add devices manually: | when you choose this way, you need to go to 'Device Manager' to add devices manually. |
| Do not show next time: | Tick it, this wizard won't show again |
| Next: | Click it, it will go to the 'Device Manager' page. |
| Cancel: | To exit the wizard |

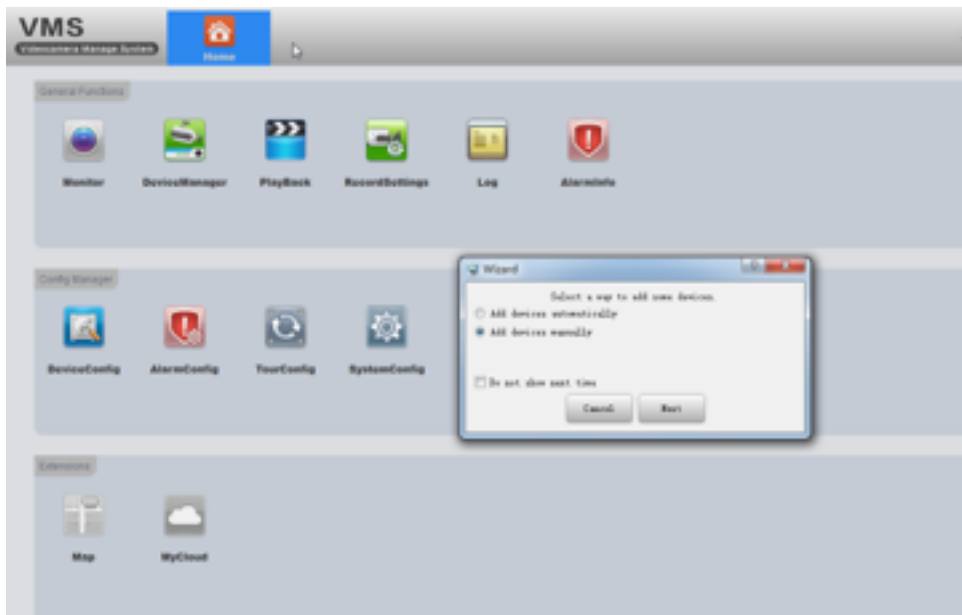

3.3 Device Manager

- If you choose “add devices automatically” in wizard, it will come to this page and countdown to auto add devices.
- If you choose “Add devices manually” in wizard, you can either choose the discovered devices to add directly (as shown in the following picture) or you can click “Manual add” to add manually (See 3.3.3).


3.3.1 Search IP in LAN and Add

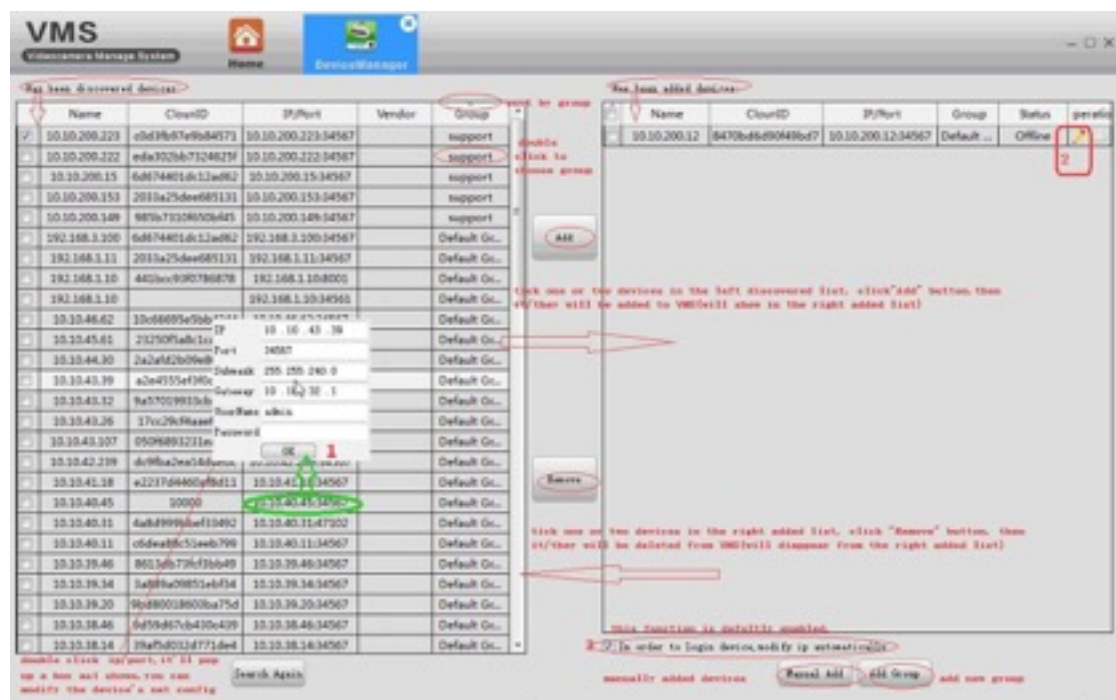

- Sometimes you may find that the device is in the left discovered list but


you can't add it to VMS. This means that your device is physically connected in the LAN but its IP is not in the same network segment with your PC. You can either use the function 3----modify IP automatically(it will auto change your device's IP to the same segment with your PC), or you can manually modify the device's IP by double click IP/port in the left list(as shown in the above picture).

- If you want to add the discovered devices by Cloud ID, click this icon, choose login type: by IP/Domain or by Cloud ID.

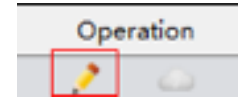


3.3.2 Add Group


If you have many devices , you'd better divide them into different groups .

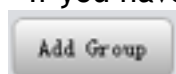

click this button to add new group. The interface is as follows:

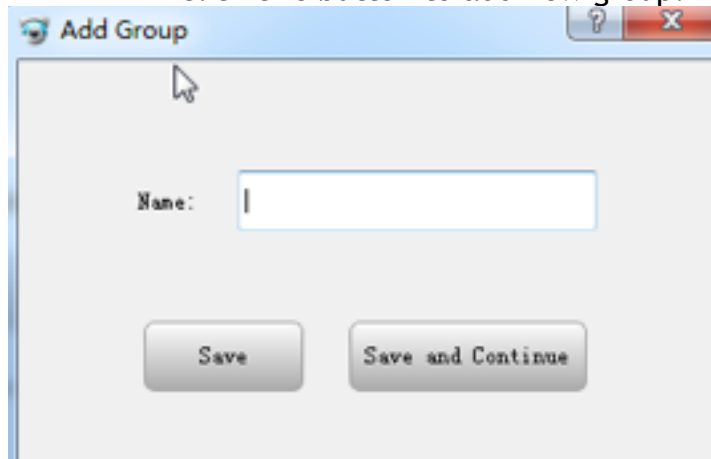

3.3.3 Add devices manually

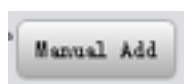

click this button to add device manually. The interface is as follows:

Device name:		Edit a name for the device to identify different devices easily.
Group:		select a group for this device
Log-in Type:		Choose a way to add device,by IP/Domain or by Cloud ID
By IP/Domain	IP/Domain	Device's IP/Domain
	Port	Device's TCP port
By Cloud ID	Cloud ID(SN)	Device's Cloud ID(Serial Number)
User name, Password		Device's Username and password

Add Device

Device Name:

Group:

Login Type:

IP/Domain:

Port:

UserName:

Password:

Add Device

Device Name:

Group:

Login Type:

Cloud ID (Serial NO):

UserName:

Password:

- If you need to add more than one devices , please Click ‘Save and Continue’, then you can add continuously.
- If you only need to add one device, please click ‘OK’.
- If you don’t want to add, please click ‘Cancel’.

3.3.4 Close window

VMS
Video Camera Management System

Home **Device Manager**

click the cross to close the window

Has been discovered devices

Name	CloudID	IP/Port	Vendor	Group
10.10.13.24	d8f7d31265d56e59	10.10.13.24.34514		Default Gr...
10.10.13.21	05ba70ed8485ced8	10.10.13.21.34521		Default Gr...
10.10.13.22	d862880891b2198a	10.10.13.22.34512		Default Gr...
10.10.13.24	d55cc41700c34baa	10.10.13.24.34514		Default Gr...
10.10.13.34	2aef9d6b116886246	10.10.13.34.34514		Default Gr...
10.10.13.42	02262b6c9902c99	10.10.13.42.34542		Default Gr...
10.10.13.43	7993eba214166680	10.10.13.43.34543		Default Gr...
10.10.13.44	4f12928a058519a2	10.10.13.44.34544		Default Gr...
10.10.13.51	94489c5d6469a367	10.10.13.51.34511		Default Gr...
10.10.13.52	727afec7f2834e2	10.10.13.52.34512		Default Gr...
10.10.13.53	901c5bdc62213c89	10.10.13.53.34513		Default Gr...
10.10.200.127	c0791b077a8076d2	10.10.200.127.34567		Default Gr...
10.10.200.148	4262089348a72082	10.10.200.148.34567		Default Gr...
10.10.200.149	985b73108f50b445	10.10.200.149.34567		Default Gr...
10.10.200.227	88010b7151a17b4	10.10.200.227.34567		Default Gr...
10.10.200.247	beb193780740e69a	10.10.200.247.34567		Default Gr...
10.10.12.127	3f0a67740239348a	10.10.12.127.34567		Default Gr...
10.10.12.187	48935012eed1676	10.10.12.187.34567		Default Gr...
10.10.12.194	3c4f129952a3e428	10.10.12.194.25005		Default Gr...
10.10.12.213	a8f50dc1230ae29f	10.10.12.213.34567		Default Gr...
10.10.12.242	3c0a1b84c288885	10.10.12.242.34567		Default Gr...
10.10.12.245	ed0a100481b11758	10.10.12.245.34567		Default Gr...
10.10.12.42	26e0667b13bdc0b4	10.10.12.42.34567		Default Gr...
10.10.12.71	127844b7e8f0e4e25	10.10.12.71.34567		Default Gr...
10.10.13.116	47e4984d050b4016	10.10.13.116.34567		Default Gr...
10.10.13.140	6070541954076a7e	10.10.13.140.34567		Default Gr...



Has been added devices

Name	CloudID	IP/Port	Group	Status
10.10.200.222	eda102bb7124625f	10.10.200.222.34567	support	Offline
10.10.200.153	2915a75bca9f0110	10.10.200.153.34567	support	Connected
10.10.200.224	c0de4db71eeb799	10.10.200.224.34567	support	Connected
10.10.200.225	6d674401d412a862	10.10.200.225.34567	support	Connected
10.10.200.226	c0a03b07e9b64571	10.10.200.226.34567	support	Connected
10.10.13.11	b4088d243da7115	10.10.13.11.34511	exhibition room	Connected
10.10.200.247	beb193780740e69a	10.10.200.247.34567	support	Offline
10.10.13.14	d8f7d31265d56e59	10.10.13.14.34514	exhibition room	Connected
10.10.13.12	094c4ae99401585	10.10.13.12.34512	exhibition room	Connected


☐ In order to login device, modify ip automatically

Click the cross to close the window(as shown in the above pic).


3.4 Monitoring

1	Devices list. You will find all the devices you added, arranged in groups. Display devices' name and device status, the red cross means the device is not online
2	Support 1/4/6/8/9/16/25/36/64 split. Support Maximize window
3	 save view  tour(see 3.11)
4	View(see 3.4.1)


◇ There will be description when you put mouse on the icon

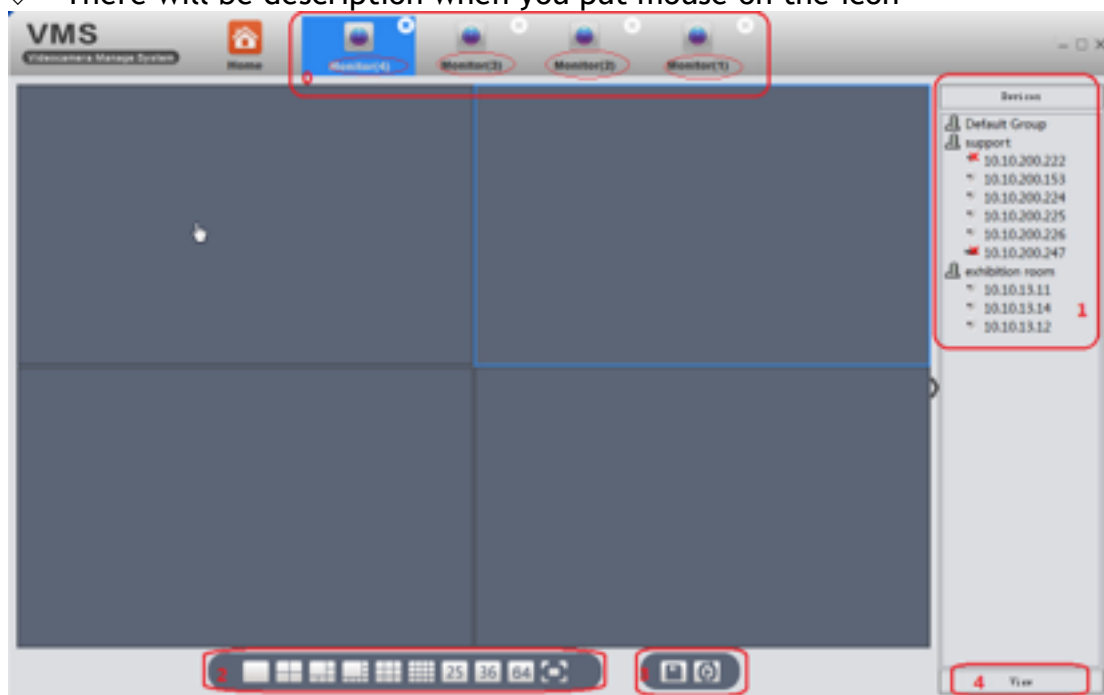

- ❖ VMS support up to 4 windows at same time(0). Click and drag, each can be dragged out into a separate window. This is very convenient for multiple screen monitoring. Each window can see 64 channels at most, $64 \times 4 = 256$. So, in theory, you can see 256 at most. As said in overviews, the actual preview number is limited by the properties of the server, the resolution of devices (bit rate) ,network bandwidth etc.

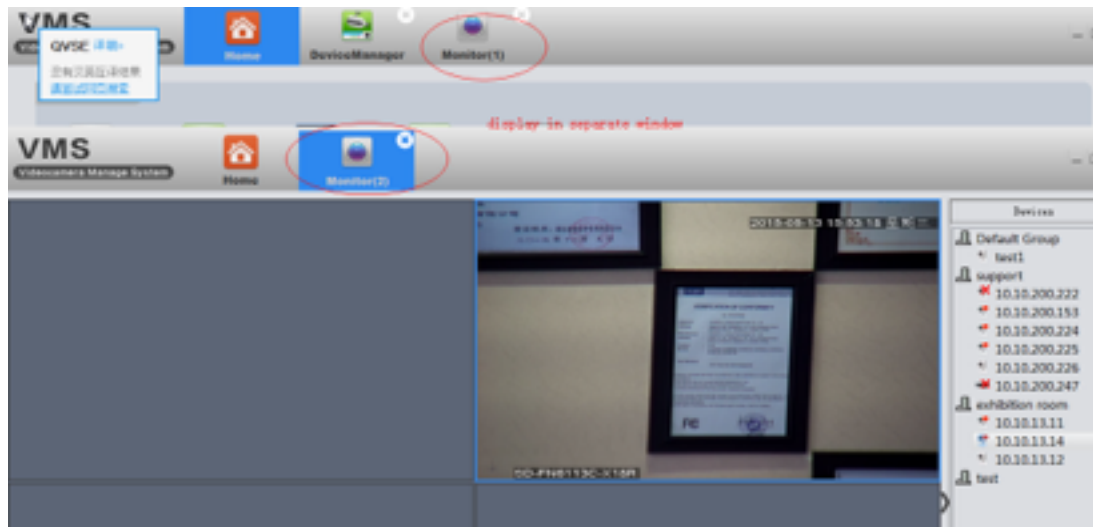

3.4.1 View

Double click the device name in the right list, or right click to choose main/extra stream to connect real-time video. If you wanna the VMS remember the view, please click 'save view' icon , save the current view. For example:

Firstly ,I connect the devices as the following pic shows, then I save that view as 11.




next time, I don't have to connect one by one again, just need to double click the saved view 11 .And it will show exactly same as ever.



3.4.2 other features



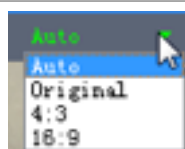




Put mouse on the top of current activity box, the auto-hiding toolbar will appear.



Choose display scale, auto resize turned on by default.



Temporary manual record


	Instantaneous screenshots
	Click to enable audio
	
	Adjust the color of video on VMS, Not of the device. 
	Disconnect the video

3.5 Playback

Click Playback icon in main interface.



- Step 1: Choose local(PC) or devices according to where the video is stored.
- Step 2: It shows the selection result in step 1.
- Step 3: Choose query objects, from a group ,a device to a specific channel of a DVR.

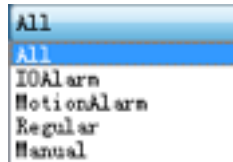


Step 4: Choose video type

Step 5: Choose date and time

Step 6: Click Search

Step 7: All video files that conform with search criteria are displayed at bottom left. Double click any file, start to play.

3.6 Record Settings

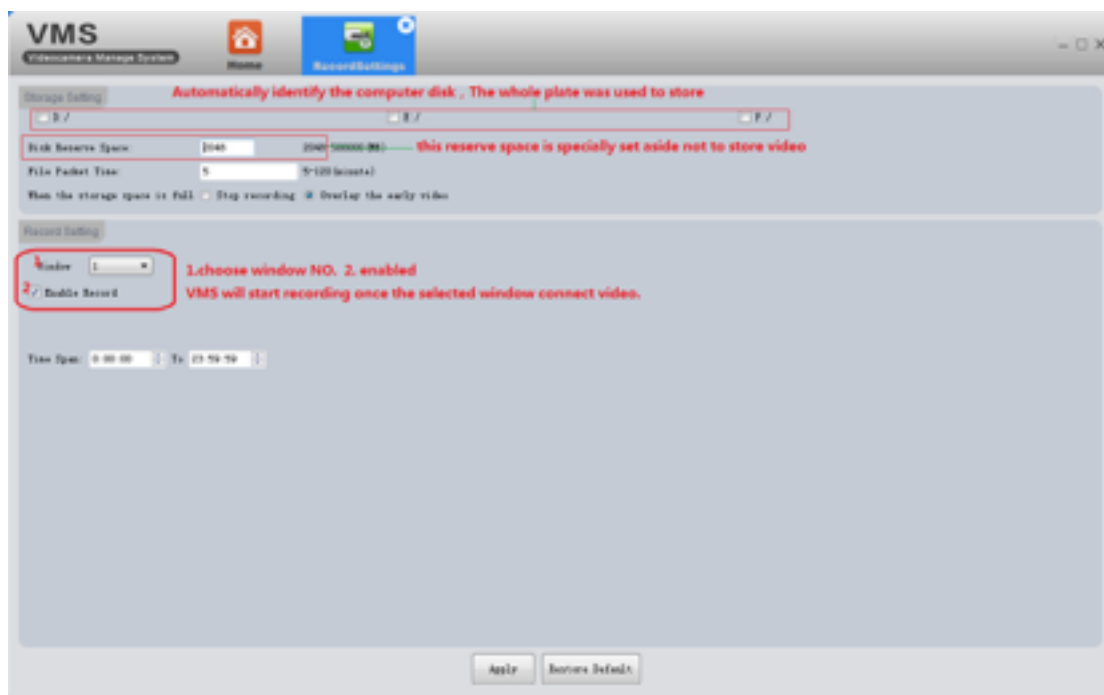

3.6.1 Storage settings

- Automatically identify the PC disk. The whole disk is used for storing.
- The disk reverse space is specially set aside not to store video

3.6.3 Record settings

1.Select window

2.Tick enable


3.Click Apply to save

VMS will start recording once the selected window connect video.


- Restore default---reset all record settings of VMS.

3.7 Log

On this page, you can search the operation Log of the client and device.

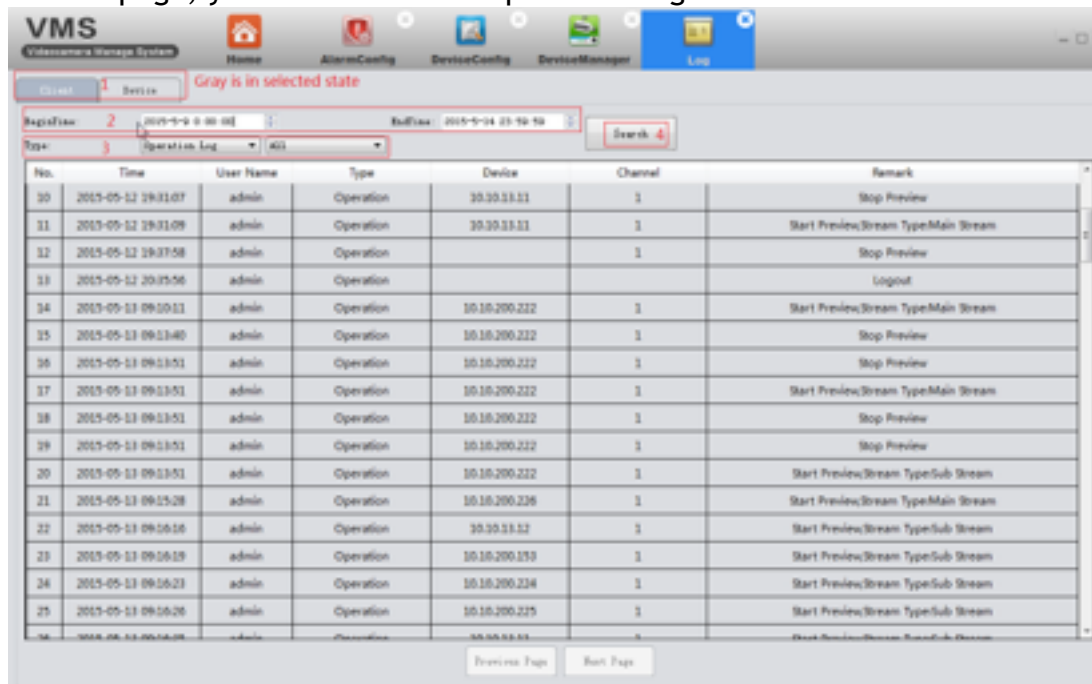


3.8 Alarm info

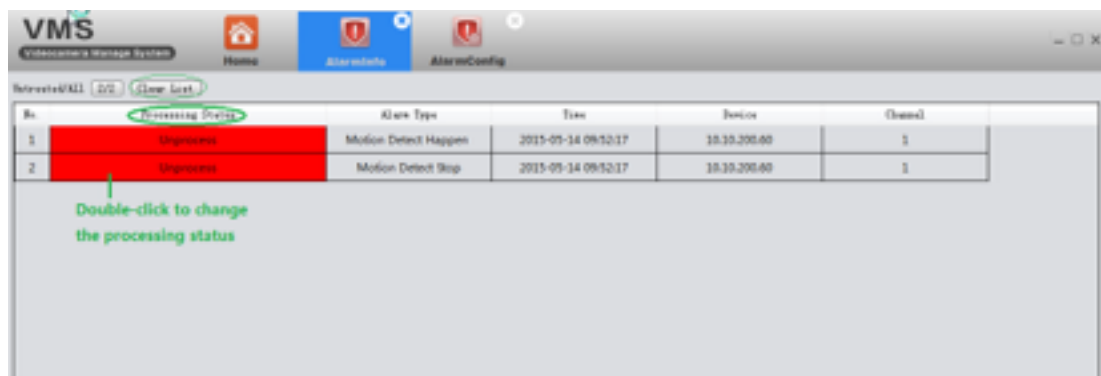


It shows all alarm info detected by VMS .

Red marks mean unprocessed. Double-click to change the processing status.


- ❖ When VMS is running, you will find an alarm message floating window at the top right corner. You can click to read the alarm message or right click to hide it.
- ❖ If you wanna VMS show alarm prompt, you must enable the alarm features both on device(see 3.9.7)and VMS(see 3.10)

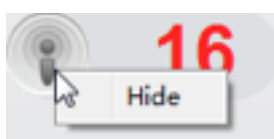

3.9 Device Config

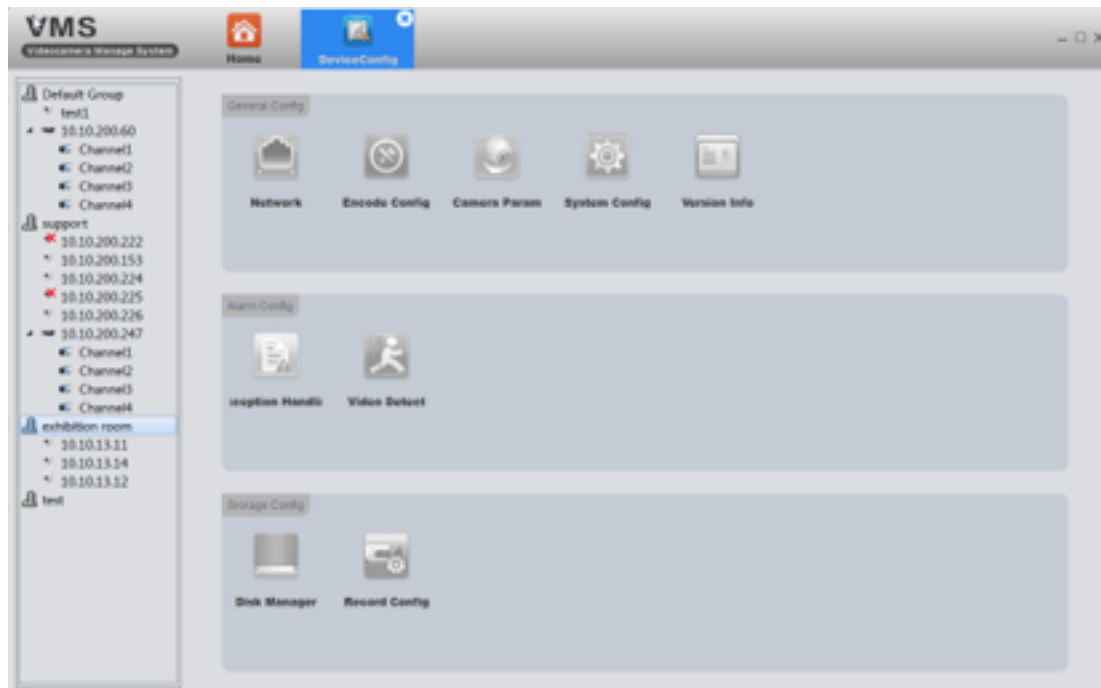


- All icon is gray before you choose a device. It will show the corresponding function-option according to the device type you choose.
- Full function-option for IPC(as shown in above pic).
- For NVR, there is no Encode and Camera Parameters as the following pic shows.

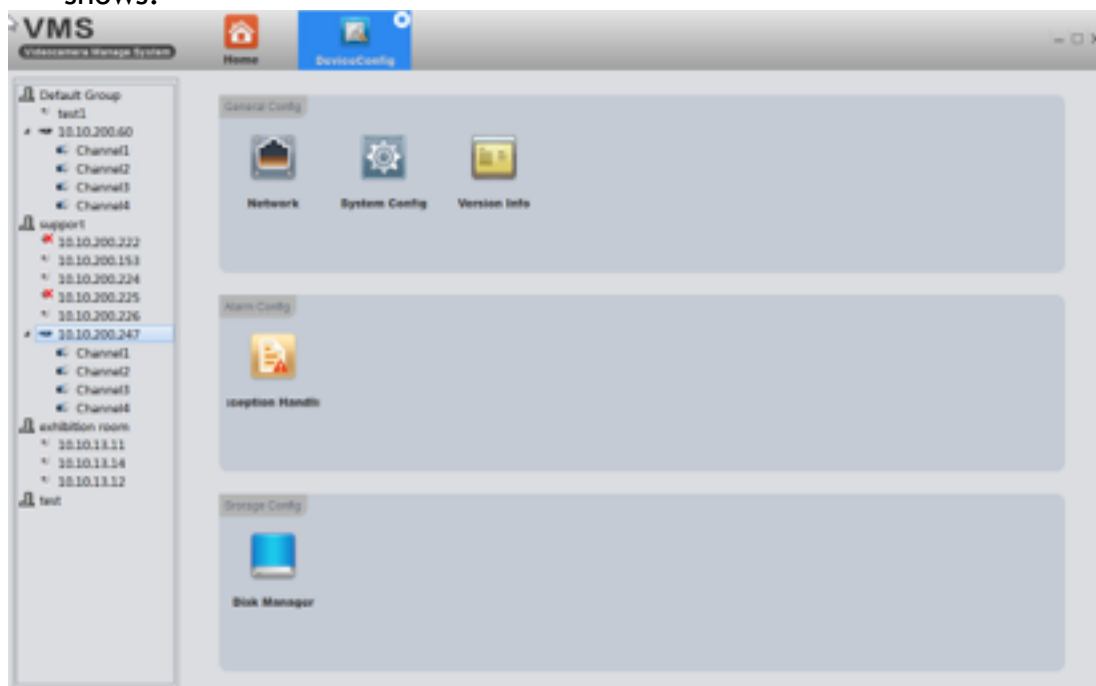

Click on the corresponding function to set and operate .


3.9.1 Network

3.9.1.1 Set device's IP

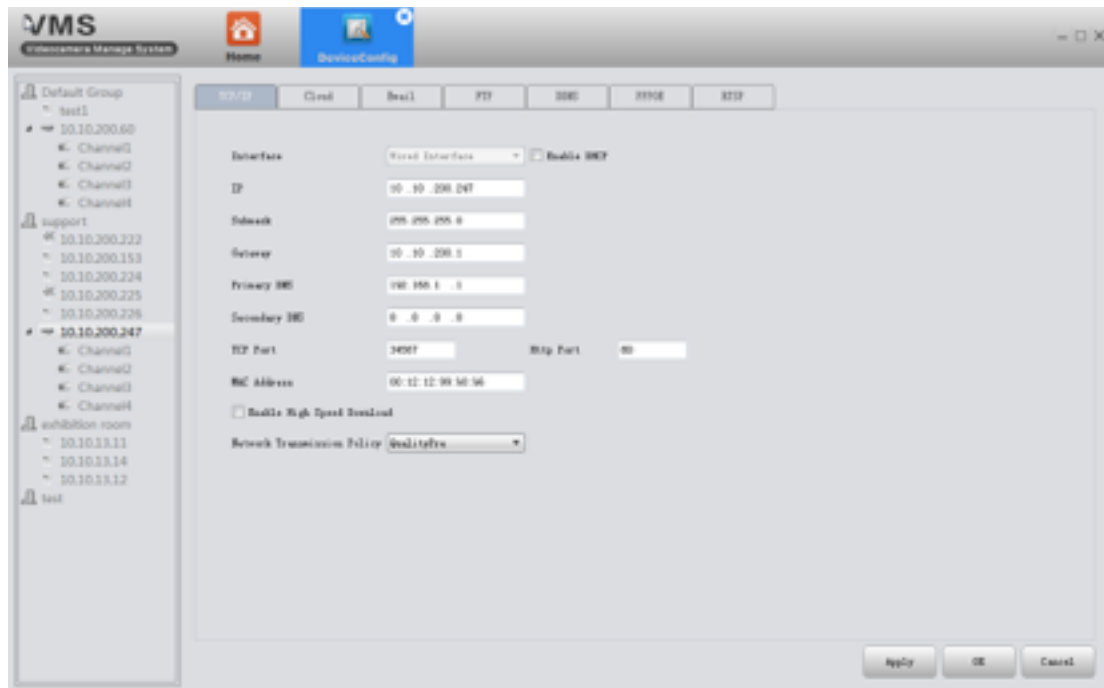

3.9.1.2 PPPOE

- 1) Why: Device can build a connection with internet based on PPPOE.
- 2) How:
 - 一.the cable connected to device's Ethernet port must support PPPOE;
 - 二.plugin cable, then input user name and password provided by ISP.

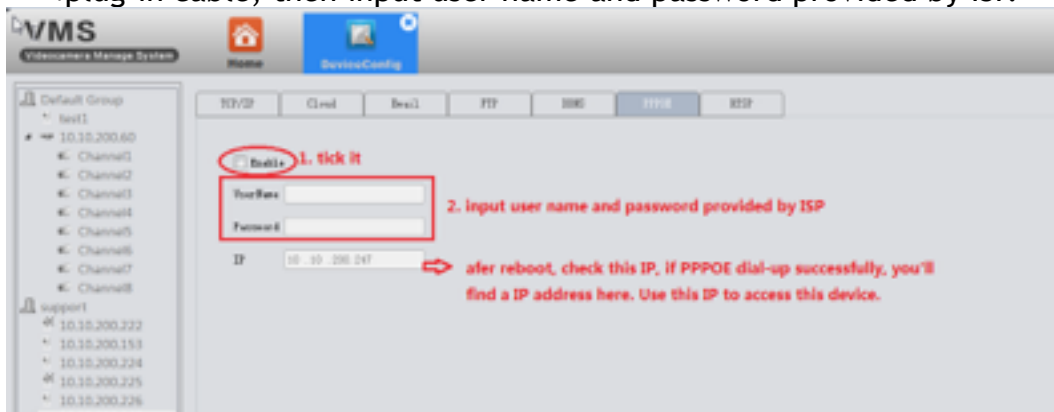

- 三. Reboot the device.

3.9.1.3 Email

- 1) Why: with necessary parameter settings, the device will send alarm information and snapshot picture to appointed mailbox.
- 2) How:
 - 一.Before you use email, make sure your device is connecting with internet(that's because the device need to connect to the mailbox server)
 - 二.Email configuration, as the following pic shows:



三. Click test, if it show success, please go to mailbox to check whether you get the test mail.


3.9.1.4 FTP

- 1) Why: FTP is available only when alarm happens, it can upload related record files and snapshot pictures to FTP server.
- 2) How:
 - You need to build a FTP server first if you don't have a ready-made FTP server . Here is a way to build a FTP server by Serv-U software.

a. Install the Serv-U software




- b. After installing the software, it will appear the step wizard which help you to define the domains and users, see as follow pic:

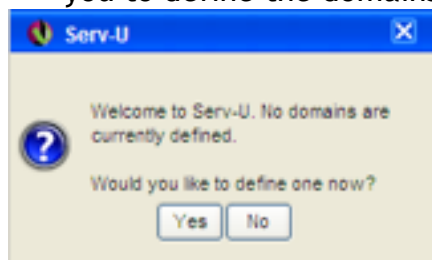

pic 1

Click "Yes", enter the next setting interface, see as pic 2

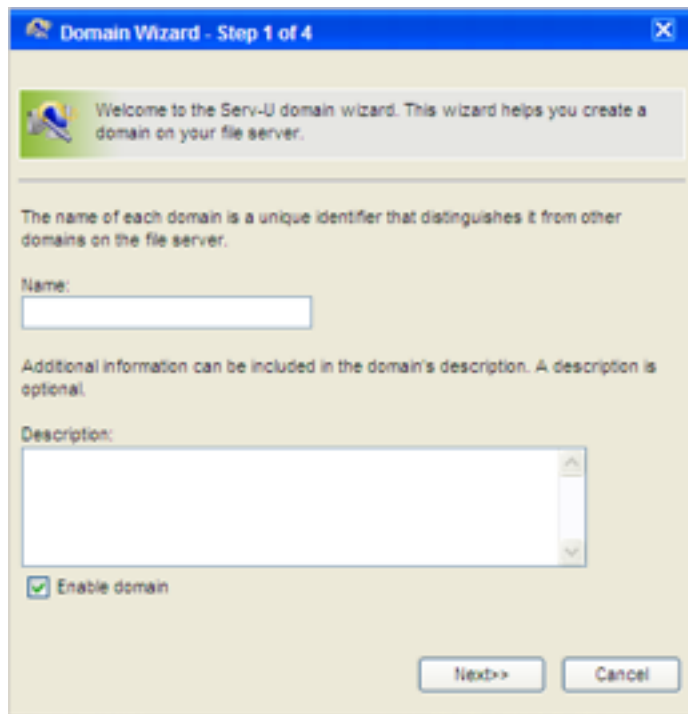

Domain Wizard - Step 1 of 4

Welcome to the Serv-U domain wizard. This wizard helps you create a domain on your file server.

The name of each domain is a unique identifier that distinguishes it from other domains on the file server.

Name:

Additional information can be included in the domain's description. A description is optional.


Description:

☒ Enable domain

Next>> Cancel

Pic 2

Input name and description,click"Next"

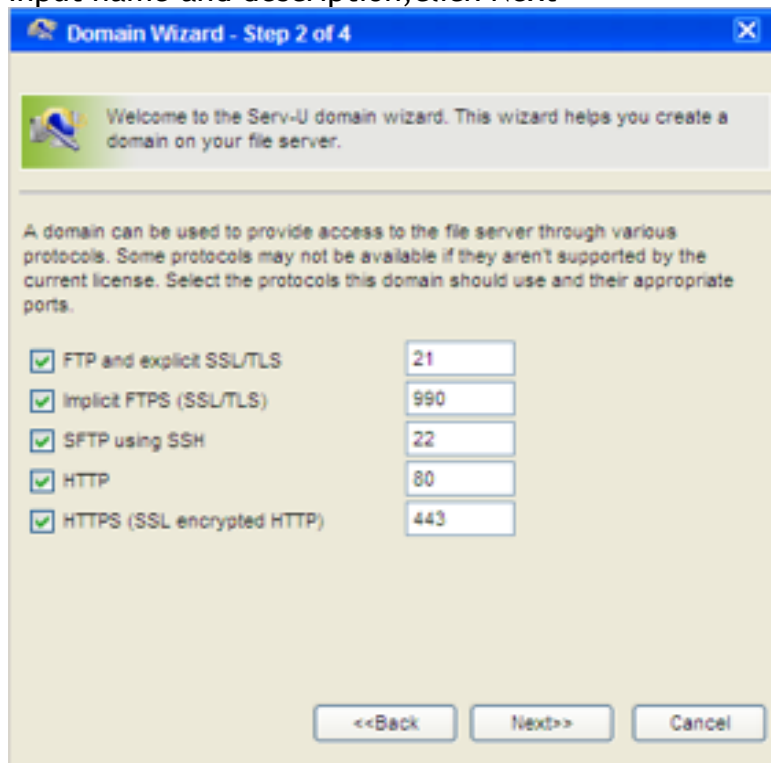

Domain Wizard - Step 2 of 4

Welcome to the Serv-U domain wizard. This wizard helps you create a domain on your file server.


A domain can be used to provide access to the file server through various protocols. Some protocols may not be available if they aren't supported by the current license. Select the protocols this domain should use and their appropriate ports.

<input checked="" type="checkbox"/> FTP and explicit SSL/TLS	<input type="text" value="21"/>
<input checked="" type="checkbox"/> Implicit FTPS (SSL/TLS)	<input type="text" value="990"/>
<input checked="" type="checkbox"/> SFTP using SSH	<input type="text" value="22"/>
<input checked="" type="checkbox"/> HTTP	<input type="text" value="80"/>
<input checked="" type="checkbox"/> HTTPS (SSL encrypted HTTP)	<input type="text" value="443"/>

<<Back Next>> Cancel


Pic 3

Click "Next",and see as pic 4. Choose your PC's IP as the built domain's IP from the drop-down box.

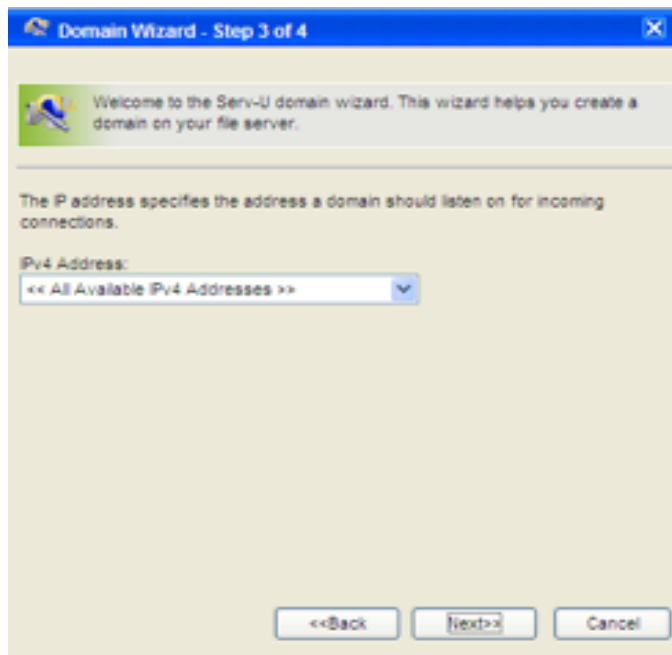


Pic 4

Click"Next"

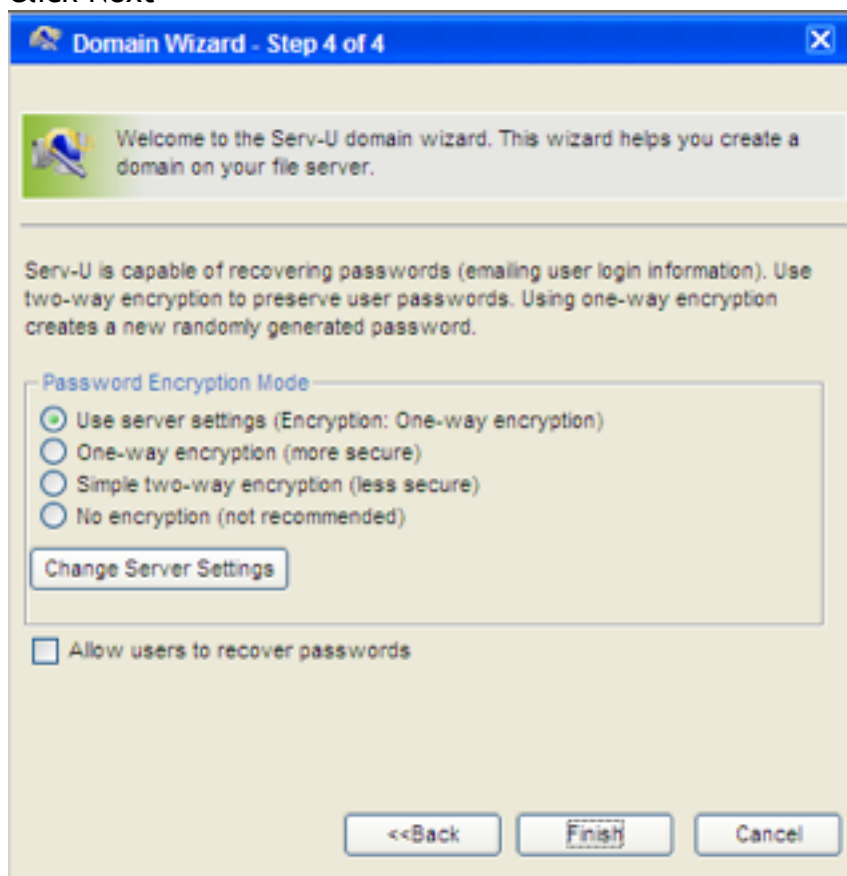


Pic 5

Click"Finish",the domain already had been defined,next step wizard will help you define users

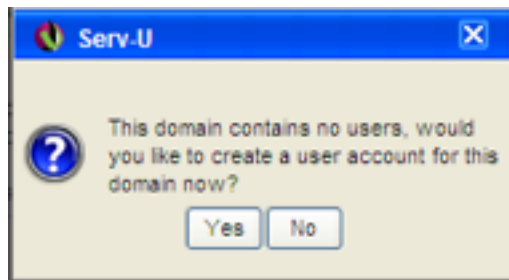

Pic 6

Click "Yes", it will appear a tip, see as pic 7

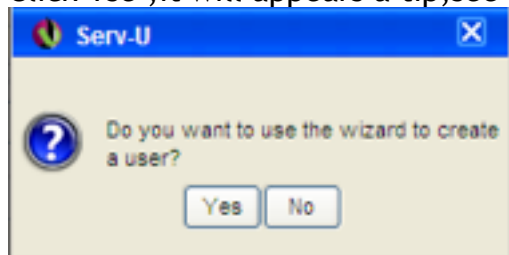


Pic 7

Click "Yes", enter the user wizard step 1

A screenshot of a "User Wizard - Step 1 of 4" dialog box. It has a blue title bar with a wizard icon. Below the title bar is a green banner with a wizard icon and the text: "Welcome to the Serv-U user account wizard. This wizard helps you quickly create new users to access your file server." Below this is a text area that says: "The login ID is provided by the client to identify their account when attempting to login to the file server." There are three input fields: "Login ID:" with the text "test" entered, "Full Name:" (optional), and "Email Address:" (optional). At the bottom right, there are two buttons: "Next>>" and "Cancel".


Pic 8

Input Log-in ID, Full name, Email Address messages, and click "Next"

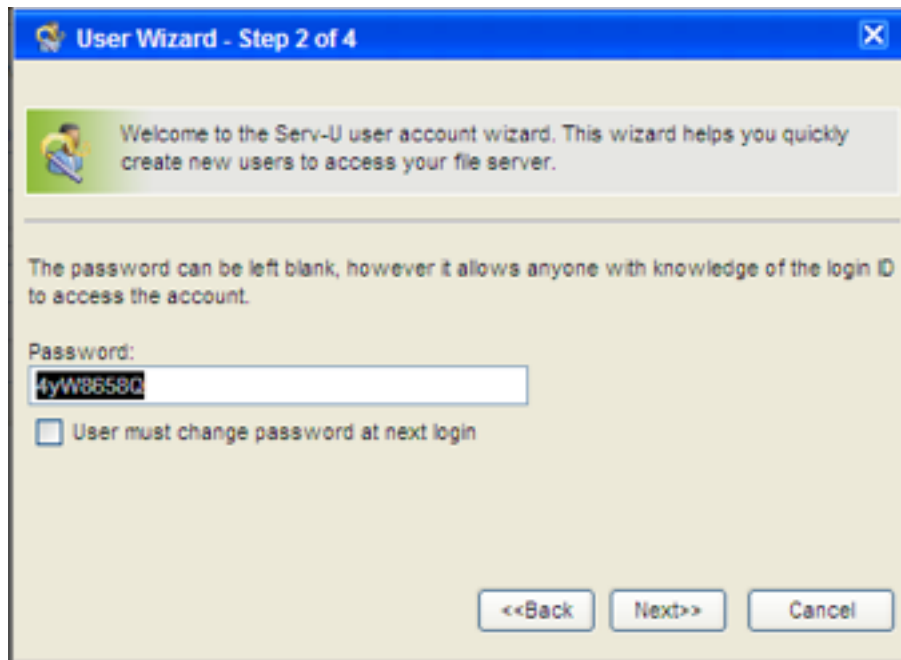


Pic 9

Click"Next"

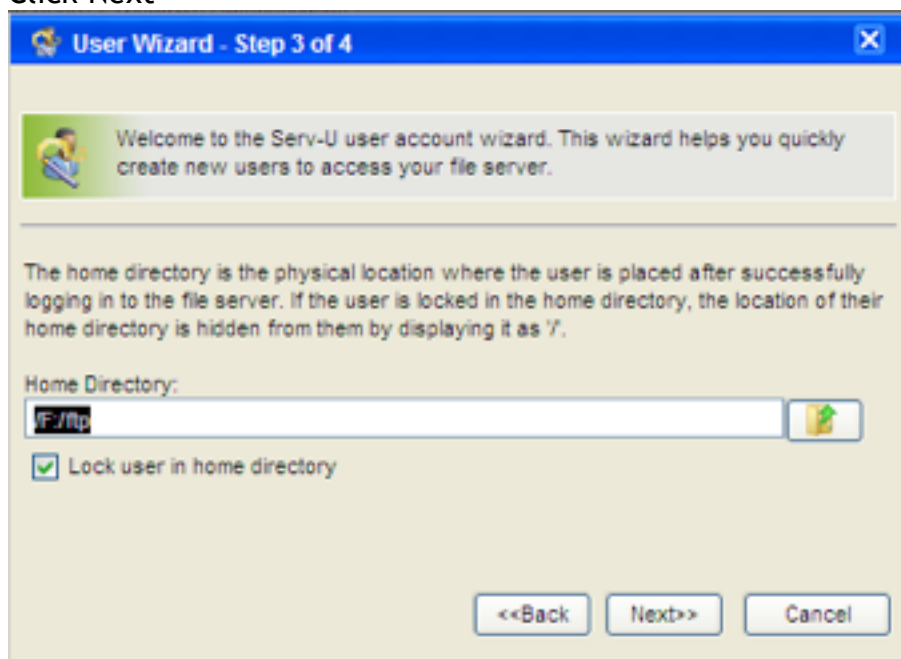


Pic 10

Setting the home directory,and click"Next"

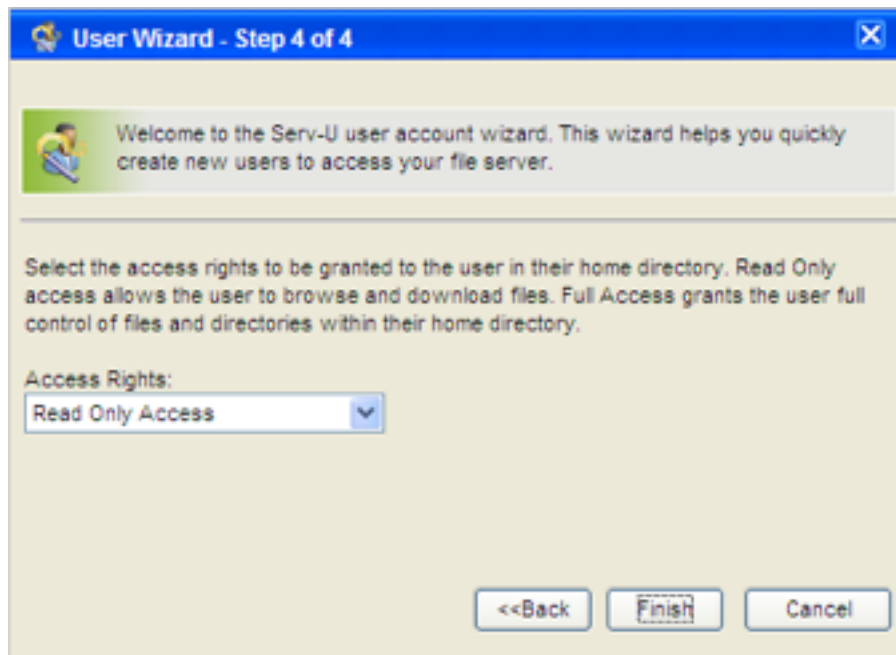


Pic 11

Click "Finish". you had defined users. next will the follow interface

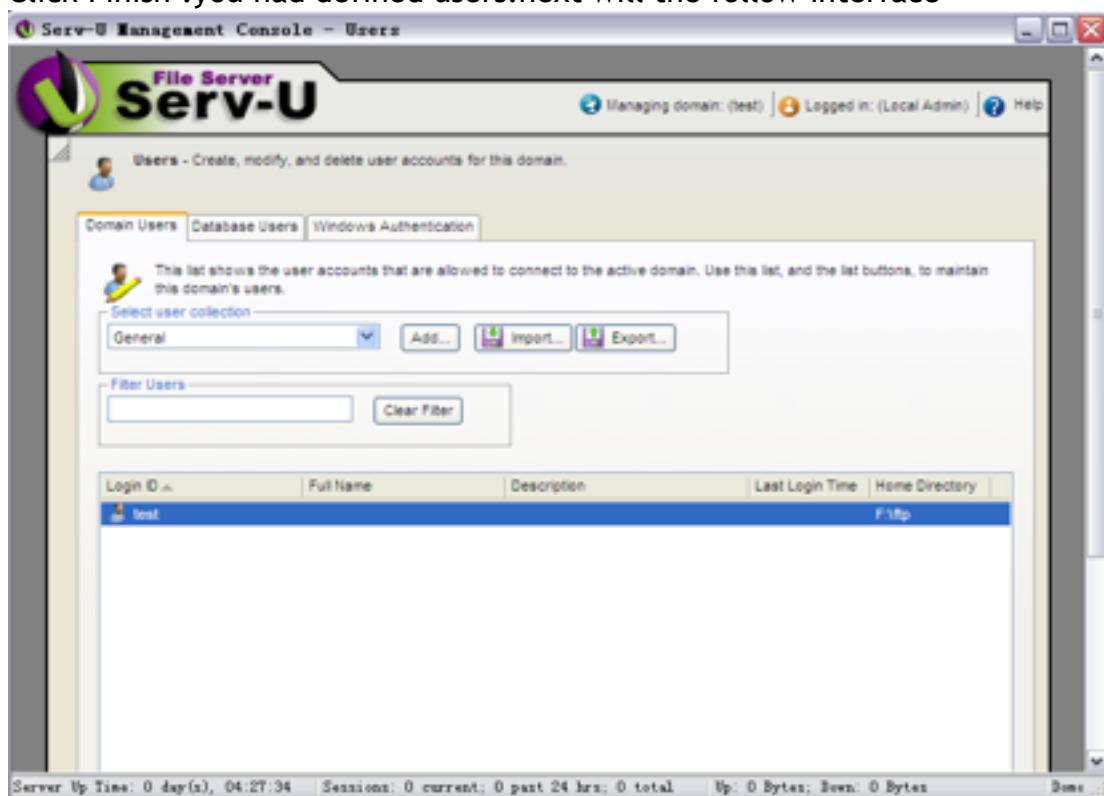


Pic 12

Click log-in ID test, setting directory, see as follow pic 13

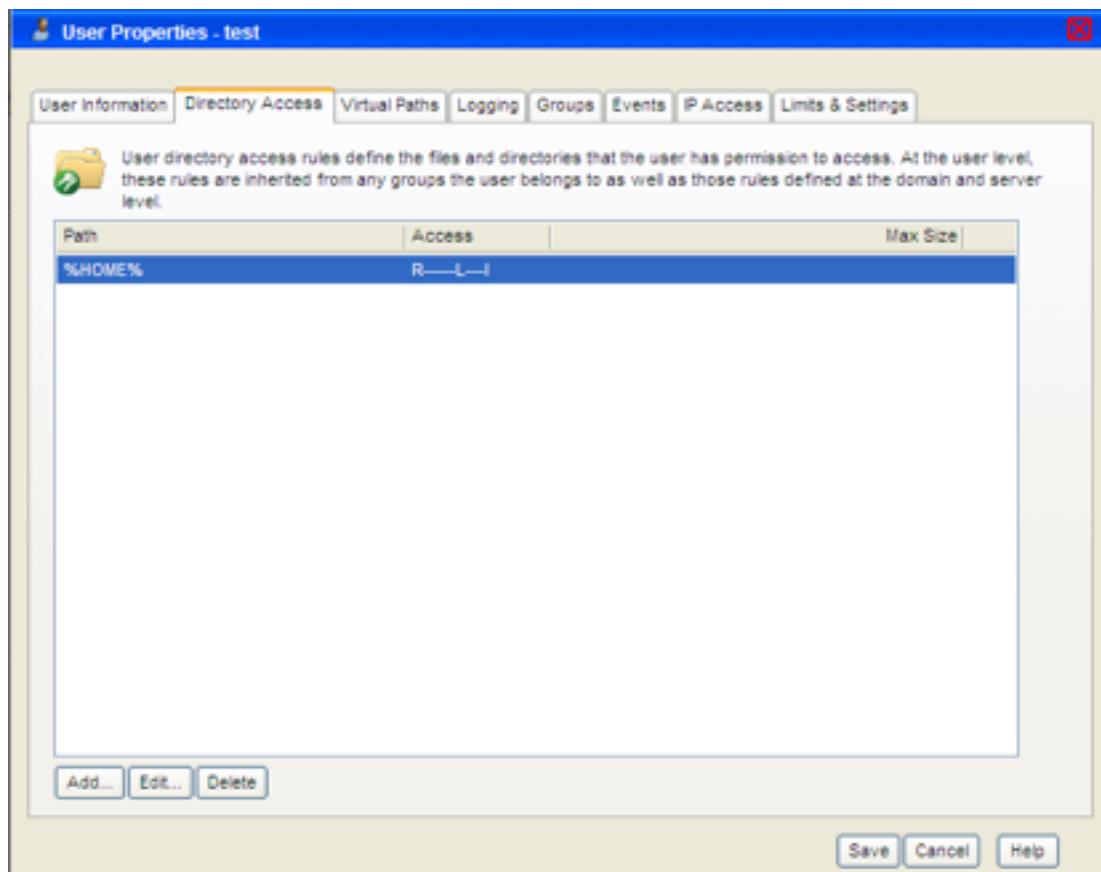

Pic 13

Find"directory access",click the path and setting it.see as follow pic14

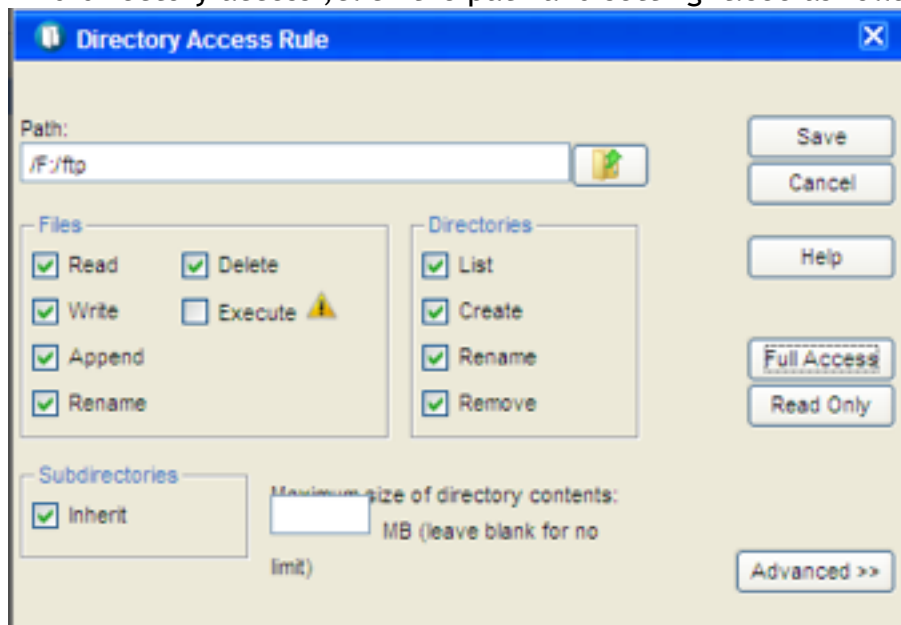

Pic 14

Click"save".After finishing all above setting steps,we already had setted the FTP server.

➤ FTP settings of device




Pic 15

The server Address is the IP of the PC where you built the FTP server.

The user name and password are the same as ftp service settled.

- ❖ one more thing:make sure the network between your device and FTP server is connected.


➤ when the alarm triggered,the file will uploaded to ftp.

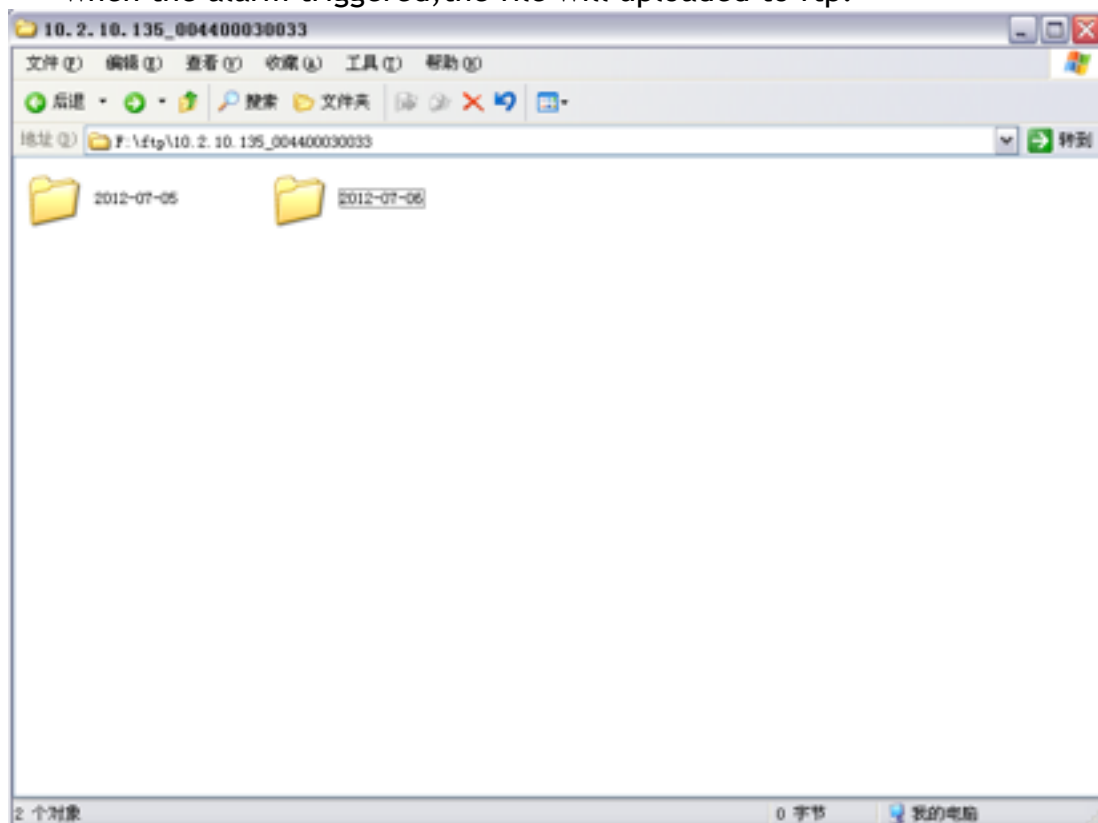

3.9.1.5 RTSP

- 1) Why: This service is needed when you use Non IE kernel browser(such as Safari, Google Chrome, Foxfire, Opera etc.) to access device.

2) How: this service is default enabled, as follows,

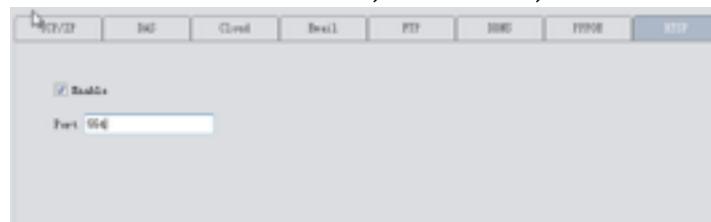

3.9.1.6 Cloud

The cloud service is also default enabled. As long as your device's network is connecting the Internet, you can easily use the Cloud ID to remotely access your device without complicated settings like port forwarding.



3.9.1.7 DDNS

DDNS: Dynamic Domain Name Server.

- First you need an available domain name. Our device default support five DDNS type: CN99/DynDns/Oray/NO-IP/MYQ-SEE.
- On this page, binding the domain name with your device. Forwarding HTTP and TCP ports of this device in your router. Then you can use the domain name and HTTP port to web access device, or use domain name and TCP port to access device via PC/mobile client.



3.9.1.8 DAS

DAS: it will auto put your device registered to Myeye server(our platform software which is used for central management of a large quantity of devices. See details in Myeye manual)

☒ Local
 ☐ Cloud
 ☐ Real3
 ☐ PTP
 ☐ 2000
 ☐ PPTP
 ☐ 8000

☒ Basic

Serial NO: this serial NO. is used for myeye server to identify this device. Edited by yourself.

Server Address: myeye server's address. must connected with this device

Server Port: Listen port of myeye ARS server. the default is 9400

Username: device's username and passport

Password:

Config in myeye server

web server Version: 3.0.0.4

Operation Setup -> Device management -> Detailed Information

Device ID: * Auto number

Belongs to:

Device type: choose auto-register

Serial NO: the serial NO you edit on device's DAS page

Device name: *(20 characters)

Device IP: server's address *Please input the host name if you are using DNS.

Port: client port of Myeye's ARS server

Channel amount:

Channel setup:

Alarm amount:

Alarm setup: Please input the alarm amount first and then set alarm channel.

3.9.2 Encode



Set video/audio encode parameters of DVR /IPC. All our devices support dual stream: main stream and extra stream. You can choose adaptive resolution, FPS, quality and so on according to your needs.

3.9.3 Camera parameters



Here to modify IPC parameters, including Exposure mode, Day/Night mode, Day NT level, wide dynamic, AE reference, AGC, backlight comprehension ,slow shutter, IR_CUT swap, Flip, mirror, anti-flicker , Auto iris,etc

3.9.4 System




Here to modify device's time ,language, operation when disk is full.

3.9.5 Version info




Display the basic information such as hardware information, firmware version, built date , serial No. and so on.

3.9.6 Exception handling

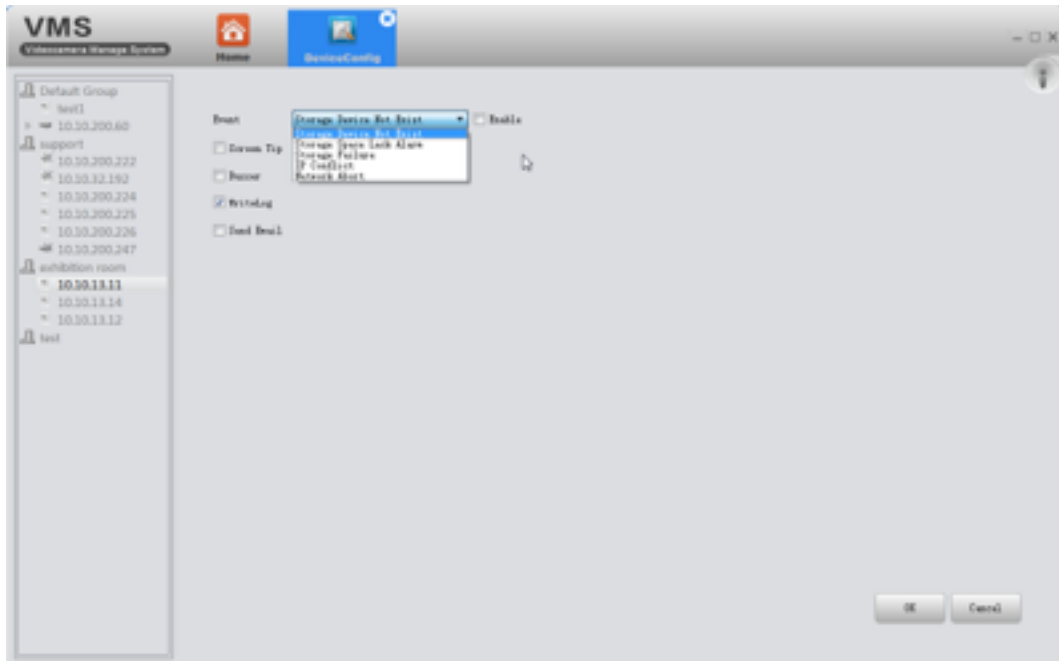


Choose event type from the drop-down box, and tick alarm type you want. The alarm info will be recorded in device's Log if you tick Write log. And if you want it to send alarm message to your mailbox, make sure the email is successfully set(see 3.9.1.3)

3.9.7 video detect

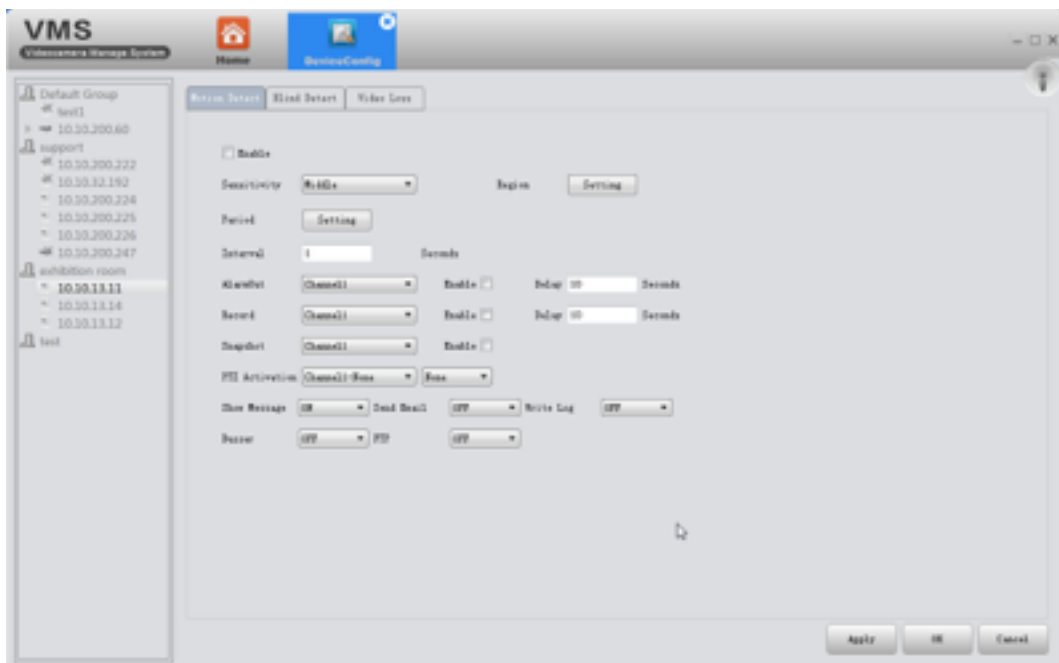


Including motion detection, blind detect, video loss.

3.9.8 Disk manager

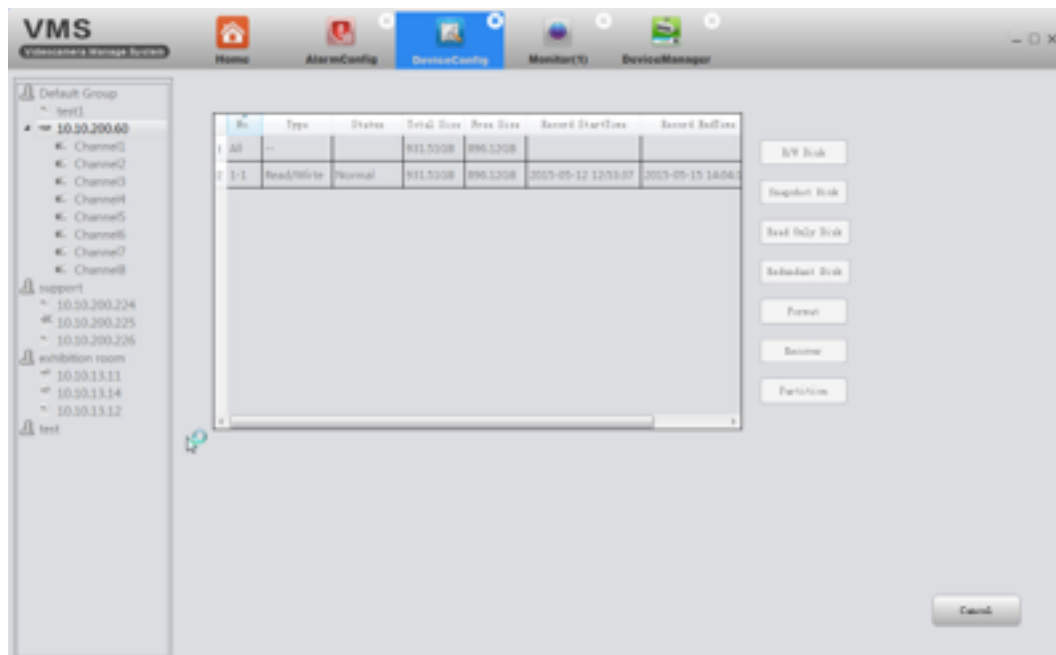


3.9.9 Record config

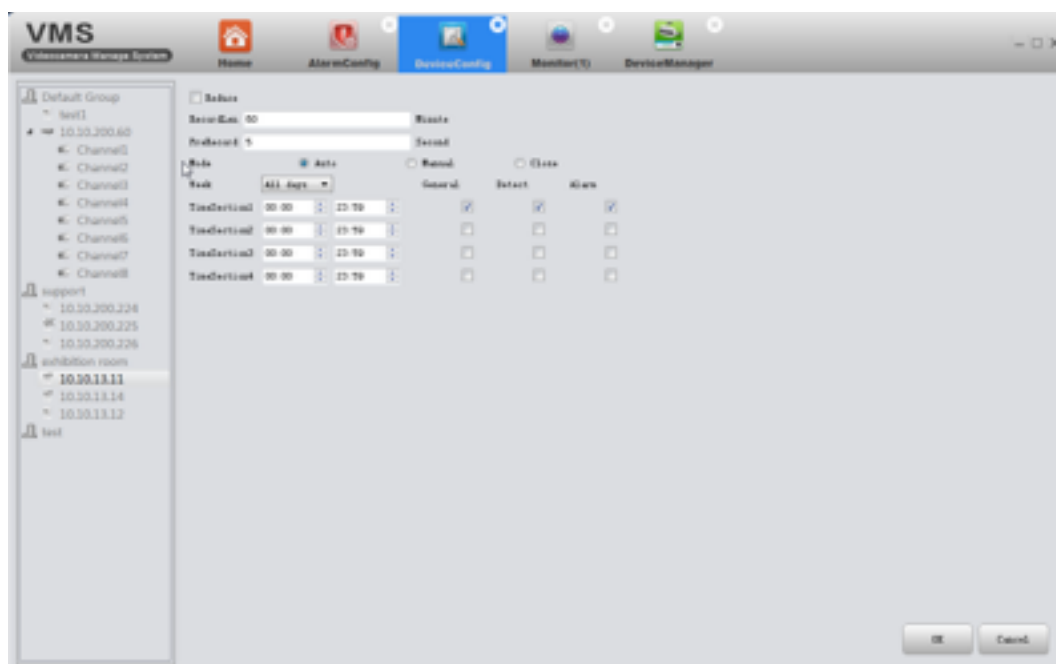


3.10 Alarm config

Alarm Config of VMS. You can set different prompt sound when alarm triggered.

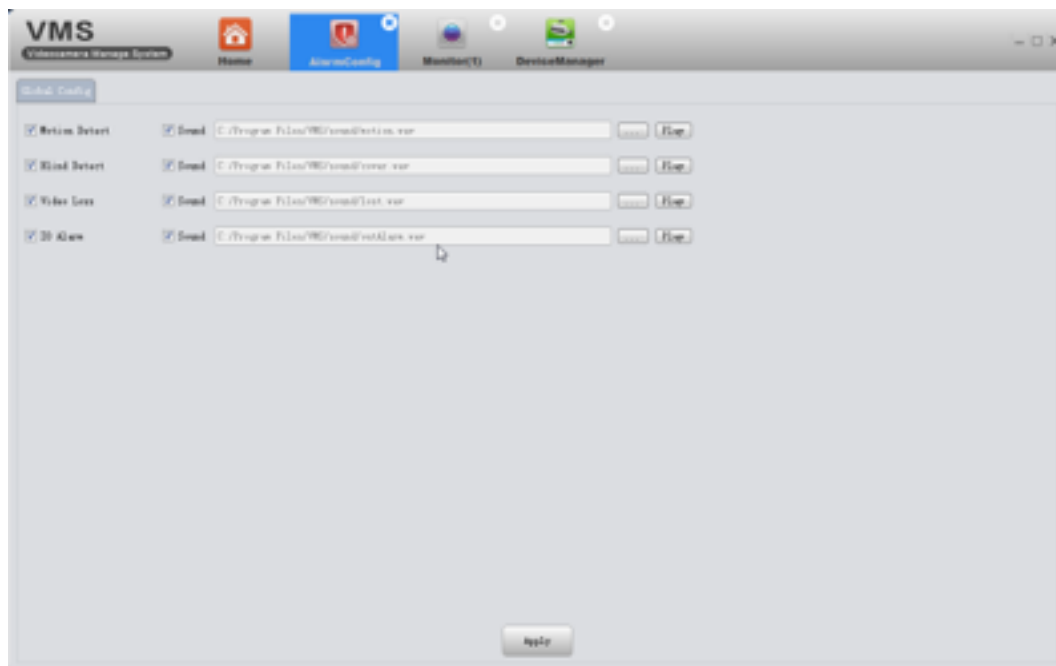


3.11 Tour

1) Add projects

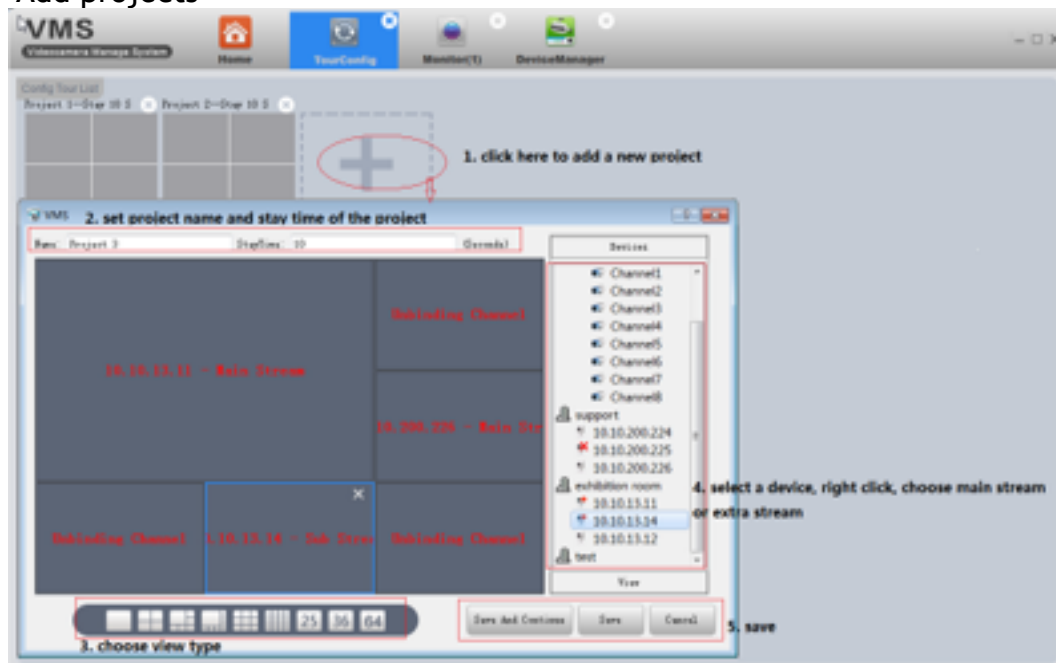


Add projects as the above pic shows.

2) On monitoring page, click tour icon to start.

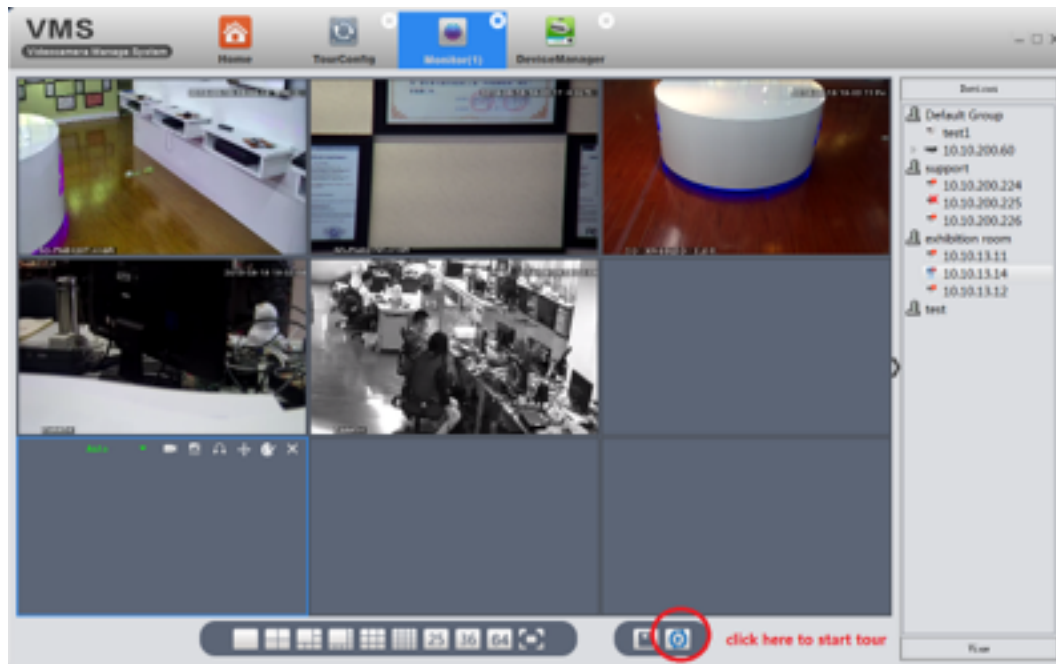

3.12 System Config

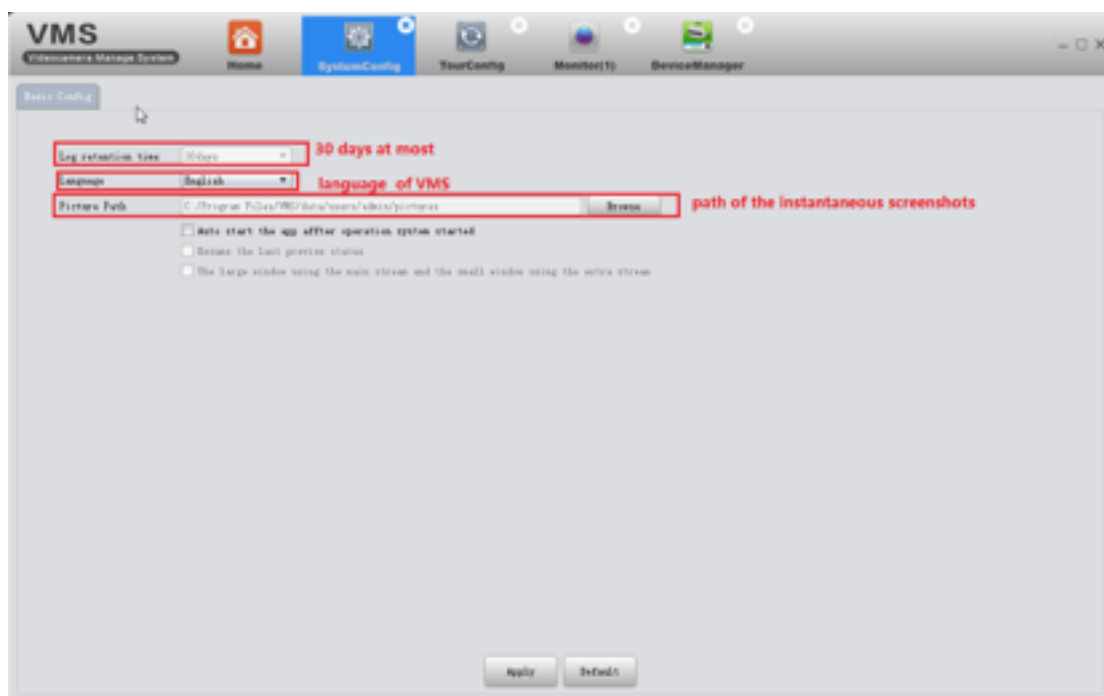

3.13 Extensions

Map and Mycloud can not use at present.