

KEENETIC PEAK DSL

AC2600 Dual Band Whole Home Wi-Fi Gigabit
VDSL2/ADSL2+ Modem Router with Wireless
Power Amplifiers, 9-port Managed Switch,
Multifunction USB 2.0 and 3.0 Ports

Command Reference Guide

Model	Peak DSL (KN-2510)
OS Version	3.7
Edition	1.120 11.02.2022

Preface

This guide contains Command-Line Interface (CLI) commands to maintain the Peak DSL device. This guide provides a complete listing of all possible commands. The other chapters provide examples of how to implement the most common of these commands, general information on the interrelationships between the commands and the conceptual background of how to use them.

1 Readership

This guide is for the networking or computer technician responsible for configuring and maintaining the Peak DSL on-site. It is also intended for the operator who manages the Peak DSL. This manual cover high-level technical support procedures available to Root administrators and Peak DSL technical support personnel.

2 Organization

This manual covers the following topics:

Introduction to the CLI	Describes how to use the Peak DSL Command-Line Interface (CLI), its hierarchical structure, authorization levels and its help features.
Command Reference	Provides an alphabetical list of the available CLI commands that you can use to configure the Peak DSL device.

3 Document Conventions

Command descriptions use the following conventions:

boldface font	Commands and keywords are in boldface . Must be typed exactly as shown. Bold font is used as a user input in examples.
<i>italic</i> font	Arguments for which you supply values are in <i>italics</i> .
[<i>optional</i>]	Elements in square brackets are optional.
< <i>replaceable</i> >	Elements in angle brackets are replaceable.
(x y z)	Alternative keywords are grouped in round brackets and separated by vertical bars.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.

Each command description is broken down into the following sub-sections:

Description	Description of what the command does.
Synopsis	The general format of the command.
Prefix no	The possibility of using no prefix with command.
Change settings	The ability of command to change the settings.
Multiple input	The possibility of multiple input.
Group entry	Name of the group that owns the command. If there is no group, this section does not displayed.
Interface type	Type of interface, which can be managed by the command. The section does not displayed, if this context has no meaning for the command. Interfaces used in the system and the relationships between them are shown in the diagrams below.
Arguments	List of arguments if they exists, and explanations to them.
Example	An illustration of how the command looks when invoked. Because the interface is straightforward, some of the examples are obvious, but they are included for clarity.

Notes, cautionary statements, and safety warnings use these conventions.

Note: Means "reader take note". Notes contain helpful suggestions or references to materials not contained in this manual.

Warning: Means "reader be careful". You are capable of doing something that might result in equipment damage or loss of data.

Contents Overview

Preface	3
Product Overview	27
Introduction to the CLI	29
Command Reference	35
Glossary	627
Interface Hierarchy	641
HTTP API	643
SNMP MIB	651
IPsec Encryption Levels	657

Table of Contents

Preface	3
1 Readership	3
2 Organization	3
3 Document Conventions	3
Table of Contents	5
Chapter 1	
Product Overview	27
1.1 Hardware Configuration	27
Chapter 2	
Introduction to the CLI	29
2.1 Enter commands in the CLI	29
2.1.1 Entering a group	30
2.2 Getting Help and auto-completion	30
2.3 Prefix no	31
2.4 Multiple input	32
2.5 Saving to startup settings	32
2.6 Delayed restart	33
Chapter 3	
Command Reference	35
3.1 Core commands	35
3.1.1 copy	35
3.1.2 erase	35
3.1.3 exit	36
3.1.4 ls	36
3.1.5 mkdir	37
3.1.6 more	38
3.2 access	38
3.3 access-list	39
3.3.1 access-list deny	40
3.3.2 access-list permit	42
3.3.3 access-list rule	44
3.4 adguard-dns	45
3.4.1 adguard-dns assign	46
3.4.2 adguard-dns check-availability	47
3.4.3 adguard-dns enable	47

3.5 afp	48
3.5.1 afp automount	48
3.5.2 afp permissive	49
3.5.3 afp share	49
3.6 cifs	50
3.6.1 cifs automount	50
3.6.2 cifs map-hidden	51
3.6.3 cifs master	51
3.6.4 cifs permissive	52
3.6.5 cifs share	52
3.7 cloud control2 security-level	53
3.8 cloudflare-dns	54
3.8.1 cloudflare-dns assign	54
3.8.2 cloudflare-dns check-availability	55
3.8.3 cloudflare-dns enable	56
3.9 components	56
3.9.1 components auto-update channel	57
3.9.2 components auto-update disable	58
3.9.3 components auto-update schedule	58
3.9.4 components check-update	59
3.9.5 components commit	59
3.9.6 components install	60
3.9.7 components list	60
3.9.8 components preset	61
3.9.9 components preview	62
3.9.10 components remove	63
3.9.11 components validity-period	63
3.10 crypto engine	64
3.11 crypto ike key	65
3.12 crypto ike nat-keepalive	66
3.13 crypto ike policy	66
3.13.1 crypto ike policy lifetime	67
3.13.2 crypto ike policy mode	68
3.13.3 crypto ike policy negotiation-mode	68
3.13.4 crypto ike policy proposal	69
3.14 crypto ike proposal	70
3.14.1 crypto ike proposal aead	71
3.14.2 crypto ike proposal dh-group	71
3.14.3 crypto ike proposal encryption	72
3.14.4 crypto ike proposal integrity	73
3.14.5 crypto ike proposal prf	74
3.15 crypto ipsec incompatible	75
3.16 crypto ipsec mtu	75

3.17 crypto ipsec profile	76
3.17.1 crypto ipsec profile authentication-local	76
3.17.2 crypto ipsec profile authentication-remote	77
3.17.3 crypto ipsec profile dpd-clear	78
3.17.4 crypto ipsec profile dpd-interval	78
3.17.5 crypto ipsec profile identity-local	79
3.17.6 crypto ipsec profile match-identity-remote	80
3.17.7 crypto ipsec profile mode	81
3.17.8 crypto ipsec profile policy	81
3.17.9 crypto ipsec profile preshared-key	82
3.17.10 crypto ipsec profile xauth	83
3.17.11 crypto ipsec profile xauth-identity	83
3.17.12 crypto ipsec profile xauth-password	84
3.18 crypto ipsec rekey delete-delay	85
3.19 crypto ipsec rekey make-before	86
3.20 crypto ipsec transform-set	86
3.20.1 crypto ipsec transform-set aead	87
3.20.2 crypto ipsec transform-set cypher	87
3.20.3 crypto ipsec transform-set dh-group	88
3.20.4 crypto ipsec transform-set hmac	89
3.20.5 crypto ipsec transform-set lifetime	90
3.21 crypto map	91
3.21.1 crypto map connect	91
3.21.2 crypto map enable	92
3.21.3 crypto map fallback-check-interval	92
3.21.4 crypto map force-encaps	93
3.21.5 crypto map l2tp-server dhcp route	94
3.21.6 crypto map l2tp-server enable	94
3.21.7 crypto map l2tp-server interface	95
3.21.8 crypto map l2tp-server ipv6cp	96
3.21.9 crypto map l2tp-server lcp echo	97
3.21.10 crypto map l2tp-server mru	97
3.21.11 crypto map l2tp-server mtu	98
3.21.12 crypto map l2tp-server multi-login	99
3.21.13 crypto map l2tp-server nat	99
3.21.14 crypto map l2tp-server range	100
3.21.15 crypto map l2tp-server static-ip	101
3.21.16 crypto map match-address	101
3.21.17 crypto map nail-up	102
3.21.18 crypto map priority	103
3.21.19 crypto map reauth-passive	103
3.21.20 crypto map set-peer	104
3.21.21 crypto map set-peer-fallback	105

3.21.22 crypto map set-profile	105
3.21.23 crypto map set-tcpmss	106
3.21.24 crypto map set-transform	107
3.21.25 crypto map virtual-ip dhcp route	108
3.21.26 crypto map virtual-ip dns-server	109
3.21.27 crypto map virtual-ip enable	109
3.21.28 crypto map virtual-ip multi-login	110
3.21.29 crypto map virtual-ip nat	110
3.21.30 crypto map virtual-ip range	111
3.21.31 crypto map virtual-ip static-ip	112
3.22 dlna	112
3.22.1 dlna container	113
3.22.2 dlna db-directory	114
3.22.3 dlna directory	114
3.22.4 dlna display-name	115
3.22.5 dlna interface	116
3.22.6 dlna port	117
3.22.7 dlna rescan	117
3.22.8 dlna sort	118
3.23 dns-proxy	119
3.23.1 dns-proxy https upstream	119
3.23.2 dns-proxy intercept enable	120
3.23.3 dns-proxy max-ttl	121
3.23.4 dns-proxy proceed	121
3.23.5 dns-proxy rebind-protect	122
3.23.6 dns-proxy srr-reset	123
3.23.7 dns-proxy tls upstream	123
3.24 dpn accept	124
3.25 dyndns profile	125
3.25.1 dyndns profile domain	125
3.25.2 dyndns profile password	126
3.25.3 dyndns profile send-address	127
3.25.4 dyndns profile type	127
3.25.5 dyndns profile update-interval	128
3.25.6 dyndns profile url	129
3.25.7 dyndns profile username	129
3.26 easyconfig check	130
3.26.1 easyconfig check exclude-gateway	131
3.26.2 easyconfig check host	131
3.26.3 easyconfig check max-fails	132
3.26.4 easyconfig check period	132
3.27 easyconfig disable	133
3.28 eula accept	134

3.29 igmp-proxy	134
3.29.1 igmp-proxy force	135
3.30 igmp-snooping disable	135
3.31 interface	136
3.31.1 interface adsl snr-margin-offset	137
3.31.2 interface atf disable	138
3.31.3 interface atf inbound	138
3.31.4 interface authentication chap	139
3.31.5 interface authentication eap-md5	140
3.31.6 interface authentication eap-mschapv2	140
3.31.7 interface authentication eap-ttls	141
3.31.8 interface authentication identity	142
3.31.9 interface authentication mschap	142
3.31.10 interface authentication mschap-v2	143
3.31.11 interface authentication pap	143
3.31.12 interface authentication password	144
3.31.13 interface authentication peap	145
3.31.14 interface authentication shared	145
3.31.15 interface authentication wpa-psk	146
3.31.16 interface backhaul	147
3.31.17 interface band-steering	147
3.31.18 interface band-steering preference	148
3.31.19 interface cable-diagnostics	149
3.31.20 interface ccp	149
3.31.21 interface channel	150
3.31.22 interface channel auto-rescan	151
3.31.23 interface channel width	152
3.31.24 interface chilli coaport	152
3.31.25 interface chilli dhcpif	153
3.31.26 interface chilli dns	154
3.31.27 interface chilli lease	154
3.31.28 interface chilli logout	155
3.31.29 interface chilli macauth	156
3.31.30 interface chilli macpasswd	156
3.31.31 interface chilli nasip	157
3.31.32 interface chilli nasmac	158
3.31.33 interface chilli profile	158
3.31.34 interface chilli radius	159
3.31.35 interface chilli radiusacctport	160
3.31.36 interface chilli radiusauthport	160
3.31.37 interface chilli radiuslocationid	161
3.31.38 interface chilli radiuslocationname	162
3.31.39 interface chilli radiusnasid	162

3.31.40 interface chilli radiussecret	163
3.31.41 interface chilli uamallowed	164
3.31.42 interface chilli uamdomain	165
3.31.43 interface chilli uamhomepage	165
3.31.44 interface chilli uamport	166
3.31.45 interface chilli uamsecret	167
3.31.46 interface chilli uamserver	167
3.31.47 interface compatibility	168
3.31.48 interface connect	169
3.31.49 interface country-code	170
3.31.50 interface debug	170
3.31.51 interface description	171
3.31.52 interface down	171
3.31.53 interface dsl disconnect-report	172
3.31.54 interface duplex	172
3.31.55 interface dyndns profile	173
3.31.56 interface dyndns update	174
3.31.57 interface encryption anonymous-dh	174
3.31.58 interface encryption disable	175
3.31.59 interface encryption enable	175
3.31.60 interface encryption key	176
3.31.61 interface encryption mppe	177
3.31.62 interface encryption owe	178
3.31.63 interface encryption wpa	178
3.31.64 interface encryption wpa2	179
3.31.65 interface encryption wpa3	179
3.31.66 interface encryption wpa3 suite-b	180
3.31.67 interface flowcontrol	180
3.31.68 interface follow	181
3.31.69 interface ft enable	182
3.31.70 interface ft mdid	183
3.31.71 interface ft otd	183
3.31.72 interface green-ethernet	184
3.31.73 interface hide-ssid	185
3.31.74 interface iapp auto	185
3.31.75 interface iapp key	186
3.31.76 interface idle-timeout	186
3.31.77 interface igmp downstream	187
3.31.78 interface igmp fork	188
3.31.79 interface igmp upstream	188
3.31.80 interface include	189
3.31.81 interface inherit	189
3.31.82 interface ip access-group	190

3.31.83 interface ip address	191
3.31.84 interface ip address dhcp	192
3.31.85 interface ip adjust-ttl recv	193
3.31.86 interface ip adjust-ttl send	194
3.31.87 interface ip alias	194
3.31.88 interface ip dhcp client broadcast	195
3.31.89 interface ip dhcp client class-id	196
3.31.90 interface ip dhcp client debug	196
3.31.91 interface ip dhcp client displace	197
3.31.92 interface ip dhcp client dns-routes	198
3.31.93 interface ip dhcp client fallback	199
3.31.94 interface ip dhcp client hostname	199
3.31.95 interface ip dhcp client name-servers	200
3.31.96 interface ip dhcp client release	201
3.31.97 interface ip dhcp client renew	201
3.31.98 interface ip dhcp client routes	202
3.31.99 interface ip flow	202
3.31.100 interface ip global	203
3.31.101 interface ip mru	204
3.31.102 interface ip mtu	205
3.31.103 interface ip nat loopback	206
3.31.104 interface ip remote	206
3.31.105 interface ip tcp adjust-mss	207
3.31.106 interface ipcp default-route	208
3.31.107 interface ipcp dns-routes	208
3.31.108 interface ipcp name-servers	209
3.31.109 interface ipcp vj	209
3.31.110 interface ipsec encryption-level	210
3.31.111 interface ipsec force-encaps	211
3.31.112 interface ipsec ignore	212
3.31.113 interface ipsec ikev2	212
3.31.114 interface ipsec nail-up	213
3.31.115 interface ipsec name-servers	214
3.31.116 interface ipsec preshared-key	214
3.31.117 interface ipsec proposal lifetime	215
3.31.118 interface ipsec transform-set lifetime	216
3.31.119 interface ipv6 address	216
3.31.120 interface ipv6 force-default	217
3.31.121 interface ipv6 name-servers	217
3.31.122 interface ipv6 prefix	218
3.31.123 interface ipv6cp	219
3.31.124 interface lcp acfc	219
3.31.125 interface lcp echo	220

3.31.126 interface lcp pfc	221
3.31.127 interface led wan	222
3.31.128 interface lldp disable	222
3.31.129 interface mac access-list address	223
3.31.130 interface mac access-list type	223
3.31.131 interface mac address	224
3.31.132 interface mac address factory	225
3.31.133 interface mac band	225
3.31.134 interface mac bssid	226
3.31.135 interface mac clone	227
3.31.136 interface mac vht40	227
3.31.137 interface mobile lte disable-band	228
3.31.138 interface mobile name-servers	229
3.31.139 interface mobile operator	229
3.31.140 interface mobile pdp	230
3.31.141 interface mobile roaming	231
3.31.142 interface mobile scan	231
3.31.143 interface mobile umts disable-band	232
3.31.144 interface modem connect	233
3.31.145 interface modem init	233
3.31.146 interface modem timeout	234
3.31.147 interface openvpn accept-routes	235
3.31.148 interface openvpn connect	236
3.31.149 interface openvpn name-servers	236
3.31.150 interface operating-mode	237
3.31.151 interface peer	238
3.31.152 interface peer-isolation	239
3.31.153 interface ping-check profile	239
3.31.154 interface ping-check restart	240
3.31.155 interface pmf	241
3.31.156 interface power	241
3.31.157 interface pppoe service	242
3.31.158 interface pppoe session auto-cleanup	243
3.31.159 interface preamble-short	243
3.31.160 interface pvc	244
3.31.161 interface reconnect-delay	245
3.31.162 interface rekey-interval	246
3.31.163 interface rename	247
3.31.164 interface rf e2p set	247
3.31.165 interface role	248
3.31.166 interface rrm	249
3.31.167 interface schedule	249
3.31.168 interface security-level	250

3.31.169 interface sim pin	251
3.31.170 interface speed	252
3.31.171 interface speed nonegotiate	253
3.31.172 interface ssid	253
3.31.173 interface switchport access	254
3.31.174 interface switchport friend	255
3.31.175 interface switchport link-group	255
3.31.176 interface switchport mode	256
3.31.177 interface switchport trunk	257
3.31.178 interface traffic-counter action disconnect	258
3.31.179 interface traffic-counter action sms-alert message	258
3.31.180 interface traffic-counter action sms-alert phone	259
3.31.181 interface traffic-counter enable	260
3.31.182 interface traffic-counter limit	260
3.31.183 interface traffic-counter monthly	261
3.31.184 interface traffic-counter set	262
3.31.185 interface traffic-counter threshold	262
3.31.186 interface traffic-shape	263
3.31.187 interface tunnel destination	264
3.31.188 interface tunnel ekip id	264
3.31.189 interface tunnel gre keepalive	265
3.31.190 interface tunnel source	266
3.31.191 interface tx-burst	267
3.31.192 interface tx-queue length	267
3.31.193 interface tx-queue scheduler cake	268
3.31.194 interface tx-queue scheduler fq_codel	268
3.31.195 interface up	269
3.31.196 interface usb acq	270
3.31.197 interface usb apn	270
3.31.198 interface usb device-id	271
3.31.199 interface usb power-cycle	272
3.31.200 interface usb power-fail	272
3.31.201 interface usb wwan-force-connected	273
3.31.202 interface vdsl snr-margin	274
3.31.203 interface wireguard listen-port	274
3.31.204 interface wireguard peer	275
3.31.205 interface wireguard private-key	279
3.31.206 interface wmm	280
3.31.207 interface wpa-eap radius secret	280
3.31.208 interface wpa-eap radius server	281
3.31.209 interface wps	282
3.31.210 interface wps auto-self-pin	282
3.31.211 interface wps button	283

3.31.212 interface wps peer	283
3.31.213 interface wps self-pin	284
3.32 ip arp	284
3.33 ip dhcp class	285
3.33.1 ip dhcp class option	286
3.34 ip dhcp host	286
3.35 ip dhcp pool	287
3.35.1 ip dhcp pool bind	288
3.35.2 ip dhcp pool bootfile	289
3.35.3 ip dhcp pool class	289
3.35.4 ip dhcp pool debug	291
3.35.5 ip dhcp pool default-router	291
3.35.6 ip dhcp pool dns-server	292
3.35.7 ip dhcp pool domain	292
3.35.8 ip dhcp pool enable	293
3.35.9 ip dhcp pool lease	293
3.35.10 ip dhcp pool next-server	294
3.35.11 ip dhcp pool option	295
3.35.12 ip dhcp pool range	296
3.35.13 ip dhcp pool update-dns	296
3.35.14 ip dhcp pool wpad	297
3.36 ip dhcp relay lan	298
3.37 ip dhcp relay server	298
3.38 ip dhcp relay wan	299
3.39 ip esp alg enable	299
3.40 ip flow-cache timeout active	300
3.41 ip flow-cache timeout inactive	301
3.42 ip flow-export destination	302
3.43 ip flow-export version	302
3.44 ip ftp	303
3.44.1 ip ftp client-charset	303
3.44.2 ip ftp lockout-policy	306
3.44.3 ip ftp permissive	307
3.44.4 ip ftp security-level	307
3.45 ip host	308
3.46 ip hotspot	308
3.46.1 ip hotspot auto-scan interface	309
3.46.2 ip hotspot auto-scan interval	309
3.46.3 ip hotspot auto-scan passive	310
3.46.4 ip hotspot auto-scan timeout	311
3.46.5 ip hotspot default-policy	312
3.46.6 ip hotspot host	313
3.46.7 ip hotspot host service-class	314

3.46.8 ip hotspot policy	315
3.46.9 ip hotspot wake	316
3.47 ip http lockout-policy	316
3.48 ip http log access	317
3.49 ip http log auth	318
3.50 ip http log webdav	318
3.51 ip http port	319
3.52 ip http proxy	319
3.52.1 ip http proxy auth	320
3.52.2 ip http proxy domain	321
3.52.3 ip http proxy domain ndns	321
3.52.4 ip http proxy force-host	322
3.52.5 ip http proxy preserve-host	323
3.52.6 ip http proxy security-level	323
3.52.7 ip http proxy upstream	324
3.52.8 ip http proxy x-real-ip	325
3.53 ip http security-level	325
3.54 ip http ssl acme get	326
3.55 ip http ssl acme revoke	327
3.56 ip http ssl acme list	327
3.57 ip http ssl enable	328
3.58 ip http ssl redirect	328
3.59 ip http webdav	329
3.59.1 ip http webdav enable	330
3.59.2 ip http webdav permissive	330
3.59.3 ip http webdav security-level	331
3.60 ip http x-frame-options	331
3.61 ip name-server	332
3.62 ip nat	333
3.63 ip nat full-cone	334
3.64 ip nat restricted-cone	335
3.65 ip nat sstp	335
3.66 ip nat vpn	336
3.67 ip policy	336
3.67.1 ip policy description	337
3.67.2 ip policy multipath	338
3.67.3 ip policy permit	338
3.67.4 ip policy permit auto	339
3.67.5 ip policy rate-limit input	340
3.67.6 ip policy rate-limit output	340
3.68 ip route	341
3.69 ip search-domain	343
3.70 ip sip alg direct-media	343

3.71	ip sip alg port	344
3.72	ip ssh	344
3.72.1	ip ssh cipher	345
3.72.2	ip ssh keygen	346
3.72.3	ip ssh lockout-policy	347
3.72.4	ip ssh port	347
3.72.5	ip ssh security-level	348
3.72.6	ip ssh session timeout	349
3.72.7	ip ssh sftp	349
3.73	ip static	352
3.74	ip static rule	353
3.75	ip telnet	354
3.75.1	ip telnet lockout-policy	355
3.75.2	ip telnet port	356
3.75.3	ip telnet security-level	356
3.75.4	ip telnet session max-count	357
3.75.5	ip telnet session timeout	358
3.76	ip traffic-shape host	358
3.77	ip traffic-shape unknown-host	360
3.78	ipv6 firewall	361
3.79	ipv6 local-prefix	361
3.80	ipv6 name-server	362
3.81	ipv6 pass	363
3.82	ipv6 route	364
3.83	ipv6 static	365
3.84	ipv6 subnet	365
3.84.1	ipv6 subnet bind	366
3.84.2	ipv6 subnet mode	367
3.84.3	ipv6 subnet number	367
3.85	isolate-private	368
3.86	kabinet	368
3.86.1	kabinet access-level	369
3.86.2	kabinet interface	370
3.86.3	kabinet password	371
3.86.4	kabinet port	371
3.86.5	kabinet protocol-version	372
3.86.6	kabinet server	372
3.87	known host	373
3.88	mdns	374
3.88.1	mdns reflector disable	374
3.88.2	mdns reflector enforce	375
3.89	mws acquire	375
3.90	mws backhaul shutdown	376

3.91 mws log stp	377
3.92 mws member	377
3.93 mws member check-update	378
3.94 mws member debug	378
3.95 mws member dpn-accept	379
3.96 mws revisit	380
3.97 mws zone	380
3.98 ndns	381
3.98.1 ndns book-name	382
3.98.2 ndns check-name	391
3.98.3 ndns drop-name	391
3.98.4 ndns get-booked	393
3.98.5 ndns get-update	394
3.99 ntce	397
3.99.1 ntce debug	397
3.99.2 ntce qos enable	398
3.99.3 ntce qos priority	398
3.100 ntp	399
3.100.1 ntp server	401
3.100.2 ntp sync-period	401
3.101 ntp server	401
3.102 ntp sync-period	401
3.103 opkg chroot	402
3.104 opkg disk	402
3.105 opkg dns-override	403
3.106 opkg initrc	404
3.107 opkg timezone	404
3.108 ping-check profile	405
3.108.1 ping-check profile host	406
3.108.2 ping-check profile max-fails	407
3.108.3 ping-check profile min-success	408
3.108.4 ping-check profile mode	408
3.108.5 ping-check profile port	409
3.108.6 ping-check profile power-cycle	410
3.108.7 ping-check profile timeout	410
3.108.8 ping-check profile update-interval	411
3.109 ppe	411
3.110 ppoe pass	412
3.111 printer	413
3.111.1 printer bidirectional	414
3.111.2 printer debug	414
3.111.3 printer firmware	415
3.111.4 printer name	415

3.111.5 printer port	416
3.111.6 printer status-polling	416
3.111.7 printer type	417
3.112 schedule	417
3.112.1 schedule action	418
3.112.2 schedule description	419
3.112.3 schedule led	419
3.113 service afp	420
3.114 service cifs	420
3.115 service dhcp	421
3.116 service dhcp-relay	421
3.117 service dlna	422
3.118 service dns-proxy	422
3.119 service ftp	423
3.120 service http	423
3.121 service igmp-proxy	424
3.122 service internet-checker	424
3.123 service ipsec	425
3.124 service kabinet	425
3.125 service mdns	426
3.126 service mws	426
3.127 service ntce	427
3.128 service ntp-client	427
3.129 service snmp	428
3.130 service ssh	428
3.131 service sstp-server	429
3.132 service telnet	429
3.133 service torrent	430
3.134 service udpfy	430
3.135 service upnp	431
3.136 service vpn-server	431
3.137 show	432
3.137.1 show access	432
3.137.2 show acme	433
3.137.3 show adguard-dns availability	433
3.137.4 show adguard-dns profiles	434
3.137.5 show afp	434
3.137.6 show associations	435
3.137.7 show button	437
3.137.8 show button bindings	437
3.137.9 show button handlers	439
3.137.10 show chilli profiles	441
3.137.11 show cifs	442

3.137.12 show clock date	443
3.137.13 show clock timezone-list	443
3.137.14 show cloudflare-dns availability	444
3.137.15 show cloudflare-dns profiles	445
3.137.16 show configurator status	445
3.137.17 show credits	446
3.137.18 show crypto ike key	454
3.137.19 show crypto map	455
3.137.20 show defaults	457
3.137.21 show dlna	457
3.137.22 show dns-proxy	458
3.137.23 show dpn document	460
3.137.24 show dpn list	461
3.137.25 show dot1x	463
3.137.26 show drivers	464
3.137.27 show dyndns updaters	465
3.137.28 show easyconfig status	465
3.137.29 show eula document	466
3.137.30 show eula list	467
3.137.31 show interface	468
3.137.32 show interface antennas	470
3.137.33 show interface bands	471
3.137.34 show interface bridge	472
3.137.35 show interface cable-diagnostics	473
3.137.36 show interface cells	474
3.137.37 show interface channels	475
3.137.38 show interface chilli	476
3.137.39 show interface country-codes	477
3.137.40 show interface dsl disconnect-report	478
3.137.41 show interface mac	479
3.137.42 show interface operators	480
3.137.43 show interface rf e2p	482
3.137.44 show interface rrd	483
3.137.45 show interface stat	485
3.137.46 show interface traffic-counter	486
3.137.47 show interface wps pin	487
3.137.48 show interface wps status	487
3.137.49 show internet status	489
3.137.50 show ip arp	489
3.137.51 show ip dhcp bindings	490
3.137.52 show ip dhcp pool	491
3.137.53 show ip ftp	492
3.137.54 show ip hotspot	492

3.137.55 show ip hotspot rrd	494
3.137.56 show ip hotspot summary	496
3.137.57 show ip http proxy	498
3.137.58 show ip http webdav	498
3.137.59 show ip name-server	499
3.137.60 show ip nat	500
3.137.61 show ip neighbour	501
3.137.62 show ip policy	502
3.137.63 show ip route	504
3.137.64 show ipsec	505
3.137.65 show ipv6 addresses	506
3.137.66 show ipv6 prefixes	507
3.137.67 show ipv6 routes	508
3.137.68 show kabinet status	508
3.137.69 show last-change	509
3.137.70 show led	509
3.137.71 show led bindings	510
3.137.72 show led controls	513
3.137.73 show log	516
3.137.74 show media	517
3.137.75 show mws associations	518
3.137.76 show mws candidate	519
3.137.77 show mws log	520
3.137.78 show mws member	521
3.137.79 show ndns	521
3.137.80 show netfilter	522
3.137.81 show ntce applications	522
3.137.82 show ntce attributes	525
3.137.83 show ntce groups	528
3.137.84 show ntce groupsets	534
3.137.85 show ntce hosts	535
3.137.86 show ntce oses	540
3.137.87 show ntce status	542
3.137.88 show ntp status	543
3.137.89 show nvox call-history	544
3.137.90 show ping-check	546
3.137.91 show ppe	547
3.137.92 show printers	548
3.137.93 show processes	548
3.137.94 show running-config	550
3.137.95 show schedule	553
3.137.96 show self-test	553
3.137.97 show site-survey	554

3.137.98 show ssh fingerprint	555
3.137.99 show ssh sftp	555
3.137.100 show sstp-server	556
3.137.101 show system	557
3.137.102 show system cpustat	557
3.137.103 show system zram	558
3.137.104 show tags	559
3.137.105 show threads	560
3.137.106 show torrent status	561
3.137.107 show upnp redirect	561
3.137.108 show usb	562
3.137.109 show version	563
3.137.110 show vpn-server	564
3.138 sms	564
3.138.1 sms delete	565
3.138.2 sms list	566
3.138.3 sms read	568
3.138.4 sms send	569
3.139 snmp community	569
3.140 snmp contact	570
3.141 snmp location	571
3.142 sstp-server	571
3.142.1 sstp-server dhcp route	572
3.142.2 sstp-server interface	572
3.142.3 sstp-server ipv6cp	573
3.142.4 sstp-server lcp echo	574
3.142.5 sstp-server lcp force-pap	575
3.142.6 sstp-server mru	575
3.142.7 sstp-server mtu	576
3.142.8 sstp-server multi-login	576
3.142.9 sstp-server pool-range	577
3.142.10 sstp-server static-ip	577
3.143 system	578
3.143.1 system button	578
3.143.2 system clock date	580
3.143.3 system clock timezone	580
3.143.4 system configuration factory-reset	581
3.143.5 system configuration save	581
3.143.6 system debug	582
3.143.7 system description	582
3.143.8 system domainname	583
3.143.9 system eject	584
3.143.10 system hostname	584

3.143.11 system led	585
3.143.12 system led power schedule	586
3.143.13 system led power shutdown	587
3.143.14 system log clear	587
3.143.15 system log reduction	588
3.143.16 system log server	588
3.143.17 system log suppress	589
3.143.18 system mode	590
3.143.19 system mount	590
3.143.20 system ndss dump-report disable	591
3.143.21 system reboot	591
3.143.22 system set	592
3.143.23 system swap	593
3.143.24 system trace lock threshold	594
3.143.25 system zram	595
3.144 tools	595
3.144.1 tools arping	596
3.144.2 tools ping	596
3.144.3 tools ping6	597
3.144.4 tools traceroute	599
3.145 torrent	600
3.145.1 torrent directory	600
3.145.2 torrent peer-port	601
3.145.3 torrent policy	601
3.145.4 torrent reset	602
3.145.5 torrent rpc-port	602
3.146 udpxy	603
3.146.1 udpxy buffer-size	603
3.146.2 udpxy buffer-timeout	604
3.146.3 udpxy interface	605
3.146.4 udpxy port	605
3.146.5 udpxy renew-interval	606
3.146.6 udpxy timeout	607
3.147 upnp forward	607
3.148 upnp lan	608
3.149 upnp redirect	609
3.150 user	610
3.150.1 user home	610
3.150.2 user password	611
3.150.3 user tag	612
3.151 ussd send	614
3.152 vpn-server	615
3.152.1 vpn-server dhcp route	615

3.152.2 vpn-server interface	616
3.152.3 vpn-server ipv6cp	617
3.152.4 vpn-server lcp echo	617
3.152.5 vpn-server lockout-policy	618
3.152.6 vpn-server mppe	619
3.152.7 vpn-server mppe-optional	620
3.152.8 vpn-server mru	620
3.152.9 vpn-server mtu	621
3.152.10 vpn-server multi-login	621
3.152.11 vpn-server pool-range	622
3.152.12 vpn-server static-ip	622
3.153 yandexdns	623
3.153.1 yandexdns assign	623
3.153.2 yandexdns check-availability	624
3.153.3 yandexdns enable	624
Glossary	627
Appendix A	
Interface Hierarchy	641
Appendix B	
HTTP API	643
B.1 REST Core Interface	643
B.1.1 Resource Location	643
B.1.2 Methods	643
B.1.3 Data Format	644
B.2 XML Core Interface	647
B.2.1 Command Request	648
B.2.2 Configuration Request	649
B.2.3 Request Packet	649
Appendix C	
SNMP MIB	651
C.1 SNMPv2-MIB	651
C.2 IF-MIB	651
C.3 IP-MIB	653
C.4 UDP-MIB	654
C.5 HOST-RESOURCES-MIB	654
C.6 UCD-SNMP-MIB	654
Appendix D	
IPsec Encryption Levels	657
D.1 weak	657
D.2 weak-pfs	658
D.3 normal	660
D.4 normal-pfs	661

D.5 normal-3des	662
D.6 normal-3des-pfs	663
D.7 high	664
D.8 strong	665
D.9 strong-aead	666
D.10 strong-aead-pfs	666

Product Overview

1.1 Hardware Configuration

CPU EcoNet EN7516GT MIPS® 1004Kc 900MHz, 2 cores / 4 threads

RAM 256MB DDR3: Winbond W632GU6MB-11, Nanya NT5CC128M16JR-EK

DSL AFE EcoNet EN7556N (ADSL2+/VDSL2 35b)

Flash Winbond W25N01GVZE IG 128MB SPI

Ethernet

Ports	Chipset	Notes
9	Integrated	

Label	Speed	Notes
0	1000 Mbps	WAN
1	1000 Mbps	
2	1000 Mbps	
3	1000 Mbps	
4	1000 Mbps	
5	1000 Mbps	
6	1000 Mbps	
7	1000 Mbps	
8	1000 Mbps	

DSL

Label	Speed	Notes
1		

USB

Label	Speed	Notes
1	USB 2.0	
2	USB 3.0	

Wi-Fi

Band	Chipset	Notes
2.4 GHz	MediaTek MT7615DN (PCIe Gen 2.1)	802.11bgn 4x4, QAM256, BF

Band	Chipset	Notes
5 GHz		802.11an+ac 4x4, BF, MU-MIMO, BW160

Introduction to the CLI

This chapter describes how to use the Peak DSL Command-Line Interface (CLI), its hierarchical structure, authorization levels and its help features.

The primary tool for managing the Peak DSL router is the command line interface ([CLI](#)). System settings can be defined as a sequence of commands, which can be executed to bring the device to the specified condition.

Peak DSL has three types of settings:

Current settings	<i>running config</i> is a set of commands describing the current status of the system. Current settings are stored in RAM and reflect every change of the system settings. However, the content of RAM is lost when the device is turned off. To restore the settings after reboot, they must be saved in non-volatile memory.
Startup configuration	<i>startup config</i> is a sequence of commands, which is stored in a specific partition of the non-volatile memory. It is used to initialize the system immediately after startup.
Default settings	<i>default config</i> contains factory default settings of Peak DSL. RESET button is used to reset startup configuration to the factory default.

Files `startup-config` and `running-config` can be edited manually, without participation of the command line. It should be remembered that the lines with ! in the beginning are ignored by the parser and the arguments which contain spaces must be enclosed in double quotes (for example, `ssid "Free Wi-Fi"`). Quotes themselves are ignored by the parser.

Responsibility for the accuracy of the changes rests with their author.

2.1 Enter commands in the CLI

Command line interpreter in Peak DSL is designed for beginners as well as experts. All command names and options are clear and easy to remember.

Commands are divided into groups and arranged in a hierarchy. Thus, to do a setting, the operator needs to enter a sequence of nested command group names (node commands), and then enter the final command with parameters.

For example, IP-address of the Dsl0 network interface is set using the **address** command, which is located in the **interface → ip** group:

```
(config)>interface Dsl0 ip address 192.168.15.43/24
Network address saved.
```

2.1.1 Entering a group

Some of the node commands (containing a group of child commands) can be “entered” to allow direct executing of the child commands without typing the node name as prefix. In this case the prompt is changed to indicate the entered group.

The **exit** command or [Ctrl]+[D] key combination can be used to exit a group.

For example, after entering the interface group the command line prompt is changed to (config-if):

```
(config)>interface Dsl0
(config-if)>ip address 192.168.15.43/24
Network address saved.
(config-if)>[Ctrl]+[D]
(config)>
```

2.2 Getting Help and auto-completion

To make the configuring process as comfortable as possible, the CLI provides auto-completion of commands and parameters, hinting the operator, which commands are available at the current level of nesting. Auto-completion works by pressing [Tab]. Example:

```
(config)>in[Tab]

interface - network interface configuration

(config)> interface Gi[Tab]

Usage template:
interface {name}

Variants:
GigabitEthernet0
GigabitEthernet0/Vlan1
Dsl0

(config)> interface GigabitEthernet0[Tab]

Usage template:
interface {name}

Variants:
GigabitEthernet0/Vlan1
Dsl0

(config)> interface GigabitEthernet0[Enter]
(config-if)> ip[Tab]

address - set interface IP address
alias - add interface IP alias
dhcp - enable dhcp client
```

```

        mtu - set Maximum Transmit Unit size
        mru - set Maximum Receive Unit size
access-group - bind access-control rules
        apn - set 3G access point name

(config-if)> ip ad[Tab]

        address - set interface IP address

(config-if)> ip address[Tab]

Usage template:
address {address} {mask}

(config-if)> ip address 192.168.15.43[Enter]
Configurator error[852002]: address: argument parse error.
(config-if)> ip address 192.168.15.43/24[Enter]
Network address saved.
(config-if)>

```

Hint for the current command can always be displayed by pressing [Tab]. Example:

```

(config)> interface Dsl0 [Tab]

description - set interface description
        alias - add interface name alias
mac-address - set interface MAC address
        dyndns - DynDns updates
security-level - assign security level
authentication - configure authentication
        ip - set interface IP parameters
        igmp - set interface IGMP parameters
        up - enable interface
        down - disable interface

(config)> interface Dsl0

```

2.3 Prefix no

Prefix **no** is used to negate a command.

For example, the command **interface** is responsible for creating a network interface with the given name. When used with this command, prefix **no** causes the opposite action — removing of the interface:

```
(config)> no interface PPPoE0
```

If the command is composite, **no** can be placed in front of any member. For example, **service dhcp** enables the **DHCP** service. It consists of two parts: **service** — the group name in the hierarchy of commands, and **dhcp** — the final command. Prefix **no** can be placed either at the beginning, or in the middle. The action is the same in both cases: stopping of the service.

```
(config)> no service dhcp  
(config)> service no dhcp
```

2.4 Multiple input

Many commands have the property of *idempotence*, which means that multiple input of a command has the same effect as the single input. For example, entering **service http** adds a single line “service http” to the current settings, and re-entering does not change anything.

However, some of the commands allow you to add not a single, but multiple records, if they are entered with different arguments. For example, static routing table entries **ip route** or filters **access-list** are added sequentially and appear in the settings as a list:

Example 2.1. Using a command with multiple input

```
(config)> ip route 1.1.1.0/24 PPTP0  
Network::RoutingTable: Added static route: 1.1.1.0/24 via PPTP0.  
(config)> ip route 1.1.2.0/24 PPTP0  
Network::RoutingTable: Added static route: 1.1.2.0/24 via PPTP0.  
(config)> ip route 1.1.3.0/24 PPTP1  
Network::RoutingTable: Added static route: 1.1.3.0/24 via PPTP1.  
(config)> show running-config  
...  
ip route 1.1.1.0 255.255.255.0 PPTP0  
ip route 1.1.2.0 255.255.255.0 PPTP0  
ip route 1.1.3.0 255.255.255.0 PPTP1  
...
```

Records from such tables can be removed one by one, using prefix **no** and arguments to identify the record you want to remove:

```
(config)> no ip route 1.1.2.0/24  
Network::RoutingTable: Deleted static route: 1.1.2.0/24 via PPTP0.  
(config)> show running-config  
...  
ip route 1.1.1.0 255.255.255.0 PPTP0  
ip route 1.1.3.0 255.255.255.0 PPTP1  
...
```

2.5 Saving to startup settings

Current and startup settings are stored in the files running-config and startup-config, respectively. To save the current settings in the non-volatile memory, copy them as shown below:

```
(config)> copy running-config startup-config  
Copied: running-config -> startup-config
```

2.6 Delayed restart

If Peak DSL device is located away from the operator and is managed remotely, there is a risk to lose control over it because of a misoperation. In this case it will be difficult to reboot and return to the saved settings.

The **system reboot** command lets you set a delayed restart timer, perform “risky” settings, then turn off the timer and save the changes. If connection to the device is lost during configuration, the operator will be enough to wait for automatic reboot and connect to the device again.

Command Reference

3.1 Core commands

Core commands are used to manage files on your device.

3.1.1 copy

Description Copy the contents of one file to another. Used for the firmware updating, saving the current settings, resetting to factory, etc.

Prefix no No

Change settings No

Multiple input No

Synopsis

(config)>	copy <source> <destination>
-----------	------------------------------------

Arguments

Argument	Value	Description
source	<i>Filename</i>	Full path to the file to be copied in <file system>:<path> format
destination	<i>Filename</i>	Full path to the directory for the new file.

Example Current settings can be saved as follows:

```
(config)> copy running-config startup-config
```

```
(config)> copy log MyPassport:/log.txt
```

File names in this example are aliases. Full names of the configuration files are system:running-config and flash:startup-config, respectively.

History

Version	Description
2.00	The copy command has been introduced.

3.1.2 erase

Description Delete a file from the Peak DSL device.

Prefix no No

Change settings Yes**Multiple input** Yes**Synopsis** (config)> **erase** <filename>**Arguments**

Argument	Value	Description
filename	<i>Filename</i>	Specifies the file to be removed.

Example (config)> **erase ext-opkg:/dlna_files.db**
FileSystem::Repository: "ext-opkg:/dlna_files.db" erased.**History**

Version	Description
2.00	The erase command has been introduced.

3.1.3 exit

Description Leave the command node.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (config)> **exit****Example** (show)> **exit**
Core::Configurator: Done.
(config)>**History**

Version	Description
2.00	The exit command has been introduced.

3.1.4 ls

Description Display list of files from the specified directory.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (config)> **ls** [<directory>]

Arguments	Argument	Value	Description
	directory	String	Path to the directory. Must contain the name of the file system and path to the folder directly in the following format <file system>:<path>. Examples of file systems — flash, temp, proc, usb. etc.

Example

```
(config)> ls FILES:
               rel: FILES:
               entry, type = D:
                     name: com
               entry, type = R:
                     name: IMAX.mkv
                     size: 1886912512
               entry, type = D:
                     name: speedfan
               entry, type = D:
                     name: portable
               entry, type = D:
                     name: video
               entry, type = D:
                     name: Новая папка
```

History

Version	Description
2.00	The ls command has been introduced.

3.1.5 mkdir

Description Create a new directory.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (config)> **mkdir** <*directory*>**Arguments**

Argument	Value	Description
directory	String	Path to the directory.

Example

```
(config)> mkdir SANDSK:/test  
FileSystem::Repository: "SANDSK:/test" created.
```

```
(config)> mkdir SANDSK:/test/onetest  
FileSystem::Repository: "SANDSK:/test/onetest" created.
```

History

Version	Description
2.12	The mkdir command has been introduced.

3.1.6 more

Description

Display the contents of a text file line by line.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(config)> more <filename>
```

Arguments

Argument	Value	Description
filename	<i>Filename</i>	Full path to the file or alias.

Example

```
(config)> more temp:/resolv.conf  
nameserver 127.0.0.1  
options timeout:1 attempts:1 rotate
```

History

Version	Description
2.00	The more command has been introduced.

3.2 access

Description

Set user access for directory on USB storage.

Command with **no** prefix denies access to the directory.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config)> access <directory> <user> <mode> [ recursive ]
```

```
(config)> no access <directory> <user> [ recursive ]
```

Arguments

Argument	Value	Description
directory	<i>String</i>	Name of directory on USB storage.
user	<i>String</i>	User name.
mode	forbidden	Access denied.
	read	Read-only access.
	write	Write-only access.
	read/write	Access to reading and writing.
	inherited	Access rights are inherited from a parent folder.
recursive	<i>Keyword</i>	Access rights applies to all subfolders.

Example

```
(config)> access 0D5F-1DB6:Downloads test read/write
```

```
(config)> no access 0D5F-1DB6:Downloads test
```

History

Version	Description
2.00	The access command has been introduced.

3.3 access-list

Description

Access to a group of commands to configure the selected list of packet filtering rules. If the list is not found, the command tries to create it. Such a list can be assigned to a network interface using **interface ip access-group** command.

Command with **no** prefix removes the list of rules.

Prefix no	Yes
Change settings	Yes
Multiple input	Yes
Group entry	(config-acl)

Synopsis

```
(config)> access-list <name>
(config)> no access-list <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	Filtering rules list name (Access Control List , ACL).

Example

```
(config)> access-list test_acl
Network::Acl: "test_acl" access list created.
(config-acl)>
```

```
(config)> no access-list test_acl
Network::Acl: "test_acl" access list removed.
```

History

Version	Description
2.00	The access-list command has been introduced.

3.3.1 access-list deny

Description Add a packet filtering deny rule into a specified [ACL](#).

Command with **no** prefix removes the rule.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-acl)> deny (tcp | udp) <source> <source-mask>
  [ port((<src-port-operator> <source-port>)||
  ( range <source-port> <source-end-port> ))]
  <destination> <destination-mask>
  [ port((<dst-port-operator> <destination-port>)||
  ( range <destination-port> <destination-end-port> ))]

(config-acl)> deny (icmp | esp | gre | ipip | ip) <source> <source-mask>
  <destination> <destination-mask>

(config-acl)> no deny (tcp | udp) <source> <source-mask>
  [ port((<src-port-operator> <source-port>)||
  ( range <source-port> <source-end-port> ))]
  <destination> <destination-mask>
  [ port((<dst-port-operator> <destination-port>)||
  ( range <destination-port> <destination-end-port> ))]

(config-acl)> no deny (icmp | esp | gre | ipip | ip) <source> <source-mask>
  <destination> <destination-mask>
```

Arguments

Argument	Value	Description
tcp	<i>Keyword</i>	TCP protocol.
udp	<i>Keyword</i>	UDP protocol.
icmp	<i>Keyword</i>	ICMP protocol.
esp	<i>Keyword</i>	ESP protocol.
gre	<i>Keyword</i>	GRE protocol.
ipip	<i>Keyword</i>	IP in IP protocol.

Argument	Value	Description
ip	Keyword	<i>IP</i> protocol (include <i>TCP</i> , <i>UDP</i> , <i>ICMP</i> and other).
source	<i>IP-address</i>	The source address in the header of IP-packet.
source-mask	<i>IP-mask</i>	Mask to be applied to the source address in the header of IP-packet before comparison with <i>source</i> . There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).
source-port	<i>Integer</i>	Source port in the <i>TCP</i> or <i>UDP</i> header.
source-end-port	<i>Integer</i>	The end of the source range of ports.
src-port-operator	lt	Operator “less” to compare the port with the specified <i>source-port</i> .
	eq	Operator “equal” to compare the port with the specified <i>source-port</i> .
	gt	Operator “greater” to compare the port with the specified <i>source-port</i> .
destination	<i>IP-address</i>	The destination address in the header of IP-packet.
destination-mask	<i>IP-mask</i>	Mask to be applied to the destination address in the header of IP-packet before comparison with <i>destination</i> . There are two ways to enter the mask: in the canonical form (for example, 255.255.255.0) and in the form of prefix with bit length (for example, /24).
destination-port	<i>Integer</i>	Destination port in the <i>TCP</i> or <i>UDP</i> header.
destination-end-port	<i>Integer</i>	The end of the destination range of ports.
dst-port-operator	lt	Operator “less” to compare the port with the specified <i>destination-port</i> .
	eq	Operator “equal” to compare the port with the specified <i>destination-port</i> .
	gt	Operator “greater” to compare the port with the specified <i>destination-port</i> .

Example

```
(config-acl)> deny tcp 0.0.0.0/24 port eq 80 0.0.0.0/24 port >
range 18 88
```

Network::Acl: Rule accepted.

```
(config-acl)> deny icmp 192.168.0.0 255.255.255.0 192.168.1.1 >
255.255.255.0
```

Network::Acl: Rule accepted.

```
(config-acl)> no deny tcp 0.0.0.0/24 port eq 80 0.0.0.0/24 port ▶
range 18 88
Network::Acl: Rule deleted.
```

```
(config-acl)> no deny icmp 192.168.0.0 255.255.255.0 192.168.1.1 ▶
255.255.255.0
Network::Acl: Rule deleted.
```

History

Version	Description
2.00	The access-list deny command has been introduced.
2.06	New value ip was added to the protocol argument.
2.08	New protocols esp , gre and ipip were added.
2.09.A.2.1	Port ranges were added.

3.3.2 access-list permit

Description Add a packet filtering permit rule into a specified [ACL](#).

Command with **no** prefix removes the rule.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-acl)> permit (tcp | udp) <source> <source-mask>
[ port((<src-port-operator> <source-port>)|
( range <source-port> <source-end-port> ))]
<destination> <destination-mask>
[ port((<dst-port-operator> <destination-port>)|
( range <destination-port> <destination-end-port> ))]

(config-acl)> permit (icmp | esp | gre | ipip | ip) <source> <source-mask>
<destination> <destination-mask>

(config-acl)> no permit (tcp | udp) <source> <source-mask>
[ port((<src-port-operator> <source-port>)|
( range <source-port> <source-end-port> ))]
<destination> <destination-mask>
[ port((<dst-port-operator> <destination-port>)|
( range <destination-port> <destination-end-port> ))]

(config-acl)> no permit (icmp | esp | gre | ipip | ip) <source> <source-mask>
<destination> <destination-mask>
```

Arguments

Argument	Value	Description
tcp	<i>Keyword</i>	<i>TCP</i> protocol.
udp	<i>Keyword</i>	<i>UDP</i> protocol.
icmp	<i>Keyword</i>	<i>ICMP</i> protocol.
esp	<i>Keyword</i>	<i>ESP</i> protocol.
gre	<i>Keyword</i>	<i>GRE</i> protocol.
ipip	<i>Keyword</i>	<i>IP in IP</i> protocol.
ip	<i>Keyword</i>	<i>IP</i> protocol (include <i>TCP</i> , <i>UDP</i> , <i>ICMP</i> and other).
source	<i>IP-address</i>	The source address in the header of IP-packet.
source-mask	<i>IP-mask</i>	Mask to be applied to the source address in the header of IP-packet before comparison with <i>source</i> . There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).
source-port	<i>Integer</i>	Source port in the <i>TCP</i> or <i>UDP</i> header.
source-end-port	<i>Integer</i>	The end of the source range of ports.
src-port-operator	lt	Operator “less” to compare the port with the specified <i>source-port</i> .
	eq	Operator “equal” to compare the port with the specified <i>source-port</i> .
	gt	Operator “greater” to compare the port with the specified <i>source-port</i> .
destination	<i>IP-address</i>	The destination address in the header of IP-packet.
destination-mask	<i>IP-mask</i>	Mask to be applied to the destination address in the header of IP-packet before comparison with <i>destination</i> . There are two ways to enter the mask: in the canonical form (for example, 255.255.255.0) and in the form of prefix with bit length (for example, /24).
destination-port	<i>Integer</i>	Destination port in the <i>TCP</i> or <i>UDP</i> header.
destination-end-port	<i>Integer</i>	The end of the destination range of ports.
dst-port-operator	lt	Operator “less” to compare the port with the specified <i>destination-port</i> .
	eq	Operator “equal” to compare the port with the specified <i>destination-port</i> .
	gt	Operator “greater” to compare the port with the specified <i>destination-port</i> .

Example

```
(config-acl)> permit icmp 192.168.0.0 255.255.255.0 192.168.1.1 ▶
255.255.255.0
Network::Acl: Rule accepted.

(config-acl)> permit tcp 0192.168.1.0/24 port eq 443 0.0.0.0/24 ▶
port range 8080 9090
Network::Acl: Rule accepted.

(config-acl)> no permit icmp 192.168.0.0 255.255.255.0 ▶
192.168.1.1 255.255.255.0
Network::Acl: Rule deleted.

(config-acl)> no permit tcp 0192.168.1.0/24 port eq 443 ▶
0.0.0.0/24 port range 8080 9090
Network::Acl: Rule deleted.
```

History

Version	Description
2.00	The access-list permit command has been introduced.
2.06	New value ip was added to the protocol argument.
2.08	New protocols esp , gre and ipip were added.
2.09.A.2.1	Port ranges were added.

3.3.3 access-list rule

Description Disable, set operation time by schedule, change the order or set description for the [ACL](#) rule.

Command with **no** prefix enables the rule, removes schedule and description for [ACL](#) rule.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-acl)> rule <index> ( disable | schedule <schedule> | order
<new-index> | description <description>)
```

```
(config-acl)> no rule <index> ( disable | schedule | description)
```

Arguments

Argument	Value	Description
index	<i>Integer</i>	The ACL rule number.
disable	<i>Keyword</i>	Disable the ACL rule.
schedule	<i>Schedule name</i>	The name of the schedule that was created with schedule group of commands.
order	<i>Integer</i>	New position of the ACL rule in the list.

Argument	Value	Description
description	<i>String</i>	The ACL rule description.

Example

```
(config-acl)> rule 0 disable
Network::Acl: Rule disabled.

(config-acl)> rule 0 schedule acl_schedule
Network::Acl: Rule schedule set to "acl_schedule".

(config-acl)>rule 0 description myacl
Network::Acl: Rule description set to "myacl".

(config-acl)> rule 0 order 1
Network::Acl: Rule 0 moved to position 1.

(config-acl)> no rule 0 disable
Network::Acl: Rule enabled.

(config-acl)> no rule 0 schedule
Network::Acl: Rule schedule removed.

(config-acl)> no rule 0 description
Network::Acl: Rule description removed.
```

History

Version	Description
2.08	The access-list rule command has been introduced.

3.4 adguard-dns

Description Access to a group of commands to configure *AdGuard DNS* profiles.

Prefix no No

Change settings No

Multiple input No

Group entry (adguard-dns)

Synopsis

(config)>	adguard-dns
-----------	--------------------

Example

(config)>	adguard-dns
Core::Configurator:	Done.
(adguard-dns)>	

History

Version	Description
2.12	The adguard-dns command has been introduced.

3.4.1 adguard-dns assign

Description Assign profile of protection to the host. By default standard profile is used for all hosts.

Command with **no** prefix resets setting to default standard profile.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(adguard-dns)> assign [<host>] <type>
```

```
(adguard-dns)> no assign [<host>]
```

Arguments

Argument	Value	Description
host	MAC-address	Host to which type of protection is applied. If not specified, the protection is applied to all hosts.
type	default	No protection used.
	base	Blocking advertising, tracking and phishing.
	standard	Secure DNS resolving, no blocking.
	family	Blocking advertising, tracking, phishing, adult sites, providing secure search.

Example

```
(adguard-dns)> assign base
AdguardDns::Client: Default type set.
```

```
(adguard-dns)> assign 4C:0F:6E:4B:3C:BA default
AdguardDns::Client: "4C:0F:6E:4B:3C:BA" has been associated with ▶
"default" profile.
```

```
(adguard-dns)> assign 4C:0F:6E:4B:3C:BA standard
AdguardDns::Client: "4C:0F:6E:4B:3C:BA" has been reassociated ▶
with "standard" profile.
```

```
(adguard-dns)> assign 4C:0F:6E:4B:3C:BA family
AdguardDns::Client: "4C:0F:6E:4B:3C:BA" has been reassociated ▶
with "family" profile.
```

```
(adguard-dns)> no assign a8:1e:84:85:f2:72
AdguardDns::Client: Host "a8:1e:84:85:f2:72" has been removed.
```

```
(adguard-dns)> no assign
AdguardDns::Client: Default type set.
```

History

Version	Description
2.12	The adguard-dns assign command has been introduced.

3.4.2 adguard-dns check-availability

Description Check availability of *AdGuard DNS* service.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (adguard-dns)> **check-availability****Example** (adguard-dns)> **check-availability**
AdguardDns::Client: AdGuard DNS is available.**History**

Version	Description
2.12	The adguard-dns check-availability command has been introduced.

3.4.3 adguard-dns enable

Description Enable *AdGuard DNS* service.Command with **no** prefix disables the service.**Prefix no** Yes**Change settings** Yes**Multiple input** No**Synopsis** (adguard-dns)> **enable**(adguard-dns)> **no enable****Example** (adguard-dns)> **enable**
AdguardDns::Client: AdGuard DNS enabled.(adguard-dns)> **no enable**
AdguardDns::Client: AdGuard DNS disabled.**History**

Version	Description
2.12	The adguard-dns enable command has been introduced.

3.5 afp

Description Access to a group of commands to manage *AFP* server service.

Prefix no No

Change settings No

Multiple input No

Group entry (config-afp)

Synopsis (config)> **afp**

Example

```
(config)> afp
Core::Configurator: Done.
(config-afp)>
```

History	Version	Description
	2.06	The afp command has been introduced.

3.5.1 afp automount

Description Enable automounting of USB storages to access via *AFP*. By default, the function is enabled.

Command with **no** prefix disables the automounting function.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis (config-afp)> **automount**

(config-afp)> **no automount**

Example

```
(config-afp)> automount
Afp::Server: Automount enabled.
```

```
(config-afp)> no automount
Afp::Server: Automount disabled.
```

History	Version	Description
	2.06	The afp automount command has been introduced.

3.5.2 afp permissive

Description	Enable permissive mode, when all users can access the files on USB storage. By default, the setting is disabled.				
	Command with no prefix disables permissive mode, so access to the files have only users with "afp" tag.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Synopsis	<pre>(config-afp)> permissive (config-afp)> no permissive</pre>				
Example	<pre>(config-afp)> permissive Afp::Server: Permissive mode enabled.</pre> <pre>(config-afp)> no permissive Afp::Server: Permissive mode disabled.</pre>				
History	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr style="background-color: #cccccc;"> <th style="text-align: left; padding: 2px;">Version</th> <th style="text-align: left; padding: 2px;">Description</th> </tr> </thead> <tbody> <tr> <td style="padding: 2px;">2.06</td> <td style="padding: 2px;">The afp permissive command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.06	The afp permissive command has been introduced.
Version	Description				
2.06	The afp permissive command has been introduced.				

3.5.3 afp share

Description	Share directory on USB storage.												
	Command with no prefix removes share. If you use no argument, the entire list of shares will be removed.												
Prefix no	Yes												
Change settings	Yes												
Multiple input	Yes												
Synopsis	<pre>(config-afp)> share <label> <mount> [timemachine] [description] (config-afp)> no share [label]</pre>												
Arguments	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr style="background-color: #cccccc;"> <th style="text-align: left; padding: 2px;">Argument</th> <th style="text-align: left; padding: 2px;">Value</th> <th style="text-align: left; padding: 2px;">Description</th> </tr> </thead> <tbody> <tr> <td style="padding: 2px;">label</td> <td style="padding: 2px;"><i>String</i></td> <td style="padding: 2px;">Share name for users.</td> </tr> <tr> <td style="padding: 2px;">mount</td> <td style="padding: 2px;"><i>String</i></td> <td style="padding: 2px;">Name of directory to share.</td> </tr> <tr> <td style="padding: 2px;">timemachine</td> <td style="padding: 2px;"><i>Keyword</i></td> <td style="padding: 2px;">Access for Time Machine application.</td> </tr> </tbody> </table>	Argument	Value	Description	label	<i>String</i>	Share name for users.	mount	<i>String</i>	Name of directory to share.	timemachine	<i>Keyword</i>	Access for Time Machine application.
Argument	Value	Description											
label	<i>String</i>	Share name for users.											
mount	<i>String</i>	Name of directory to share.											
timemachine	<i>Keyword</i>	Access for Time Machine application.											

Argument	Value	Description
description	<i>String</i>	Description of share.

Example

```
(config-afp)> share AFP C253-062D:/FOR_AFP timemachine
Afp::Server: Added share "AFP".
```

```
(config-afp)> no share AFP
Afp::Server: Removed share "AFP".
```

History

Version	Description
2.06	The afp share command has been introduced.

3.6 cifs

Description Access to a group of commands to manage **CIFS** service.

Prefix no No

Change settings No

Multiple input No

Group entry (config-cifs)

Synopsis

```
(config)>   cifs
```

Example

```
(config)> cifs
Core::Configurator: Done.
(config-cifs)>
```

History

Version	Description
2.00	The cifs command has been introduced.

3.6.1 cifs automount

Description Enable automounting of USB storages to access via **CIFS**. By default, the function is enabled.

Command with **no** prefix disables the automounting function.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis	<pre>(config-cifs)> automount (config-cifs)> no automount</pre>				
Example	<pre>(config-cifs)> automount Cifs::ServerTsmb: Automount enabled.</pre> <pre>(config-cifs)> no automount Cifs::ServerTsmb: Automount disabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.00</td><td>The cifs automount command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.00	The cifs automount command has been introduced.
Version	Description				
2.00	The cifs automount command has been introduced.				

3.6.2 cifs map-hidden

Description	Enable <i>ACL</i> and hidden files support for <i>CIFS</i> . By default, the feature is disabled. Command with no prefix disables the feature.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Synopsis	<pre>(config-cifs)> map-hidden (config-cifs)> no map-hidden</pre>				
Example	<pre>(config-cifs)> map-hidden Cifs::ServerTsmb: Map hidden enabled.</pre> <pre>(config-cifs)> no map-hidden Cifs::ServerTsmb: Map hidden enabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.14</td><td>The cifs map-hidden command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.14	The cifs map-hidden command has been introduced.
Version	Description				
2.14	The cifs map-hidden command has been introduced.				

3.6.3 cifs master

Description	Enable <i>Master Browser</i> function for TSMB server. By default, the setting is enabled. Command with no prefix disables <i>Master Browser</i> function.
Prefix no	Yes
Change settings	Yes

Multiple input

No

Synopsis(config-cifs)> **master**(config-cifs)> **no master****Example**(config-cifs)> **master**
Cifs::ServerT smb: Master browser enabled.(config-cifs)> **no master**
Cifs::ServerT smb: Master browser disabled.**History**

Version	Description
2.00	The cifs master command has been introduced.
2.04	The cifs master command was removed as obsolete.
3.03	The cifs master command has been returned.

3.6.4 cifs permissive

Description

Enable permissive mode, when all users can access the files on USB storage. By default, the setting is disabled.

Command with **no** prefix disables permissive mode, so access to the files have only users with "cifs" tag.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis(config-cifs)> **permissive**(config-cifs)> **no permissive****Example**(config-cifs)> **permissive**
Cifs::ServerT smb: Permissive mode enabled.(config-cifs)> **no permissive**
Cifs::ServerT smb: Permissive mode disabled.**History**

Version	Description
2.00	The cifs permissive command has been introduced.

3.6.5 cifs share

Description

Share directory on USB storage.

Command with **no** prefix removes share. If you use no argument, the entire list of shares will be removed.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

(config-cifs)> share < <i>label</i> > < <i>mount</i> > [<i>description</i>]
--

(config-cifs)> no share [<i>label</i>]

Arguments

Argument	Value	Description
label	<i>String</i>	Share name, that users will see.
mount	<i>String</i>	Name of directory to share.
description	<i>String</i>	Description of share.

Example

(config-cifs)> share MYHOME1 10A0CDE9A0CDD4FE:/ Cifs::ServerTsmb: Added share "MYHOME1".
--

(config-cifs)> share MYHOME 10A0CDE9A0CDD4FE:/Video/ Cifs::ServerTsmb: Added share "MYHOME".
--

(config-cifs)> no share MYHOME1 Cifs::ServerTsmb: Removed share "MYHOME1".
--

History

Version	Description
2.00	The cifs share command has been introduced.

3.7 cloud control2 security-level

Description Set Cloud Control2 service security level for Keenetic mobile application. By default, public value is set.

Prefix no No

Change settings Yes

Multiple input No

Synopsis

(config)> cloud control2 security-level (public private)

Arguments

Argument	Value	Description
public	<i>Keyword</i>	Access to the Cloud Control2 is allowed for public, private and protected interfaces.

Argument	Value	Description
private	Keyword	Access to the Cloud Control2 is allowed for private interfaces only.

Example

```
(config)> cloud control2 security-level public
CloudControl2::Agent: Security level changed to public.

(config)> cloud control2 security-level private
CloudControl2::Agent: Security level changed to private.
```

History

Version	Description
3.05	The cloud control2 security-level command has been introduced.

3.8 cloudflare-dns

Description Access to a group of commands to configure *Cloudflare DNS* profiles.

Prefix no No

Change settings No

Multiple input No

Group entry (cloudflare-dns)

Synopsis

(config)>	cloudflare-dns
-----------	-----------------------

Example

(config)>	cloudflare-dns
Core::Configurator: Done.	
(cloudflare-dns)>	

History

Version	Description
3.05	The cloudflare-dns command has been introduced.

3.8.1 cloudflare-dns assign

Description Assign profile of protection to the host. By default standard profile is used for all hosts.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input

Yes

Synopsis

```
(cloudflare-dns)> assign [<host>] <type>
(cloudflare-dns)> no assign [<host>]
```

Arguments

Argument	Value	Description
host	MAC-address	Host to which type of protection is applied. If not specified, the protection is applied to all hosts.
type	default	No protection used.
	standard	Secure DNS resolving, no blocking.
	malware	Blocking malware.
	family	Blocking malware and adult sites.

Example

```
(cloudflare-dns)> assign default
CloudflareDns::Client: Default type set.

(cloudflare-dns)> assign c0:b8:83:c2:cb:11 default
CloudflareDns::Client: "c0:b8:83:c2:cb:11" has been reassociated ▶
with "default" profile.

(cloudflare-dns)> assign c0:b8:83:c2:cb:11 standard
CloudflareDns::Client: "c0:b8:83:c2:cb:11" has been reassociated ▶
with "standard" profile.

(cloudflare-dns)> assign c0:b8:83:c2:cb:11 malware
CloudflareDns::Client: "c0:b8:83:c2:cb:11" has been reassociated ▶
with "malware" profile.

(cloudflare-dns)> assign c0:b8:83:c2:cb:11 family
CloudflareDns::Client: "c0:b8:83:c2:cb:11" has been reassociated ▶
with "family" profile.

(cloudflare-dns)> no assign c0:b8:83:c2:cb:11
CloudflareDns::Client: Host "c0:b8:83:c2:cb:11" has been removed.

(cloudflare-dns)> no assign
CloudflareDns::Client: Default type set.
```

History

Version	Description
3.05	The cloudflare-dns assign command has been introduced.

3.8.2 cloudflare-dns check-availability

DescriptionCheck availability of *Cloudflare DNS* service.

Prefix no	No				
Change settings	No				
Multiple input	No				
Synopsis	(cloudflare-dns)> check-availability				
Example	(cloudflare-dns)> check-availability CloudflareDns::Client: Cloudflare DNS is available.				
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>3.05</td><td>The cloudflare-dns check-availability command has been introduced.</td></tr></tbody></table>	Version	Description	3.05	The cloudflare-dns check-availability command has been introduced.
Version	Description				
3.05	The cloudflare-dns check-availability command has been introduced.				

3.8.3 cloudflare-dns enable

Description	Enable <i>Cloudflare DNS</i> service. Command with no prefix disables the service.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Synopsis	(cloudflare-dns)> enable (cloudflare-dns)> no enable				
Example	(cloudflare-dns)> enable CloudflareDns::Client: Cloudflare DNS enabled. (cloudflare-dns)> no enable CloudflareDns::Client: Cloudflare DNS disabled.				
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>3.05</td><td>The cloudflare-dns command has been introduced.</td></tr></tbody></table>	Version	Description	3.05	The cloudflare-dns command has been introduced.
Version	Description				
3.05	The cloudflare-dns command has been introduced.				

3.9 components

Description	Access to a group of commands to manage firmware components.
Prefix no	No
Change settings	No

Multiple input	No				
Group entry	(config-comp)				
Synopsis	(config)> components				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.00</td> <td>The components command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.00	The components command has been introduced.
Version	Description				
2.00	The components command has been introduced.				

3.9.1 components auto-update channel

Description Set source of components for auto-update feature. By default, value stable is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config-comp)> auto-update channel <channel>
(config-comp)> no auto-update channel

Arguments	Argument	Value	Description
channel	stable	Components have been fully tested and recommended for installation. The web interface specifies this channel as Main.	
	preview	Components contain the latest features and enhancements, but have not been fully tested yet. The web interface specifies this channel as Preview.	
	draft	The components contain the latest features and are used for testing. The web interface specifies this channel as Dev.	

Example	(config-comp)> auto-update channel preview Components::Manager: Auto-update channel is "preview".
	(config-comp)> no auto-update channel Components::Manager: Reset an auto-update channel to default.

History	Version	Description
	3.01	The components auto-update channel command has been introduced.

3.9.2 components auto-update disable

Description	Components auto-update function. By default, automatic update is enabled. Command with no prefix enables auto-update.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	Yes				
Synopsis	<pre>(config-comp)> auto-update disable (config-comp)> no auto-update disable</pre>				
Example	<pre>(config-comp)> auto-update disable Components::Manager: Components auto-update disabled. (config-comp)> no auto-update disable Components::Manager: Components auto-update enabled.</pre>				
History	<table><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.09</td><td>The components auto-update disable command has been introduced.</td></tr></tbody></table>	Version	Description	2.09	The components auto-update disable command has been introduced.
Version	Description				
2.09	The components auto-update disable command has been introduced.				

3.9.3 components auto-update schedule

Description	Assign a schedule for the auto-update operation. Schedule must be created and customized with schedule action command before execution. Command with no prefix unbinds the schedule.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(config-comp)> auto-update schedule <schedule> (config-comp)> no auto-update schedule</pre>						
Arguments	<table><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>schedule</td><td><i>Schedule name</i></td><td>The name of the schedule that was created with schedule group of commands.</td></tr></tbody></table>	Argument	Value	Description	schedule	<i>Schedule name</i>	The name of the schedule that was created with schedule group of commands.
Argument	Value	Description					
schedule	<i>Schedule name</i>	The name of the schedule that was created with schedule group of commands.					
Example	<pre>(config-comp)> auto-update schedule Update Components::Manager: Set auto-update schedule "Update".</pre>						

```
(config-comp)> no auto-update schedule
Components::Manager: Schedule disabled.
```

History

Version	Description
3.03	The components auto-update schedule command has been introduced.

3.9.4 components check-update

Description Check the firmware updates for the candidate or member of Modular Wi-Fi System.

Prefix no No

Change settings No

Multiple input No

Synopsis

(config-comp)>	check-update [<i>force</i>]
----------------	--------------------------------------

Arguments

Argument	Value	Description
force	<i>Keyword</i>	Check for updates constantly.

Example

```
(config-comp)> check-update
release: 2.15.A.3.0-2
          sandbox: draft
          timestamp: Dec 17 18:58:55
          valid: no
```

```
(config-comp)> check-update force
release: 2.15.A.3.0-2
          sandbox: draft
          timestamp: Dec 17 18:58:55
          valid: no
```

History

Version	Description
2.14	The components check-update command has been introduced.

3.9.5 components commit

Description Apply the changes made by **components install** and **components remove** commands.

Prefix no	No				
Change settings	Yes				
Multiple input	No				
Synopsis	(config-comp)> commit				
History	<table><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.00</td><td>The components commit command has been introduced.</td></tr></tbody></table>	Version	Description	2.00	The components commit command has been introduced.
Version	Description				
2.00	The components commit command has been introduced.				

3.9.6 components install

Description	Mark component to install. Final installation carried out with components commit command.						
Prefix no	No						
Change settings	Yes						
Multiple input	Yes						
Synopsis	(config-comp)> install <component>						
Arguments	<table><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>component</td><td><i>String</i></td><td>Component name. List of available components for installation can be displayed with the components list command.</td></tr></tbody></table>	Argument	Value	Description	component	<i>String</i>	Component name. List of available components for installation can be displayed with the components list command.
Argument	Value	Description					
component	<i>String</i>	Component name. List of available components for installation can be displayed with the components list command.					
Example	(config-comp)> install ntfs Components::Manager: Component "ntfs" is queued for installation.						

History	<table><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.00</td><td>The components install command has been introduced.</td></tr></tbody></table>	Version	Description	2.00	The components install command has been introduced.
Version	Description				
2.00	The components install command has been introduced.				

3.9.7 components list

Description	Switch to the selected sandbox and mark for installation all the components that require changes to match the version in the sandbox. If you use no argument, the entire list of all components for current sandbox (installed and available) will be displayed. If there is no Internet connection, only the list of installed components will be displayed.
Prefix no	No

Change settings

No

Multiple input

No

Synopsis(config-comp)> **list** [*sandbox*]**Arguments**

Argument	Value	Description
<i>sandbox</i>	<i>String</i>	Remote sandbox, such as stable or beta.

Example

```
(config-comp)> list

    firmware:
        version: 2.13.C.0.0-1

    sandbox: stable

    local:
        sandbox: beta

    component:
        name: base

        priority: optional
        size: 35233
        version: 2.13.C.0.0-1
        hash: f65428af2a6fd636db779370deb58f40
        installed: 2.13.B.1.0-1

        preset: minimal
        preset: recommended
        queued: yes

    ...

```

History

Version	Description
2.00	The components list command has been introduced.
2.06.A.6	The <i>sandbox</i> parameter has been introduced. The command components list should be used in favour of components sync .

3.9.8 components preset

Description

Select a predefined set of components. Installation of preset is carried out with **components commit** command.

Before preset installation check the latest versions of components on the update server with **components list** command. Internet connection is required.

Prefix no	No								
Change settings	Yes								
Multiple input	No								
Synopsis	(config-comp)> preset {preset}								
Arguments	Number and names of presets can be changed, so check the list of available presets with help of preset [Tab] command. <table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td rowspan="2">preset</td><td>minimal</td><td>Minimal set of components will be marked.</td></tr><tr><td>recommended</td><td>Recommended set of components will be marked for installation.</td></tr></tbody></table>	Argument	Value	Description	preset	minimal	Minimal set of components will be marked.	recommended	Recommended set of components will be marked for installation.
Argument	Value	Description							
preset	minimal	Minimal set of components will be marked.							
	recommended	Recommended set of components will be marked for installation.							
Example	(config-comp)> preset [Tab] Usage template: preset {preset} Choose: minimal recommended								
	(config-comp)> preset recommended lib::libndmComponents error[268369922]: updates are available ► for this system. (config-comp)> commit Components::Manager: Update task started.								
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.00</td><td>The components preset command has been introduced.</td></tr></tbody></table>	Version	Description	2.00	The components preset command has been introduced.				
Version	Description								
2.00	The components preset command has been introduced.								

3.9.9 components preview

Description	Show size of firmware as current set of components selected with components install command.
Prefix no	No
Change settings	Yes
Multiple input	No
Synopsis	(config-comp)> preview
Example	(config-comp)> preview

```
preview:  
size: 7733308
```

History	Version	Description
	2.06	The components preview command has been introduced.

3.9.10 components remove

Description Mark component to remove. Final removal carried out with [components commit](#) command.

Prefix no No

Change settings Yes

Multiple input Yes

Synopsis

(config-comp)>	remove <component>
----------------	---------------------------

Arguments	Argument	Value	Description
	component	<i>String</i>	Component name. List of available components for removal can be displayed with the components list command.

Example

(config-comp)> remove ntfs

Components::Manager: Component "ntfs" is queued for removal.

History	Version	Description
	2.00	The components remove command has been introduced.

3.9.11 components validity-period

Description Set a validity period of a local component list. After this time the command [components list](#) will be automatically executed to get actual list of components from update server.

Command with **no** prefix resets period to default. By default, value 1800 is used.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-comp)> validity-period <seconds>
```

```
(config-comp)> no validity-period
```

Arguments

Argument	Value	Description
seconds	<i>Integer</i>	Validity period of a local component list in seconds. Can take values in the range from 0 to 604800 inclusively.

Example

```
(config-comp)> validity-period 500
```

Components::Manager: Validity period set to 500 seconds.

```
(config-comp)> no validity-period
```

Components::Manager: Validity period reset to 1800 seconds.

History

Version	Description
2.03	The components validity-period command has been introduced.

3.10 crypto engine

Description

Select the type of *ESP* packets processing with *IPsec*. By default, the hardware mode is used.

Command with **no** prefix disables the feature.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> crypto engine <type>
```

```
(config)> no crypto engine
```

Arguments

Argument	Value	Description
type	software	Software mode.
	hardware	Hardware mode.

Example

```
(config)> crypto engine software
```

IpSec::CryptoEngineManager: IPsec crypto engine set to "software".

```
(config)> no crypto engine
```

IpSec::CryptoEngineManager: IPsec crypto engine was disabled.

History

Version	Description
2.06	The crypto engine command has been introduced.

3.11 crypto ike key

Description Add **IKE** key with remote side ID.

Command with **no** prefix removes specified key.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

(config)>	crypto ike key <name> <psk> (<type> <id> any)
(config)>	no crypto ike key <name>

Arguments

Argument	Value	Description
name	<i>String</i>	Name of the key. Latin letters, numbers, dots, hyphens and underscores are acceptable.
psk	<i>String</i>	Password for authentication. Password length can be from 6 to 96 characters.
type	address	ID type is IP-address.
	fqdn	ID type is full domain name.
	dn	ID type is domain name.
	email	ID type is e-mail address.
id	<i>String</i>	Value of the remote side ID.
any	<i>Keyword</i>	Allow the key usage for any remote side.

Example

```
(config)> crypto ike key VirtualIPServer ▶
aDjs0C1gvWCs0iE4Ijhs+HRnNPiheGA478 any
IpSec::Manager: "VirtualIPServer": crypto ike key successfully ▶
added.
```

```
(config)> crypto ike key VirtualIPServer ▶
aDjs0C1gvWCs0iE4Ijhs+HRnNPiheGA478R4M6d4+054LLihe any
IpSec::Manager: "VirtualIPServer": crypto ike key successfully ▶
updated.
```

```
(config)> no crypto ike key VirtualIPServer
IpSec::Manager: "VirtualIPServer": crypto ike key successfully ▶
removed.
```

History

Version	Description
2.06	The crypto ike key command has been introduced.

3.12 crypto ike nat-keepalive

Description Set the timeout between keepalive packets in case of NAT between the client and server *IPsec*. By default, 20 value is set.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> crypto ike nat-keepalive <nat-keepalive>
(config)> no crypto ike nat-keepalive
```

Arguments

Argument	Value	Description
nat-keepalive	<i>Integer</i>	Timeout between keepalive packets in seconds. Can take values from 5 to 3600 inclusively.

Example

```
(config)> crypto ike nat-keepalive 90
IpSec::Manager: Set crypto ike nat-keepalive timeout to 90 s.
```

```
(config)> no crypto ike nat-keepalive
IpSec::Manager: Reset crypto ike nat-keepalive timeout to 20 s.
```

History

Version	Description
2.06	The crypto ike nat-keepalive command has been introduced.

3.13 crypto ike policy

Description Access to a group of commands to configure selected *IKE* policy. If *IKE* policy is not found, the command tries to create it.

Command with **no** prefix removes *IKE* policy. At the same time references to this *IKE* policy are automatically deleted from all *IPsec* profiles.

Prefix no Yes

Change settings Yes

Multiple input	Yes						
Group entry	(config-ike-policy)						
Synopsis	<pre> (config)> crypto ike policy <name> (config)> no crypto ike policy <name></pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>name</td><td><i>String</i></td><td><i>IKE</i> policy name. Latin letters, numbers, dots, hyphens and underscores are acceptable.</td></tr> </tbody> </table>	Argument	Value	Description	name	<i>String</i>	<i>IKE</i> policy name. Latin letters, numbers, dots, hyphens and underscores are acceptable.
Argument	Value	Description					
name	<i>String</i>	<i>IKE</i> policy name. Latin letters, numbers, dots, hyphens and underscores are acceptable.					
Example	<pre>(config)> crypto ike policy test IpSec::Manager: "test": crypto ike policy successfully created. (config)> no crypto ike policy test IpSec::Manager: Crypto ike policy "test" removed.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.06</td><td>The crypto ike policy command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.06	The crypto ike policy command has been introduced.		
Version	Description						
2.06	The crypto ike policy command has been introduced.						

3.13.1 crypto ike policy lifetime

Description	Set lifetime of <i>IPsec IKE</i> association. By default, the value 86400 is used. Command with no prefix resets setting to default.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre> (config-ike-policy)> lifetime <lifetime> (config-ike-policy)> no lifetime</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>lifetime</td><td><i>Integer</i></td><td>Lifetime of <i>IPsec IKE</i> association in seconds. Can take values from 60 to 2147483647.</td></tr> </tbody> </table>	Argument	Value	Description	lifetime	<i>Integer</i>	Lifetime of <i>IPsec IKE</i> association in seconds. Can take values from 60 to 2147483647.
Argument	Value	Description					
lifetime	<i>Integer</i>	Lifetime of <i>IPsec IKE</i> association in seconds. Can take values from 60 to 2147483647.					
Example	<pre>(config-ike-policy)> lifetime 3600 IpSec::Manager: "test": crypto ike policy lifetime set to 3600 s. (config-ike-policy)> no lifetime IpSec::Manager: "test": crypto ike policy lifetime reset.</pre>						

History

Version	Description
2.06	The crypto ike policy lifetime command has been introduced.

3.13.2 crypto ike policy mode

Description

Set [IKE](#) protocol version. By default, the value ikev1 is used.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-ike-policy)> mode <mode>
```

```
(config-ike-policy)> no mode
```

Arguments

Argument	Value	Description
mode	ikev1	Protocol version IKEv1.
	ikev2	Protocol version IKEv2.

Example

```
(config-ike-policy)> mode ikev2
IpSec::Manager: "test": crypto ike policy mode set to "ikev2".
```

```
(config-ike-policy)> no mode
IpSec::Manager: "test": crypto ike policy mode reset.
```

History

Version	Description
2.06	The crypto ike policy mode command has been introduced.

3.13.3 crypto ike policy negotiation-mode

Description

Set exchange mode for IKEv1 (see [crypto ike policy mode](#) command). By default, the value main is used.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-ike-policy)> negotiation-mode <negotiation-mode>
(config-ike-policy)> no negotiation-mode
```

Arguments

Argument	Value	Description
negotiation-mode	main	Main mode, protects the identity of the peers.
	aggressive	Aggressive mode, does not protect the identity of the peers.

Example

```
(config-ike-policy)> negotiation-mode aggressive
IpSec::Manager: "test": crypto ike policy negotiation-mode set ▶
to "aggressive".
(config-ike-policy)> no negotiation-mode
IpSec::Manager: "test": crypto ike policy negotiation-mode reset.
```

History

Version	Description
2.06	The crypto ike policy negotiation-mode command has been introduced.

3.13.4 crypto ike policy proposal

Description

Add reference on existing *IKE* proposal to *IKE* policy. The order of adding has a value for data exchange on the *IKE* protocol.

Command with **no** prefix removes reference on *IKE* proposal.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config-ike-policy)> proposal <proposal>
(config-ike-policy)> no proposal <proposal>
```

Arguments

Argument	Value	Description
proposal	String	<i>IKE</i> proposal name. Latin letters, numbers, dots, hyphens and underscores are acceptable.

Example

```
(config-ike-policy)> proposal test
IpSec::Manager: "test": crypto ike proposal "test" successfully ▶
added.
```

```
(config-ike-policy)> no proposal
IpSec::Manager: "test": crypto ike policy proposal "test" ▶
successfully removed.
```

History

Version	Description
2.06	The crypto ike policy proposal command has been introduced.

3.14 crypto ike proposal

Description

Access to a group of commands to configure selected *IKE* proposal. If *IKE* proposal is not found, the command tries to create it.

A full list of encryption algorithms implemented in the system is provided in the [Appendix](#).

Command with **no** prefix removes *IKE* proposal. At the same time references to this *IKE* proposal are automatically deleted from all *IKE* policy.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Group entry

(config-ike-proposal)

Synopsis

```
(config)> crypto ike proposal <name>
(config)> no crypto ike proposal <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	<i>IKE</i> proposal name. Latin letters, numbers, dots, hyphens and underscores are acceptable.

Example

```
(config)> crypto ike proposal test
IpSec::Manager: "test": crypto ike proposal successfully created.

(config)> no crypto ike proposal test
IpSec::Manager: Crypto ike proposal "test" removed.
```

History

Version	Description
2.06	The crypto ike proposal command has been introduced.

3.14.1 crypto ike proposal aead

Description Enable *AEAD* cypher mode on *IKE* proposal.

Prefix no No

Change settings No

Multiple input No

Synopsis

(config-ike-proposal)>	aead
------------------------	-------------

Example

(config-ike-proposal)>	aead
IpSec::Manager: "TEST": crypto ike proposal "TEST" enabled AEAD mode.	

History	Version	Description
	3.05	The crypto ike proposal aead command has been introduced.

3.14.2 crypto ike proposal dh-group

Description Add the selected *DH* group to *IKE* proposal to work in the *PFS* mode. The order of adding has a value for data exchange on the *IKE* protocol.

Command with **no** prefix removes the selected group.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

(config-ike-proposal)>	dh-group <dh-group>
(config-ike-proposal)>	no dh-group <dh-group>

Arguments	Argument	Value	Description
	dh-group	1	<i>DH</i> group to work in the <i>PFS</i> mode.
		2	
		5	
		14	
		15	
		16	
		17	
		18	

Argument	Value	Description
	19	
	20	
	21	
	25	
	26	
	31	
	32	

Example

```
(config-ike-proposal)> dh-group 14
IpSec::Manager: "test": crypto ike proposal DH group "14" ►
successfully added.
```

```
(config-ike-proposal)> no dh-group 14
IpSec::Manager: "test": crypto ike proposal "test" group type ►
successfully removed.
```

History

Version	Description
2.06	The crypto ike proposal dh-group command has been introduced.

3.14.3 crypto ike proposal encryption

Description Add the selected type of encryption to *IKE* proposal. The order of adding has a value for data exchange on the *IKE* protocol.

Command with **no** prefix removes the selected type of encryption.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
| (config-ike-proposal)> encryption <encryption>
| (config-ike-proposal)> no encryption <encryption>
```

Arguments

Argument	Value	Description
encryption	des	Type of <i>IKE</i> encryption.
	3des	
	aes-cbc-128	
	aes-cbc-192	
	aes-cbc-256	

Argument	Value	Description
	aes-ctr-128	
	aes-ctr-192	
	aes-ctr-256	

Example

```
(config-ike-proposal)> encryption des
IpSec::Manager: "test": crypto ike proposal encryption algorithm ▶
"des" added.
```

```
(config-ike-proposal)> no encryption des
IpSec::Manager: "test": crypto ike proposal "test" encryption ▶
type successfully removed.
```

History

Version	Description
2.06	The crypto ike proposal encryption command has been introduced.

3.14.4 crypto ike proposal integrity

Description Add the selected value of **HMAC** signature algorithm to **IKE** proposal. The order of adding has a value for data exchange on the **IKE** protocol.

Command with **no** prefix removes the selected algorithm.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

<pre>(config-ike-proposal)> integrity <integrity></pre>
<pre>(config-ike-proposal)> no integrity <integrity></pre>

Arguments

Argument	Value	Description
integrity	md5	HMAC signature algorithm of IKE messages.
	sha1	
	sha256	
	sha384	
	sha512	

Example

```
(config-ike-proposal)> integrity sha256
IpSec::Manager: "test": crypto ike proposal integrity algorithm ▶
"sha256" successfully added.
```

```
(config-ike-proposal)> no integrity sha256
IpSec::Manager: "test": crypto ike proposal "test" integrity ▶
type successfully removed.
```

History

Version	Description
2.06	The crypto ike proposal integrity command has been introduced.

3.14.5 crypto ike proposal prf

Description Add the selected *PRF* group to *IKE* proposal.

Command with **no** prefix removes the selected algorithm.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

(config-ike-proposal)>	prf <prf>
(config-ike-proposal)>	no prf <prf>

Arguments

Argument	Value	Description
prf	md5	<i>HMAC</i> signature algorithm of <i>IKE</i> messages.
	sha1	
	aes-xcbc	
	sha256	
	sha384	
	sha512	
	aes-cmac	

Example

```
(config-ike-proposal)> prf sha256
IpSec::Manager: "TEST": crypto ike proposal prf algorithm ▶
"sha256" successfully added.
```

```
(config-ike-proposal)> no prf sha256
IpSec::Manager: "TEST": crypto ike proposal "TEST" prf type ▶
successfully removed.
```

History

Version	Description
3.05	The crypto ike proposal prf command has been introduced.

3.15 crypto ipsec incompatible

Description	Disable <i>IPsec</i> tunnels compatibility checking. By default, the setting is disabled. Command with no prefix enables the checking back.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Synopsis	<pre> (config)> crypto ipsec incompatible (config)> no crypto ipsec incompatible</pre>				
Example	<pre>(config)> crypto ipsec incompatible IpSec::Manager: Compatibility checks is disabled.</pre> <pre>(config)> no crypto ipsec incompatible IpSec::Manager: Compatibility checks is enabled.</pre>				
History	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr style="background-color: #cccccc;"> <th style="text-align: left; padding: 2px;">Version</th> <th style="text-align: left; padding: 2px;">Description</th> </tr> </thead> <tbody> <tr> <td style="padding: 2px;">2.10</td> <td style="padding: 2px;">The crypto ipsec incompatible command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.10	The crypto ipsec incompatible command has been introduced.
Version	Description				
2.10	The crypto ipsec incompatible command has been introduced.				

3.16 crypto ipsec mtu

Description	Set <i>MTU</i> value to be transmitted to <i>IPsec</i> . By default, <i>auto</i> value is used.											
Prefix no	No											
Change settings	No											
Multiple input	No											
Synopsis	<pre> (config)> crypto ipsec mtu (auto <value>)</pre>											
Arguments	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr style="background-color: #cccccc;"> <th style="text-align: left; padding: 2px;">Argument</th> <th style="text-align: left; padding: 2px;">Value</th> <th style="text-align: left; padding: 2px;">Description</th> </tr> </thead> <tbody> <tr> <td style="padding: 2px;">auto</td> <td style="padding: 2px;"><i>Keyword</i></td> <td style="padding: 2px;"><i>MTU</i> will be assigned automatically.</td> </tr> <tr> <td style="padding: 2px;">value</td> <td style="padding: 2px;"><i>Integer</i></td> <td style="padding: 2px;"><i>MTU</i> value. Can take values from 128 to 1500 inclusively.</td> </tr> </tbody> </table>			Argument	Value	Description	auto	<i>Keyword</i>	<i>MTU</i> will be assigned automatically.	value	<i>Integer</i>	<i>MTU</i> value. Can take values from 128 to 1500 inclusively.
Argument	Value	Description										
auto	<i>Keyword</i>	<i>MTU</i> will be assigned automatically.										
value	<i>Integer</i>	<i>MTU</i> value. Can take values from 128 to 1500 inclusively.										

Example	<pre>(config)> crypto ipsec mtu auto IpSec::Manager: MTU is set to auto.</pre> <pre>(config)> crypto ipsec mtu 1400 IpSec::Manager: Static MTU value is set to 1400.</pre>
----------------	---

History	Version	Description
	2.08	The crypto ipsec mtu command has been introduced.

3.17 crypto ipsec profile

Description Access to a group of commands to configure selected *IPsec* profile. If profile is not found, the command tries to create it.

Command with **no** prefix removes profile. At the same time references to this profile are automatically deleted from all *IPsec* crypto maps.

Prefix no Yes

Change settings Yes

Multiple input Yes

Group entry (config-ipsec-profile)

Synopsis

```
(config)> crypto ipsec profile <name>
(config)> no crypto ipsec profile <name>
```

Arguments	Argument	Value	Description
	name	String	<i>IPsec</i> profile name. Latin letters, numbers, dots, hyphens and underscores are acceptable.

Example

```
(config)> crypto ipsec profile test
IpSec::Manager: "test": crypto ipsec profile successfully created.

(config)> no crypto ipsec profile test
IpSec::Manager: Crypto ipsec profile "test" removed.
```

History	Version	Description
	2.06	The crypto ipsec profile command has been introduced.

3.17.1 crypto ipsec profile authentication-local

Description Set authentication type for local host. By default, value pre-share is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input	No						
Synopsis	<pre>(config-ipsec-profile)> authentication-local <auth> </pre> <pre>(config-ipsec-profile)> no authentication-local</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>auth</td><td>pre-share</td><td>A single available type of authorization for now.</td></tr> </tbody> </table>	Argument	Value	Description	auth	pre-share	A single available type of authorization for now.
Argument	Value	Description					
auth	pre-share	A single available type of authorization for now.					
Example	<pre>(config-ipsec-profile)> authentication-local pre-share IpSec::Manager: "test": crypto ipsec profile authentication-local ▶ type "pre-share" is set.</pre> <pre>(config-ipsec-profile)> no authentication-local IpSec::Manager: "test": crypto ipsec profile authentication-local ▶ reset.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.06</td><td>The crypto ipsec profile authentication-local command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.06	The crypto ipsec profile authentication-local command has been introduced.		
Version	Description						
2.06	The crypto ipsec profile authentication-local command has been introduced.						

3.17.2 crypto ipsec profile authentication-remote

Description	Set authentication type for remote host. By default, value pre-share is used. Command with no prefix resets setting to default.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(config-ipsec-profile)> authentication-remote <auth> </pre> <pre>(config-ipsec-profile)> no authentication-remote</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>auth</td><td>pre-share</td><td>A single available type of authorization for now.</td></tr> </tbody> </table>	Argument	Value	Description	auth	pre-share	A single available type of authorization for now.
Argument	Value	Description					
auth	pre-share	A single available type of authorization for now.					
Example	<pre>(config-ipsec-profile)> authentication-remote pre-share IpSec::Manager: "test": crypto ipsec profile ▶ authentication-remote type "pre-share" is set.</pre>						

```
(config-ipsec-profile)> no authentication-remote
IpSec::Manager: "test": crypto ipsec profile ▶
authentication-remote reset.
```

History

Version	Description
2.06	The crypto ipsec profile authentication-remote command has been introduced.

3.17.3 crypto ipsec profile dpd-clear

Description Set method of action when detecting a dead *IKE* peer. By default, the setting is enabled, which means deleting peer information.

Command with **no** prefix set action to restart.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config-ipsec-profile)>	dpd-clear
(config-ipsec-profile)>	no dpd-clear

Example

```
(config-ipsec-profile)> dpd-clear
IpSec::Manager: "VPNL2TPServer": crypto ipsec profile DPD action ▶
set to "clear".
```

```
(config-ipsec-profile)> no dpd-clear
IpSec::Manager: "VPNL2TPServer": crypto ipsec profile DPD action ▶
set to "restart".
```

History

Version	Description
2.11	The crypto ipsec profile dpd-clear command has been introduced.

3.17.4 crypto ipsec profile dpd-interval

Description Set parameters of method to detect a dead *IKE* peer. By default, *interval* is set to 30, *retry-count* is set to 3.

Command with **no** prefix resets settings to default.

Prefix no Yes

Change settings Yes

Multiple input	No									
Synopsis	<pre>(config-ipsec-profile)> dpd-interval <interval> [retry-count] (config-ipsec-profile)> no dpd-interval</pre>									
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>interval</td><td><i>Integer</i></td><td>The interval of sending <i>DPD</i> packets in seconds. Can take values from 2 to 3600.</td></tr> <tr> <td>retry-count</td><td><i>Integer</i></td><td>Number of attempts to send <i>DPD</i> packets. Can take values from 3 to 60.</td></tr> </tbody> </table>	Argument	Value	Description	interval	<i>Integer</i>	The interval of sending <i>DPD</i> packets in seconds. Can take values from 2 to 3600.	retry-count	<i>Integer</i>	Number of attempts to send <i>DPD</i> packets. Can take values from 3 to 60.
Argument	Value	Description								
interval	<i>Integer</i>	The interval of sending <i>DPD</i> packets in seconds. Can take values from 2 to 3600.								
retry-count	<i>Integer</i>	Number of attempts to send <i>DPD</i> packets. Can take values from 3 to 60.								
Example	<pre>(config-ipsec-profile)> dpd-interval 5 30 IpSec::Manager: "test": crypto ipsec profile dpd retry count is ▶ set to 30. (config-ipsec-profile)> no dpd-interval IpSec::Manager: "test": crypto ipsec profile dpd retry count ▶ reset.</pre>									
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.06</td><td>The crypto ipsec profile dpd-interval command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.06	The crypto ipsec profile dpd-interval command has been introduced.					
Version	Description									
2.06	The crypto ipsec profile dpd-interval command has been introduced.									

3.17.5 crypto ipsec profile identity-local

Description Set a local identifier of *IPsec* profile.
Command with **no** prefix removes the local identifier.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config-ipsec-profile)> identity-local <type> <id>
(config-ipsec-profile)> no identity-local

Arguments	Argument	Value	Description
type	address	ID type is IP-address.	
	fqdn	ID type is full domain name.	
	dn	ID type is domain name.	
	email	ID type is e-mail address.	

Argument	Value	Description
id	<i>String</i>	Local ID value.

Example

```
(config-ipsec-profile)> identity-local address 10.10.10.5
IpSec::Manager: "test": crypto ipsec profile identity-local is ▶
set to "10.10.10.5" with type "address".

(config-ipsec-profile)> no identity-local
IpSec::Manager: "test": crypto ipsec profile identity-local reset.
```

History

Version	Description
2.06	The crypto ipsec profile identity-local command has been introduced.

3.17.6 crypto ipsec profile match-identity-remote

Description Set remote host identifier for *IPsec* profile.

Command with **no** prefix removes remote host ID.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

<pre>(config-ipsec-profile)> match-identity-remote (<type> <id> any)</pre>
<pre>(config-ipsec-profile)> no match-identity-remote</pre>

Arguments

Argument	Value	Description
type	address	ID type is IP-address.
	fqdn	ID type is full domain name.
	dn	ID type is domain name.
	email	ID type is e-mail address.
id	<i>String</i>	Remote host ID value.
any	<i>Keyword</i>	Allow usage of any remote host.

Example

```
(config-ipsec-profile)> match-identity-remote any
IpSec::Manager: "test": crypto ipsec profile ▶
match-identity-remote is set to any.
```

```
(config-ipsec-profile)> no match-identity-remote
IpSec::Manager: "test": crypto ipsec profile ▶
match-identity-remote reset.
```

History	Version	Description
	2.06	The crypto ipsec profile match-identity-remote command has been introduced.

3.17.7 crypto ipsec profile mode

Description Set the mode of operation *IPsec*. By default, tunnel value is set.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-ipsec-profile)> mode <mode>
(config-ipsec-profile)> no mode
```

Arguments	Argument	Value	Description
	mode	tunnel	Tunnel mode, when the entire IP packet is encrypted and/or authenticated.
		transport	Transport mode, when only the payload of the IP packet is encrypted and/or authenticated.

Example

```
(config-ipsec-profile)> mode transport
IpSec::Manager: "test": crypto ipsec profile mode set to ▶
"transport".
```

```
(config-ipsec-profile)> no mode
IpSec::Manager: "test": crypto ipsec profile mode reset.
```

History	Version	Description
	2.06	The crypto ipsec profile mode command has been introduced.

3.17.8 crypto ipsec profile policy

Description Set the reference to existing *IKE* policy (see **crypto ike policy** command).

Command with **no** prefix removes the reference.

Prefix no Yes

Change settings Yes

Multiple input

No

Synopsis(config-ipsec-profile)> **policy** <policy>(config-ipsec-profile)> **no policy****Arguments**

Argument	Value	Description
policy	String	<i>IKE</i> policy name. You can see the list of available policies with help of policy [Tab] command.

Example(config-ipsec-profile)> **policy** [Tab]

Usage template:

policy {name: {A-Z, a-z, 0-9, ., _, -}}

Choose:

VirtualIPServer

VPNL2TPServer

(config-ipsec-profile)> **policy VirtualIPServer**

IpSec::Manager: "TEST": crypto ipsec profile policy set to ▶ "VirtualIPServer".

(config-ipsec-profile)> **no policy**

IpSec::Manager: "test": crypto ipsec profile policy reset.

History

Version	Description
2.06	The crypto ipsec profile policy command has been introduced.

3.17.9 crypto ipsec profile preshared-key

DescriptionSet pre-shared key for *IPsec* profile.Command with **no** prefix removes pre-shared key.**Prefix no**

Yes

Change settings

Yes

Multiple input

No

Synopsis(config-ipsec-profile)> **preshared-key** <preshare-key>(config-ipsec-profile)> **no preshared-key****Arguments**

Argument	Value	Description
preshare-key	String	Pre-shared key value.

Example

```
(config-ipsec-profile)> preshared-key testkey
IpSec::Manager: "test": crypto ipsec profile preshared key was ▶
set.
```

```
(config-ipsec-profile)> no preshared-key
IpSec::Manager: "test": crypto ipsec profile preshared key reset.
```

History

Version	Description
2.06	The crypto ipsec profile preshared-key command has been introduced.

3.17.10 crypto ipsec profile xauth

Description Enable additional authentication *XAuth* for IKEv1 mode. By default, function is disabled.

Command with **no** prefix disables additional authentication.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

<pre>(config-ipsec-profile)> xauth <type></pre>
<pre>(config-ipsec-profile)> no xauth</pre>

Arguments

Argument	Value	Description
type	client	Client mode.
	server	Server mode.

Example

```
(config-ipsec-profile)> xauth client
IpSec::Manager: "test": crypto ipsec profile xauth set to ▶
"client".
```

```
(config-ipsec-profile)> no xauth
IpSec::Manager: "test": crypto ipsec profile xauth is disabled.
```

History

Version	Description
2.06	The crypto ipsec profile xauth command has been introduced.

3.17.11 crypto ipsec profile xauth-identity

Description Set login for additional authentication *XAuth* in client mode.

Command with **no** prefix removes the login.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
| (config-ipsec-profile)> xauth-identity <identity>
| (config-ipsec-profile)> no xauth-identity
```

Arguments	Argument	Value	Description
	identity	String	Login for <i>XAuth</i> client mode.

Example

```
(config-ipsec-profile)> xauth-identity ident
IpSec::Manager: "test": crypto ipsec profile xauth-identity is ▶
set to "ident".
(config-ipsec-profile)> no xauth-identity
IpSec::Manager: "test": crypto ipsec profile xauth identity is ▶
deleted.
```

History	Version	Description
	2.06	The crypto ipsec profile xauth-identity command has been introduced.

3.17.12 crypto ipsec profile xauth-password

Description Set password for additional authentication *XAuth* in client mode.

Command with **no** prefix removes the password.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
| (config-ipsec-profile)> xauth-password <password>
| (config-ipsec-profile)> no xauth-password
```

Arguments	Argument	Value	Description
	password	String	Password for <i>XAuth</i> client mode.

Example

```
(config-ipsec-profile)> xauth-password password
IpSec::Manager: "test": crypto ipsec profile xauth-password is ▶
set.
```

```
(config-ipsec-profile)> no xauth-password
IpSec::Manager: "test": crypto ipsec profile xauth password is ▶
deleted.
```

History

Version	Description
2.06	The crypto ipsec profile xauth-password command has been introduced.

3.18 crypto ipsec rekey delete-delay

Description

Set interval before removing the IKE SA after receiving the DELETE command from the remote side. By default, the 10 value is used.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> crypto ipsec rekey delete-delay <delay>
(config)> no crypto ipsec rekey delete-delay
```

Arguments

Argument	Value	Description
delay	<i>Integer</i>	Delay value in seconds. Can take value in the range from 1 till 60.

Example

```
(config)> crypto ipsec rekey delete-delay 1
IpSec::Manager: Rekey delete-delay value is set to 1.
```

```
(config)> no crypto ipsec rekey delete-delay
IpSec::Manager: Rekey delete-delay value is set to 10.
```

History

Version	Description
2.11	The crypto ipsec rekey delete-delay command has been introduced.

3.19 crypto ipsec rekey make-before

Description	Set the mode when new IKE SA creates before the breaking the old one. By default, the feature is disabled. Command with no prefix disables the mode.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Synopsis	<pre> (config)> crypto ipsec rekey make-before (config)> no crypto ipsec rekey make-before</pre>				
Example	<pre>(config)> crypto ipsec rekey make-before IpSec::Manager: Enable make-before-brake scheme for IKEv2 rekey. (config)> no crypto ipsec rekey make-before IpSec::Manager: Disable make-before-brake scheme for IKEv2 rekey.</pre>				
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.11</td><td>The crypto ipsec rekey make-before command has been introduced.</td></tr></tbody></table>	Version	Description	2.11	The crypto ipsec rekey make-before command has been introduced.
Version	Description				
2.11	The crypto ipsec rekey make-before command has been introduced.				

3.20 crypto ipsec transform-set

Description	Access to a group of commands to configure selected <i>IPsec ESP</i> transformation during Phase 2. If transformation is not found, the command tries to create it. Command with no prefix removes transformation. At the same time references to this transformation are automatically deleted from all <i>IPsec</i> crypto maps.
Prefix no	Yes
Change settings	Yes
Multiple input	Yes
Group entry	(config-ipsec-transform)
Synopsis	<pre> (config)> crypto ipsec transform-set <name> (config)> no crypto ipsec transform-set <name></pre>

Arguments

Argument	Value	Description
name	<i>String</i>	<i>IPsec</i> transformation name. Latin letters, numbers, dots, hyphens and underscores are acceptable.

Example

```
(config)> crypto ipsec transform-set test
IpSec::Manager: "test": crypto ipsec transform-set successfully ►
created.
```

```
(config)> no crypto ipsec transform-set test
IpSec::Manager: Crypto ipsec transform-set "test" removed.
```

History

Version	Description
2.06	The crypto ipsec transform-set command has been introduced.

3.20.1 crypto ipsec transform-set aead

Description Enable *AEAD* cypher mode on *IPsec*.

Prefix no No

Change settings No

Multiple input No

Synopsis (config-ipsec-transform)> **aead**

Example (config-ipsec-transform)> **dh-group 14**

```
IpSec::Manager: "TEST": crypto ipsec transform-set "TEST" enabled ►
AEAD mode.
```

History

Version	Description
3.05	The crypto ipsec transform-set aead command has been introduced.

3.20.2 crypto ipsec transform-set cypher

Description Add the selected type of encryption to *IPsec* transformation. The order of adding has a value for data exchange on the *IKE* protocol.

Command with **no** prefix removes the selected type of encryption.

Prefix no Yes

Change settings Yes

Multiple input

Yes

Synopsis(config-ipsec-transform)> **cypher** <*cypher*>(config-ipsec-transform)> **no cypher** <*cypher*>**Arguments**

Argument	Value	Description
cypher	esp-des	Type of <i>IPsec ESP</i> encryption.
	esp-3des	
	esp-aes-128	
	esp-aes-192	
	esp-aes-256	

Example

```
(config-ipsec-transform)> cypher esp-3des
IpSec::Manager: "test": crypto ipsec transform-set cypher ▶
"esp-3des" successfully added.
```

```
(config-ipsec-transform)> no cypher esp-3des
IpSec::Manager: "test": crypto ipsec transform-set "test" cypher ▶
successfully removed.
```

History

Version	Description
2.06	The crypto ipsec transform-set cypher command has been introduced.

3.20.3 crypto ipsec transform-set dh-group

Description

Add the selected *DH* group to *IPsec* transformation to work in the *PFS* mode. The order of adding has a value for data exchange on the *IKE* protocol.

Command with **no** prefix removes the selected group.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis(config-ipsec-transform)> **dh-group** <*dh-group*>(config-ipsec-transform)> **no dh-group** <*dh-group*>**Arguments**

Argument	Value	Description
dh-group	1	<i>DH</i> group to work in the <i>PFS</i> mode.
	2	

Argument	Value	Description
	5	
	14	
	15	
	16	
	17	
	18	

Example

```
(config-ipsec-transform)> dh-group 14
```

IpSec::Manager: "test": crypto ipsec transform-set dh-group "14" ► successfully added.

```
(config-ipsec-transform)> no dh-group 14
```

IpSec::Manager: "test": crypto ipsec transform-set "test" ► dh-group successfully removed.

History

Version	Description
2.06	The crypto ipsec transform-set dh-group command has been introduced.

3.20.4 crypto ipsec transform-set hmac

Description

Add the selected value of **HMAC** signature algorithm to **IPsec** transformation. The order of adding has a value for data exchange on the **IKE** protocol.

Command with **no** prefix removes the selected algorithm.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config-ipsec-transform)> hmac <hmac>
```

```
(config-ipsec-transform)> no hmac <hmac>
```

Arguments

Argument	Value	Description
hmac	esp-md5-hmac	HMAC signature algorithm of IPsec ESP transformation.
	esp-sha1-hmac	
	esp-sha256-hmac	

Example

```
(config-ipsec-transform)> hmac esp-sha1-hmac
IpSec::Manager: "test": crypto ipsec transform-set hmac ▶
"esp-sha1-hmac" successfully added.
```

```
(config-ipsec-transform)> no hmac esp-sha1-hmac
IpSec::Manager: "test": crypto ipsec transform-set "test" hmac ▶
successfully removed.
```

History

Version	Description
2.06	The crypto ipsec transform-set hmac command has been introduced.

3.20.5 crypto ipsec transform-set lifetime

Description Set lifetime of selected *IPsec* transformation. By default, the value 3600 is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-ipsec-transform)> lifetime <lifetime>
```

```
(config-ipsec-transform)> no lifetime
```

Arguments

Argument	Value	Description
lifetime	<i>Integer</i>	Lifetime of <i>IPsec</i> transformation in seconds. Can take values from 60 to 2147483647.

Example

```
(config-ipsec-transform)> lifetime 8640
IpSec::Manager: "test": crypto ipsec transform-set lifetime set ▶
to 8640 s.
```

```
(config-ipsec-transform)> no lifetime
IpSec::Manager: "test": crypto ipsec transform-set lifetime reset.
```

History

Version	Description
2.06	The crypto ipsec transform-set lifetime command has been introduced.

3.21 crypto map

Description	Access to a group of commands to configure selected <i>IPsec</i> crypto map. If crypto map is not found, the command tries to create it.
	Command with no prefix removes crypto map.
Prefix no	Yes
Change settings	Yes
Multiple input	Yes
Group entry	(config-crypto-map)
Synopsis	<pre>(config)> crypto map <name> (config)> no crypto map <name></pre>

Arguments	Argument	Value	Description
	name	<i>String</i>	<i>IPsec</i> crypto map name. Latin letters, numbers, dots, hyphens and underscores are acceptable.

Example	<pre>(config)> crypto map test IpSec::Manager: "test": crypto map successfully created. (config)> no crypto map test IpSec::Manager: Crypto map profile "test" removed.</pre>
----------------	--

History	Version	Description
	2.06	The crypto map command has been introduced.

3.21.1 crypto map connect

Description	Enable automatic unconditional <i>IPsec</i> connection to the remote host. Setting has no meaning if basic remote host was set to any (see crypto map set-peer command). By default, setting is disabled and connection is established when attempting to transmit traffic through the <i>IPsec ESP</i> transformation.
	Command with no prefix disables automatic unconditional connection.
Prefix no	Yes
Change settings	Yes
Multiple input	No

Synopsis	<pre>(config-crypto-map)> connect (config-crypto-map)> no connect</pre>				
Example	<pre>(config-crypto-map)> connect IpSec::Manager: "test": crypto map autoconnect enabled. (config-crypto-map)> no connect IpSec::Manager: "test": crypto map autoconnect disabled.</pre>				
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.06</td><td>The crypto map connect command has been introduced.</td></tr></tbody></table>	Version	Description	2.06	The crypto map connect command has been introduced.
Version	Description				
2.06	The crypto map connect command has been introduced.				

3.21.2 crypto map enable

Description	Enable selected <i>IPsec</i> crypto map. By default, setting is enabled. Command with no prefix disables crypto map.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Synopsis	<pre>(config-crypto-map)> enable (config-crypto-map)> no enable</pre>				
Example	<pre>(config-crypto-map)> enable IpSec::Manager: "test": crypto map enabled. (config-crypto-map)> no enable IpSec::Manager: "test": crypto map disabled.</pre>				
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.06</td><td>The crypto map enable command has been introduced.</td></tr></tbody></table>	Version	Description	2.06	The crypto map enable command has been introduced.
Version	Description				
2.06	The crypto map enable command has been introduced.				

3.21.3 crypto map fallback-check-interval

Description	Enable periodic checking of basic host availability and return to it in case of presence basic and backup remote hosts both. By default, setting is disabled. Command with no prefix disables checking.
Prefix no	Yes
Change settings	Yes

Multiple input	No						
Synopsis	<pre>(config-crypto-map)> fallback-check-interval <interval-value> (config-crypto-map)> no fallback-check-interval</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>interval-value</td><td>Integer</td><td>Period of checking in seconds. Can take values from 60 to 86400.</td></tr> </tbody> </table>	Argument	Value	Description	interval-value	Integer	Period of checking in seconds. Can take values from 60 to 86400.
Argument	Value	Description					
interval-value	Integer	Period of checking in seconds. Can take values from 60 to 86400.					
Example	<pre>(config-crypto-map)> fallback-check-interval 120 IpSec::Manager: "test": crypto map fallback check interval is ▶ set to 120. (config-crypto-map)> no fallback-check-interval IpSec::Manager: "test": crypto map fallback check interval is ▶ cleared.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.06</td><td>The crypto map fallback-check-interval command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.06	The crypto map fallback-check-interval command has been introduced.		
Version	Description						
2.06	The crypto map fallback-check-interval command has been introduced.						

3.21.4 crypto map force-encaps

Description	Enforce the <i>ESP</i> packet wrapping mode in <i>UDP</i> to bypass the firewall and NAT. Command with no prefix disables the mode.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config-crypto-map)> force-encaps (config-crypto-map)> no force-encaps</pre>
Example	<pre>(config-crypto-map)> force-encaps IpSec::Manager: "test": crypto map force ESP in UDP encapsulation ▶ enabled. (config-crypto-map)> no force-encaps IpSec::Manager: "test": crypto map force ESP in UDP encapsulation ▶ disabled.</pre>

History

Version	Description
2.08	The crypto map force-encaps command has been introduced.

3.21.5 crypto map l2tp-server dhcp route

Description

Assign a route which is transmitted in DHCP INFORM messages to the *L2TP*-server clients.

Command with **no** prefix cancels the specified route. If you use no arguments, the entire list of routes will be cleared.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-crypto-map)> l2tp-server dhcp route <address> <mask>
(config-crypto-map)> no l2tp-server dhcp route [<address> <mask>]
```

Arguments

Argument	Value	Description
address	<i>IP-address</i>	Network client address.
mask	<i>IP-mask</i>	Network client mask. There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).

Example

```
(config-crypto-map)> l2tp-server dhcp route 192.168.2.0/24
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ▶
added DHCP INFORM route to 192.168.2.0/255.255.255.0.
```

```
(config-crypto-map)> l2tp-server no dhcp route
IpSec::Manager: "VPNL2TPServer": Cleared DHCP INFORM routes.
```

History

Version	Description
2.12	The crypto map l2tp-server dhcp route command has been introduced.

3.21.6 crypto map l2tp-server enable

Description Enable *L2TP*-server on *IPsec* crypto map. By default, the setting is enabled.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings	Yes				
Multiple input	No				
Synopsis	<pre>(config-crypto-map)> l2tp-server enable (config-crypto-map)> no l2tp-server enable</pre>				
Example	<pre>(config-crypto-map)> l2tp-server enable IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ► enabled. (config-crypto-map)> no l2tp-server enable IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ► disabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.11</td> <td>The crypto map l2tp-server enable command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.11	The crypto map l2tp-server enable command has been introduced.
Version	Description				
2.11	The crypto map l2tp-server enable command has been introduced.				

3.21.7 crypto map l2tp-server interface

Description	Bind L2TP -server to the specified interface. Command with no prefix unbinds the server.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(config-crypto-map)> l2tp-server interface <interface> (config-crypto-map)> no l2tp-server interface</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>interface</td> <td><i>Interface name</i></td> <td>Full name or an alias of the interface. You can see the list of available interfaces with help of l2tp-server interface [Tab] command.</td> </tr> </tbody> </table>	Argument	Value	Description	interface	<i>Interface name</i>	Full name or an alias of the interface. You can see the list of available interfaces with help of l2tp-server interface [Tab] command.
Argument	Value	Description					
interface	<i>Interface name</i>	Full name or an alias of the interface. You can see the list of available interfaces with help of l2tp-server interface [Tab] command.					

Example	<pre>(config-crypto-map)> l2tp-server interface [Tab] Usage template: interface {interface} Choose: GigabitEthernet1</pre>
----------------	--

```

ISP
WifiMaster0/AccessPoint2
WifiMaster1/AccessPoint1
WifiMaster0/AccessPoint3
WifiMaster0/AccessPoint0
    AccessPoint
WifiMaster1/AccessPoint2
WifiMaster0/AccessPoint1
    GuestWiFi

```

```
(config-crypto-map)> l2tp-server interface ISP
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ▶
is bound to ISP.
```

```
(config-crypto-map)> no l2tp-server interface ISP
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ▶
is unbound.
```

History

Version	Description
2.11	The crypto map l2tp-server interface command has been introduced.

3.21.8 crypto map l2tp-server ipv6cp

Description Enable IPv6 support. DHCP IPv6 pools are created for each *L2TP*-server. By default, the setting is disabled.

Command with **no** prefix disables IPv6 support.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```

(config-crypto-map)> l2tp-server ipv6cp
(config-crypto-map)> no l2tp-server ipv6cp

```

Example

```
(config-crypto-map)> l2tp-server ipv6cp
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ▶
IPv6CP is enabled.
```

```
(config-crypto-map)> no l2tp-server ipv6cp
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ▶
IPv6CP is disabled.
```

History

Version	Description
3.00	The crypto map l2tp-server ipv6cp command has been introduced.

3.21.9 crypto map l2tp-server lcp echo

Description Specify the testing rules of the *L2TP*-server connections with *LCP* echo tools.
Command with **no** prefix disables *LCP* echo.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config-crypto-map)>	l2tp-server lcp echo <interval> <count>
(config-crypto-map)>	no l2tp-server lcp echo

Arguments	Argument	Value	Description
	interval	<i>Integer</i>	Interval between sending <i>LCP</i> echo, in seconds. If within the specified time interval there is no <i>LCP</i> echo request from the remote location, the same request will be sent there asking for response <i>LCP</i> reply.
	count	<i>Integer</i>	The number of consecutive requests <i>LCP</i> echo sent, for which no response <i>LCP</i> reply was received. If count of <i>LCP</i> echo requests goes unanswered, the connection is terminated.

Example

(config-crypto-map)>	l2tp-server lcp echo 5 3 IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ▶ set LCP echo to "5" : "3".
(config-crypto-map)>	no l2tp-server lcp echo IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ▶ LCP echo disabled.

History	Version	Description
	2.11	The crypto map l2tp-server lcp echo command has been introduced.

3.21.10 crypto map l2tp-server mru

Description Set *MRU* value to be transmitted to *L2TP*-server. By default, 1200 value is used.
Command with **no** prefix resets value to default.

Prefix no Yes

Change settings Yes

Multiple input

No

Synopsis(config-crypto-map)> **l2tp-server mru <mru>**(config-crypto-map)> **no l2tp-server mru****Arguments**

Argument	Value	Description
mru	<i>Integer</i>	<i>MRU</i> value. Can take values from 128 to 1500 inclusively.

Example(config-crypto-map)> **l2tp-server mru 1500**

IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ▶ set MRU to "1500".

(config-crypto-map)> **no l2tp-server mru**

IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ▶ MRU reset to default.

History

Version	Description
2.11	The crypto map l2tp-server mru command has been introduced.

3.21.11 crypto map l2tp-server mtu

DescriptionSet *MTU* value to be transmitted to *L2TP*-server. By default, 1400 value is used.Command with **no** prefix resets value to default.**Prefix no**

Yes

Change settings

Yes

Multiple input

No

Synopsis(config-crypto-map)> **l2tp-server mtu <mtu>**(config-crypto-map)> **no l2tp-server mtu****Arguments**

Argument	Value	Description
mtu	<i>Integer</i>	<i>MTU</i> value. Can take values from 576 to 1500 inclusively.

Example(config-crypto-map)> **l2tp-server mtu 1400**

IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ▶ set MTU to "1400".

```
(config-crypto-map)> no l2tp-server mtu
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ▶
MTU reset to default.
```

History	Version	Description
	2.11	The crypto map l2tp-server mtu command has been introduced.

3.21.12 crypto map l2tp-server multi-login

Description	Allow connection to <i>L2TP</i> -server for multiple users from one account. Command with no prefix disables the feature.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config-crypto-map)> l2tp-server multi-login (config-crypto-map)> no l2tp-server multi-login</pre>
Example	<pre>(config-crypto-map)> l2tp-server multi-login IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ▶ multiple login is enabled. (config-crypto-map)> no l2tp-server multi-login IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ▶ multiple login is disabled.</pre>

History	Version	Description
	2.11	The crypto map l2tp-server multi-login command has been introduced.

3.21.13 crypto map l2tp-server nat

Description	Enable translation of addresses for <i>L2TP</i> -server. Command with no prefix disables the translation.
Prefix no	Yes
Change settings	Yes
Multiple input	No

Synopsis

```
(config-crypto-map)> l2tp-server nat
```

```
(config-crypto-map)> no l2tp-server nat
```

Example

```
(config-crypto-map)> l2tp-server nat
```

IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
SNAT is enabled.

```
(config-crypto-map)> no l2tp-server nat
```

IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►
SNAT is disabled.

History

Version	Description
2.11	The crypto map l2tp-server nat command has been introduced.

3.21.14 crypto map l2tp-server range

Description Assign a pool of addresses for the clients of [L2TP](#)-server. By default, size 100 is used.

Command with **no** prefix removes a pool.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> l2tp-server range <begin>(<end> | <size>)
```

```
(config-crypto-map)> no l2tp-server range
```

Arguments

Argument	Value	Description
begin	<i>IP-address</i>	Start address of pool.
end	<i>IP-address</i>	End address of pool.
size	<i>Integer</i>	Pool size.

Example

```
(config-crypto-map)> l2tp-server range 172.16.2.33 172.16.2.38  
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►  
pool range set from "172.16.2.33" to "172.16.2.38".
```

```
(config-crypto-map)> l2tp-server range 172.16.2.33 100  
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ►  
pool range set from "172.16.2.33" to "172.16.2.132".
```

```
(config-crypto-map)> no l2tp-server range
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ▶
pool range deleted.
```

History	Version	Description
	2.11	The crypto map l2tp-server range command has been introduced.

3.21.15 crypto map l2tp-server static-ip

Description Bind IP-address to the user. User account must have ipsec-l2tp tag.

Command with **no** prefix removes binding.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> static-ip <user> <address>
(config-crypto-map)> no static-ip <user>
```

Arguments	Argument	Value	Description
	user	<i>String</i>	Username.
	address	<i>IP-address</i>	IP-address to bind.

Example

```
(config-crypto-map)> l2tp-server static-ip admin 172.16.2.33
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ▶
static IP "172.16.2.33" assigned to user "admin".
```

```
(config-crypto-map)> no l2tp-server static-ip admin
IpSec::Manager: "VPNL2TPServer": crypto map L2TP/IPsec server ▶
static IP removed for user "admin".
```

History	Version	Description
	2.11	The crypto map l2tp-server static-ip command has been introduced.

3.21.16 crypto map match-address

Description Set the reference to existing list of packet filtering rules (see [access-list](#) command). The first rule in the list will be used for [IPsec](#) Phase 2.

Command with **no** prefix removes the reference.

Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(config-crypto-map)> match-address <access-list> (config-crypto-map)> no match-address</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>access-list</td><td><i>String</i></td><td>Packet filtering rules name. You can see available lists with help of match-address [Tab] command.</td></tr> </tbody> </table>	Argument	Value	Description	access-list	<i>String</i>	Packet filtering rules name. You can see available lists with help of match-address [Tab] command.
Argument	Value	Description					
access-list	<i>String</i>	Packet filtering rules name. You can see available lists with help of match-address [Tab] command.					
Example	<pre>(config-crypto-map)> match-address [Tab] Usage template: match-address {access-list} Choose: _WEBADMIN_GigabitEthernet0/Vlan4 _WEBADMIN_ISP _WEBADMIN_Home _WEBADMIN_Bridge2 _WEBADMIN_Wireguard2</pre> <pre>(config-crypto-map)> match-address test IpSec::Manager: "test": crypto map match-address set to "test".</pre> <pre>(config-crypto-map)> no match-address IpSec::Manager: "test": crypto map match-address reset.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.06</td><td>The crypto map match-address command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.06	The crypto map match-address command has been introduced.		
Version	Description						
2.06	The crypto map match-address command has been introduced.						

3.21.17 crypto map nail-up

Description	Enable automatic renegotiation of <i>IPsec ESP</i> transformations at their obsolescence. By default, setting is disabled. Command with no prefix disables automatic renegotiation.
Prefix no	Yes
Change settings	Yes
Multiple input	No

Synopsis

```
(config-crypto-map)> nail-up
```

```
(config-crypto-map)> no nail-up
```

Example

```
(config-crypto-map)> nail-up
IpSec::Manager: "test": crypto map SA renegotiation enabled.
```

```
(config-crypto-map)> no nail-up
IpSec::Manager: "test": crypto map SA renegotiation disabled.
```

History

Version	Description
2.06	The crypto map nail-up command has been introduced.

3.21.18 crypto map priority

Description

Set priority for *IPsec* crypto map. By default, value 0 is used.

Command with **no** prefix resets value to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-crypto-map)> priority <priority>
```

```
(config-crypto-map)> no priority
```

Arguments

Argument	Value	Description
priority	<i>Integer</i>	Priority value. Can take values in the range from 0 till 255 inclusively.

Example

```
(config-crypto-map)> priority 255
IpSec::Manager: "VPNL2TPServer": crypto map priority set to 255.
```

```
(config-crypto-map)> no priority
IpSec::Manager: "VPNL2TPServer": crypto map priority reset.
```

History

Version	Description
2.06	The crypto map priority command has been introduced.

3.21.19 crypto map reauth-passive

Description

Enable passive reauthentication of *IPsec* crypto map. By default, setting is disabled.

Command with **no** prefix disables passive reauthentication.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> reauth-passive
(config-crypto-map)> no reauth-passive
```

Example

```
(config-crypto-map)> reauth-passive
IpSec::Manager: "VPNL2TPServer": crypto map SA passive ▶
reauthentication enabled.
```

```
(config-crypto-map)> no reauth-passive
IpSec::Manager: "VPNL2TPServer": crypto map SA passive ▶
reauthentication disabled.
```

History	Version	Description
	2.11	The crypto map reauth-passive command has been introduced.

3.21.20 crypto map set-peer

Description Set basic remote host for *IPsec* connection.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> set-peer <remote-ip>
(config-crypto-map)> no set-peer
```

Arguments	Argument	Value	Description
	remote-ip	String	IP-address or domain name of remote host.
		any	Accept any incoming connections.

Example

```
(config-crypto-map)> set-peer ipsec.test.com
IpSec::Manager: "test": crypto map primary remote peer is set ▶
to "ipsec.test.com".
```

```
(config-crypto-map)> no set-peer
IpSec::Manager: "test": crypto map remote primary and fallback ►
peer reset.
```

History	Version	Description
	2.06	The crypto map set-peer command has been introduced.

3.21.21 crypto map set-peer-fallback

Description Set backup remote host for *IPsec* connection. This setting can be made after assignment of basic host (see **crypto map set-peer** command).

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> set-peer-fallback <remote-ip>
(config-crypto-map)> no set-peer-fallback
```

Arguments	Argument	Value	Description
	remote-ip	String	IP-address or domain name of remote host.

Example

```
(config-crypto-map)> set-peer-fallback test.com
IpSec::Manager: "test": crypto map fallback remote peer cannot ►
be set without primary peer.
```

```
(config-crypto-map)> no set-peer-fallback
IpSec::Manager: "test": crypto map fallback remote peer reset.
```

History	Version	Description
	2.06	The crypto map set-peer-fallback command has been introduced.

3.21.22 crypto map set-profile

Description Set the reference to existing *IPsec* profile (see **crypto ipsec profile** command).

Command with **no** prefix removes the reference.

Prefix no Yes

Change settings Yes

Multiple input

No

Synopsis

```
(config-crypto-map)> set-profile <profile>
(config-crypto-map)> no set-profile
```

Arguments

Argument	Value	Description
profile	String	<i>IPsec</i> profile name. You can see the list of available profiles with help of set-profile [Tab] command.

Example

```
(config-crypto-map)> set-profile [Tab]
Usage template:
    set-profile {name: {A-Z, a-z, 0-9, ., _, -}}
Choose:
    TEST
    MYMY
VirtualIPServer
VPNL2TPServer

(config-crypto-map)> set-profile test
IpSec::Manager: "test": crypto map ipsec profile is set to "test".
(config-crypto-map)> no set-profile
IpSec::Manager: "test": crypto map ipsec profile reset.
```

History

Version	Description
2.06	The crypto map set-profile command has been introduced.

3.21.23 crypto map set-tcpmss

Description

Set the limit on the segment size of outgoing *TCP* sessions within *IPsec* tunnel. If the *MSS* value, which is transmitted in the header of SYN-packets, exceeds the specified limit, command changes it. Path MTU Discovery mode allows automatically identify *MSS* limit.

Command with **no** prefix removes all limits from *MSS*.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-crypto-map)> set-tcpmss <mss-value>
```

```
(config-crypto-map)> no set-tcpmss
```

Arguments

Argument	Value	Description
mss-value	<i>Integer</i>	<i>MSS</i> upper limit. Can take values from 576 to 1500.
pmtu		Enable Path MTU Discovery mode.

Example

```
(config-crypto-map)> set-tcpmss 1280
IpSec::Manager: "test": crypto map tcpmss set to 1280.
```

```
(config-crypto-map)> no set-tcpmss
IpSec::Manager: "test": crypto map tcpmss reset.
```

History

Version	Description
2.06	The crypto map set-tcpmss command has been introduced.

3.21.24 crypto map set-transform

Description Set the reference to existing *IPsec ESP* transformation (see **crypto ipsec transform-set** command).

Command with **no** prefix removes the reference.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> set-transform <transform-set>
(config-crypto-map)> no set-transform
```

Arguments

Argument	Value	Description
transform-set	<i>String</i>	<i>IPsec</i> transformation name. You can see the list of available transformations with help of set-transform [Tab] command.

Example

```
(config-crypto-map)> set-transform [Tab]
Usage template:
    set-transform {name: {A-Z, a-z, 0-9, ., _, -}}
Choose:
VirtualIPServer
VPNL2TPServer
```

```
(config-crypto-map)> set-transform test
IpSec::Manager: "test": crypto map ipsec transform-set is set ▶
to "test".
```

```
(config-crypto-map)> no set-transform
IpSec::Manager: "test": crypto map ipsec transform-set reset.
```

History

Version	Description
2.06	The crypto map set-transform command has been introduced.

3.21.25 crypto map virtual-ip dhcp route

Description Assign a route which is transmitted in DHCP INFORM messages to the Virtual IP server clients.

Command with **no** prefix deletes the specified route. If you use no arguments, the entire list of routes will be cleared.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

<pre>(config-crypto-map)> virtual-ip dhcp route <address> <mask></pre>
<pre>(config-crypto-map)> no virtual-ip dhcp route [<address> <mask>]</pre>

Arguments

Argument	Value	Description
address	<i>IP-address</i>	Network client address.
mask	<i>IP-mask</i>	Network client mask. There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).

Example

```
(config-crypto-map)> virtual-ip dhcp route 192.168.2.0/24
IpSec::ManagerVirtualIp: "VirtualIPServerIKE2": crypto map ▶
Virtual IP server added DHCP INFORM route to ▶
192.168.2.0/255.255.255.0.
```

```
(config-crypto-map)> no virtual-ip dhcp route 192.168.2.0/24
IpSec::ManagerVirtualIp: "VirtualIPServerIKE2": crypto map ▶
Virtual IP server DHCP INFORM route to 192.168.2.0/255.255.255.0 ▶
removed.
```

```
(config-crypto-map)> no virtual-ip dhcp route
IpSec::ManagerVirtualIp: "VirtualIPServerIKE2": crypto map ▶
Virtual IP server DHCP INFORM routes cleared.
```

History

Version	Description
3.06	The crypto map virtual-ip dhcp route command has been introduced.

3.21.26 crypto map virtual-ip dns-server

Description

Set **DNS**-server issued to clients in Virtual IP server mode.

Command with **no** prefix deletes the address.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-crypto-map)> virtual-ip dns-server <address>
(config-crypto-map)> no virtual-ip dns-server
```

Arguments

Argument	Value	Description
address	<i>IP-address</i>	IP-address of DNS -server.

Example

```
(config-crypto-map)> virtual-ip dns-server 10.5.5.5
IpSec::Manager: "test": crypto map Virtual IP DNS server set to ▶
"10.5.5.5".
(config-crypto-map)> no virtual-ip dns-server
IpSec::Manager: "test": crypto map Virtual IP DNS server deleted.
```

History

Version	Description
2.08	The crypto map virtual-ip dns-server command has been introduced.

3.21.27 crypto map virtual-ip enable

Description

Enable Virtual IP server mode, when clients receive addresses from a given range. The value of a remote subnet, specified in the corresponding access-list, will be ignored. By default, the setting is disabled.

Command with **no** prefix disables the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-crypto-map)> virtual-ip enable
```

```
(config-crypto-map)> no virtual-ip enable
```

Example

```
(config-crypto-map)> virtual-ip enable
```

```
IpSec::Manager: "test": crypto map Virtual IP mode enabled.
```

```
(config-crypto-map)> no virtual-ip enable
```

```
IpSec::Manager: "test": crypto map Virtual IP mode disabled.
```

History

Version	Description
2.08	The crypto map virtual-ip enable command has been introduced.

3.21.28 crypto map virtual-ip multi-login

Description Allow connection to Virtual IP server for multiple users from one account.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-crypto-map)> virtual-ip multi-login
```

```
(config-crypto-map)> no virtual-ip multi-login
```

Example

```
(config-crypto-map)> virtual-ip multi-login
```

```
IpSec::Manager: "VirtualIPServer": crypto map Virtual IP server ▶  
multiple login is enabled.
```

```
(config-crypto-map)> no virtual-ip multi-login
```

```
IpSec::Manager: "VirtualIPServer": crypto map Virtual IP server ▶  
multiple login is disabled.
```

History

Version	Description
3.05	The crypto map virtual-ip multi-login command has been introduced.

3.21.29 crypto map virtual-ip nat

Description Enable translation for remote network of Virtual IP extension server.

Command with **no** prefix removes the rule.

Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Synopsis	<pre>(config-crypto-map)> virtual-ip nat (config-crypto-map)> no virtual-ip nat</pre>				
Example	<pre>(config-crypto-map)> virtual-ip nat IpSec::Manager: "test": crypto map Virtual IP remote pool SNAT ► is enabled.</pre> <pre>(config-crypto-map)> no virtual-ip nat IpSec::Manager: "test": crypto map Virtual IP remote pool SNAT ► is disabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.08</td><td>The crypto map virtual-ip nat command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.08	The crypto map virtual-ip nat command has been introduced.
Version	Description				
2.08	The crypto map virtual-ip nat command has been introduced.				

3.21.30 crypto map virtual-ip range

Description	Configure the range of addresses issued to clients in Virtual IP server mode. Command with no prefix removes the range.												
Prefix no	Yes												
Change settings	Yes												
Multiple input	No												
Synopsis	<pre>(config-crypto-map)> virtual-ip range <begin>(<end> <size>) (config-crypto-map)> no virtual-ip range</pre>												
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>begin</td><td><i>IP-address</i></td><td>The beginning of the address range.</td></tr> <tr> <td>end</td><td><i>IP-address</i></td><td>The end of the address range.</td></tr> <tr> <td>size</td><td><i>Integer</i></td><td>Address range size.</td></tr> </tbody> </table>	Argument	Value	Description	begin	<i>IP-address</i>	The beginning of the address range.	end	<i>IP-address</i>	The end of the address range.	size	<i>Integer</i>	Address range size.
Argument	Value	Description											
begin	<i>IP-address</i>	The beginning of the address range.											
end	<i>IP-address</i>	The end of the address range.											
size	<i>Integer</i>	Address range size.											
Example	<pre>(config-crypto-map)> virtual-ip range 10.5.0.0 20 IpSec::Manager: "test": crypto map Virtual IP pool range set ► from "10.5.0.0" to "10.5.0.19" (CIDR 10.5.0.0/27).</pre>												

```
(config-crypto-map)> no virtual-ip range
IpSec::Manager: "test": crypto map Virtual IP pool range deleted.
```

History

Version	Description
2.08	The crypto map virtual-ip range command has been introduced.

3.21.31 crypto map virtual-ip static-ip

Description Bind IP-address to the user. User account must have ipsec-xauth tag.

Command with **no** prefix removes binding.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

<pre>(config-crypto-map)> virtual-ip static-ip <user> <address></pre>
<pre>(config-crypto-map)> no virtual-ip static-ip <user></pre>

Arguments

Argument	Value	Description
user	<i>String</i>	Username.
address	<i>IP-address</i>	IP-address to bind.

Example

```
(config-crypto-map)> virtual-ip static-ip admin 172.20.0.1
IpSec::ManagerVirtualIp: "VirtualIPServer": crypto map Virtual ▶
IP server static address "172.20.0.1" assigned to user "admin".
```

```
(config-crypto-map)> no virtual-ip static-ip admin
IpSec::ManagerVirtualIp: "VirtualIPServer": crypto map Virtual ▶
IP server static address removed for user "admin".
```

History

Version	Description
3.05	The crypto map virtual-ip static-ip command has been introduced.

3.22 dlna

Description Access to a group of commands to manage [DLNA](#) service.

Prefix no No

Change settings No

Multiple input	No
Group entry	(config-dlna)
Synopsis	(config)> dlna

Example

```
(config)> dlna
Core::Configurator: Done.
(config-dlna)>
```

History	Version	Description
	2.00	The dlna command has been introduced.

3.22.1 dlna container

Description	Set default container for <i>DLNA</i> service. Command with no prefix resets the setting.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	(config-dlna)> container <container> (config-dlna)> no container

Arguments	Argument	Value	Description
	container	browse	Show the content of browse container by default.
		music	Show the content of music container by default.
		video	Show the content of video container by default.
		images	Show the content of images container by default.

Example

```
(config-dlna)> container browse
Dlna::Server: Set default container to "browse".
```

```
(config-dlna)> no container
Dlna::Server: Reset default container.
```

History	Version	Description
	2.11	The dlna container command has been introduced.

3.22.2 dlna db-directory

Description Specify the directory with database of multimedia content.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
| (config-dlna)> db-directory <directory>
```

```
| (config-dlna)> no db-directory
```

Arguments

Argument	Value	Description
directory	String	Name of the directory with database.

Example

```
(config-dlna)> db-directory 46E243F4E243E6B1:/components/dlna/  
Dlna::Server: DB directory set.
```

```
(config-dlna)> no db-directory  
Dlna::Server: DB directory removed.
```

History

Version	Description
2.06	The dlna db-directory command has been introduced.

3.22.3 dlna directory

Description Specify the directory with media content.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
| (config-dlna)> directory <directory> [ media-type ]
```

```
| (config-dlna)> no directory <directory>
```

Arguments

Argument	Value	Description
directory	String	Name of the directory with media content.
media-type	audio	Content type is audio.

Argument	Value	Description
	video	Content type is video.
	images	Content type is images.

Example

```
(config-dlna)> directory ▶
46E243F4E243E6B1:/components/transmission/download/
Dlna::Server: ▶
"46E243F4E243E6B1:/components/transmission/download/" directory ▶
added.

(config-dlna)> no directory ▶
46E243F4E243E6B1:/components/transmission/download/
Dlna::Server: ▶
"46E243F4E243E6B1:/components/transmission/download/" directory ▶
removed.
```

History

Version	Description
2.00	The dlna directory command has been introduced.
2.06	Parameter media-type was added.

3.22.4 dlna display-name

Description Assign custom name to **DLNA** server.Command with **no** prefix removes the setting.**Prefix no** Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(config-dlna)> display-name <display-name>
(config-dlna)> no display-name
```

Arguments

Argument	Value	Description
display-name	<i>String</i>	Server name to assign.

Example

```
(config-dlna)> display-name MYDLNA
Dlna::Server: Set a display name.
```

History

Version	Description
2.12	The dlna display-name command has been introduced.

3.22.5 dlna interface

Description Set the router interface through which media content will be transmitted. You can enter up to 16 interfaces.

Command with **no** prefix removes the defined interface from the list. If you use no argument, the entire list of interfaces will be removed.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Synopsis

```
(config-dlna)> interface <interface>
(config-dlna)> no interface <interface>
```

Arguments	Argument	Value	Description
	interface	<i>Interface name</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(config-dlna)> interface [Tab]
```

Usage template:
 interface {interface}

Choose:
 GigabitEthernet1
 ISP
 WifiMaster0/AccessPoint2
 WifiMaster1/AccessPoint1
 WifiMaster0/AccessPoint3
 WifiMaster0/AccessPoint0
 AccessPoint
 WifiMaster1/AccessPoint2
 WifiMaster0/AccessPoint1
 GuestWiFi

```
(config-dlna)> interface GigabitEthernet0/Vlan1
```

```
(config-dlna)> no interface GigabitEthernet0/Vlan1
```

History

Version	Description
2.00	The dlna interface command has been introduced.

3.22.6 dlna port

Description Set DLNA-server port for HTTP (descriptions, SOAP, media transfer) traffic.
Command with **no** prefix resets port to default. By default, value 8200 is used.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config-dlna)> port <port>
(config-dlna)> no port

Arguments	Argument	Value	Description
	port	<i>Integer</i>	The port number.

Example

(config-dlna)> port 8999
Dlna::Server: Port changed to 8999.

(config-dlna)> no port
Dlna::Server: Port reset to 8200.

History	Version	Description
	2.00	The dlna port command has been introduced.

3.22.7 dlna rescan

Description Renew info about files in the directory with media content.

Note: If keyword **full** is specified, deleting and recreating of the content database happens. This may take a long time, so it is recommended to do this when the content database structure is damaged.

Prefix no No

Change settings No

Multiple input No

Synopsis

(config-dlna)> rescan [full]
--

Arguments

Argument	Value	Description
full	<i>Keyword</i>	Specifies if rebuilding of database content is needed.

Example

```
(config-dlna)> rescan
(config-dlna)> rescan full
```

History

Version	Description
2.00	The dlna rescan command has been introduced.

3.22.8 dlna sort

Description	Set the sort criteria for DLNA server files. Command with no prefix removes the setting.
Prefix no	Yes
Change settings	Yes
Multiple input	Yes
Synopsis	<pre>(config-dlna)> sort <key> [<order>] (config-dlna)> no sort</pre>

Arguments

Argument	Value	Description
key	class	Sort by class of media content (audio, video, images).
	title	Sort by title.
	date	Sort by date.
	track	Sort by track.
	album	Sort by album.
order	ascending	Sort files in ascending order. The parameter is used by default.
	descending	Sort files in descending order.

Example

```
(config-dlna)> sort date
Dlna::Server: "date by ascending" sort criterion appended.

(config-dlna)> sort date ascending
Dlna::Server: "date by ascending" sort criterion appended.

(config-dlna)> no sort
Dlna::Server: Sort criteria removed.
```

History

Version	Description
2.11	The dlna sort command has been introduced.

3.23 dns-proxy

Description Access to a group of commands to manage DNS proxy service.

Prefix no No

Change settings No

Multiple input No

Group entry (config-dnspx)

Synopsis

```
(config)> dns-proxy
```

Example

```
(config)> dns-proxy
Core::Configurator: Done.
(config-dnspx)>
```

History

Version	Description
2.04	The dns-proxy command has been introduced.

3.23.1 dns-proxy https upstream

Description Add *DNS over HTTPS* server.

Command with **no** prefix removes the defined server from the list. If you use no argument, the entire list of servers will be cleared.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-dnspx)> https upstream <url> [<format>] [ sni <hash> ] [ on <interface> ]
(config-dnspx)> no https upstream [<url>]
```

Arguments

Argument	Value	Description
url	<i>String</i>	Custom URL of DNS service.
format	dnsm	The format to represent DNS data.
	json	

Argument	Value	Description
hash	<i>String</i>	Hash TLS certificate.
interface	<i>Interface name</i>	Interface name to configure.

Example

```
(config-dnspx)>https upstream https://cloudflare-dns.com/dns-query?ct=application/dns-json json
Dns::Secure::ManagerDoh: DNS-over-HTTPS name server ▶
"https://cloudflare-dns.com/dns-query?ct=application/dns-json" ▶
(json) added.

(config-dnspx)>https upstream https://dns.adguard.com/dns-query dnsm
Dns::Secure::ManagerDoh: DNS-over-HTTPS name server ▶
"https://dns.adguard.com/dns-query" (dnsm) added.

(config-dnspx)>https upstream https://dns.adguard.com/dns-query dnsm on ISP
Dns::Secure::ManagerDoh: DNS-over-HTTPS name server ▶
"https://dns.adguard.com/dns-query" (dnsm) added.

(config-dnspx)>no https upstream https://dns.adguard.com/dns-query
Dns::Secure::ManagerDoh: DNS-over-HTTPS name server ▶
"https://dns.adguard.com/dns-query" deleted.

(config-dnspx)>no https upstream
Dns::Secure::ManagerDoh: DNS-over-HTTPS name servers cleared.
```

History

Version	Description
3.01	The dns-proxy https upstream command has been introduced.

3.23.2 dns-proxy intercept enable

Description Enable transit DNS requests interception. This feature is also enabled when the Internet filter is running. By default, the interception is disabled.

Command with **no** prefix disables the interception.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

<pre>(config-dnspx)> intercept enable</pre>
<pre>(config-dnspx)> no intercept enable</pre>

Example

```
(config-dnspx)> intercept enable
Dns::Filter::Interceptor: Enabled.
(config-dnspx)> no intercept enable
Dns::Filter::Interceptor: Disabled.
```

History

Version	Description
3.06	The dns-proxy intercept enable command has been introduced.

3.23.3 dns-proxy max-ttl

Description Set maximum TTL for DNS proxy cached entries.Command with **no** prefix removes maximum TTL value.**Prefix no** Yes**Change settings** Yes**Multiple input** No

Synopsis

```
(config-dnspx)> max-ttl <max-ttl>
(config-dnspx)> no max-ttl
```

Arguments

Argument	Value	Description
max-ttl	<i>Integer</i>	The maximum value of TTL. Can take values from 1 to 604800000 milliseconds (1 week).

Example

```
(config-dnspx)> max-ttl 10000
Dns::Proxy: Dns-proxy set max-ttl to 10000.
```

```
(config-dnspx)> no max-ttl
Dns::Proxy: Dns-proxy max-ttl cleared.
```

History

Version	Description
2.05	The dns-proxy max-ttl command has been introduced.

3.23.4 dns-proxy proceed

Description Set interval between concurrent requests, which is sent by DNS proxy to multiple DNS servers. By default, 500 value is used.Command with **no** prefix resets proceed to default.**Prefix no** Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-dnspx)> proceed <proceed>
```

```
(config-dnspx)> no proceed
```

Arguments

Argument	Value	Description
proceed	<i>Integer</i>	The value of DNS proxy proceed in milliseconds. Can take values from 1 to 50000.

Example

```
(config-dnspx)> proceed 600
```

Dns::Proxy: Dns-proxy set 600 msec. proceed.

```
(config-dnspx)> no proceed
```

Dns::Proxy: Dns-proxy proceed timeout reset.

History

Version	Description
2.04	The dns-proxy proceed command has been introduced.

3.23.5 dns-proxy rebind-protect

Description

Enable protect against *DNS rebinding* attacks. By default, auto mode is used.

Command with **no** prefix disables protection.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-dnspx)> rebind-protect (auto | strict)
```

```
(config-dnspx)> no rebind-protect
```

Arguments

Argument	Value	Description
auto	<i>Keyword</i>	Protect subnets for private interfaces.
strict	<i>Keyword</i>	Protect subnets from list IANA IPv4 Special-Purpose Address Registry ¹ .

Example

```
(config-dnspx)> rebind-protect auto
```

Dns::Manager: Enabled rebind protection.

¹ <https://www.iana.org/assignments/iana-ipv4-special-registry/iana-ipv4-special-registry.xhtml>

```
(config-dnspx)> no rebind-protect
Dns::Manager: Disabled rebind protection.
```

History

Version	Description
3.04	The dns-proxy rebind-protect command has been introduced.

3.23.6 dns-proxy srr-reset

Description Set DNS proxy send-response rating reset time. By default, value 600000 is used.

Command with **no** prefix resets time reset to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

<pre>(config-dnspx)> srr-reset <srr-reset></pre>
<pre>(config-dnspx)> no srr-reset</pre>

Arguments

Argument	Value	Description
srr-reset	<i>Integer</i>	The value of time reset in milliseconds. Can take values from 0 to 600000.

Example

```
(config-dnspx)> srr-reset 111
Dns::Manager: Set send-response rating reset time to 111 ms.
```

```
(config-dnspx)> no srr-reset
Dns::Manager: Reset send-response rating reset time to default.
```

History

Version	Description
2.12	The dns-proxy srr-reset command has been introduced.

3.23.7 dns-proxy tls upstream

Description Add *DNS over TLS* server.

Command with **no** prefix removes the defined server from the list. If you use no argument, the entire list of servers will be cleared.

Prefix no Yes

Change settings Yes

Multiple input

Yes

Synopsis

```
(config-dnspx)> tls upstream <address> [<port>] [ sni <fqdn> ] [ spki <hash> ] [ on <interface> ]
```

```
(config-dnspx)> no tls upstream [<address>] [<port>]
```

Arguments

Argument	Value	Description
address	<i>IP-address</i>	IP-address of the server.
port	<i>Integer</i>	The server port.
fqdn	<i>String</i>	Full domain name.
hash	<i>String</i>	Hash TLS certificate.
interface	<i>Interface name</i>	Interface name to configure.

Example

```
(config-dnspx)>tls upstream 1.1.1.1 853 sni cloudflare-dns.com  
Dns::Secure::ManagerDot: DNS-over-TLS name server 1.1.1.1:853 ►  
added.
```

```
(config-dnspx)>tls upstream 1.1.1.1 853 sni cloudflare-dns.com ►  
on ISP  
Dns::Secure::ManagerDot: DNS-over-TLS name server 1.1.1.1:853 ►  
added.
```

```
(config-dnspx)>no tls upstream 1.1.1.1 853  
Dns::Secure::ManagerDot: DNS-over-TLS name server 1.1.1.1:853 ►  
deleted.
```

```
(config-dnspx)>no tls upstream  
Dns::Secure::ManagerDot: DNS-over-TLS name servers cleared.
```

History

Version	Description
3.01	The dns-proxy tls upstream command has been introduced.

3.24 dpn accept

Description

Accept user agreement [DPN](#). Until the license is accepted, the configurator does not accept any command except READ_ONLY.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(config)> dpn accept
```

Example

```
(config)> dpn accept
Core::Legal: Accepted dpn version 20200330.
```

History

Version	Description
3.05	The dpn accept command has been introduced.

3.25 dyndns profile

Description

Access to a group of commands to configure DynDns profile. If the profile is not found, the command tries to create it. You can enter up to 32 profiles.

Command with **no** prefix removes DynDns profile.

Prefix no Yes

Change settings Yes

Multiple input Yes

Group entry (config-dyndns)

Synopsis

```
(config)> dyndns profile <name>
```

```
(config)> no dyndns profile <name>
```

Arguments

Argument	Value	Description
name	String	The profile name. Maximum name length is 64 characters.

Example

```
(config)> dyndns profile _WEBADMIN
Core::Configurator: Done.
(config-dyndns)>
```

History

Version	Description
2.00	The dyndns profile command has been introduced.

3.25.1 dyndns profile domain

Description

Assign permanent domain name to the computer. You need to register this domain name on the site [dyndns.com](http://www.dyndns.com)² or [no-ip.com](http://www.no-ip.com)³ before execution.

² <http://www.dyndns.com>

³ <http://www.no-ip.com>

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-dyndns)> domain <domain>
(config-dyndns)> no domain
```

Arguments	Argument	Value	Description
	domain	<i>String</i>	The domain name. Maximum domain name length is 254 characters.

Example

```
(config-dyndns)> domain support.ddns.net
DynDns::Profile: "_WEBADMIN": domain saved..
```

```
(config-dyndns)> no domain
ynDns::Profile: "_WEBADMIN" domain cleared.
```

History	Version	Description
	2.00	The dyndns profile domain command has been introduced.

3.25.2 dyndns profile password

Description Set password for access via DynDns.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-dyndns)> password <password>
(config-dyndns)> no password
```

Arguments	Argument	Value	Description
	password	<i>String</i>	The password for authentication. Maximum password length is 64 characters.

Example

```
(config-dyndns)> password 123456789
DynDns::Profile: "_WEBADMIN": password saved..
```

```
(config-dyndns)> no password
DynDns::Profile: "_WEBADMIN" password cleared.
```

History

Version	Description
2.00	The dyndns profile password command has been introduced.

3.25.3 dyndns profile send-address

Description	Enable the necessity of connection IP-address indication in DynDns request. Command with no prefix removes the setting.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config-dyndns)> send-address (config-dyndns)> no send-address</pre>
Example	<pre>(config-dyndns)> send-address DynDns::Profile: Send address is enabled.</pre> <pre>(config-dyndns)> no send-address DynDns::Profile: Send address is disabled.</pre>

History

Version	Description
2.03	The dyndns profile send-address command has been introduced.

3.25.4 dyndns profile type

Description	Set DynDns type depending on the site where the domain name was registered.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config-dyndns)> type <type> (config-dyndns)> no type</pre>

Arguments

Argument	Value	Description
type	dyndns	Used if the domain name was registered on the dyndns.com ⁴ site.
	noip	Used if the domain name was registered on the no-ip.com ⁵ site.
	custom	Used if the domain name was registered on the other site (defined with dyndns profile url command).

Example

```
(config-dyndns)> type noip
DynDns::Profile: "_WEBADMIN": type saved.
```

```
(config-dyndns)> no type
DynDns::Profile: "_WEBADMIN" type cleared.
```

History

Version	Description
2.00	The dyndns profile type command has been introduced.

3.25.5 dyndns profile update-interval

Description

Set the address update interval for DynDns.

Command with **no** prefix cancels the ability to update.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-dyndns)> update-interval <days> days [ <hours> hours ]
[ <minutes> minutes ] [ <seconds> seconds ]
(config-dyndns)> no update-interval
```

Arguments

Argument	Value	Description
days	<i>Integer</i>	Interval time in days.
hours	<i>Integer</i>	Interval time in hours.
minutes	<i>Integer</i>	Interval time in minutes.
seconds	<i>Integer</i>	Interval time in seconds.

⁴ <http://www.dyndns.com>

⁵ <http://www.no-ip.com>

Example	(config-dyndns)> update-interval 5 days 5 hours 5 minutes 5 seconds DynDns::Profile: Interval is set to 450305 seconds.
	(config-dyndns)> update-interval 5 days DynDns::Profile: Interval is set to 432000 seconds.
	(config-dyndns)> no update-interval DynDns::Profile: Periodic registration disabled.

History	Version	Description
	2.03	The dyndns profile update-interval command has been introduced.

3.25.6 dyndns profile url

Description Set dynamic DNS service custom URL.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config-dyndns)> url <url>
(config-dyndns)> no url

Arguments	Argument	Value	Description
	url	<i>String</i>	Custom URL of DNS service.

Example

(config-dyndns)> url http://members.dyndns.org/nic/update DynDns::Profile: "_WEBADMIN": URL saved.
--

(config-dyndns)> no url DynDns::Profile: "_WEBADMIN" URL cleared.

History	Version	Description
	2.05	The dyndns profile url command has been introduced.

3.25.7 dyndns profile username

Description Set username for access via DynDns.

Prefix no Yes

Change settings Yes

Multiple input

No

Synopsis

```
(config-dyndns)> username <username>  
(config-dyndns)> no username
```

Arguments

Argument	Value	Description
username	String	Username for authentication. Maximum name length is 64 characters.

Example

```
(config-dyndns)> username test@gmail.com  
DynDns::Profile: "_WEBADMIN": username saved.  
  
(config-dyndns)> no username  
DynDns::Profile: "_WEBADMIN" username cleared.
```

History

Version	Description
2.00	The dyndns profile username command has been introduced.

3.26 easyconfig check

Description

Access to a group of commands to configure Internet access check. To check Internet access, first requests to the default gateway are sent. If the answer is received, then the remote hosts specified in the settings are polled. The duration and frequency of requests are also specified in the settings. If all the checks have been passed, then the Internet access is provided.

Prefix no

No

Change settings

No

Multiple input

No

Group entry

(ezconfig-check)

Synopsis

```
(config)> easyconfig check
```

Example

```
(config)> easyconfig check  
(ezconfig-check)>
```

History

Version	Description
2.00	The easyconfig check command has been introduced.

3.26.1 easyconfig check exclude-gateway

Description Disable default gateway check. By default, the setting is enabled.

Command with **no** prefix enables the check back.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(ezconfig-check)> exclude-gateway
--

(ezconfig-check)> no exclude-gateway

Example

(ezconfig-check)> exclude-gateway Network::InternetChecker: Gateway checking disabled.
--

(ezconfig-check)> no exclude-gateway Network::InternetChecker: Gateway checking enabled.
--

History

Version	Description
2.05	The easyconfig check exclude-gateway command has been introduced.

3.26.2 easyconfig check host

Description Specify the hostnames used to send requests for Internet access detection. By default, host address is google.com.

Command with **no** prefix resets hostnames to default.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

(ezconfig-check)> host <host>
--

(ezconfig-check)> no host [<host>]

Arguments

Argument	Value	Description
host	<i>String</i>	Remote host name.

Example

(ezconfig-check)> host google.com Network::InternetChecker: "google.com" name added.
--

```
(ezconfig-check)> no host google.com
Network::InternetChecker: "google.com" name removed.
```

```
(ezconfig-check)> no host
Network::InternetChecker: Domain name set reset to default.
```

History

Version	Description
2.00	The easyconfig check host command has been introduced.

3.26.3 easyconfig check max-fails

Description Specify the number of consecutive failed requests to the hostnames determined with **easyconfig check host** command. By default, value 3 is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

<pre>(ezconfig-check)> max-fails <count></pre>
<pre>(ezconfig-check)> no max-fails</pre>

Arguments

Argument	Value	Description
count	Integer	Amount of failed requests. Can take values from 2 to 8 inclusively.

Example

```
(ezconfig-check)> max-fails 5
Network::InternetChecker: A new maximum fail count set to 5.
```

```
(ezconfig-check)> no max-fails
Network::InternetChecker: The maximum fail count reset to the default value (3).
```

History

Version	Description
2.00	The easyconfig check max-fails command has been introduced.

3.26.4 easyconfig check period

Description Set a period of checking. By default, the value 15 is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(ezconfig-check)>	period <period>
(ezconfig-check)>	no period

Arguments	Argument	Value	Description
	period	<i>Integer</i>	Check interval in seconds. Can take values in the range from 10 to 60 inclusively.

Example

(ezconfig-check)>	period 20
Network::InternetChecker: A new check period set to 20 seconds.	
(ezconfig-check)>	no period
Network::InternetChecker: Check period reset to default (15 ► seconds).	

History	Version	Description
	2.00	The easyconfig check period command has been introduced.

3.27 easyconfig disable

Description Disable initial setup wizard. By default, the setting is enabled.

Command with **no** prefix enables initial setup wizard.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config)>	easyconfig disable
(config)>	no easyconfig disable

Example

(config)>	easyconfig disable
EasyConfig::Manager: Disabled.	
(config)>	no easyconfig disable
EasyConfig::Manager: Enabled.	

History

Version	Description
3.01	The easyconfig disable command has been introduced.

3.28 eula accept

Description	Accept user agreement EULA . Until the license is accepted, the configurator does not accept any command except READ_ONLY.
Prefix no	No
Change settings	No
Multiple input	No
Synopsis	(config)> eula accept
Example	(config)> eula accept Core::Eula: "20181001" license accepted.

History

Version	Description
2.15	The eula accept command has been introduced.

3.29 igmp-proxy

Description	Access to a group of commands to configure IGMP .
Prefix no	No
Change settings	No
Multiple input	No
Group entry	(igmp-proxy)
Synopsis	(config)> igmp-proxy
Example	(config)> igmp-proxy (igmp-proxy)>

History

Version	Description
2.06	The igmp-proxy command has been introduced.

3.29.1 igmp-proxy force

Description	Force old version of IGMP . By default, the setting is disabled and the protocol version is selected in automatic mode.									
	Command with no prefix resets setting to default.									
Prefix no	Yes									
Change settings	Yes									
Multiple input	No									
Synopsis	<pre>(igmp-proxy)> force <protocol> (igmp-proxy)> no force</pre>									
Arguments	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left; padding: 2px;">Argument</th> <th style="text-align: left; padding: 2px;">Value</th> <th style="text-align: left; padding: 2px;">Description</th> </tr> </thead> <tbody> <tr> <td style="padding: 2px;">protocol</td> <td style="padding: 2px;">igmp-v1</td> <td style="padding: 2px;">Apply filtering to incoming packets.</td> </tr> <tr> <td style="padding: 2px;"></td> <td style="padding: 2px;">igmp-v2</td> <td style="padding: 2px;">Apply filtering to outgoing packets.</td> </tr> </tbody> </table>	Argument	Value	Description	protocol	igmp-v1	Apply filtering to incoming packets.		igmp-v2	Apply filtering to outgoing packets.
Argument	Value	Description								
protocol	igmp-v1	Apply filtering to incoming packets.								
	igmp-v2	Apply filtering to outgoing packets.								
Example	<pre>(igmp-proxy)> force igmp-v1 Igmp::Proxy: Forced protocol: igmp-v1.</pre> <pre>(igmp-proxy)> no force Igmp::Proxy: Enabled IGMP auto-detect.</pre>									
History	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left; padding: 2px;">Version</th> <th style="text-align: left; padding: 2px;">Description</th> </tr> </thead> <tbody> <tr> <td style="padding: 2px;">2.08</td> <td style="padding: 2px;">The igmp-proxy force command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.08	The igmp-proxy force command has been introduced.					
Version	Description									
2.08	The igmp-proxy force command has been introduced.									

3.30 igmp-snooping disable

Description	Disable IGMP snooping. Command is available in Client, Repeater or AP modes only.
	Command with no prefix enables IGMP snooping.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config)> igmp-snooping disable</pre>
Example	<pre>(config)> igmp-snooping disable Igmp::Snooping: Disabled.</pre>

```
(config)> no igmp-snooping disable
Igmp::Snooping: Enabled.
```

History

Version	Description
2.12	The igmp-snooping disable command has been introduced.

3.31 interface

Description

Access to a group of commands to configure the selected interface. If the interface is not found, the command tries to create it.

The interface name specifies its class that inherits certain properties, see the diagrams in the [Appendix](#). The commands work in relation to classes. The corresponding interface class is specified in the command description.

Command with **no** prefix deletes the interface.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Group entry

(config-if)

Synopsis

```
(config)> interface <name>
```

```
(config)> no interface <name>
```

Arguments

Argument	Value	Description
name	<i>Interface name</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(config)> interface [Tab]
```

Usage template:
 interface {name}

Choose:

- Pvc
- Vlan
- CdcEthernet
- UsbModem
- RealtekEthernet
- AsixEthernet
- Davicom
- UsbLte

```

Yota
Bridge
PPPoE
SSTP
PPTP
L2TP
Wireguard
OpenVPN
IPIP
TunnelSixInFour
Gre
EoIP
TunnelSixToFour
Chilli

```

History	Version	Description
	2.00	The interface command has been introduced.

3.31.1 interface adsl snr-margin-offset

Description Configure the signal-to-noise ratio for ADSL line. By default, 0 value is used.

Command with **no** prefix resets the signal-to-noise ratio.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Dsl

Synopsis

```

(config-if)> adsl snr-margin-offset <offset>
(config-if)> no adsl snr-margin-offset

```

Arguments

Argument	Value	Description
offset	String	Integer value measured in dB and indicating the signal-to-noise ratio. Can take values in the range from -10 to +10 dB.

Example

```

(config-if)> adsl snr-margin-offset -10
Network::Interface::Tc3262::Dsl: ADSL SNR margin offset is set ▶
to -10 dB.

```

```

(config-if)> adsl snr-margin-offset 10
Network::Interface::Tc3262::Dsl: ADSL SNR margin offset is set ▶
to 10 dB.

```

```
(config-if)> no adsl snr-margin-offset
Network::Interface::Tc3262::Dsl: ADSL SNR margin reset to default.
```

History

Version	Description
3.03	The interface adsl snr-margin-offset command has been introduced.

3.31.2 interface atf disable

Description Disable **ATF** for AP 2,4 GHz and 5 GHz. By default, the setting is disabled.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFiMaster

Synopsis

```
(config-if)> atf disable
(config-if)> no atf disable
```

Example

```
(config-if)> atf disable
Network::Interface::Rtx::WifiMaster: "WifiMaster1": Airtime ►
Fairness disabled.
```

```
(config-if)> no atf disable
Network::Interface::Rtx::WifiMaster: "WifiMaster1": Airtime ►
Fairness enabled.
```

History

Version	Description
3.02	The interface atf disable command has been introduced.

3.31.3 interface atf inbound

Description Enable **ATF** for transferring inbound packets only for AP 2,4 GHz and 5 GHz. By default, the setting is disabled.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type	WiFiMaster				
Synopsis	<pre>(config-if)> atf inbound </pre> <pre>(config-if)> no atf inbound</pre>				
Example	<pre>(config-if)> atf inbound Network::Interface::Rtx::WifiMaster: "WifiMaster0": Airtime ▶ Fairness inbound is set.</pre> <pre>(config-if)> atf inbound Network::Interface::Rtx::WifiMaster: "WifiMaster1": Airtime ▶ Fairness inbound is set.</pre> <pre>(config-if)> no atf inbound Network::Interface::Rtx::WifiMaster: "WifiMaster1": Airtime ▶ Fairness inbound is unset.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>3.02</td> <td>The interface atf inbound command has been introduced.</td> </tr> </tbody> </table>	Version	Description	3.02	The interface atf inbound command has been introduced.
Version	Description				
3.02	The interface atf inbound command has been introduced.				

3.31.4 interface authentication chap

Description	Enable <i>CHAP</i> authentication support. Command with no prefix disables <i>CHAP</i> .
Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	Secure
Synopsis	<pre>(config-if)> authentication chap </pre> <pre>(config-if)> no authentication chap</pre>
Example	<pre>(config-if)> authentication chap Network::Interface::Supplicant: "PPTP0": added authentication: ▶ CHAP.</pre> <pre>(config-if)> no authentication chap Network::Interface::Supplicant: "PPTP0": removed authentication: ▶ CHAP.</pre>

History

Version	Description
2.00	The interface authentication chap command has been introduced.

3.31.5 interface authentication eap-md5

Description Enable EAP-MD5 authentication support.
Command with **no** prefix disables EAP-MD5.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> authentication eap-md5
(config-if)> no authentication eap-md5
```

Example

```
(config-if)> authentication eap-md5
Network::Interface::Ethernet: "GigabitEthernet1": configured ▶
authentication: EAP-MD5.

(config-if)> no authentication eap-md5
Network::Interface::Suplicant: "GigabitEthernet1": removed ▶
authentication: EAP-MD5.
```

History

Version	Description
2.00	The interface authentication eap-md5 command has been introduced.

3.31.6 interface authentication eap-mschapv2

Description Enable EAP-MSCHAPv2 authentication support.
Command with **no** prefix disables EAP-MSCHAPv2, MS-CHAPv2.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> authentication eap-mschapv2
```

```
(config-if)> no authentication eap-mschapv2
```

Example

```
(config-if)> authentication eap-mschapv2
Network::Interface::Supplicant: "IKE0": authentication is ▶
unchanged.
```

```
(config-if)> no authentication eap-mschapv2
Network::Interface::Supplicant: "IKE0": removed authentication: ▶
EAP-MSCHAPv2, MS-CHAPv2.
```

History

Version	Description
3.05	The interface authentication eap-mschapv2 command has been introduced.

3.31.7 interface authentication eap-ttls

Description Enable EAP-TTLS authentication support.
Command with **no** prefix disables EAP-TTLS.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> authentication eap-ttls
(config-if)> no authentication eap-ttls
```

Example

```
(config-if)> authentication eap-ttls
Network::Interface::Ethernet: "GigabitEthernet1": configured ▶
authentication: EAP-TTLS.
```

```
(config-if)> no authentication eap-ttls
Network::Interface::Supplicant: "GigabitEthernet1": removed ▶
authentication: EAP-TTLS.
```

History

Version	Description
2.00	The interface authentication eap-ttls command has been introduced.

3.31.8 interface authentication identity

Description Specify user name for device authentication on the remote system. Equally often used on PPTP, PPPoE and L2TP connections, as well as for UsbQmi interfaces.

Command with **no** prefix deletes the previously specified user name.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
| (config-if)> authentication identity <identity>
| (config-if)> no authentication identity
```

Arguments	Argument	Value	Description
	identity	String	User name for authentication.

Example

```
(config-if)> authentication identity mylogin
Network::Interface::Supplicant: "PPTP0": identity saved.
```

```
(config-if)> no authentication identity
Network::Interface::Supplicant: "PPTP0": identity cleared.
```

History	Version	Description
	2.00	The interface authentication identity command has been introduced.

3.31.9 interface authentication mschap

Description Enable MS-CHAP authentication support.

Command with **no** prefix disables MS-CHAP.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
| (config-if)> authentication mschap
```

```
(config-if)> no authentication mschap
```

Example

```
(config-if)> authentication mschap
```

Network::Interface::Supplicant: "PPTP0": added authentication: ▶
MS-CHAP.

```
(config-if)> no authentication mschap
```

Network::Interface::Supplicant: "PPTP0": removed authentication: ▶
MS-CHAP.

History

Version	Description
2.00	The interface authentication mschap command has been introduced.

3.31.10 interface authentication mschap-v2

Description Enable MS-CHAPv2 authentication support.

Command with **no** prefix disables MS-CHAPv2.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> authentication mschap-v2
```

```
(config-if)> no authentication mschap-v2
```

Example

```
(config-if)> authentication mschap-v2
```

Network::Interface::Supplicant: "PPTP0": authnentication is ▶
unchanged.

```
(config-if)> no authentication mschap-v2
```

Network::Interface::Supplicant: "PPTP0": removed authentication: ▶
MS-CHAPv2.

History

Version	Description
2.00	The interface authentication mschap-v2 command has been introduced.

3.31.11 interface authentication pap

Description Enable **PAP** authentication support.

Command with **no** prefix disables [PAP](#).

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

(config-if)>	authentication pap
(config-if)>	no authentication pap

Example

```
(config-if)> authentication pap
Network::Interface::Supplicant: "PPTP0": added authentication: ▶
PAP.
```

```
(config-if)> no authentication pap
Network::Interface::Supplicant: "PPTP0": removed authentication: ▶
PAP.
```

History	Version	Description
	2.00	The interface authentication pap command has been introduced.

3.31.12 interface authentication password

Description Specify password for device authentication on the remote system. Equally often used on PPTP, PPPoE and L2TP connections.

Command with **no** prefix deletes the password.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

(config-if)>	authentication password <password>
(config-if)>	no authentication password

Arguments	Argument	Value	Description
	password	<i>String</i>	Password for authentication.

Example

```
(config-if)> authentication password Aihoi2cha1
Network::Interface::Supplicant: "PPTP0": password saved.
```

```
(config-if)> no authentication password
Network::Interface::Suplicant: "PPTP0": password cleared.
```

History	Version	Description
	2.00	The interface authentication password command has been introduced.

3.31.13 interface authentication peap

Description Enable [EAP-PEAP](#) authentication support.
Command with **no** prefix disables [EAP-PEAP](#).

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> authentication peap
(config-if)> no authentication peap
```

Example

```
(config-if)> authentication peap
Network::Interface::Ethernet: "WifiMaster1/AccessPoint0": ►
configured authentication: PEAP.
```

```
(config-if)> no authentication peap
Network::Interface::Suplicant: "WifiMaster1/AccessPoint0": ►
removed authentication: PEAP.
```

History	Version	Description
	2.03	The interface authentication peap command has been introduced.

3.31.14 interface authentication shared

Description Enable authentication with a [shared key](#). This mode is used only in conjunction with [WEP](#) encryption. [Shared keys](#) are specified by [interface encryption key](#) command.
Command with **no** prefix turns authentication to open mode.

Prefix no Yes

Change settings Yes

Multiple input

No

Interface type

WiFi

Synopsis(config-if)> **authentication shared**(config-if)> **no authentication shared****Example**(config-if)> **authentication shared**Network::Interface::Rtx::AccessPoint: "WifiMaster1/AccessPoint0": ►
shared authentication mode enabled.(config-if)> **no authentication shared**Network::Interface::Rtx::AccessPoint: "WifiMaster1/AccessPoint0": ►
shared authentication mode disabled.**History**

Version	Description
2.00	The interface authentication shared command has been introduced.

3.31.15 interface authentication wpa-psk

Description

Specify the pre-agreed key for authentication via WPA-PSK protocol. It is possible to specify the key as a 256-bit hexadecimal number or as a string of ASCII-characters. In the second case, the string is used as a code phrase to generate the key (passphrase).

Command with **no** prefix removes setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

WiFi

Synopsis(config-if)> **authentication wpa-psk <psk>**(config-if)> **no authentication wpa-psk****Arguments**

Argument	Value	Description
psk	<i>String</i>	Pre-agreed key in the form of a 256-bit hexadecimal number, which consists of 64 hexadecimal digits, or in the form of ASCII string of 8 to 63 characters length.

Example(config-if)> **authentication wpa-psk Eethaich9z**

Network::Interface::Wifi: "WifiMaster1/AccessPoint0": WPA PSK set.

```
(config-if)> no authentication wpa-psk
Network::Interface::Wifi: "WifiMaster1/AccessPoint0": WPA PSK ►
removed.
```

History	Version	Description
	2.00	The interface authentication wpa-psk command has been introduced.

3.31.16 interface backhaul

Description	Enable support of VLAN for wireless connection between routers Keenetic in the trunk mode. By default, setting is disabled. Command with no prefix disables the setting.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	WiFiMaster
Synopsis	<pre>(config-if)> backhaul (config-if)> no backhaul</pre>
Example	<pre>(config-if)> backhaul Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint1": ► backhaul mode enabled. (config-if)> no backhaul Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint1": ► backhaul mode disabled.</pre>

History	Version	Description
	3.02	The interface backhaul command has been introduced.

3.31.17 interface band-steering

Description	Enable Band Steering for AP 5 GHz. By default, the setting is enabled. For correct Band Steering operation it is necessary to fulfill the following conditions:
	<ul style="list-style-type: none"> • access points 2,4 GHz and 5 GHz are enabled both • they have the same SSID's

- they have the same security settings (encryption type, key value, etc.)

Command with **no** prefix disables the *Band Steering*.

Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Interface type	WiFiMaster				
Synopsis	<pre>(config-if)> band-steering (config-if)> no band-steering</pre>				
Example	<pre>(config-if)> band-steering Network::Interface::Rtx::WifiMaster: "WifiMaster1": band steering ▶ enabled. (config-if)> no band-steering Network::Interface::Rtx::WifiMaster: "WifiMaster1": band steering ▶ disabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.09</td><td>The interface band-steering command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.09	The interface band-steering command has been introduced.
Version	Description				
2.09	The interface band-steering command has been introduced.				

3.31.18 interface band-steering preference

Description	Set the band to give a preference in <i>Band Steering</i> technology. By default, the value is not defined. Command with no prefix resets setting to default.									
Prefix no	Yes									
Change settings	Yes									
Multiple input	No									
Interface type	WiFiMaster									
Synopsis	<pre>(config-if)> band-steering preference <band> (config-if)> no band-steering preference</pre>									
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>band</td><td>2</td><td>2,4 GHz band.</td></tr> <tr> <td></td><td>5</td><td>5 GHz band.</td></tr> </tbody> </table>	Argument	Value	Description	band	2	2,4 GHz band.		5	5 GHz band.
Argument	Value	Description								
band	2	2,4 GHz band.								
	5	5 GHz band.								

Example

```
(config-if)> band-steering preference 5
Network::Interface::Rtx::WifiMaster: "WifiMaster1": band steering ▶
preference is 5 GHz.
```

```
(config-if)> no band-steering preference
Network::Interface::Rtx::WifiMaster: "WifiMaster1": band steering ▶
preference disabled.
```

History

Version	Description
2.09	The interface band-steering preference command has been introduced.

3.31.19 interface cable-diagnostics

Description Enable a diagnostic procedure on a port. Multiple starts of diagnostics on the same port ignored with a successfull result until the running procedure finish. Detailed info about connection progress is saved to the system log.

Prefix no No

Change settings No

Multiple input No

Interface type Ethernet

Synopsis (config-if)> **cable-diagnostics**

Example (config-if)> **cable-diagnostics**
Network::Interface::Rtx::Switch: "GigabitEthernet0/1": started ▶
a cable diagnostics.

History

Version	Description
3.07	The interface cable-diagnostics command has been introduced.

3.31.20 interface ccp

Description Enable **CCP** support during establishing connection.

Command with **no** prefix disables **CCP**.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP

Synopsis

```
(config-if)> ccp
```

```
(config-if)> no ccp
```

Example

```
(config-if)> ccp
```

CCP enabled.

```
(config-if)> no ccp
```

CCP disabled.

History

Version	Description
2.00	The interface ccp command has been introduced.

3.31.21 interface channel

Description

Set the radio channel (broadcasting frequency band) for wireless interfaces. Wi-Fi interfaces take integers from 1 to 14 (frequency range from 2.412 GHz to 2.484 GHz) and from 36 to 165 (frequency range from 5.180 GHz to 5.825 GHz) as channel numbers. By default, auto value is used.

Command with **no** prefix resets to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Radio

Synopsis

```
(config-if)> channel <channel>
```

```
(config-if)> no channel
```

Arguments

Argument	Value	Description
channel	number	Number of radio channel.
	auto	Radio channel number is detected automatically.

Example

```
(config-if)> channel 8
```

Network::Interface::Rtx::WifiMaster: "WifiMaster0": channel set ▶ to 8.

```
(config-if)> channel 36
```

Network::Interface::Rtx::WifiMaster: "WifiMaster1": channel set ▶ to 36.

```
(config-if)> no channel
Network::Interface::Rtx::WifiMaster: "WifiMaster0": auto channel ▶
mode set.
```

History	Version	Description
	2.00	The interface channel command has been introduced.

3.31.22 interface channel auto-rescan

Description Set a schedule for radio channel automatic scanning. By default, the setting is disabled.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Radio

Synopsis

```
(config-if)> channel auto-rescan [<hh>:<mm>]interval <interval>
(config-if)> no channel auto-rescan
```

Arguments	Argument	Value	Description
	interval	1	Rescan interval in hours.
		6	
		12	
		24	

Example

```
(config-if)> channel auto-rescan interval 1
Network::Interface::Rtx::WifiMaster: "WifiMaster0": scheduled ▶
auto rescan, interval 1 hour.
```

```
(config-if)> no channel auto-rescan
Network::Interface::Rtx::WifiMaster: "WifiMaster0": auto rescan ▶
disabled.
```

History	Version	Description
	2.07	The interface channel auto-rescan command has been introduced.

3.31.23 interface channel width

Description Set the bandwidth for a specified channel. By default, 40-above for AP 2,4 GHz, 40-above/80 for AP 5 GHz value is used.

Command with **no** prefix resets to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Radio

Synopsis

```
(config-if)> channel width <width>
(config-if)> no channel width
```

Arguments	Argument	Value	Description
width	20	Set bandwidth equal to 20 MHz.	
	40-above	Expand the bandwidth up to 40 MHz using next channel.	
	40-below	Expand the bandwidth up to 40 MHz using previous channel.	
	40-above/80	Expand the bandwidth up to 40/80 MHz using next channel.	
	40-below/80	Expand the bandwidth up to 40/80 MHz using previous channel.	

Example

```
(config-if)> channel width 20
Network::Interface::Rtx::WifiMaster: "WifiMaster0": channel ►
bandwidth setting applied.
```

```
(config-if)> no channel width
Network::Interface::Rtx::WifiMaster: "WifiMaster0": channel ►
bandwidth settings reset to default.
```

History	Version	Description
	2.04	The interface channel width command has been introduced.

3.31.24 interface chilli coaport

Description Set **UDP** port to which disconnect requests from the **RADIUS** client are sent.

Command with **no** prefix removes the setting.

Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Interface type	Chilli						
Synopsis	<pre>(config-if)> chilli coaport <coaport> (config-if)> no chilli coaport</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>coaport</td><td><i>Integer</i></td><td>The <i>CoA</i> port number.</td></tr> </tbody> </table>	Argument	Value	Description	coaport	<i>Integer</i>	The <i>CoA</i> port number.
Argument	Value	Description					
coaport	<i>Integer</i>	The <i>CoA</i> port number.					
Example	<pre>(config-if)> chilli coaport 3940 Chilli::Interface: "Chilli0": coaport set to 3940.</pre> <pre>(config-if)> no chilli coaport Chilli::Interface: "Chilli0": coaport reset to default.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.10</td><td>The interface chilli coaport command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.10	The interface chilli coaport command has been introduced.		
Version	Description						
2.10	The interface chilli coaport command has been introduced.						

3.31.25 interface chilli dhcpif

Description Assign Chilli interface to the system network interface.

Command with **no** prefix cancels the association.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

(config-if)> chilli dhcpif <dhcpif>
(config-if)> no chilli dhcpif

Arguments	Argument	Value	Description
	dhcpif	<i>Interface name</i>	Full interface name or an alias.

Example

(config-if)> chilli dhcpif Bridge1
Chilli::Interface: "Chilli0": bound to Bridge1.

```
(config-if)> no chilli dhcpif
Chilli::Interface: "Chilli0": unbound.
```

History

Version	Description
2.10	The interface chilli dhcpif command has been introduced.

3.31.26 interface chilli dns

Description Set IP-address of the DNS-server.Command with **no** prefix removes the setting.**Prefix no** Yes**Change settings** Yes**Multiple input** No**Interface type** Chilli

Synopsis

```
(config-if)> chilli dns <dns1> [<dns2>]
(config-if)> no chilli dns
```

Arguments

Argument	Value	Description
dns1	<i>IP-address</i>	Address of primary DNS-server.
dns2	<i>IP-address</i>	Address of secondary DNS-server.

Example

```
(config-if)> chilli dns 8.8.8.8 1.1.1.1
Chilli::Interface: "Chilli0": DNS servers set to 8.8.8.8, 1.1.1.1.
```

```
(config-if)> no chilli dns
Chilli::Interface: "Chilli0": DNS servers reset to default.
```

History

Version	Description
2.10	The interface chilli dns command has been introduced.

3.31.27 interface chilli lease

Description Configure the lease time of the connected client IP-addresses. By default, the value 3600 is used.Command with **no** prefix resets setting to default.**Prefix no** Yes

Change settings	Yes						
Multiple input	No						
Interface type	Chilli						
Synopsis	<pre>(config-if)> chilli lease <lease> (config-if)> no chilli lease</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>lease</td> <td><i>Integer</i></td> <td>Lease time in seconds. The maximum value is 259200.</td> </tr> </tbody> </table>	Argument	Value	Description	lease	<i>Integer</i>	Lease time in seconds. The maximum value is 259200.
Argument	Value	Description					
lease	<i>Integer</i>	Lease time in seconds. The maximum value is 259200.					
Example	<pre>(config-if)> chilli lease 1000 Chilli::Interface: "Chilli0": lease has been set 1000 seconds. (config-if)> no chilli lease Chilli::Interface: "Chilli0": lease has been reset to default ▶ (3600 seconds).</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.11</td> <td>The interface chilli lease command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.11	The interface chilli lease command has been introduced.		
Version	Description						
2.11	The interface chilli lease command has been introduced.						

3.31.28 interface chilli logout

Description	Force the MAC-address of the specified client to be disabled.									
Prefix no	No									
Change settings	No									
Multiple input	No									
Interface type	Chilli									
Synopsis	<pre>(config-if)> chilli logout (<mac> all)</pre>									
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>mac</td> <td><i>MAC-address</i></td> <td>MAC-address of the registered client.</td> </tr> <tr> <td>all</td> <td>Keyword</td> <td>Disable all MAC-addresses.</td> </tr> </tbody> </table>	Argument	Value	Description	mac	<i>MAC-address</i>	MAC-address of the registered client.	all	Keyword	Disable all MAC-addresses.
Argument	Value	Description								
mac	<i>MAC-address</i>	MAC-address of the registered client.								
all	Keyword	Disable all MAC-addresses.								
Example	<pre>(config-if)> chilli logout 64:a2:22:51:b4:11 (config-if)> chilli logout all Chilli::Interface: "Chilli0": service restarted.</pre>									

History

Version	Description
2.10	The interface chilli logout command has been introduced.

3.31.29 interface chilli macauth

Description

Enable user authentication option based on MAC-address detection only.

Command with **no** prefix disables the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Chilli

Synopsis

```
(config-if)>  chilli macauth
```

```
(config-if)> no chilli macauth
```

Example

```
(config-if)>  chilli macauth
Chilli::Interface: "Chilli0": macauth set to "".
```

```
(config-if)> no chilli macauth
Chilli::Interface: "Chilli0": macauth cleared.
```

History

Version	Description
2.10	The interface chilli macauth command has been introduced.

3.31.30 interface chilli macpasswd

Description

Set the password for MAC-address authentication.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Chilli

Synopsis

```
(config-if)>  chilli macpasswd <macpasswd>
```

```
(config-if)> no chilli macpasswd
```

Arguments

Argument	Value	Description
macpasswd	<i>String</i>	The user password.

Example

```
(config-if)> chilli macpasswd 1234567890
Chilli::Interface: "Chilli0": macpasswd set to "1234567890".

(config-if)> no chilli macpasswd
Chilli::Interface: "Chilli0": macpasswd cleared.
```

History

Version	Description
2.11	The interface chilli macpasswd command has been introduced.

3.31.31 interface chilli nasip

Description Set [RADIUS](#) option NAS IP Address. Allows you to configure and use an arbitrary IP-address.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

```
(config-if)> chilli nasip <address> | interface <wan> | auto
(config-if)> no chilli nasip
```

Arguments

Argument	Value	Description
address	<i>IP-address</i>	Specific IP-address of the server.
wan	<i>Interface name</i>	IP-address from the specified WAN interface.
auto	<i>Keyword</i>	IP-address from the current WAN interface.

Example

```
(config-if)> chilli nasip 95.213.215.187
Chilli::Interface: "Chilli0": NAS IP address set to ▶
"95.213.215.187".
```

```
(config-if)> chilli nasip interface ISP
Chilli::Interface: "Chilli0": NAS IP interface set to ▶
"GigabitEthernet1".
```

```
(config-if)> chilli nasip auto
Chilli::Interface: "Chilli0": NAS IP address set to auto.
```

```
(config-if)> no chilli nasip
Chilli::Interface: "Chilli0": NAS IP address cleared.
```

History

Version	Description
2.10	The interface chilli nasip command has been introduced.

3.31.32 interface chilli nasmac

Description Set MAC-address for **RADIUS** Called-Station-ID attribute. By default, MAC-address of the guest network is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

(config-if)> chilli nasmac <mac>
(config-if)> no chilli nasmac

Arguments

Argument	Value	Description
mac	MAC-address	New MAC-address for RADIUS Called-Station-ID.

Example

```
(config-if)> chilli nasmac 50:ff:20:00:1e:86
Chilli::Interface: "Chilli0": NAS MAC address set to ▶
"50:ff:20:00:1e:86".
```

```
(config-if)> no chilli nasmac
Chilli::Interface: "Chilli0": NAS MAC address cleared.
```

History

Version	Description
2.11	The interface chilli nasmac command has been introduced.

3.31.33 interface chilli profile

Description Assign Chilli profile to the Chilli interface.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings	Yes						
Multiple input	No						
Interface type	Chilli						
Synopsis	<pre>(config-if)> chilli profile <profile> (config-if)> no chilli profile</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>profile</td> <td>String</td> <td><i>RADIUS</i> server profile name.</td> </tr> </tbody> </table>	Argument	Value	Description	profile	String	<i>RADIUS</i> server profile name.
Argument	Value	Description					
profile	String	<i>RADIUS</i> server profile name.					
Example	<pre>(config-if)> chilli profile Wi-Fi_SYSTEM Chilli::Interface: "Chilli0": assigned profile: Wi-Fi. (config-if)> no chilli profile Chilli::Interface: "Chilli0": profile cleared.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.10</td> <td>The interface chilli profile command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.10	The interface chilli profile command has been introduced.		
Version	Description						
2.10	The interface chilli profile command has been introduced.						

3.31.34 interface chilli radius

Description	Add the <i>RADIUS</i> server addresses. Command with no prefix removes the servers.									
Prefix no	Yes									
Change settings	Yes									
Multiple input	No									
Interface type	Chilli									
Synopsis	<pre>(config-if)> chilli radius <server1> [<server2>] (config-if)> no chilli radius</pre>									
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>server1</td> <td>String</td> <td>Address of first <i>RADIUS</i> server.</td> </tr> <tr> <td>server2</td> <td>String</td> <td>Address of second <i>RADIUS</i> server.</td> </tr> </tbody> </table>	Argument	Value	Description	server1	String	Address of first <i>RADIUS</i> server.	server2	String	Address of second <i>RADIUS</i> server.
Argument	Value	Description								
server1	String	Address of first <i>RADIUS</i> server.								
server2	String	Address of second <i>RADIUS</i> server.								

Example

```
(config-if)> chilli radius radius.example.net radius2.example.net
Chilli::Interface: "Chilli0": RADIUS servers set to >
radius.example.net, radius2.example.net.
```

```
(config-if)> no chilli radius
Chilli::Interface: "Chilli0": RADIUS servers cleared.
```

History

Version	Description
2.10	The interface chilli radius command has been introduced.

3.31.35 interface chilli radiusacctport

Description Set accounting UDP-port of [RADIUS](#) server. By default, value 1813 is used.

Command with **no** prefix resets port to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

```
(config-if)> chilli radiusacctport <radiusacctport>
```

```
(config-if)> no chilli radiusacctport
```

Arguments

Argument	Value	Description
radiusacctport	String	The port number.

Example

```
(config-if)> chilli radiusacctport 1819
Chilli::Interface: "Chilli0": radiusacctport set to 1819.
```

```
(config-if)> no chilli radiusacctport
Chilli::Interface: "Chilli0": radiusacctport reset to default.
```

History

Version	Description
3.06	The interface chilli radiusacctport command has been introduced.

3.31.36 interface chilli radiusauthport

Description Set authentication UDP-port of [RADIUS](#) server. By default, value 1812 is used.

Command with **no** prefix resets port to default.

Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Interface type	Chilli						
Synopsis	<pre>(config-if)> chilli radiusauthport <radiusauthport> (config-if)> no chilli radiusauthport</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>radiusauthport</td><td><i>String</i></td><td>The port number.</td></tr> </tbody> </table>	Argument	Value	Description	radiusauthport	<i>String</i>	The port number.
Argument	Value	Description					
radiusauthport	<i>String</i>	The port number.					
Example	<pre>(config-if)> chilli radiusauthport 1820 Chilli::Interface: "Chilli0": radiusauthport set to 1820. (config-if)> no chilli radiusauthport Chilli::Interface: "Chilli0": radiusauthport reset to default.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>3.06</td><td>The interface chilli radiusauthport command has been introduced.</td></tr> </tbody> </table>	Version	Description	3.06	The interface chilli radiusauthport command has been introduced.		
Version	Description						
3.06	The interface chilli radiusauthport command has been introduced.						

3.31.37 interface chilli radiuslocationid

Description	Set location identifier of RADIUS server. It should be in the format <code>isocc=</code> , <code>cc=</code> , <code>ac=</code> , <code>network=</code> . Command with no prefix removes the setting.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Interface type	Chilli						
Synopsis	<pre>(config-if)> chilli radiuslocationid <radiuslocationid> (config-if)> no chilli radiuslocationid</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>radiuslocationid</td><td><i>String</i></td><td>Location identifier value.</td></tr> </tbody> </table>	Argument	Value	Description	radiuslocationid	<i>String</i>	Location identifier value.
Argument	Value	Description					
radiuslocationid	<i>String</i>	Location identifier value.					

Example

```
(config-if)> chilli radiuslocationid >
  isocc=,cc=,ac=,network=WiFISYSTEM,
Chilli::Interface: "Chilli0": radiuslocationid set to ▶
  "isocc=,cc=,ac=,network=WiFISYSTEM,".
```

```
(config-if)> no chilli radiuslocationid
Chilli::Interface: "Chilli0": radiuslocationid cleared.
```

History

Version	Description
2.10	The interface chilli radiuslocationid command has been introduced.

3.31.38 interface chilli radiuslocationname

Description Set location name of **RADIUS** server.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

<pre>(config-if)> chilli radiuslocationname <radiuslocationname></pre>
<pre>(config-if)> no chilli radiuslocationname</pre>

Arguments

Argument	Value	Description
radiuslocationname	String	Location name.

Example

```
(config-if)> chilli radiuslocationname MyHotSpot
Chilli::Interface: "Chilli0": radiuslocationname set to ▶
  "MyHotSpot".
```

```
(config-if)> no chilli radiuslocationname
Chilli::Interface: "Chilli0": radiuslocationname cleared.
```

History

Version	Description
2.10	The interface chilli radiuslocationname command has been introduced.

3.31.39 interface chilli radiusnasid

Description Set Network Access Server identifier.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

(config-if)>	chilli radiusnasid <radiusnasid>
(config-if)>	no chilli radiusnasid

Arguments

Argument	Value	Description
radiusnasid	<i>String</i>	NAS identifier.

Example

(config-if)>	chilli radiusnasid keeneticru_12
Chilli::Interface: "Chilli0": radiusnasid set to "keeneticru_12".	
(config-if)>	no chilli radiusnasid
Chilli::Interface: "Chilli0": radiusnasid cleared.	

History

Version	Description
2.10	The interface chilli radiusnasid command has been introduced.

3.31.40 interface chilli radiussecret

Description Set shared secret for both **RADIUS** servers.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

(config-if)>	chilli radiussecret <radiussecret>
(config-if)>	no chilli radiussecret

Arguments

Argument	Value	Description
radiussecret	<i>String</i>	A secret value.

Example

```
(config-if)> chilli radiussecret 12df34fd
Chilli::Interface: "Chilli0": radiussecret set to "12df34fd".

(config-if)> no chilli radiussecret
Chilli::Interface: "Chilli0": radiussecret cleared.
```

History

Version	Description
2.10	The interface chilli radiussecret command has been introduced.

3.31.41 interface chilli uamallowed

Description

Specify the resource to which the client has access without first authenticating.

Command with **no** prefix removes the resource from the list. If you use no argument, the entire list of resources will be cleared.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type Chilli

Synopsis

```
(config-if)> chilli uamallowed <uamallowed>
(config-if)> no chilli uamallowed [ <uamallowed> ]
```

Arguments

Argument	Value	Description
uamallowed	<i>String</i>	IP-address, URL or subnetwork.

Example

```
(config-if)> chilli uamallowed 188.166.114.0/24
Chilli::Interface: "Chilli0": "188.166.114.0/24" added to walled garden.
```

```
(config-if)> chilli uamallowed www.example.link
Chilli::Interface: "Chilli0": "www.example.link" added to walled garden.
```

```
(config-if)> no chilli uamallowed 188.166.114.0/24
Chilli::Interface: "Chilli0": "188.166.114.0/24" removed from walled garden.
```

```
(config-if)> no chilli uamallowed www.example.link
Chilli::Interface: "Chilli0": "www.example.link" removed from walled garden.
```

```
(config-if)> no chilli uamallowed
Chilli::Interface: "Chilli0": walled garden cleared.
```

History

Version	Description
2.10	The interface chilli uamallowed command has been introduced.

3.31.42 interface chilli uamdomain

Description

Specify the domain name to which the client has access without first authenticating.

Command with **no** prefix removes the domain name from the list. If you use no argument, the entire list of domain names will be cleared.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Interface type

Chilli

Synopsis

```
(config-if)> chilli uamdomain <uamdomain>
```

```
(config-if)> no chilli uamdomain [<uamdomain>]
```

Arguments

Argument	Value	Description
uamdomain	String	Domain name of remote host.

Example

```
(config-if)> chilli uamdomain example.net
Chilli::Interface: "Chilli0": "example.net" added to walled ▶
garden.
```

```
(config-if)> no chilli uamdomain example.net
Chilli::Interface: "Chilli0": "example.net" removed from walled ▶
garden.
```

```
(config-if)> no chilli uamdomain
Chilli::Interface: "Chilli0": walled garden cleared.
```

History

Version	Description
2.10	The interface chilli uamdomain command has been introduced.

3.31.43 interface chilli uamhomepage

Description

Set URL of homepage to redirect unauthenticated users to.

Command with **no** prefix removes the setting.

Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Interface type	Chilli						
Synopsis	<pre>(config-if)> chilli uamhomepage <uamhomepage> (config-if)> no chilli uamhomepage</pre>						
Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>uamhomepage</td><td><i>String</i></td><td>Custom URL.</td></tr></tbody></table>	Argument	Value	Description	uamhomepage	<i>String</i>	Custom URL.
Argument	Value	Description					
uamhomepage	<i>String</i>	Custom URL.					
Example	<pre>(config-if)> chilli uamhomepage http://192.168.2.1/welcome.html Chilli::Interface: "Chilli0": uamhomepage set to ▶ "http://192.168.2.1/welcome.html".</pre> <pre>(config-if)> no chilli uamhomepage Chilli::Interface: "Chilli0": uamhomepage cleared.</pre>						
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.10</td><td>The interface chilli uamhomepage command has been introduced.</td></tr></tbody></table>	Version	Description	2.10	The interface chilli uamhomepage command has been introduced.		
Version	Description						
2.10	The interface chilli uamhomepage command has been introduced.						

3.31.44 interface chilli uamport

Description	Set TCP port to bind to for authenticating clients. By default, value 3990 is used. Command with no prefix resets port to default.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Interface type	Chilli						
Synopsis	<pre>(config-if)> chilli uamport <uamport> (config-if)> no chilli uamport</pre>						
Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>uamport</td><td><i>Integer</i></td><td>The port number.</td></tr></tbody></table>	Argument	Value	Description	uamport	<i>Integer</i>	The port number.
Argument	Value	Description					
uamport	<i>Integer</i>	The port number.					

Example

```
(config-if)> chilli uampport 3922
Chilli::Interface: "Chilli0": uampport set to 3922.
```

```
(config-if)> no chilli uampport
Chilli::Interface: "Chilli0": uampport reset to default.
```

History

Version	Description
2.10	The interface chilli uampport command has been introduced.

3.31.45 interface chilli uamsecret

Description Set shared secret between **UAM** server and Chilli. The **UAM** secret is used to hash the challenge before password computation.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Chilli

Synopsis

<pre>(config-if)> chilli uamsecret <uamsecret></pre>
<pre>(config-if)> no chilli uamsecret</pre>

Arguments

Argument	Value	Description
uamsecret	<i>String</i>	A secret value.

Example

```
(config-if)> chilli uamsecret 12df34fd
Chilli::Interface: "Chilli0": uamsecret set to "12df34fd".
```

```
(config-if)> no chilli uamsecret
Chilli::Interface: "Chilli0": uamsecret set to "".
```

History

Version	Description
2.10	The interface chilli uamsecret command has been introduced.

3.31.46 interface chilli uamserver

Description Set URL of web server to use for authenticating clients.

Command with **no** prefix removes the setting.

Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Interface type	Chilli						
Synopsis	<pre>(config-if)> chilli uamserver <uamserver> (config-if)> no chilli uamserver</pre>						
Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>uamserver</td><td>String</td><td>Custom URL of web server.</td></tr></tbody></table>	Argument	Value	Description	uamserver	String	Custom URL of web server.
Argument	Value	Description					
uamserver	String	Custom URL of web server.					
Example	<pre>(config-if)> chilli uamserver ▶ https://auth.example.net/hotspotlogin Chilli::Interface: "Chilli0": uamserver set to ▶ "https://auth.example.net/hotspotlogin".</pre> <pre>(config-if)> no chilli uamserver Chilli::Interface: "Chilli0": uamserver cleared.</pre>						
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.10</td><td>The interface chilli uamserver command has been introduced.</td></tr></tbody></table>	Version	Description	2.10	The interface chilli uamserver command has been introduced.		
Version	Description						
2.10	The interface chilli uamserver command has been introduced.						

3.31.47 interface compatibility

Description	Set the standard for wireless communications, with which a given wireless adapter (the interface) must be compatible. For Wi-Fi interfaces, the compatibility is set by string of Latin letters A, B, G, N, that denote extensions to the standard IEEE 802.11. For example, the presence 'N' in the compatibility line will imply that the given adapter will be able to deal with the 802.11n-compatible devices via radio channel. The set of admissible compatibility lines is defined by the hardware capabilities of a particular adapter and provisions of the relevant additions to the IEEE 802.11 standard. By default, "BGN" value is used for 2.4 GHz, "AN" — for 5 GHz.
Prefix no	No
Change settings	Yes
Multiple input	No
Interface type	Radio
Synopsis	<pre>(config-if)> compatibility <annex></pre>

Arguments

Argument	Value	Description
annex	B, G, N	For 2,4 GHz.
	A, N	For 5 GHz.

Example

```
(config-if)> compatibility N
Network::Interface::Rtx::WifiMaster: "WifiMaster0": PHY mode set.

(config-if)> compatibility N+AC
Network::Interface::Rtx::WifiMaster: "WifiMaster1": PHY mode set.
```

History

Version	Description
2.00	The interface compatibility command has been introduced.

3.31.48 interface connect

Description Start the process of connecting to a remote node.

Command with **no** prefix terminates the connection.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP, IP

Synopsis

```
(config-if)> connect [via <via>]
(config-if)> no connect
```

Arguments

Argument	Value	Description
via	Interface name	Interface through which remote node is accessed. For PPPoE this option is mandatory.

Example

```
(config-if)> connect via ISP
(config-if)> no connect
```

History

Version	Description
2.00	The interface connect command has been introduced.

3.31.49 interface country-code

Description Assign to the interface a literal country code, which influences the set of radio channels. By default, RU value is used.

Prefix no No

Change settings Yes

Multiple input No

Interface type Radio

Synopsis

```
(config-if)> country-code <code>
```

Arguments	Argument	Value	Description
	code	<i>String</i>	The country code.

Example

```
(config-if)> country-code RU
Network::Interface::Rtx::WifiMaster: "WifiMaster0": country code ▶
set.
```

History	Version	Description
	2.00	The interface country-code command has been introduced.

3.31.50 interface debug

Description Enable debug mode of [PPP](#) connection. Detailed info about connection progress is saved to the system log. By default, setting is disabled.

Command with **no** prefix disables the debug mode.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP

Synopsis

```
(config-if)> debug
          (config-if)> no debug
```

Example

```
(config-if)> debug
Network::Interface::Base: Debug enabled.
```

```
(config-if)> no debug
Network::Interface::Base: Debug disabled.
```

History

Version	Description
2.00	The interface debug command has been introduced.

3.31.51 interface description

Description Assign arbitrary description to the specified network interface.

Command with **no** prefix deletes the description.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-if)> description <description>
(config-if)> no description
```

Arguments

Argument	Value	Description
description	<i>String</i>	Arbitrary description of the interface.

Example

```
(config-if)> description MYHOME
Network::Interface::Base: "Bridge0": description saved.
```

```
(config-if)> no description
Network::Interface::Base: "Bridge0": description saved.
```

History

Version	Description
2.00	The interface description command has been introduced.

3.31.52 interface down

Description Disable the network interface and persist the state “down” to the settings.

Command with **no** prefix enables the network interface and deletes “down” from settings.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
| (config-if)> down
```

```
| (config-if)> no down
```

Example

```
(config-if)> down
```

```
Network::Interface::Base: "GigabitEthernet0/2": interface is down.
```

```
(config-if)> up
```

```
Network::Interface::Base: "GigabitEthernet0/2": interface is up.
```

History

Version	Description
2.00	The interface down command has been introduced.

3.31.53 interface dsl disconnect-report

Description Enable DSL disconnect reporting.

Command with **no** prefix disables reporting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Dsl

Synopsis

```
| (config-if)> dsl disconnect-report
```

```
| (config-if)> no dsl disconnect-report
```

Example

```
(config-if)> dsl disconnect-report
```

```
Network::Interface::Tc3262::DisconnectReport: Enabled a line ▶ disconnect report.
```

```
(config-if)> no dsl disconnect-report
```

```
Network::Interface::Tc3262::DisconnectReport: Disabled a line ▶ disconnect report.
```

History

Version	Description
3.07	The interface dsl disconnect-report command has been introduced.

3.31.54 interface duplex

Description Set the duplex mode of the Ethernet port. By default, auto value is set.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

(config-if)>	duplex (full half auto)
(config-if)>	no duplex

Arguments

Argument	Value	Description
mode	full	Full duplex protocol.
	half	Half duplex protocol.
	auto	Auto duplex protocol.

Example

(config-if)>	duplex full
Network::Interface::Ethernet: "GigabitEthernet0/1": duplex set ▶ to "full".	
(config-if)>	no duplex
Network::Interface::Ethernet: "GigabitEthernet0/1": duplex reset ▶ to default.	

History

Version	Description
2.06.B.1	The interface duplex command has been introduced.

3.31.55 interface dyndns profile

Description Assign the DynDns profile to the interface. Profile must be created and customized with [dyndns profile](#) commands before execution.

Command with **no** prefix unbinds the profile.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config-if)>	dyndns profile < <i>profile</i> >
(config-if)>	no dyndns profile

Arguments

Argument	Value	Description
profile	<i>String</i>	The name of DynDns profile.

Example

```
(config-if)> dyndns profile TEST
DynDns::Profile: Interface set.
```

```
(config-if)> no dyndns profile TEST
DynDns::Profile: Interface removed.
```

History

Version	Description
2.02	The interface dyndns profile command has been introduced.

3.31.56 interface dyndns update

Description

Update IP-address for DynDns manually. By default command works in accordance with the policy of the DynDns service provider, that is not allows to update too often. Using the keyword **force** allows you to update excluding policy of the service provider.

Prefix no

No

Change settings

Yes

Multiple input

No

Synopsis

```
(config-if)> dyndns update [ force ]
```

Arguments

Argument	Value	Description
force	<i>Keyword</i>	Not take into account the update rate recommended by service provider.

Example

```
(config-if)> dyndns update
```

History

Version	Description
2.00	The interface dyndns update command has been introduced.

3.31.57 interface encryption anonymous-dh

Description

Enable Anonymous DH for SSTP-servers without a certificate.

Command with **no** prefix disables Anonymous DH.

Prefix no

Yes

Change settings	Yes				
Multiple input	No				
Interface type	SSTP				
Synopsis	<pre>(config-if)> encryption anonymous-dh (config-if)> no encryption anonymous-dh</pre>				
Example	<pre>(config-if)> encryption anonymous-dh Network::Interface::Sstp: "SSTP0": anonymous DH TLS is enabled. (config-if)> no encryption anonymous-dh Network::Interface::Sstp: "SSTP0": anonymous DH TLS is disabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.13</td> <td>The interface encryption anonymous-dh command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.13	The interface encryption anonymous-dh command has been introduced.
Version	Description				
2.13	The interface encryption anonymous-dh command has been introduced.				

3.31.58 interface encryption disable

Description	Disable encryption on the wireless interface.				
Prefix no	No				
Change settings	Yes				
Multiple input	No				
Interface type	WiFi				
Synopsis	<pre>(config-if)> encryption disable</pre>				
Example	<pre>(config-if)> encryption disable Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ▶ wireless encryption disabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.00</td> <td>The interface encryption disable command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.00	The interface encryption disable command has been introduced.
Version	Description				
2.00	The interface encryption disable command has been introduced.				

3.31.59 interface encryption enable

Description	Enable encryption on the wireless interface. By default, WEP encryption is used. Command with no prefix disables wireless interface encryption.
--------------------	--

Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Interface type	WiFi				
Synopsis	<pre>(config-if)> encryption enable (config-if)> no encryption enable</pre>				
Example	<pre>(config-if)> encryption enable Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ► wireless encryption enabled. (config-if)> no encryption enable Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ► wireless encryption disabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.00</td> <td>The interface encryption enable command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.00	The interface encryption enable command has been introduced.
Version	Description				
2.00	The interface encryption enable command has been introduced.				

3.31.60 interface encryption key

Description	Specify the WEP encryption keys. Depending on the bit, the key can be standard 64-bit WEP uses a 40 bit key (also known as WEP-40), or 128-bit WEP uses a 26 hexadecimal characters (13 characters ASCII). Overall, there can be 1 to 4 encryption keys, with one of them default key must be assigned. Command with no prefix removes key.									
Prefix no	Yes									
Change settings	Yes									
Multiple input	Yes									
Interface type	WiFi									
Synopsis	<pre>(config-if)> encryption key <id> (<value> [default] default) (config-if)> no encryption key <id></pre>									
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><i>id</i></td> <td><i>Integer</i></td> <td>The key number. Overall, up to 4 keys could be specified.</td> </tr> <tr> <td><i>value</i></td> <td><i>String</i></td> <td>The key value as a hexadecimal number, consisting of 10 or 26 digits.</td> </tr> </tbody> </table>	Argument	Value	Description	<i>id</i>	<i>Integer</i>	The key number. Overall, up to 4 keys could be specified.	<i>value</i>	<i>String</i>	The key value as a hexadecimal number, consisting of 10 or 26 digits.
Argument	Value	Description								
<i>id</i>	<i>Integer</i>	The key number. Overall, up to 4 keys could be specified.								
<i>value</i>	<i>String</i>	The key value as a hexadecimal number, consisting of 10 or 26 digits.								

Argument	Value	Description
default	Keyword	Indicates that this key will be used by default.

Example	(config-if)> encryption key 1 1231231234 Network::Interface::Wifi: "WifiMaster0/AccessPoint0": WEP key 1 ► set. (config-if)> no encryption key 1 Network::Interface::Wifi: "WifiMaster0/AccessPoint0": WEP key 1 ► removed.
----------------	--

History	Version	Description
	2.00	The interface encryption key command has been introduced.

3.31.61 interface encryption mppe

Description	Enable MPPE encryption support. Command with no prefix disables MPPE encryption.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	PPTP
Synopsis	<pre>(config-if)> encryption mppe (config-if)> no encryption mppe</pre>

Example	(config-if)> encryption mppe MPPE enabled. (config-if)> no encryption mppe MPPE disabled.
----------------	--

History	Version	Description
	2.00	The interface encryption mppe command has been introduced.

3.31.62 interface encryption owe

Description	Enable OWE security algorithms on the wireless interface. By default, the setting is disabled. Command with no prefix disables OWE support.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Interface type	WifiMaster				
Synopsis	<pre> (config-if)> encryption owe (config-if)> no encryption owe</pre>				
Example	<pre>(config-if)> encryption owe Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ▶ OWE algorithms enabled. (config-if)> no encryption owe Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ▶ OWE algorithms disabled.</pre>				
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>3.00</td><td>The interface encryption owe command has been introduced.</td></tr></tbody></table>	Version	Description	3.00	The interface encryption owe command has been introduced.
Version	Description				
3.00	The interface encryption owe command has been introduced.				

3.31.63 interface encryption wpa

Description	Enable WPA security algorithms on the wireless interface. Wireless interface can support the joint use of WPA and WPA2 , but supporting WEP automatically disables when any of the WPA is enabled. Command with no prefix disables WPA support.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	WiFi
Synopsis	<pre> (config-if)> encryption wpa (config-if)> no encryption wpa</pre>

Example

```
(config-if)> encryption wpa
WPA algorithms enabled.
```

History

Version	Description
2.00	The interface encryption wpa command has been introduced.

3.31.64 interface encryption wpa2

Description Enable **WPA2** (IEEE 802.11i, RSN) security algorithms on the wireless interface. Wireless interface can support the joint use of **WPA** and **WPA2**, but supporting **WEP** automatically disables when any of the **WPA** is enabled.

Command with **no** prefix disables **WPA2** support.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFi

Synopsis

(config-if)>	encryption wpa2
(config-if)>	no encryption wpa2

Example

```
(config-if)> encryption wpa2
WPA2 algorithms enabled.
```

History

Version	Description
2.00	The interface encryption wpa2 command has been introduced.

3.31.65 interface encryption wpa3

Description Enable **WPA3** security algorithms on the wireless interface. Wireless interface can support the joint use of **WPA2** and **WPA3**. By default, the setting is disabled.

Command with **no** prefix disables **WPA3** support.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFi

Synopsis

```
| (config-if)> encryption wpa3
```

```
| (config-if)> no encryption wpa3
```

Example

```
(config-if)> encryption wpa3
```

```
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►  
WPA3 algorithms enabled.
```

```
(config-if)> no encryption wpa3
```

```
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►  
WPA3 algorithms disabled.
```

History

	Version	Description
	3.00	The interface encryption wpa3 command has been introduced.

3.31.66 interface encryption wpa3 suite-b

Description Enable [WPA3](#) security algorithms to protect sensitive data Suite-B for [WPA Enterprise](#). By default, the feature is disabled.

Prefix no No

Change settings Yes

Multiple input No

Interface type WiFi

Synopsis

```
| (config-if)> encryption wpa3 suite-b
```

Example

```
(config-if)> encryption wpa3 suite-b
```

```
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint1": ►  
WPA3 SuiteB enabled.
```

History

	Version	Description
	3.01	The interface encryption wpa3 suite-b command has been introduced.

3.31.67 interface flowcontrol

Description Configure Ethernet flow control Tx/Rx. By default, the feature is enabled.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input	No						
Interface type	Ethernet						
Synopsis	<pre>(config-if)> flowcontrol on (config-if)> no flowcontrol [send]</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>send</td><td><i>Keyword</i></td><td>Flow control works asynchronously.</td></tr> </tbody> </table>	Argument	Value	Description	send	<i>Keyword</i>	Flow control works asynchronously.
Argument	Value	Description					
send	<i>Keyword</i>	Flow control works asynchronously.					
Example	<pre>(config-if)> flowcontrol on Network::Interface::Ethernet: "GigabitEthernet0/0": flow control ▶ enabled. (config-if)> no flowcontrol send Network::Interface::Ethernet: "GigabitEthernet0/0": flow control ▶ send disabled.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.08</td><td>The interface flowcontrol command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.08	The interface flowcontrol command has been introduced.		
Version	Description						
2.08	The interface flowcontrol command has been introduced.						

3.31.68 interface follow

Description	Copy settings from AP on WifiMaster0 (2.4 GHz) to the AP on WifiMaster with an index greater than zero (5 GHz or above).
	The follower automatically copies all changes applied to the master access point.
	If you change the follower settings, the link with the master access point is terminated.
Warning:	The WifiMaster0 access points are always used as a source of settings. They never follow. They can only be followed.
Prefix no	No
Change settings	Yes
Multiple input	No
Interface type	AccessPoint
Synopsis	<pre>(config-if)> follow <access-point></pre>

Arguments	Argument	Value	Description
	access-point	<i>Interface name</i>	The name of an AccessPoint interface on the WifiMaster0 2.4 GHz. You can see the list of available interfaces with help of follow [Tab] command.

Example	(config-if)> follow WifiMaster0/AccessPoint0 Network::Interface::AccessPoint: "WifiMaster1/AccessPoint0": set ▶ to follow WifiMaster0/AccessPoint0.
---------	---

History	Version	Description
	3.07	The interface follow command has been introduced.

3.31.69 interface ft enable

Description	Enable support of FT for Access Point (FT Over the Air, OTA) within the IEEE 802.11r standard. By default, the option is disabled. For correct FT operation between 2,4 and 5 GHz APs it is necessary to fulfill the following conditions: <ul style="list-style-type: none">• access points 2,4 GHz and 5 GHz are enabled both• they have the same SSID's• they have the same security settings (encryption type — WPA2 or without password, password value, etc.) Command with no prefix removes the setting.
-------------	---

Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	AccessPoint
Synopsis	<pre>(config-if)> ft enable (config-if)> no ft enable</pre>

Example	(config-if)> ft enable Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ▶ fast transition enabled. (config-if)> no ft enable Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ▶ fast transition disabled.
---------	--

History

Version	Description
2.13	The interface ft enable command has been introduced.

3.31.70 interface ft mdid

Description

Set Mobility Domain ID for **FT**. By default, KN value is used.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

AccessPoint

Synopsis

```
(config-if)> ft mdid <mdid>
```

```
(config-if)> no ft mdid
```

Arguments

Argument	Value	Description
mdid	String	The value of Mobility Domain ID. Consists of 2 ASCII symbols.

Example

```
(config-if)> ft mdid 1F
```

Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ► fast transition MDID set to "1F".

```
(config-if)> no ft mdid
```

Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ► fast transition MDID reset to default.

History

Version	Description
2.13	The interface ft mdid command has been introduced.

3.31.71 interface ft otd

Description

Enable support of **FT** Over-the-DS (Distribution System) within the IEEE 802.11r standard. This type of **FT** is used for roaming in outdated subscriber devices, for example, in the iPhone 4s. By default, the setting is disabled.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input	No				
Interface type	AccessPoint				
Synopsis	<pre>(config-if)> ft otd (config-if)> no ft otd</pre>				
Example	<pre>(config-if)> ft otd Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ▶ fast transition OTD enabled. (config-if)> no ft otd Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ▶ fast transition OTD disabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.13</td> <td>The interface ft otd command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.13	The interface ft otd command has been introduced.
Version	Description				
2.13	The interface ft otd command has been introduced.				

3.31.72 interface green-ethernet

Description	Enable <i>Green Ethernet</i> mode on the interface. By default, this mode is disabled. Command with no prefix disables the setting.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Interface type	Ethernet				
Synopsis	<pre>(config-if)> green-ethernet (config-if)> no green-ethernet</pre>				
Example	<pre>(config-if)> green-ethernet Network::Interface::Ethernet: Green ethernet enabled. (config-if)> no green-ethernet Network::Interface::Ethernet: Green ethernet disabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>3.05</td> <td>The interface green-ethernet command has been introduced.</td> </tr> </tbody> </table>	Version	Description	3.05	The interface green-ethernet command has been introduced.
Version	Description				
3.05	The interface green-ethernet command has been introduced.				

3.31.73 interface hide-ssid

Description	Enable hidden SSID mode. When using this feature, Access Point will not be displayed in the list of available wireless networks. But if user informed of the existence of this network and know its SSID , than he can connect to it. The mode is disabled by default.				
	Command with no prefix disables the mode.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Interface type	Access Point				
Synopsis	<pre>(config-if)> hide-ssid (config-if)> no hide-ssid</pre>				
Example	<pre>(config-if)> hide-ssid Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ▶ SSID broadcasting disabled. (config-if)> no hide-ssid Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ▶ SSID broadcasting enabled.</pre>				
History	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr style="background-color: #cccccc;"> <th style="text-align: left; padding: 2px;">Version</th> <th style="text-align: left; padding: 2px;">Description</th> </tr> </thead> <tbody> <tr> <td style="padding: 2px;">2.00</td> <td style="padding: 2px;">The interface hide-ssid command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.00	The interface hide-ssid command has been introduced.
Version	Description				
2.00	The interface hide-ssid command has been introduced.				

3.31.74 interface iapp auto

Description	Generate IAPP key in automatic mode. To assign the key manually, use interface iapp key command.
Prefix no	No
Change settings	Yes
Multiple input	No
Interface type	Bridge
Synopsis	<pre>(config-if)> iapp auto</pre>
Example	<pre>(config-if)> iapp auto Network::Interface::Rtx::Iapp: Bridge0 autoconfigured.</pre>

History

Version	Description
3.03	The interface iapp auto command has been introduced.

3.31.75 interface iapp key

Description

Assign the **IAPP** Mobile Domain key for successful synchronization between Access Points where **FT** works (**interface ft enable** command). Access Points must belong to the same IP-subnet. By default, the key is not assigned.

Command with **no** prefix removes key value.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Bridge

Synopsis

```
(config-if)> iapp key <key>
```

```
(config-if)> no iapp key
```

Arguments

Argument	Value	Description
key	String	The value of IAPP key. Maximum key length is 64 characters.

Example

```
(config-if)> iapp key 11223344556677
Network::Interface::Rtx::Iapp: Bridge0 key applied.
```

```
(config-if)> no iapp key
Network::Interface::Rtx::Iapp: Bridge0 key cleared.
```

History

Version	Description
2.13	The interface iapp key command has been introduced.

3.31.76 interface idle-timeout

Description

Set the interval for the STA client to disconnect from the Access Point by inactivity timeout. By default, 600 value is used.

Command with **no** prefix disables the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type	WiFiMaster						
Synopsis	<pre>(config-if)> idle-timeout <idle-timeout> (config-if)> no idle-timeout</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>idle-timeout</td><td><i>Integer</i></td><td>Idle-timeout value in seconds. Can take values from 60 to 2147483646.</td></tr> </tbody> </table>	Argument	Value	Description	idle-timeout	<i>Integer</i>	Idle-timeout value in seconds. Can take values from 60 to 2147483646.
Argument	Value	Description					
idle-timeout	<i>Integer</i>	Idle-timeout value in seconds. Can take values from 60 to 2147483646.					
Example	<pre>(config-if)> idle-timeout 500 Network::Interface::Rtx::WifiMaster: "WifiMaster1": idle timeout ▶ value is 500 sec.</pre> <pre>(config-if)> no idle-timeout Network::Interface::Rtx::WifiMaster: "WifiMaster1": idle timeout ▶ disabled.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>3.06</td><td>The interface idle-timeout command has been introduced.</td></tr> </tbody> </table>	Version	Description	3.06	The interface idle-timeout command has been introduced.		
Version	Description						
3.06	The interface idle-timeout command has been introduced.						

3.31.77 interface igmp downstream

Description	Enable IGMP mode on the interface in the direction of the multicast recipients. service igmp-proxy must be enabled on the device. There can be several downstream interfaces. Command with no prefix disables the mode.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	IP
Synopsis	<pre>(config-if)> igmp downstream (config-if)> no igmp downstream</pre>
Example	<pre>(config-if)> igmp downstream</pre> <pre>(config-if)> no igmp downstream</pre>

History

Version	Description
2.00	The interface igmp downstream command has been introduced.

3.31.78 interface igmp fork

Description Enable the duplication of outgoing packets **IGMP** upstream to the specified interface. There can be only one fork interface.

Command with **no** prefix disables the mode.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
| (config-if)>    igmp fork
| (config-if)> no igmp fork
```

Example

```
(config-if)> igmp fork
```

```
(config-if)> no igmp fork
```

History

Version	Description
2.00	The interface igmp fork command has been introduced.

3.31.79 interface igmp upstream

Description Enable **IGMP** mode on the interface in the direction of the multicast source. **service igmp-proxy** must be enabled on the device. Only one upstream interface is allowed.

Command with **no** prefix disables the mode.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
| (config-if)>    igmp upstream
```

```
(config-if)> no igmp upstream
```

Example

```
(config-if)> igmp upstream
```

```
(config-if)> no igmp upstream
```

History

Version	Description
2.00	The interface igmp upstream command has been introduced.

3.31.80 interface include

Description Specify Ethernet-interface name which will be added to the software bridge as a port.

Command with **no** prefix removes the interface from the bridge.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type Bridge

Synopsis

```
(config-if)> include <interface>
(config-if)> no include <interface>
```

Arguments

Argument	Value	Description
interface	<i>Interface name</i>	Name or alias of the Ethernet-interface that should be plugged into the bridge.

Example

```
(config-if)> include ISP
Network:::Interface:::Bridge: "Bridge0": ISP included.
```

```
(config-if)> no include
Network:::Interface:::Bridge: "Bridge0": removed ISP.
```

History

Version	Description
2.00	The interface include command has been introduced.

3.31.81 interface inherit

Description Specify the name of the Ethernet-interface which will be added to the program bridge as a port. In contrast with the **include** command, **inherit** command

transfers some settings of the interface being added to the bridge, such as IP-address, mask and IP-aliases. On removing either the bridge itself or the bridge interface, these settings, even if they have been changed will be copied back to the vacant interface.

The command allows one to add the device control interface to the bridge so that control is not lost.

Command with **no** prefix removes the interface from the bridge, returns the settings that have earlier been inherited by the bridge back to the interface, and resets these settings on the bridge.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type Bridge

Synopsis

```
(config-if)> inherit <interface>
(config-if)> no inherit <interface>
```

Arguments	Argument	Value	Description
	interface	<i>Interface name</i>	Name or alias of the Ethernet-interface that should be plugged into the bridge.

Example	<pre>(config-if)> inherit GigabitEthernet0/Vlan3 Network::Interface::Bridge: "Bridgel": GigabitEthernet0/Vlan3 ► inherited in Bridgel.</pre> <pre>(config-if)> no inherit Network::Interface::Bridge: "Bridgel": inherit removed.</pre>
----------------	--

History	Version	Description
	2.00	The interface inherit command has been introduced.

3.31.82 interface ip access-group

Description Assign a named list of filtering rules ([ACL](#), see [access-list](#)) to the interface. Parameter **in** or **out** indicates the traffic direction for which the [ACL](#) will be applied. Several ACLs can be assigned to a single interface.

Command with **no** prefix disables the [ACL](#) for the specified interface and traffic direction.

Prefix no Yes

Change settings Yes

Multiple input	Yes									
Interface type	IP									
Synopsis	<pre>(config-if)> ip access-group <acl> <direction> (config-if)> no ip access-group [<acl> [<direction>]]</pre>									
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>acl</td><td><i>String</i></td><td>List of filtering rules as previously created using access-list command.</td></tr> <tr> <td>direction</td><td>in out</td><td>Apply filtering to incoming packets. Apply filtering to outgoing packets.</td></tr> </tbody> </table>	Argument	Value	Description	acl	<i>String</i>	List of filtering rules as previously created using access-list command.	direction	in out	Apply filtering to incoming packets. Apply filtering to outgoing packets.
Argument	Value	Description								
acl	<i>String</i>	List of filtering rules as previously created using access-list command.								
direction	in out	Apply filtering to incoming packets. Apply filtering to outgoing packets.								
Example	<pre>(config-if)> ip access-group BLOCK in Network::Acl: Input "BLOCK" access list added to "CdcEthernet1". (config-if)> ip access-group BLOCK out Network::Acl: Output "BLOCK" access list added to "CdcEthernet1". (config-if)> no ip access-group BLOCK in Network::Acl: "BLOCK" access group deleted from "CdcEthernet1". (config-if)> no ip access-group Network::Acl: All access groups deleted from "CdcEthernet1".</pre>									
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.00</td><td>The interface ip access-group command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.00	The interface ip access-group command has been introduced.					
Version	Description									
2.00	The interface ip access-group command has been introduced.									

3.31.83 interface ip address

Description	Change the IP-address and the mask of the network interface. If the address automatic configuration service is running on the interface, for instance, DHCP-client, (see interface ip address dhcp), then the manually set address can be overwritten.
	Command with no prefix resets the address to 0.0.0.0.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	IP
Synopsis	<pre>(config-if)> ip address <address> <mask></pre>

```
(config-if)> no ip address
```

Arguments

Argument	Value	Description
address	<i>IP-address</i>	The network interface address.
mask	<i>IP-mask</i>	The network interface mask. There are two ways to specify the mask: the canonical form (for example, 255.255.255.0) and the prefix with bit length (for example, /24).

Example

The network address, defined by the IP-address and mask, can be specified in either of the two ways: specify a mask in the canonical form, or set the prefix bit length.

```
(config)> ip address 192.168.9.1/24
Network::Interface::Ip: "Bridge3": IP address is 192.168.9.1/24.
```

```
(config)> no ip address
Network::Interface::Ip: "Bridge3": IP address cleared.
```

History

Version	Description
2.00	The interface ip address command has been introduced.

3.31.84 interface ip address dhcp

Description

Start the DHCP-client to automatically configure the network parameters: IP-address and mask of the interface, [DNS](#) servers and default gateway.

Command with **no** prefix stops the DHCP-client, removes the dynamically configured settings and restores the previous settings of IP-address and mask.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> ip address dhcp [ hostname <hostname> ]
```

```
(config-if)> no ip address dhcp
```

Arguments

Argument	Value	Description
hostname	<i>String</i>	Name of the host to be placed in the DHCP option 12 field. This name need not be the

Argument	Value	Description
		same as the host name entered in global configuration mode.

Example

```
(config-if)> ip address dhcp hostname QWERTY2
```

Dhcp::Client: Started DHCP client on ISP.

```
(config-if)> no ip address dhcp
```

Dhcp::Client: Stopped DHCP client on ISP.

History

Version	Description
2.00	The interface ip address dhcp command has been introduced.

3.31.85 interface ip adjust-ttl recv

Description Modify the TTL for all inbound packets on the interface.

Command with **no** prefix cancels the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-if)> ip adjust-ttl recv <recv>
```

```
(config-if)> no ip adjust-ttl recv
```

Arguments

Argument	Value	Description
recv	<i>Integer</i>	The value of TTL changing. Can take values from 1 to 255 inclusively.

Example

```
(config-if)> ip adjust-ttl recv 1
```

Network::Interface::Ip: "CdcEthernet0": incoming TTL set to 1.

```
(config-if)> no ip adjust-ttl recv
```

Network::Interface::Ip: "CdcEthernet0": incoming TTL settings removed.

History

Version	Description
3.07	The interface ip adjust-ttl recv command has been introduced. Previous command name is interface ip adjust-ttl .

3.31.86 interface ip adjust-ttl send

Description Modify the TTL for all outbound packets on the interface.

Command with **no** prefix cancels the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
| (config-if)> ip adjust-ttl send <send>
| (config-if)> no ip adjust-ttl send
```

Arguments

Argument	Value	Description
send	<i>Integer</i>	The value of TTL changing. Can take values from 1 to 255 inclusively.

Example

```
(config-if)> ip adjust-ttl send 65
Network::Interface::Ip: "CdcEthernet1": outgoing TTL set to 65.

(config-if)> no ip adjust-ttl send
Network::Interface::Ip: "CdcEthernet1": outgoing TTL settings ▶ removed.
```

History

Version	Description
2.09	The interface ip adjust-ttl send command has been introduced.

3.31.87 interface ip alias

Description Assign an additional IP-address and mask to the network interface (alias).

Command with **no** prefix resets the specified alias to 0.0.0.0. If you use no arguments, the entire list of aliases will be removed.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP, Ethernet

Synopsis

```
| (config-if)> ip alias <address> <mask>
```

(config-if)> **no ip alias** [<address> <mask>]

Arguments

Argument	Value	Description
address	<i>IP-address</i>	Additional address of the network interface.
mask	<i>IP-mask</i>	Additional mask of the network interface. There are two ways to specify the mask: the canonical form (for example, 255.255.255.0) and the prefix with bit length (for example, /24).

Example

```
(config-if)> ip alias 192.168.1.88/24
```

Network::Interface::Ip: "WifiMaster1/WifiStation0": alias 0 is ▶ 192.168.1.88/24.

```
(config-if)> no ip alias 192.168.1.88/24
```

Network::Interface::Ip: "WifiMaster1/WifiStation0": alias 0 reset ▶ to 0.0.0.0/0.

```
(config-if)> no ip alias
```

Network::Interface::Ip: "WifiMaster1/WifiStation0": all aliases ▶ removed.

History

Version	Description
2.00	The interface ip alias command has been introduced.

3.31.88 interface ip dhcp client broadcast

Description

Set broadcast bit in the DHCP Discover messages, that indicate to a server how the reply should be sent back to the client. By default, the setting is disabled.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Ethernet

Synopsis

```
(config-if)> ip dhcp client broadcast
```

```
(config-if)> no ip dhcp client broadcast
```

Example

```
(config-if)> ip dhcp client broadcast
```

Dhcp::Client: ISP DHCP client request broadcast enabled.

```
(config-if)> no ip dhcp client broadcast
Dhcp::Client: ISP DHCP client request broadcast disabled.
```

History

Version	Description
2.15	The interface ip dhcp client broadcast command has been introduced.

3.31.89 interface ip dhcp client class-id

Description Specify the device vendor name where **DHCP** client is running (dhcp option 60).

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> ip dhcp client class-id <class>
(config-if)> no ip dhcp client class-id
```

Arguments

Argument	Value	Description
class	<i>String</i>	Vendor class name, enclosed in double quotes.

Example

```
(config-if)> ip dhcp client class-id "Peak DSL"
Dhcp::Client: ISP DHCP client vendor class is set to "Peak DSL".
```

```
(config-if)> no ip dhcp client class-id
Dhcp::Client: ISP DHCP client vendor class is cleared.
```

History

Version	Description
2.02	The interface ip dhcp client class-id command has been introduced.

3.31.90 interface ip dhcp client debug

Description Enable debug mode for DHCP-client. Detailed info about DHCP-client working is saved to the system log.

Command with **no** prefix disables the debug mode.

Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Interface type	Ethernet				
Synopsis	<pre>(config-if)> ip dhcp client debug (config-if)> no ip dhcp client debug</pre>				
Example	<pre>(config-if)> ip dhcp client debug Dhcp::Client: ISP DHCP client debug enabled. (config-if)> no ip dhcp client debug Dhcp::Client: ISP DHCP client debug disabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.01</td> <td>The interface ip dhcp client debug command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.01	The interface ip dhcp client debug command has been introduced.
Version	Description				
2.01	The interface ip dhcp client debug command has been introduced.				

3.31.91 interface ip dhcp client displace

Description	Displace static address of <i>what</i> if it conflicts with an address from DHCP-client of main interface. This command is executed automatically when you connect the USB Ethernet adapter. After that the configuration will be saved and device will be restarted. Command with no prefix cancels the displacement for the specified interface.									
Prefix no	Yes									
Change settings	Yes									
Multiple input	Yes									
Interface type	Ethernet									
Synopsis	<pre>(config-if)> ip dhcp client displace <what> [check-session] (config-if)> no ip dhcp client displace <what> [check-session]</pre>									
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>what</td> <td><i>Interface name</i></td> <td>Name or alias of the interface whose static address will be displaced.</td> </tr> <tr> <td>check-session</td> <td><i>Keyword</i></td> <td>With active SCGI sessions, it does not allow rebooting and changing the router's</td> </tr> </tbody> </table>	Argument	Value	Description	what	<i>Interface name</i>	Name or alias of the interface whose static address will be displaced.	check-session	<i>Keyword</i>	With active SCGI sessions, it does not allow rebooting and changing the router's
Argument	Value	Description								
what	<i>Interface name</i>	Name or alias of the interface whose static address will be displaced.								
check-session	<i>Keyword</i>	With active SCGI sessions, it does not allow rebooting and changing the router's								

Argument	Value	Description
		network address. By default, command is added to default-config.

Example

```
(config-if)> ip dhcp client displace Home
Dhcp::Client: ISP added "Home" displacement.
```

```
(config-if)> ip dhcp client displace Home check-session
Dhcp::Client: ISP added "Home" displacement.
```

```
(config-if)> no ip dhcp client displace Home
Dhcp::Client: ISP deleted "Home" displacement.
```

```
(config-if)> no ip dhcp client displace Home check-session
Dhcp::Client: ISP deleted "Home" displacement.
```

History

Version	Description
2.03	The interface ip dhcp client displace command has been introduced.
2.15	Argument check-session was added.

3.31.92 interface ip dhcp client dns-routes

Description Enable automatic addition of host routes to the DNS-server received from the DHCP-server. By default, the setting is enabled.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> ip dhcp client dns-routes
```

```
(config-if)> no ip dhcp client dns-routes
```

Example

```
(config-if)> ip dhcp client dns-routes
Dhcp::Client: ISP DHCP client DNS host routes are enabled.
```

```
(config-if)> no ip dhcp client dns-routes
Dhcp::Client: ISP DHCP client DNS host routes are disabled.
```

History	Version	Description
	2.00	The interface ip dhcp client dns-routes command has been introduced.

3.31.93 interface ip dhcp client fallback

Description Set static IP-address in case of DHCP errors.
Command with **no** prefix cancels setting and sets 0.0.0.0. address.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> ip dhcp client fallback <type>
(config-if)> no ip dhcp client fallback
```

Arguments	Argument	Value	Description
	type	String	The type of IP-address. Currently implemented only one type — static.

Example

```
(config-if)> ip dhcp client fallback static
Dhcp::Client: A DHCP address fallback is static.

(config-if)> no ip dhcp client fallback
Dhcp::Client: A DHCP address fallback set to zero for "ISP".
```

History	Version	Description
	2.05	The interface ip dhcp client fallback command has been introduced.

3.31.94 interface ip dhcp client hostname

Description Assign a host name which is sent in DHCP-request.
Command with **no** prefix resets the host name to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type	Ethernet								
Synopsis	<pre>(config-if)> ip dhcp client hostname <hostname></pre> <pre>(config-if)> no ip dhcp client hostname</pre>								
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>hostname</td><td>String</td><td>The host name to assign.</td></tr> </tbody> </table>			Argument	Value	Description	hostname	String	The host name to assign.
Argument	Value	Description							
hostname	String	The host name to assign.							
Example	<pre>(config-if)> ip dhcp client hostname MYHOME</pre> <p>Dhcp::Client: ISP DHCP client hostname is set to MYHOME.</p> <pre>(config-if)> no ip dhcp client hostname</pre> <p>Dhcp::Client: ISP DHCP client hostname is reset to default (HOME).</p>								
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.00</td><td>The interface ip dhcp client hostname command has been introduced.</td></tr> </tbody> </table>			Version	Description	2.00	The interface ip dhcp client hostname command has been introduced.		
Version	Description								
2.00	The interface ip dhcp client hostname command has been introduced.								

3.31.95 interface ip dhcp client name-servers

Description	Use DNS -server addresses which are received via DHCP . By default, the function is enabled.						
	Command with no prefix denies using of DNS -server addresses which are received via DHCP .						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Interface type	Ethernet						
Synopsis	<pre>(config-if)> ip dhcp client name-servers</pre> <pre>(config-if)> no ip dhcp client name-servers</pre>						
Example	<pre>(config-if)> ip dhcp client name-servers</pre> <p>Dhcp::Client: ISP DHCP name servers are enabled.</p> <pre>(config-if)> no ip dhcp client name-servers</pre> <p>Dhcp::Client: ISP DHCP name servers are disabled.</p>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.00</td><td>The interface ip dhcp client name-servers command has been introduced.</td></tr> </tbody> </table>			Version	Description	2.00	The interface ip dhcp client name-servers command has been introduced.
Version	Description						
2.00	The interface ip dhcp client name-servers command has been introduced.						

3.31.96 interface ip dhcp client release

Description DHCP-client releases lease IP-address and goes into sleep mode. Another execution of this command takes DHCP-client to the mode of automatical obtaining of IP-address.

Prefix no No

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> ip dhcp client release
```

Example

```
(config-if)> ip dhcp client release
Dhcp::Client: IP address released.
```

History	Version	Description
	2.03	The interface ip dhcp client release command has been introduced.

3.31.97 interface ip dhcp client renew

Description DHCP-client releases lease IP-address and passes in a mode of obtaining a new one.

Prefix no No

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> ip dhcp client renew
```

Example

```
(config-if)> ip dhcp client renew
Dhcp::Client: IP address renewed.
```

History	Version	Description
	2.03	The interface ip dhcp client renew command has been introduced.

3.31.98 interface ip dhcp client routes

Description	Enable receiving routes from the provider (dhcp options 33, 121, 242). By default it is enabled. In the configuration it is displayed only with no prefix. Command with no prefix disables the setting.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Interface type	Ethernet				
Synopsis	<pre> (config-if)> ip dhcp client routes (config-if)> no ip dhcp client routes</pre>				
Example	<pre>(config-if)> ip dhcp client routes Dhcp::Client: ISP DHCP client static routes are enabled. (config-if)> no ip dhcp client routes Dhcp::Client: ISP DHCP client static routes are disabled.</pre>				
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.05</td><td>The interface ip dhcp client routes command has been introduced.</td></tr></tbody></table>	Version	Description	2.05	The interface ip dhcp client routes command has been introduced.
Version	Description				
2.05	The interface ip dhcp client routes command has been introduced.				

3.31.99 interface ip flow

Description	Enable <i>NetFlow</i> sensor on the specified interface. By default, the setting is disabled. Command with no prefix disables <i>NetFlow</i> sensor.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Interface type	IP						
Synopsis	<pre> (config-if)> ip flow <direction> (config-if)> no ip flow</pre>						
Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>direction</td><td>ingress</td><td>Collection of incoming traffic.</td></tr></tbody></table>	Argument	Value	Description	direction	ingress	Collection of incoming traffic.
Argument	Value	Description					
direction	ingress	Collection of incoming traffic.					

Argument	Value	Description
	egress	Collection of outgoing traffic.
	both	Collection of incoming and outgoing traffic both.

Example

```
(config-if)> ip flow ingress
Netflow::Manager: NetFlow collector is enabled on interface ▶
"Home" in "ingress" direction.
```

```
(config-if)> ip flow egress
Netflow::Manager: NetFlow collector is enabled on interface ▶
"Home" in "egress" direction.
```

```
(config-if)> ip flow both
Netflow::Manager: NetFlow collector is enabled on interface ▶
"Home" in "both" direction.
```

History

Version	Description
2.11	The interface ip flow command has been introduced.

3.31.100 interface ip global

Description

Set property “global” with a parameter to the interface. This property is necessary to configure the default route, DynDNS-Client and NAT functioning. Can represent global-interfaces as leading to the global network (the Internet).

Property “global” affects the interface priority in setting the default route. The higher the priority the more desirable it is for the user to access the global network through the specified interface. Internet access backup (WAN backup) functionality is using priority “global”.

By default, setting is disabled.

Command with **no** prefix removes property.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
| (config-if)> ip global <priority> | order <order> | auto)
```

```
| (config-if)> no ip global
```

Arguments

Argument	Value	Description
priority	<i>Integer</i>	Interface priority to configure the default route. Can take values from 1 to 65534.
order	<i>Integer</i>	Relative priority between interfaces. It can take values from 0 to 65534, but not more than the number of global interfaces.
auto	<i>Keyword</i>	Automatic priority calculation of the interface. The interface is located near the end of the list, but above order X.

Example

```
(config-if)> ip global 10
Network::Interface::IP: "L2TP0": global priority is 10.

(config-if)> ip global order 0
Network::Interface::IP: "L2TP0": order is 1.

(config-if)> ip global auto
Network::Interface::IP: Global priority recalculated.

(config-if)> no ip global
Network::Interface::IP: "L2TP0": global priority cleared.
```

History

Version	Description
2.00	The interface ip global command has been introduced.
2.09	The order and auto arguments were added.

3.31.101 interface ip mru

Description

Set the value of *MRU* to be transmitted to a remote node during establishing the *PPP (IPCP)* connection. By default, 1460 value is used.

Command with **no** prefix resets the *MRU* value to that which was before the first use of the command.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

PPP

Synopsis

```
(config-if)> ip mru <mru>
```

```
(config-if)> no ip mru
```

Arguments

Argument	Value	Description
mru	<i>Integer</i>	<i>MRU</i> value.

Example

```
(config-if)> ip mru 1492
Network::Interface::Ppp: "PPPoE0": MRU saved.
```

```
(config-if)> no ip mru
Network::Interface::Ppp: "PPPoE0": MRU reset to default.
```

History

Version	Description
2.00	The interface ip mru command has been introduced.

3.31.102 interface ip mtu

Description

Set the *MTU* value on the network interface. When establishing a connection via *PPP (IPCP)*, packets with defined *MTU* size will be sent to the remote host, even if the host requested a lower *MTU* value.

Command with **no** prefix resets the *MTU* value to that which was before the first use of the command.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config-if)> ip mtu <mtu>
```

```
(config-if)> no ip mtu
```

Arguments

Argument	Value	Description
mtu	<i>Integer</i>	<i>MTU</i> value. Can take values from 64 to 65535 inclusively.

Example

```
(config-if)> ip mtu 1500
Network::Interface::Base: "GigabitEthernet1": static MTU is 1500.
```

```
(config-if)> no ip mtu
```

```
Network::Interface::Base: "GigabitEthernet1": static MTU reset ▶
to default.
```

History

Version	Description
2.00	The interface ip mtu command has been introduced.

3.31.103 interface ip nat loopback

Description	Enable reverse translation to send local requests to the local server from the Internet. By default, the setting is enabled for the Home segment interfaces (private and protected security levels).				
	Command with no prefix disables NAT loopback.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Interface type	IP				
Synopsis	<pre>(config-if)> ip nat loopback (config-if)> no ip nat loopback</pre>				
Example	<pre>(config-if)> ip nat loopback Network::StaticNat: NAT loopback is explicitly enabled on "Home". (config-if)> no ip nat loopback Network::StaticNat: NAT loopback is explicitly disabled on "Home".</pre>				
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.11</td><td>The ip nat loopback command has been introduced.</td></tr></tbody></table>	Version	Description	2.11	The ip nat loopback command has been introduced.
Version	Description				
2.11	The ip nat loopback command has been introduced.				

3.31.104 interface ip remote

Description	Set a remote peer static address.								
Prefix no	Yes								
Change settings	Yes								
Multiple input	No								
Interface type	PPP								
Synopsis	<pre>(config-if)> ip remote <address> (config-if)> no ip remote</pre>								
Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>address</td><td><i>IP-address</i></td><td>A remote peer address.</td></tr></tbody></table>	Argument	Value	Description	address	<i>IP-address</i>	A remote peer address.		
Argument	Value	Description							
address	<i>IP-address</i>	A remote peer address.							

Example

```
(config-if)> ip remote 192.168.2.19
Network::Interface::Ppp: "L2TP0": remote address saved.
```

```
(config-if)> no ip remote
Network::Interface::Ppp: "L2TP0": remote address erased.
```

History

Version	Description
2.00	The interface ip remote command has been introduced.

3.31.105 interface ip tcp adjust-mss

Description

Set the limit on the segment size of outgoing **TCP** sessions. If the **MSS** value, which is transmitted in the header of SYN-packets, exceeds the specified limit, command changes it. The command is applied to the interface and affects all outgoing **TCP** SYN packets.

Command with **no** prefix removes all limits from **MSS**.

Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	IP

Synopsis

```
(config-if)> ip tcp adjust-mss (pmtu | <mss> )
(config-if)> no ip tcp adjust-mss
```

Arguments

Argument	Value	Description
pmtu	<i>Keyword</i>	Set the upper limit of MSS , equal to the minimum MTU along the path to the remote peer.
mss	<i>Integer</i>	MSS upper limit.

Example

```
(config-if)> ip tcp adjust-mss pmtu
Network::Interface::Ip: "L2TP0": TCP-MSS adjustment enabled.
```

```
(config-if)> ip tcp adjust-mss 1300
Network::Interface::Ip: "L2TP0": TCP-MSS adjustment enabled.
```

```
(config-if)> no ip tcp adjust-mss
Network::Interface::Ip: "L2TP0": TCP-MSS adjustment disabled.
```

History

Version	Description
2.00	The interface ip tcp adjust-mss command has been introduced.

3.31.106 interface ipcp default-route

Description	Use the remote peer address as default gateway. By default, the setting is enabled.
	Command with no prefix denies default gateway changing.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	PPP
Synopsis	<pre> (config-if)> ipcp default-route (config-if)> no ipcp default-route</pre>
Example	<pre>(config-if)> ipcp default-route Using peer as a default gateway.</pre>

History	Version	Description
	2.00	The interface ipcp default-route command has been introduced.

3.31.107 interface ipcp dns-routes

Description	Use routes which are received via <i>IPCP</i> . By default, the setting is enabled.
	Command with no prefix removes the setting.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	PPP
Synopsis	<pre> (config-if)> ipcp dns-routes (config-if)> no ipcp dns-routes</pre>
Example	<pre>(config-if)> ipcp dns-routes DNS routes enabled</pre>
	<pre>(config-if)> no ipcp dns-routes DNS routes disabled</pre>

History

Version	Description
2.02	The interface ipcp dns-routes command has been introduced.

3.31.108 interface ipcp name-servers

Description Use **DNS** servers addresses which are received via **IPCP**. By default, the setting is enabled.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP

Synopsis

```
(config-if)> ipcp name-servers
(config-if)> no ipcp name-servers
```

Example

```
(config-if)> ipcp name-servers
using remote name servers.
```

```
(config-if)> no ipcp name-servers
not using remote name servers.
```

History

Version	Description
2.00	The interface ipcp name-servers command has been introduced.

3.31.109 interface ipcp vj

Description Enable compression of TCP/IP headers by Van Jacobson's method. By default, the setting is disabled.

Command with **no** prefix disables compression.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP

Synopsis

```
(config-if)> ipcp vj [cid]
```

```
(config-if)> no ipcp vj
```

Arguments

Argument	Value	Description
cid	Keyword	Enable compression of Connection ID into headers.

Example

```
(config-if)> ipcp vj cid
VJ compression enabled.
```

```
(config-if)> no ipcp vj
VJ compression disabled.
```

History

Version	Description
2.03	The interface ipcp vj command has been introduced.

3.31.110 interface ipsec encryption-level

Description Set encryption level for *IPSec* connection that is automatically associated with the tunnel. By default, the *normal* value is used.

A detailed description of each level is given in the [Appendix](#).

Command with **no** prefix resets encryption level to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> ipsec encryption-level <level>
(config-if)> no ipsec encryption-level
```

Arguments

Argument	Value	Description
level	weak	Weak level, DES and MD5 algorithms enabled.
	normal	Level is compatible with most systems, priority is given to AES128 and SHA1.
	normal-3des	Level is compatible with most systems, priority is given to 3DES and SHA1.
	strong	The strongest level, <i>PFS</i> is mandatory, priority is given to AES256 and SHA1.
	weak-pfs	The same as weak, but for the second phase <i>PFS</i> group 1 and 2 is enabled.

Argument	Value	Description
	normal-pfs	The same as normal, but for the second phase <i>PFS</i> group 2 and 5 is enabled.
	normal-3des-pfs	The same as normal-3des, but for the second phase <i>PFS</i> group 5 and 14 is enabled.
	high	A set of modern algorithms for external providers of VPN services.
	strong-aead	The strongest level, priority is given to AES256 and SHA1 with addition of <i>AEAD</i> algorithms.
	strong-aead-pfs	The strongest level, <i>PFS</i> is mandatory, priority is given to AES256 and SHA1 with addition of <i>AEAD</i> algorithms.

Example

```
(config-if)> ipsec encryption-level high
Network::Interface::Secure: "IKE0": security level is set to ▶
"high".
```

```
(config-if)> no ipsec encryption-level
Network::Interface::Secure: "IKE0": security level was reset.
```

History

Version	Description
2.08	The interface ipsec encryption-level command has been introduced.
3.07	New levels of encryption has been added — high, strong-aead and strong-aead-pfs.

3.31.111 interface ipsec force-encaps

Description Enable support of *ESP* forced encapsulation in *UDP* for client tunnels. By default, the feature is disabled.

Command with **no** prefix cancels the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
| (config-if)> ipsec force-encaps
```

```
| (config-if)> no ipsec force-encaps
```

Example

```
(config-if)> ipsec force-encaps
Network::Interface::Secure: Force ESP in UDP encapsulation ▶
enabled.
```

```
(config-if)> no ipsec force-encaps
Network::Interface::Secure: Force ESP in UDP encapsulation ►
disabled.
```

History

Version	Description
2.12	The interface ipsec force-encaps command has been introduced.

3.31.112 interface ipsec ignore

Description Disable processing incoming *IKE* packets for *IPSec* service on the interface. By default the command is disabled.

Command with **no** prefix cancels the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
(config-if)> ipsec ignore
(config-if)> no ipsec ignore
```

Example

```
(config-if)> ipsec ignore
IpSec::Manager: Interface "Gre0" added to IPsec ignore list.
```

```
(config-if)> no ipsec ignore
IpSec::Manager: Interface "Gre0" removed from IPsec ignore list.
```

History

Version	Description
2.10	The interface ipsec ignore command has been introduced.

3.31.113 interface ipsec ikev2

Description Enable IKEv2 protocol for *IPSec* connection that is automatically associated with the tunnel. By default, IKEv1 is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type	Secure				
Synopsis	<pre>(config-if)> ipsec ikev2</pre> <pre>(config-if)> no ipsec ikev2</pre>				
Example	<pre>(config-if)> ipsec ikev2 Network::Interface::Secure: IKEv2 is enabled.</pre> <pre>(config-if)> no ipsec ikev2 Network::Interface::Secure: IKEv2 is disabled, enable IKEv1.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.10</td> <td>The interface ipsec ikev2 command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.10	The interface ipsec ikev2 command has been introduced.
Version	Description				
2.10	The interface ipsec ikev2 command has been introduced.				

3.31.114 interface ipsec nail-up

Description	Enable automatic changes of the secret keys for L2TP/IPsec, EoIP/IPsec, Gre/IPsec, IPIP/IPsec tunnels. By default, setting is enabled.				
	Command with no prefix disables the setting.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Interface type	Secure				
Synopsis	<pre>(config-if)> ipsec nail-up</pre> <pre>(config-if)> no ipsec nail-up</pre>				
Example	<pre>(config-if)> ipsec nail-up Network::Interface::Secure: SA renegotiation enabled.</pre> <pre>(config-if)> no ipsec nail-up Network::Interface::Secure: SA renegotiation disabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.12</td> <td>The interface ipsec nail-up command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.12	The interface ipsec nail-up command has been introduced.
Version	Description				
2.12	The interface ipsec nail-up command has been introduced.				

3.31.115 interface ipsec name-servers

Description	Use <i>DNS</i> -server addresses which are received via IKEv1 or IKEv2 <i>IPSec</i> -server. By default, the function is enabled.				
	Command with no prefix denies using of <i>DNS</i> -server addresses which are received via IKEv1 and IKEv2 <i>IPSec</i> -server.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Interface type	Secure				
Synopsis	<pre> (config-if)> ipsec name-servers (config-if)> no ipsec name-servers</pre>				
Example	<pre>(config-if)> ipsec name-servers IpSec::Interface::Ike: "IKE0": automatic name servers via IKE ► Configuration Payload are enabled. (config-if)> no ipsec name-servers IpSec::Interface::Ike: "IKE0": automatic name servers via IKE ► Configuration Payload are disabled.</pre>				
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>3.06</td><td>The interface ipsec name-servers command has been introduced.</td></tr></tbody></table>	Version	Description	3.06	The interface ipsec name-servers command has been introduced.
Version	Description				
3.06	The interface ipsec name-servers command has been introduced.				

3.31.116 interface ipsec preshared-key

Description	Set PSK key for <i>IPSec</i> connection that is automatically associated with the tunnel. Command also enables <i>IPSec</i> for this tunnel.
	Command with no prefix resets the key.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	Secure
Synopsis	<pre> (config-if)> ipsec preshared-key <key> (config-if)> no ipsec preshared-key</pre>

Arguments

Argument	Value	Description
key	<i>String</i>	Secret PSK key value.

Example

```
(config-if)> ipsec preshared-key 12345678
Network::Interface::Secure: "Gre0": preshared key was set.
```

```
(config-if)> no ipsec preshared-key
Network::Interface::Secure: "Gre0": preshared key was reset.
```

History

Version	Description
2.08	The interface ipsec preshared-key command has been introduced.

3.31.117 interface ipsec proposal lifetime

Description Set lifetime of *IPSec* transformation Phase1 on the interface. By default, the value 28800 is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

<pre>(config-if)> ipsec proposal lifetime <lifetime></pre>
<pre>(config-if)> no ipsec proposal lifetime</pre>

Arguments

Argument	Value	Description
lifetime	<i>Integer</i>	Lifetime of <i>IPSec</i> transformation in seconds. Can take values from 60 to 2147483647.

Example

```
(config-if)> ipsec proposal lifetime 222222
Network::Interface::Secure: IPsec IKE proposal lifetime set to ▶
222222 s.
```

```
(config-if)> no ipsec proposal lifetime
Network::Interface::Secure: IPsec IKE proposal lifetime reset ▶
to 28800 s.
```

History

Version	Description
2.11	The interface ipsec proposal lifetime command has been introduced.

3.31.118 interface ipsec transform-set lifetime

Description Set lifetime of *IPSec* transformation Phase2 on the interface. By default, the value 28800 is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Secure

Synopsis

```
| (config-if)> ipsec transform-set lifetime <lifetime>
```

```
| (config-if)> no ipsec transform-set lifetime
```

Arguments

Argument	Value	Description
lifetime	<i>Integer</i>	Lifetime of <i>IPSec</i> transformation in seconds. Can take values from 60 to 2147483647.

Example

```
(config-if)> ipsec transform-set lifetime 2222222
Network::Interface::Secure: IPsec ESP transform-set lifetime set ▶
to 2222222 s.
```

```
(config-if)> no ipsec transform-set lifetime
Network::Interface::Secure: IPsec ESP transform-set lifetime ▶
reset to 28800 s.
```

History

Version	Description
2.11	The interface ipsec transform-set lifetime command has been introduced.

3.31.119 interface ipv6 address

Description Configure an IPv6 address on the interface. If the argument is **auto**, address is autoconfigured. Passing a literal address as an argument will assign it statically.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-if)> ipv6 address (<address> | auto)
```

```
(config-if)> no ipv6 address [<address> | auto]
```

Arguments

Argument	Value	Description
address	<i>IPv6-address</i>	Name server address.
auto	<i>Keyword</i>	Enable stateless autoconfiguration.

Example

```
(config-if)> ipv6 address 2001:db8::1
```

Static IPv6 address saved.

History

Version	Description
2.00	The interface ipv6 address command has been introduced.

3.31.120 interface ipv6 force-default

Description

Force the interface to be used as default IPv6 gateway. By default, the setting is disabled.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-if)> ipv6 force-default
```

```
(config-if)> no ipv6 force-default
```

Example

```
(config-if)> ipv6 force-default
```

interface is forced to be the default IPv6 gateway

History

Version	Description
2.00	The interface ipv6 force-default command has been introduced.

3.31.121 interface ipv6 name-servers

Description

Configure retrieval of [DNS](#) information. When **auto** is set, enables DHCPv6 name-server requests.

Command with **no** prefix removes the setting.

Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre> (config-if)> ipv6 name-servers (auto) (config-if)> no ipv6 name-servers [auto]</pre>						
Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>auto</td><td><i>Keyword</i></td><td>Enable name-server autoconfiguration.</td></tr></tbody></table>	Argument	Value	Description	auto	<i>Keyword</i>	Enable name-server autoconfiguration.
Argument	Value	Description					
auto	<i>Keyword</i>	Enable name-server autoconfiguration.					
Example	<pre>(config-if)> ipv6 name-servers auto Name servers provided by the interface network are accepted.</pre>						
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.00</td><td>The interface ipv6 name-servers command has been introduced.</td></tr></tbody></table>	Version	Description	2.00	The interface ipv6 name-servers command has been introduced.		
Version	Description						
2.00	The interface ipv6 name-servers command has been introduced.						

3.31.122 interface ipv6 prefix

Description Configure prefix delegation. When **auto** is set, prefix is requested via DHCPv6-PD.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
| (config-if)> ipv6 prefix (<prefix> | auto)
```

```
| (config-if)> no ipv6 prefix [<prefix> | auto]
```

Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>auto</td><td><i>Keyword</i></td><td>Enable prefix delegation.</td></tr><tr><td>prefix</td><td><i>Prefix</i></td><td>Manual input of prefix.</td></tr></tbody></table>	Argument	Value	Description	auto	<i>Keyword</i>	Enable prefix delegation.	prefix	<i>Prefix</i>	Manual input of prefix.
Argument	Value	Description								
auto	<i>Keyword</i>	Enable prefix delegation.								
prefix	<i>Prefix</i>	Manual input of prefix.								

Example

```
(config-if)> ipv6 prefix 2001:db8:43:ab12::/64
Static IPv6 prefix added.
```

History

Version	Description
2.00	The interface ipv6 prefix command has been introduced.

3.31.123 interface ipv6cp

Description Enable *IPv6CP* support during establishing connection.

Command with **no** prefix disables *IPv6CP*.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP

Synopsis

```
(config-if)> ipv6cp
          (config-if)> no ipv6cp
```

Example

```
(config-if)> ipv6cp
IPv6CP enabled.
```

History

Version	Description
2.00	The interface ipv6cp command has been introduced.

3.31.124 interface lcp acfc

Description Enable compression negotiation of the *Data Link Layer Address and Control fields*. By default, the feature is disabled.

Command with **no** prefix disables this option and all the remote peer requests for the *ACFC* negotiation will be rejected.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP

Synopsis

```
(config-if)> lcp acfc [cid]
          (config-if)> no lcp acfc
```

Arguments

Argument	Value	Description
cid	Keyword	Enable compression of Connection ID into headers.

Example(config-if)> **lcp acfc cid**

ACFC compression enabled

(config-if)> **no lcp acfc cid**

ACFC compression disabled

History

Version	Description
2.03	The interface lcp acfc command has been introduced.

3.31.125 interface lcp echo

DescriptionSpecify the testing rules of the **PPP** connection with **LCP** echo tools.

By default, interval is set to 30, count is set to 3.

Command with **no** prefix disables **LCP** echo.**Prefix no**

Yes

Change settings

Yes

Multiple input

No

Interface type

PPP

Synopsis(config-if)> **lcp echo <interval> <count> [adaptive]**(config-if)> **no lcp echo****Arguments**

Argument	Value	Description
interval	<i>Integer</i>	Interval between sending LCP echo, in seconds. If within the specified time interval there is no LCP echo request from the remote location, the same request will be sent there asking for response LCP reply.
count	<i>Integer</i>	The number of consecutive requests LCP echo sent, for which no response LCP reply was received. If count of LCP echo requests goes unanswered, the connection is terminated.
adaptive	Keyword	Pppd will send LCP echo-request frames only if no traffic was received from the peer since the last echo-request was sent.

Example

```
(config-if)> lcp echo 20 2
Network::Interface::Ppp: "PPPoE0": LCP echo parameters updated.
```

```
(config-if)> no lcp echo
```

```
Network::Interface::Ppp: "PPPoE0": LCP echo disabled.
```

History

Version	Description
2.00	The interface lcp echo command has been introduced.
2.06	The adaptive keyword has been added.

3.31.126 interface lcp pfc

Description

Enable compression negotiation of the *PPP Protocol field*. By default, the feature is disabled.

Command with **no** prefix disables this option and all the remote peer requests for the *PFC* negotiation will be rejected.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

PPP

Synopsis

```
(config-if)> lcp pfc [cid]
```

```
(config-if)> no lcp pfc
```

Arguments

Argument	Value	Description
cid	Keyword	Enable compression of Connection ID into headers.

Example

```
(config-if)> lcp pfc cid
```

PFC compression enabled

```
(config-if)> no lcp pfc cid
```

PFC compression disabled

History

Version	Description
2.03	The interface lcp pfc command has been introduced.

3.31.127 interface led wan

Description	Display the interface status by means of LED. SelectedWan control should be chosen with system led command. By default, function is disabled. Command with no prefix disables the feature.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config-if)> led wan (config-if)> no led wan</pre>
Example	<pre>(config-if)> led wan Network::Interface::Led: Selected WAN GigabitEthernet1. (config-if)> no led wan Network::Interface::Led: Selected no WAN.</pre>

History	Version	Description
	2.08	The interface led wan command has been introduced.

3.31.128 interface lldp disable

Description	Disable LLDP agent on interface. By default, the feature is enabled. Command with no prefix enables LLDP agent.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config-if)> lldp disable (config-if)> no lldp disable</pre>
Example	<pre>(config-if)> lldp disable Network::DiscoveryManager: LLDP agent is disabled on interface ▶ "ISP". (config-if)> no lldp disable Network::DiscoveryManager: LLDP agent is enabled on interface ▶ "ISP".</pre>

History

Version	Description
2.11	The interface lldp disable command has been introduced.

3.31.129 interface mac access-list address

Description

Add a MAC-address to the permit/deny filtering list of the interface. Type of access list is set with **interface mac access-list type** command.

Command with **no** prefix removes the specified MAC-address from the [ACL](#).

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Interface type

Access Point

Synopsis

```
(config-if)> mac access-list address <address>
```

```
(config-if)> no mac access-list address <address>
```

Arguments

Argument	Value	Description
address	MAC-address	A MAC-address to be added to the ACL .

Example

```
(config-if)> mac access-list address 64:a2:f9:53:b2:12
Network::Interface::Ethernet: "WifiMaster0/AccessPoint1": added ▶
64:a2:f9:53:b2:12 to the ACL.
```

```
(config-if)> no mac access-list address 64:a2:f9:53:b2:12
Network::Interface::Ethernet: "WifiMaster0/AccessPoint1": removed ▶
64:a2:f9:53:b2:12 from the ACL.
```

```
(config-if)> no mac access-list address
Network::Interface::Ethernet: "WifiMaster0/AccessPoint1": ACL ▶
cleared.
```

History

Version	Description
2.00	The interface mac access-list address command has been introduced.

3.31.130 interface mac access-list type

Description

Set the type for filtering list of the interface. Type is not defined by default (none value assigned).

Prefix no	No										
Change settings	Yes										
Multiple input	No										
Interface type	Access Point										
Synopsis	(config-if)> mac access-list type <type>										
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td rowspan="3">type</td><td>none</td><td>Type of filtering list is not defined.</td></tr> <tr> <td>permit</td><td>Only approved MAC-addresses will be added to the list.</td></tr> <tr> <td>deny</td><td>Only restricted MAC-addresses will be added to the list.</td></tr> </tbody> </table>	Argument	Value	Description	type	none	Type of filtering list is not defined.	permit	Only approved MAC-addresses will be added to the list.	deny	Only restricted MAC-addresses will be added to the list.
Argument	Value	Description									
type	none	Type of filtering list is not defined.									
	permit	Only approved MAC-addresses will be added to the list.									
	deny	Only restricted MAC-addresses will be added to the list.									

Example	(config-if)> mac access-list type permit Network::Interface::Ethernet: "WifiMaster0/AccessPoint1": ACL ► type changed to permit.
----------------	---

History	Version	Description
	2.00	The interface mac access-list type command has been introduced.

3.31.131 interface mac address

Description	Set the MAC-address to the specified network interface. Address is specified in hexadecimal format 00:00:00:00:00:00 . The command allows one to assign arbitrary address, but warns the user if the new address “multicast” bit is set or “OUI enforced” bit is cleared. Command with no prefix resets the original MAC-addresses on the interface. Warning: Change MAC-address on Wi-Fi interface is prohibited.
--------------------	--

Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	MAC
Synopsis	<pre>(config-if)> mac address <mac> (config-if)> no mac address</pre>

Arguments

Argument	Value	Description
mac	MAC-address	New MAC-address of the interface.

Example

```
(config-if)> mac address 3C:1F:6E:2A:1C:BA
```

```
(config-if)> no mac address
```

History

Version	Description
2.00	The interface mac address command has been introduced.

3.31.132 interface mac address factory

Description Set the factory MAC-address to the interface.

Prefix no No

Change settings Yes

Multiple input No

Interface type MAC

Synopsis

<pre>(config-if)> mac address factory <name></pre>

Arguments

Argument	Value	Description
name	lan	"LAN" MAC-address will be assigned to the interface.
	wan	"WAN" MAC-address will be assigned to the interface.
	wlan5	"WLAN5" MAC-address will be assigned to the interface.

Example

```
(config-if)> mac address factory lan
Core::System::UConfig: done.
```

History

Version	Description
2.00	The interface mac address factory command has been introduced.

3.31.133 interface mac band

Description Bind a registered host to a 2.4 GHz or 5 GHz frequency band.

Command with **no** prefix removes the binding. If you use no argument, the entire list of bindings will be cleared.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type Bridge

Synopsis

```
(config-if)> mac band <mac> <band>
(config-if)> no mac band [ <mac> ]
```

Arguments

Argument	Value	Description
mac	<i>MAC-address</i>	MAC-address of the registered client.
band	0	2,4 GHz band.
	1	5 GHz band.

Example

```
(config-if)> mac band c0:b8:83:c2:cb:11 0
Network::Interface::Rtx::MacBand: "Bridge0": bound ▶
c0:b8:83:c2:cb:11 to 2.4 GHz.
```

```
(config-if)> mac band c0:b8:83:c2:cb:11 1
Network::Interface::Rtx::MacBand: "Bridge0": bound ▶
c0:b8:83:c2:cb:11 to 5 GHz.
```

```
(config-if)> no mac band c0:b8:83:c2:cb:85
Network::Interface::Rtx::MacBand: "Bridge0": unbound ▶
c0:b8:83:c2:cb:85 from 2.4 GHz.
```

```
(config-if)> no mac band
Network::Interface::Rtx::MacBand: Unbound all hosts.
```

History

Version	Description
3.05	The interface mac band command has been introduced.

3.31.134 interface mac bssid

Description Set the new MAC-address of access point 2,4 GHz or 5 GHz in WISP mode.

Command with **no** prefix returns the original MAC-address to the interface.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type	WifiStation						
Synopsis	<pre>(config-if)> mac bssid <bssid> (config-if)> no mac bssid</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>bssid</td><td>MAC-address</td><td>New MAC-address of the access point interface.</td></tr> </tbody> </table>	Argument	Value	Description	bssid	MAC-address	New MAC-address of the access point interface.
Argument	Value	Description					
bssid	MAC-address	New MAC-address of the access point interface.					
Example	<pre>(config-if)> mac bssid 56:ff:20:00:1e:11 Network::Interface::WifiStation: BSSID set to 56:ff:20:00:1e:11. (config-if)> no mac bssid Network::Interface::WifiStation: BSSID cleared.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.13</td><td>The interface mac bssid command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.13	The interface mac bssid command has been introduced.		
Version	Description						
2.13	The interface mac bssid command has been introduced.						

3.31.135 interface mac clone

Description	Clone the MAC-address from the operator's PC to the interface.				
Prefix no	No				
Change settings	Yes				
Multiple input	No				
Interface type	MAC, IP				
Synopsis	<pre>(config-if)> mac clone</pre>				
Example	<pre>(config-if)> mac clone</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.00</td><td>The interface mac clone command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.00	The interface mac clone command has been introduced.
Version	Description				
2.00	The interface mac clone command has been introduced.				

3.31.136 interface mac vht40

Description	Add a host to VHT40 compatibility list.
	Command with no prefix removes the host from the list. If you use no argument, the entire list of hosts will be cleared.
Prefix no	Yes

Change settings

Yes

Multiple input

Yes

Interface type

WiFiMaster

Synopsis

```
(config-if)> mac vht40 <vht40>
```

```
(config-if)> no mac vht40 [ <vht40> ]
```

Arguments

Argument	Value	Description
vht40	MAC-address	MAC-address of the host.

Example

```
(config-if)> mac vht40 fa:8e:80:ec:12:11
```

Network::Interface::Rtx::WifiMaster: "WifiMaster1": added ► "fa:8e:80:ec:12:11" to VHT40 compatibility list.

```
(config-if)> no mac vht40 fa:8e:80:ec:58:e2
```

Network::Interface::Rtx::WifiMaster: "WifiMaster1": removed ► "fa:8e:80:ec:12:11" from VHT40 compatibility list.

```
(config-if)> no mac vht40
```

Network::Interface::Rtx::WifiMaster: "WifiMaster1": cleared VHT40 ► compatibility list.

History

Version	Description
3.06	The interface mac vht40 command has been introduced.

3.31.137 interface mobile lte disable-band

Description

Disable specified LTE band.

Command with **no** prefix enables LTE band. If you use no argument, the entire list of LTE bands will be enabled.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Interface type

Usb

Synopsis

```
(config-if)> mobile lte disable-band <band>
```

```
(config-if)> no mobile lte disable-band [ <band> ]
```

Arguments

Argument	Value	Description
band	<i>Integer</i>	LTE band in the range from 1 to 43 inclusively.

Example

```
(config-if)> mobile lte disable-band 22
UsbQmi::Interface: "UsbQmi0": LTE band 22 disabled.
```

```
(config-if)> no mobile lte disable-band 22
UsbQmi::Interface: "UsbQmi0": LTE band 22 enabled.
```

```
(config-if)> no mobile lte disable-band
UsbQmi::Interface: "UsbQmi0": all LTE bands are enabled.
```

History

Version	Description
3.04	The interface mobile lte disable-band command has been introduced.

3.31.138 interface mobile name-servers

Description

Use **DNS**-server addresses which are received via mobile operator. By default, the function is enabled.

Command with **no** prefix denies using of **DNS**-server addresses which are received via mobile operator.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Usb

Synopsis

```
(config-if)> mobile name-servers
```

```
(config-if)> no mobile name-servers
```

Example

```
(config-if)> mobile name-servers
UsbQmi::Interface: "UsbQmi0": automatic name servers via QMI are ►
enabled.
```

```
(config-if)> no mobile name-servers
UsbQmi::Interface: "UsbQmi0": automatic name servers via QMI are ►
disabled.
```

History

Version	Description
3.06	The interface mobile name-servers command has been introduced.

3.31.139 interface mobile operator

Description

Set network identifier for **PLMN**.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

```
(config-if)> mobile operator <PLMN>
(config-if)> no mobile operator
```

Arguments

Argument	Value	Description
PLMN	String	Operator identifier.

Example

```
(config-if)> mobile operator 25011
UsbQmi::Interface: Operator PLMN is set to "25011".
```



```
(config-if)> no mobile operator
UsbQmi::Interface: Operator PLMN cleared.
```

History

Version	Description
3.04	The interface mobile operator command has been introduced.

3.31.140 interface mobile pdp

Description Choose IP protocol version for USB modem. IPv6 can be selected only if the corresponding system component is installed.

Prefix no No

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

```
(config-if)> mobile pdp (ipv4 | ipv4v6)
```

Arguments

Argument	Value	Description
ipv4	String	IPv4 only.
ipv4v6	String	IPv4 and IPv6 dual stack.

Example

```
(config-if)> mobile pdp ipv4
UsbQmi::Interface: Packet data protocol is set to "ipv4".
```

```
(config-if)> mobile pdp ipv4v6
UsbQmi::Interface: Packet data protocol is set to "ipv4v6".
```

History

Version	Description
3.04	The interface mobile pdp command has been introduced.

3.31.141 interface mobile roaming

Description

Enable mobile roaming.

Command with **no** prefix disables the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Usb

Synopsis

```
(config-if)> mobile roaming
```

```
(config-if)> no mobile roaming
```

Example

```
(config-if)> mobile roaming
```

UsbQmi::Interface: "UsbQmi0": roaming is enabled.

```
(config-if)> no mobile roaming
```

UsbQmi::Interface: "UsbQmi0": roaming is disabled.

History

Version	Description
3.03	The interface mobile roaming command has been introduced.

3.31.142 interface mobile scan

Description

Run a mobile network scan. The scanning process takes 20-50 seconds.

Command with **no** prefix stops scanning.

Prefix no

Yes

Change settings

No

Multiple input

No

Interface type	Usb				
Synopsis	<pre>(config-if)> mobile scan</pre> <pre>(config-if)> no mobile scan</pre>				
Example	<pre>(config-if)> mobile scan UsbQmi::Interface: Network scanning started.</pre> <pre>(config-if)> no mobile scan UsbQmi::Interface: Network scanning stopped.</pre>				
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>3.05</td><td>The interface mobile scan command has been introduced.</td></tr></tbody></table>	Version	Description	3.05	The interface mobile scan command has been introduced.
Version	Description				
3.05	The interface mobile scan command has been introduced.				

3.31.143 interface mobile umts disable-band

Description	Disable specified UMTS band.						
	Command with no prefix enables UMTS band. If you use no argument, the entire list of UMTS bands will be enabled.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	Yes						
Interface type	Usb						
Synopsis	<pre>(config-if)> mobile umts disable-band <band></pre> <pre>(config-if)> no mobile umts disable-band [<band>]</pre>						
Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>band</td><td><i>Integer</i></td><td>UMTS band. Can take values 1, 2, 3, 4, 5, 6, 7, 8, 9, 11, 26.</td></tr></tbody></table>	Argument	Value	Description	band	<i>Integer</i>	UMTS band. Can take values 1, 2, 3, 4, 5, 6, 7, 8, 9, 11, 26.
Argument	Value	Description					
band	<i>Integer</i>	UMTS band. Can take values 1, 2, 3, 4, 5, 6, 7, 8, 9, 11, 26.					
Example	<pre>(config-if)> mobile umts disable-band 6 UsbQmi::Interface: "UsbQmi0": WCDMA band 6 disabled.</pre> <pre>(config-if)> no mobile lte disable-band 6 UsbQmi::Interface: "UsbQmi0": WCDMA band 6 enabled.</pre> <pre>(config-if)> no mobile lte disable-band UsbQmi::Interface: "UsbQmi0": all WCDMA bands are enabled.</pre>						

History	Version	Description
	3.05	The interface mobile umts disable-band command has been introduced.

3.31.144 interface modem connect

Description Command to connect for USB-modem. Modem must be initialized with **modem init** command before execution.

Command with **no** prefix terminates the connection.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type UsbModem

Synopsis

```
(config-if)> modem connect ( dial <phone> | <string> )
(config-if)> no modem connect
```

Arguments

Argument	Value	Description
phone	String	The phone number for dialing.
string	String	An arbitrary command.

Example

```
(config-if)> modem connect dial *99#
Network::Interface::UsbModem: "UsbModem0": connect sequence saved.

(config-if)> modem connect dial *99#
Network::Interface::UsbModem: "UsbModem0": connect sequence ▶
cleared.
```

History

Version	Description
2.00	The interface modem connect command has been introduced.

3.31.145 interface modem init

Description Add modem initialization string at specified position index.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input

No

Interface type

UsbModem

Synopsis

```
(config-if)> modem init [<index>]<string>[ sleep <delay> ]  
(config-if)> no modem init [<index>]
```

Arguments

Argument	Value	Description
index	<i>Integer</i>	Position, the line number where you want to insert a string.
string	<i>String</i>	Modem initialization string.
delay	<i>Integer</i>	Modem delay value in seconds.

Example

```
(config-if)> modem init AT^SYSCFG=14,2,3fffffff,0,1  
Network::Interface::UsbModem: "UsbModem0": initialization string ►  
inserted.  
  
(config-if)> modem init AT^SYSCFG=14,2,3fffffff,0,1 sleep 1  
Network::Interface::UsbModem: "UsbModem0": initialization string ►  
inserted.  
  
(config-if)> no modem init  
Network::Interface::UsbModem: "UsbModem0": initialization strings ►  
erased.
```

History

Version	Description
2.00	The interface modem init command has been introduced.

3.31.146 interface modem timeout

Description

Set modem connection timeout. Setting is used for slow modems/connections. By default, 30 value is used.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

UsbModem

Synopsis

```
(config-if)> modem timeout <timeout>  
(config-if)> no modem timeout
```

Arguments	Argument	Value	Description
	timeout	<i>Integer</i>	Value of timeout in seconds. Can take values from 1 to 600 inclusively.

Example

```
(config-if)> modem timeout 300
Network::Interface::UsbModem: "UsbModem0": connect timeout is ▶
300 seconds.
```

```
(config-if)> no modem timeout
Network::Interface::UsbModem: "UsbModem0": connect timeout is ▶
unchanged, defaults to 30 seconds.
```

History

Version	Description
2.05	The interface modem timeout command has been introduced.

3.31.147 interface openvpn accept-routes

Description Enable receiving routes from a remote side via OpenVPN.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type OpenVPN

Synopsis

```
(config-if)> openvpn accept-routes
```

```
(config-if)> no openvpn accept-routes
```

Example

```
(config-if)> openvpn accept-routes
Network::Interface::OpenVpn: "OpenVPN0": enable automatic routes ▶
accept via tunnel.
```

```
(config-if)> no openvpn accept-routes
```

```
Network::Interface::OpenVpn: "OpenVPN0": disable automatic routes ▶
accept via tunnel.
```

History

Version	Description
2.10	The interface openvpn accept-routes command has been introduced.

3.31.148 interface openvpn connect

Description Set interface for OpenVPN connection. If you use no argument, connection is set via any interface.

Prefix no No

Change settings Yes

Multiple input No

Interface type OpenVPN

Synopsis

```
| (config-if)> openvpn connect [via <via>]
| (config-if)> openvpn connect
```

Arguments

Argument	Value	Description
via	<i>Interface name</i>	Full interface name or an alias.

Example

```
(config-if)> openvpn connect via ISP
Network::Interface::OpenVpn: "OpenVPN0": set connection via ISP.

(config-if)> openvpn connect
Network::Interface::OpenVpn: "OpenVPN0": set connection via any ▶
interface.
```

History

Version	Description
2.10	The interface openvpn connect command has been introduced.

3.31.149 interface openvpn name-servers

Description Use [DNS](#)-server addresses which are received via OpenVPN-server. By default, the function is enabled.

Command with **no** prefix denies using of [DNS](#)-server addresses which are received via OpenVPN-server.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type OpenVPN

Synopsis

```
(config-if)> openvpn name-servers
```

```
(config-if)> no openvpn name-servers
```

Example

```
(config-if)> openvpn name-servers
```

Network::Interface::OpenVpn: "OpenVPN0": automatic name servers via tunnel are enabled.

```
(config-if)> no openvpn name-servers
```

Network::Interface::OpenVpn: "OpenVPN0": automatic name servers via tunnel are disabled.

History

Version	Description
3.06	The interface openvpn name-servers command has been introduced.

3.31.150 interface operating-mode

Description Configure the ADSL operating mode. By default, auto value is used.

Prefix no No

Change settings Yes

Multiple input No

Interface type Switch

Synopsis

```
(config-if)> operating-mode ((adsl2 | adsl2+) [annex (a | i | l | al | m)] | ansi-dmt | itu-dmt | glite | auto)
```

Arguments

Argument	Value	Description
mode	adsl2	Configures operation in ADSL2 operating mode — ITU G.992.3 Annex A, Annex L, and Annex M. If an Annex operating mode is not chosen, Annex A, Annex L, and Annex M will all be enabled. The final mode will be decided by negotiation with the DSL access multiplexer (DSLAM).
	adsl2+	Configures operation in ADSL2+ mode — ITU G.992.5 Annex A and Annex M. If an Annex A operating mode is not chosen, both Annex A and Annex M will be enabled. The final mode will be decided by negotiation with DSLAM.
	ansi-dmt	Configures a router to operate in ANSI full-rate mode — ANSI T1.413.
	itu-dmt	Configures operation in ITU G.992.1 Annex A fullrate mode.

Argument	Value	Description
	glite	Configures operation in ITU G.992.2 Standard for ADSL using discrete multitone modulation.
	auto	Configures the device so that the DSLAM automatically picks the ADSL operating mode. All supported modes are enabled.
annex	annex a	xDSL service functioning over plain old telephone service.
	annex i	Extending ADSL band to use the voice frequency range, 32 upstream tones for an additional 256 kbit/s upstream data rate over POTS lines.
	annex l	Increases the range of the DSL service enabling the link to work at a distance of 7 kilometres (23,000 ft).
	annex al	Annex A and Annex L both.
	annex m	Upstream/downstream frequency split has been shifted from 138 kHz up to 276 kHz, allowing maximum upstream bandwidth to be increased from 1.4 Mbit/s to 3.3 Mbit/s.

History

Version	Description
2.01	The interface operating-mode command has been introduced.

3.31.151 interface peer

Description Specify ID of the remote peer to which the *PPP* connection will be used. A more precise meaning of configuration depends on interface type. For example, for PPPoE the **interface peer** command specifies the name of access hub, for PPTP — remote host name or IP-address, and for SSTP — specifies a remote server with port 443 or another.

Command with **no** prefix cancels the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPP

Synopsis

(config-if)>	peer <peer>
(config-if)>	no peer

Arguments

Argument	Value	Description
peer	<i>String</i>	Remote connection point ID or remote server address host.example.net:port. By default, port number is 443.

Example(config-if)> **peer 111**(config-if)> **peer host.example.net:5555****History**

Version	Description
2.00	The interface peer command has been introduced.
2.12	Added the ability to change the port of a remote server.

3.31.152 interface peer-isolation

Description

Enable the isolation of wireless clients in the Home segment. The setting applies on the Bridge interface and has an effect for all access points included in it. Also, it blocks traffic from wireless clients inside the L2 network.

Command with **no** prefix cancels the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Bridge

Synopsis(config-if)> **peer-isolation**(config-if)> **no peer-isolation****Example**(config-if)> **peer-isolation**

Network::Interface::Ethernet: "Bridge0": peer isolation enabled.

(config-if)> **no peer-isolation**

Network::Interface::Ethernet: "Bridge0": peer isolation disabled.

History

Version	Description
2.10	The interface peer-isolation command has been introduced.

3.31.153 interface ping-check profile

DescriptionAssign *Ping Check* profile to the interface.

Command with **no** prefix cancels the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
| (config-if)> ping-check profile <profile>
| (config-if)> no ping-check profile
```

Arguments	Argument	Value	Description
	profile	<i>String</i>	Profile name to assign.

Example

```
(config-if)> ping-check profile test
PingCheck::Client: Set ping-check profile for interface "ISP".
(config-if)> no ping-check profile
PingCheck::Client: Reset ping-check profile for interface "ISP".
```

History	Version	Description
	2.04	The interface ping-check profile command has been introduced.

3.31.154 interface ping-check restart

Description Enable interface restart if *Ping Check* is triggered (Internet is not available on interface). By default the function is disabled.

Command with **no** prefix disables the function.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
| (config-if)> ping-check restart [<interface>]
| (config-if)> no ping-check restart
```

Arguments	Argument	Value	Description
	interface	<i>Interface name</i>	Full name or alias of the interface to be restarted when the <i>Ping Check</i> on the binded interface is triggered. If this argument is not specified, the interface binded with <i>Ping Check</i> profile will be restarted.

Example

```
(config-if)> ping-check restart
PingCheck::Client: Enabled "PPPoE0" interface restart.

(config-if)> ping-check restart ISP
PingCheck::Client: Enabled "ISP" interface restart for "PPPoE0".

(config-if)> no ping-check restart
PingCheck::Client: Remove restart settings for "PPPoE0".
```

History

Version	Description
3.04	The interface ping-check restart command has been introduced.

3.31.155 interface pmf

Description

Enable **PMF** functionality.

Command with **no** prefix disables the feature.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

WiFi

Synopsis

```
(config-if)> pmf
(config-if)> no pmf
```

Example

```
(config-if)> pmf
Network::Interface::Rtx::WifiStation: "WifiMaster0/WifiStation0": ▶
PMF enabled.

(config-if)> no pmf
Network::Interface::Rtx::WifiStation: "WifiMaster0/WifiStation0": ▶
PMF disabled.
```

History

Version	Description
2.09	The interface pmf command has been introduced.

3.31.156 interface power

Description

Set the transmitter power for the radio interface. Transmitter power is limited by the hardware capabilities and state laws applicable to radio broadcast. This command allows one to only reduce the power of the transmitter relative to its maximum power, such as to decrease potential interference with other

devices in this range/band. By default, the setting value of the power is set to 100.

Prefix no No

Change settings Yes

Multiple input No

Interface type Radio

Synopsis

```
(config-if)> power <power>
```

Arguments

Argument	Value	Description
power	<i>Integer</i>	The transmitter power as the percentage of the maximum power (from 1 to 100).

Example

```
(config-if)> power 1
Network::Interface::Rtx::WifiMaster: "WifiMaster0": TX power ▶
level set.
```

History

Version	Description
2.00	The interface power command has been introduced.

3.31.157 interface pppoe service

Description Specify PPPoE service. If service is not defined, then PPPoE-client will be connected to an arbitrary service.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPPoE

Synopsis

```
(config-if)> pppoe service <service>
(config-if)> no pppoe service
```

Arguments

Argument	Value	Description
service	<i>String</i>	Name of PPPoE service.

Example

```
(config-if)> pppoe service TEST
Network::Interface::Pppoe: "PPPoE0": service set.
```

```
(config-if)> no pppoe service
Network::Interface::Pppoe: "PPPoE0": service removed.
```

History	Version	Description
	2.05	The interface pppoe service command has been introduced.

3.31.158 interface pppoe session auto-cleanup

Description Enable sending a PADT packet for the unfinished PPPoE session. By default the option is enabled.

Command with **no** prefix disables sending a PADT packet.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type PPPoE

Synopsis

```
(config-if)> pppoe session auto-cleanup
```

```
(config-if)> no pppoe session auto-cleanup
```

Example

```
(config-if)> pppoe session auto-cleanup
Network::Interface::Ppp: "PPPoE0": enabled session auto cleanup.
```

```
(config-if)> no pppoe session auto-cleanup
Network::Interface::Ppp: "PPPoE0": disabled session auto cleanup.
```

History	Version	Description
	3.03	The interface pppoe session auto-cleanup command has been introduced.

3.31.159 interface preamble-short

Description Use short *preamble*. By default, the setting is disabled.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Radio

Synopsis	<pre>(config-if)> preamble-short </pre> <pre>(config-if)> no preamble-short</pre>				
Example	<pre>(config-if)> preamble-short Network::Interface::Rtx::WifiMaster: "WifiMaster0": short ▶ preamble enabled.</pre> <pre>(config-if)> no preamble-short Network::Interface::Rtx::WifiMaster: "WifiMaster0": short ▶ preamble disabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.00</td><td>The interface preamble-short command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.00	The interface preamble-short command has been introduced.
Version	Description				
2.00	The interface preamble-short command has been introduced.				

3.31.160 interface pvc

Description	Configure a <i>permanent virtual circuit</i> on an <i>ATM</i> interface.										
Prefix no	No										
Change settings	Yes										
Multiple input	Yes										
Interface type	PVC										
Group entry	(config-if-atm-vc)										
Synopsis	<pre>(config-if)> pvc <vpi> <vci></pre>										
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>vpi</td><td><i>Integer</i></td><td><i>ATM</i> network <i>virtual path identifier</i> of this <i>PVC</i>. Can take values from 0 to 255.</td></tr> <tr> <td>vci</td><td><i>Integer</i></td><td><i>ATM</i> network <i>virtual channel identifier</i> of this <i>PVC</i>. Can take values from 0 to 65535.</td></tr> </tbody> </table>		Argument	Value	Description	vpi	<i>Integer</i>	<i>ATM</i> network <i>virtual path identifier</i> of this <i>PVC</i> . Can take values from 0 to 255.	vci	<i>Integer</i>	<i>ATM</i> network <i>virtual channel identifier</i> of this <i>PVC</i> . Can take values from 0 to 65535.
Argument	Value	Description									
vpi	<i>Integer</i>	<i>ATM</i> network <i>virtual path identifier</i> of this <i>PVC</i> . Can take values from 0 to 255.									
vci	<i>Integer</i>	<i>ATM</i> network <i>virtual channel identifier</i> of this <i>PVC</i> . Can take values from 0 to 65535.									
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.00</td><td>The interface pvc command has been introduced.</td></tr> </tbody> </table>		Version	Description	2.00	The interface pvc command has been introduced.					
Version	Description										
2.00	The interface pvc command has been introduced.										

3.31.160.1 interface pvc encapsulation

Description	Configure the <i>ATM</i> adaptation layer (<i>AAL</i>) and encapsulation type for an <i>ATMPVC</i> .
Prefix no	No

Change settings	Yes									
Multiple input	No									
Interface type	PVC									
Synopsis	<pre>(config-if-atm-vc) encapsulation (aal5mux aal5snap)</pre>									
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>encapsulation</td> <td>aal5mux</td> <td>Dedicate the specified <i>PVC</i> to a single protocol (called VC multiplexing).</td> </tr> <tr> <td></td> <td>aal5snap</td> <td>Multiplex two or more protocols over the same <i>PVC</i> (called <i>LLC multiplexing</i>).</td> </tr> </tbody> </table>	Argument	Value	Description	encapsulation	aal5mux	Dedicate the specified <i>PVC</i> to a single protocol (called VC multiplexing).		aal5snap	Multiplex two or more protocols over the same <i>PVC</i> (called <i>LLC multiplexing</i>).
Argument	Value	Description								
encapsulation	aal5mux	Dedicate the specified <i>PVC</i> to a single protocol (called VC multiplexing).								
	aal5snap	Multiplex two or more protocols over the same <i>PVC</i> (called <i>LLC multiplexing</i>).								
Example	<pre>(config-if-atm-vc)> encapsulation aal5mux Network::Interface::Pvc: using Ethernet encapsulation, VC mux.</pre>									
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.00</td> <td>The interface pvc encapsulation command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.00	The interface pvc encapsulation command has been introduced.					
Version	Description									
2.00	The interface pvc encapsulation command has been introduced.									

3.31.161 interface reconnect-delay

Description	Set the period of time between reconnection attempts. By default, value 3 is used.						
	Command with no prefix resets setting to default.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Interface type	PPP						
Synopsis	<pre>(config-if)> reconnect-delay <sec> (config-if)> no reconnect-delay</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>sec</td> <td><i>Integer</i></td> <td>Value of time in seconds. Can take values from 3 to 600.</td> </tr> </tbody> </table>	Argument	Value	Description	sec	<i>Integer</i>	Value of time in seconds. Can take values from 3 to 600.
Argument	Value	Description					
sec	<i>Integer</i>	Value of time in seconds. Can take values from 3 to 600.					
Example	<pre>(config-if)> reconnect-delay 3 Network::Interface::Ppp: "PPTP1": reconnect delay set to 3 ▶ seconds.</pre>						

```
(config-if)> no reconnect-delay
Network::Interface::Ppp: "PPTP0": reconnect delay reset to ▶
default.
```

History

Version	Description
2.11	The interface reconnect-delay command has been introduced.

3.31.162 interface rekey-interval

Description Set the period of time between automatic changes of the secret keys, which all devices on the network share. By default, 86400 value is used.

Command with **no** prefix disables keys changing.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFi

Synopsis

```
(config-if)> rekey-interval <interval>
(config-if)> no rekey-interval
```

Arguments

Argument	Value	Description
interval	<i>Integer</i>	Value of rekey interval in seconds.

Example

```
(config-if)> rekey-interval 3000
Network::Interface::Rtx::WifiMaster: "WifiMaster0": rekey ▶
interval is 3000 sec.
```

```
(config-if)> no rekey-interval
Network::Interface::Rtx::WifiMaster: "WifiMaster0": rekey ▶
interval disabled.
```

History

Version	Description
2.06	The interface rekey-interval command has been introduced.
2.15	Added default value of rekey interval 3600 sec.
3.04	Default value of rekey interval is changed to 86400 sec.

3.31.163 interface rename

Description	Assign arbitrary name to the specified network interface. The interface can be referred to by the new name just like by ID. Command with no prefix removes the setting.						
Warning:	Do not rename Home interface. This can cause unpredictable system errors.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(config-if)> rename <rename> (config-if)> no rename</pre>						
Arguments	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr style="background-color: #cccccc;"> <th style="text-align: left; padding: 2px;">Argument</th> <th style="text-align: left; padding: 2px;">Value</th> <th style="text-align: left; padding: 2px;">Description</th> </tr> </thead> <tbody> <tr> <td style="padding: 2px;">rename</td> <td style="padding: 2px;"><i>String</i></td> <td style="padding: 2px;">New interface name.</td> </tr> </tbody> </table>	Argument	Value	Description	rename	<i>String</i>	New interface name.
Argument	Value	Description					
rename	<i>String</i>	New interface name.					
Example	<pre>(config-if)> rename PPPoE1 Network::Interface::Base: "PPPoE0": renamed to "PPPoE1".</pre> <pre>(config-if)> no rename Network::Interface::Base: "PPPoE0": name cleared.</pre>						
History	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr style="background-color: #cccccc;"> <th style="text-align: left; padding: 2px;">Version</th> <th style="text-align: left; padding: 2px;">Description</th> </tr> </thead> <tbody> <tr> <td style="padding: 2px;">2.08</td> <td style="padding: 2px;">The interface rename command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.08	The interface rename command has been introduced.		
Version	Description						
2.08	The interface rename command has been introduced.						

3.31.164 interface rf e2p set

Description	Change the memory cell value of calibration data at <i>offset</i> by <i>value</i> for the specified interface.
Prefix no	No
Change settings	No
Multiple input	No
Interface type	Radio
Synopsis	<pre>(config-if)> rf e2p set <offset> <value></pre>

Arguments	Argument	Value	Description
	offset	<i>Hexadecimal number</i>	Memory cell location. Can take values from 1E0 to 1FE.
	value	<i>Hexadecimal number</i>	Value to be set. Can take values from 0 to FFFF.

Example

```
(config-if)> rf e2p set 1f6 0
Network::Interface::Rtx::WifiMaster: EEPROM [0x01F6]:0000 set.
```

History

Version	Description
2.04	The interface rf e2p set command has been introduced.

3.31.165 interface role

Description Set a role for the interface. Multiple roles can be assigned to one interface. Command is used for correct view of VLAN connections in the web interface.

Command with **no** prefix removes the role. If you use no arguments, the entire list of roles will be removed.

Prefix no Yes

Change settings No

Multiple input Yes

Synopsis

<pre>(config-if)> role <role> [for <ifor>]</pre>
<pre>(config-if)> no role [role]</pre>

Arguments	Argument	Value	Description
	role	inet	Interface is used for Internet connection.
		iptv	Interface is used for IPTV service.
		voip	Interface is used for VoIP service.
		misc	Interface is used for IP Policy .
	ifor	<i>Interface name</i>	Full interface name or an alias.

Example

```
(config-if)> role iptv for GigabitEthernet1
Network::Interface::Base: "GigabitEthernet1": assigned role ▶
"iptv" for GigabitEthernet1.
```

```
(config-if)> no role iptv for GigabitEthernet1
Network::Interface::Base: "GigabitEthernet1": deleted role "iptv".
```

```
(config-if)> no role
Network::Interface::Base: "GigabitEthernet1": deleted all roles.
```

History

Version	Description
2.06	The interface role command has been introduced.
2.10	Argument misc was added.

3.31.166 interface rrm

Description	Enable RRM for search of nearby APs according to IEEE 802.11k standard in order to provide this AP list to the subscriber device by request. By default, the option is disabled.
	Command with no prefix removes the setting.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	AccessPoint
Synopsis	<pre>(config-if)> rrm (config-if)> no rrm</pre>
Example	<pre>(config-if)> rrm Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ▶ RRM enabled. (config-if)> no rrm Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ▶ RRM disabled.</pre>

History

Version	Description
2.13	The interface rrm command has been introduced.

3.31.167 interface schedule

Description	Assign a schedule to the interface. Schedule must be created and customized with schedule action command before execution.
	Command with no prefix unbinds the schedule.
Prefix no	Yes
Change settings	Yes

Multiple input

No

Synopsis(config-if)> **schedule** <*schedule*>(config-if)> **no schedule****Arguments**

Argument	Value	Description
schedule	<i>Schedule name</i>	The name of the schedule that was created with schedule group of commands.

Example

```
(config-if)> schedule WIFI
Network::Interface::Base: "WifiMaster0": schedule is "WiFi".
(config-if)> no schedule
Network::Interface::Base: "WifiMaster0": schedule cleared.
```

History

Version	Description
2.06	The interface schedule command has been introduced.

3.31.168 interface security-level

Description

Specify the interface security level. The security levels define the firewall logic:

- Allow establishing private → public connections.
- Prohibit establishing connections coming to the public interface, i. e. in the direction public → private and public → public.
- The device itself accepts network connections (allows control) only from private interfaces.
- Data transfer between private interfaces can be allowed or disallowed depending on the **isolate-private** global parameter.
- protected interfaces have no access to device and to other private/protected subnetworks, but they have access to public interfaces and to the internet. The device provides only DHCP and DNS services to the protected segments.
- Data transfer from private to protected interfaces is forbidden by default. To allow such connection use the **no isolate-private** command.

Note:

By default, to all newly created interfaces public security level assigned.

Access lists **access-list** have higher priority than the security levels, so they can be used to set additional rules of packet filtering.

Prefix no	No
Change settings	Yes
Multiple input	No
Interface type	IP
Synopsis	<pre>(config-if)> security-level (public private protected)</pre>
Example	<p>Despite the fact that there is no functionality to disable the firewall completely, it is possible to disable it for particular directions. Suppose that it is necessary to allow data transfer between the "home" network Home and global network PPPoE0. To accomplish that, to both interfaces must be assigned private security level and function isolate-private must be disabled.</p> <pre>(config)> interface Home security-level private Network::Interface::IP: "Bridge0": security level set to ▶ "private".</pre> <pre>(config)> interface PPPoE0 security-level private Network::Interface::IP: "PPPoE0": security level set to "private".</pre> <pre>(config)> no isolate-private Netfilter::Manager: Private networks not isolated.</pre>
Note:	<p>The firewall and the address translation — are the functions designed to solve fundamentally different problems. Enabling NAT between Home and PPPoE0 interfaces in the configuration shown above, does not prohibit access to the network Home from the global network. Even as the address translation is enabled by command ip nat Home, the packets from PPPoE0 will get to Home network.</p>

History	Version	Description
	2.00	The interface security-level command has been introduced.
	2.06	The protected parameter was added.

3.31.169 interface sim pin

Description	Set PIN-code for SIM card.
Prefix no	No
Change settings	No
Multiple input	No
Interface type	Usb

Synopsis

```
(config-if)> sim pin <pin>
```

Arguments

Argument	Value	Description
pin	String	4 to 8 digits PIN.

Example

```
(config-if)> sim pin 1455
UsbQmi::Interface: "UsbQm1": PIN code set.
```

History

Version	Description
3.02	The interface sim pin command has been introduced.

3.31.170 interface speed

Description Configure the speed of the Ethernet interface. By default, auto value is set.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> speed (10 | 100 | 1000 | auto)
```

```
(config-if)> no speed
```

Arguments

Argument	Value	Description
10	Keyword	Connection speed in Mbit/s.
100		
1000		
auto	Keyword	Automatical speed configuration.

Example

```
(config-if)> speed 1000
Network::Interface::Ethernet: "GigabitEthernet1/0": speed set ▶
to 1000.
```

```
(config-if)> no speed
Network::Interface::Ethernet: "GigabitEthernet1/0": speed reset ▶
to default (auto-negotiation).
```

History	Version	Description
	2.06.B.1	The interface speed command has been introduced.

3.31.171 interface speed nonegotiate

Description Disable autonegotiation. By default, autonegotiation is enabled.

Command with **no** prefix enables autonegotiation.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

```
(config-if)> speed nonegotiate
```

```
(config-if)> no speed nonegotiate
```

Example

```
(config-if)> speed nonegotiate
Network::Interface::Ethernet: "GigabitEthernet1/0": ▶
autonegotiation will be disabled for fixed speed.
```

```
(config-if)> no speed nonegotiate
Network::Interface::Ethernet: "GigabitEthernet1/0": ▶
autonegotiation enabled..
```

History	Version	Description
	2.08	The interface speed nonegotiate command has been introduced.

3.31.172 interface ssid

Description Specify the wireless network name (SSID) for WiFiStation and AccessPoint interfaces. Depending on the interface type, the SSID value is processed differently.

- For AccessPoint, the SSID is a necessary setting, without which the connection will not be accepted.
- For the WiFiStation SSID determines which access point WiFiStation will connect to. Without a specified SSID, WiFiStation can connect to any available wireless network at its discretion.

Command with **no** prefix resets network name to default.

Prefix no Yes

Change settings

Yes

Multiple input

No

Interface type

WiFi

Synopsis

```
| (config-if)> ssid <ssid>
| (config-if)> no ssid
```

Arguments

Argument	Value	Description
ssid	<i>String</i>	Wireless Network Name (SSID).

Example

```
(config-if)> ssid MYNETWORK
Network::Interface::Wireless: "WifiMaster0/AccessPoint0": SSID ►
saved.

(config-if)> no ssid
Network::Interface::Rtx::AccessPoint: "WifiMaster0/AccessPoint0": ►
SSID reset.
```

History

Version	Description
2.00	The interface ssid command has been introduced.

3.31.173 interface switchport access

Description

Set the port **VLAN** ID for access mode. Allows to transfer frames of the specified **VLAN** to the port and remove **VLAN** marker from the transferred frames.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Port

Synopsis

```
| (config-if)> switchport access vlan <vid>
| (config-if)> no switchport access vlan
```

Arguments

Argument	Value	Description
vid	<i>Integer</i>	Access VLAN ID. Can take values from 1 to 4094 inclusively.

Example

```
(config-if)> switchport access vlan 1
Network::Interface::Switch: "GigabitEthernet0/0": set access ►
VLAN ID: 1.
```

History

Version	Description
2.06	The interface switchport access command has been introduced.

3.31.174 interface switchport friend

Description

Configure undirectional **VLAN** for multicast traffic in addition to access **VLAN**. Port can be a member of one access **VLAN**. This command enables forwarding of downstream traffic from a different **VLAN** (called "friend"). Friend packets are transmitted without a tag.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Port

Synopsis

```
(config-if)> switchport friend vlan <vid>
(config-if)> no switchport friend vlan
```

Arguments

Argument	Value	Description
vid	Integer	Friend VLAN ID. Can take values from 1 to 4094 inclusively.

Example

```
(config-if)> switchport friend vlan 2
Network::Interface::Switch: "GigabitEthernet0/0": set friend ►
VLAN ID: 2.
```

History

Version	Description
2.06	The interface switchport friend command has been introduced.

3.31.175 interface switchport link-group

Description

Enable **Link Aggregation** for 5+6 or 7+8 Ethernet-ports. Traffic allocation is based on XOR (balance-xor) mode.

Command with **no** prefix removes port group.

Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Interface type	Ethernet				
Synopsis	<pre>(config-if)> switchport link-group (config-if)> no switchport link-group</pre>				
Example	<pre>(config-if)> switchport link-group Network::Interface::Switch: "GigabitEthernet0/7": link aggregation is enabled.</pre> <pre>(config-if)> no switchport link-group Network::Interface::Switch: "GigabitEthernet0/7": link aggregation is unchanged.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>3.06</td><td>The interface switchport link-group command has been introduced.</td></tr> </tbody> </table>	Version	Description	3.06	The interface switchport link-group command has been introduced.
Version	Description				
3.06	The interface switchport link-group command has been introduced.				

3.31.176 interface switchport mode

Description Set access or trunk mode for [VLAN](#). By default, access mode is set.

Command with **no** prefix resets setting to default.

Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Interface type	Port						
Synopsis	<pre>(config-if)> switchport mode [(access [q-in-q]) trunk] (config-if)> no switchport mode</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>mode</td><td>access</td><td>Enable the access mode to a VLAN, that is the mode when only the untagged frames pass through the port. The incoming frames get tagged with the PVID marker, which is set with switchport access command. The port is an output one only for VLAN with PVID ID. Once a frame is</td></tr> </tbody> </table>	Argument	Value	Description	mode	access	Enable the access mode to a VLAN , that is the mode when only the untagged frames pass through the port. The incoming frames get tagged with the PVID marker, which is set with switchport access command. The port is an output one only for VLAN with PVID ID. Once a frame is
Argument	Value	Description					
mode	access	Enable the access mode to a VLAN , that is the mode when only the untagged frames pass through the port. The incoming frames get tagged with the PVID marker, which is set with switchport access command. The port is an output one only for VLAN with PVID ID. Once a frame is					

Argument	Value	Description
		transferred to the port, the VLAN marker gets removed.
	trunk	Enable the VLAN trunk mode, that is the mode when frames belonging to several VLANs get transmitted through the port. In this case each frame gets tagged. The list of IDs of VLAN networks that include the port is set with switchport trunk command.
q-in-q	<i>Keyword</i>	Enable double tagging.

Example(config-if)> **switchport mode access**

Network::Interface::Switch: "GigabitEthernet0/1": access mode ► enabled.

History

Version	Description
2.06	The interface switchport mode command has been introduced.

3.31.177 interface switchport trunk

Description

Add a port to the **VLAN**. Allows receiving and transmitting of the given **VLAN** frames to the port, such that VLAN marker from the transmitted frames is not removed. In the trunk mode it is allowed to add a port to several VLANs.

Command with **no** prefix removes the port from the specified **VLAN**. If you use no argument, the port will be removed from all the VLANs.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Interface type

Port

Synopsis(config-if)> **switchport trunk vlan <vid>**(config-if)> **no switchport trunk vlan [vid]****Arguments**

Argument	Value	Description
vid	<i>Integer</i>	VLAN ID. Can take values from 1 to 4094 inclusively.

Example

```
(config-if)> switchport trunk vlan 100
Network::Interface::Switch: "GigabitEthernet0/1": set trunk VLAN ▶
ID: 100.
```

History

Version	Description
2.06	The interface switchport trunk command has been introduced.

3.31.178 interface traffic-counter action disconnect

Description Disconnect from the provider when the traffic limit is reached.

Prefix no No

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

(config-if)>	traffic-counter action <trigger> disconnect
--------------	--

Arguments

Argument	Value	Description
trigger	limit	Disconnection trigger on a limit traffic.

Example

```
(config-if)> traffic-counter action limit disconnect
UsbQmi::TrafficCounter: "UsbQmi0": set disconnect action for ▶
trigger "limit".
```

History

Version	Description
3.06	The interface traffic-counter action disconnect command has been introduced.

3.31.179 interface traffic-counter action sms-alert message

Description Set [SMS](#) alert message.

Prefix no No

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

```
(config-if)> traffic-counter action <trigger> sms-alert message  
<message>
```

Arguments

Argument	Value	Description
trigger	threshold	SMS alerting trigger is a threshold.
	limit	SMS alerting trigger is a traffic limit.
message	String	SMS alerting message.

Example

```
(config-if)> traffic-counter action threshold sms-alert message ▶  
TEXT  
UsbQmi::TrafficCounter: "UsbQmi0": set message for trigger ▶  
"threshold".
```

History

Version	Description
3.06	The interface traffic-counter action sms-alert message command has been introduced.

3.31.180 interface traffic-counter action sms-alert phone

Description Set phone numbers for [SMS](#) alerting.

Prefix no No

Change settings Yes

Multiple input Yes

Interface type Usb

Synopsis

```
(config-if)> traffic-counter action <trigger> sms-alert phone <phone>
```

Arguments

Argument	Value	Description
trigger	threshold	SMS alerting trigger is a threshold.
	limit	SMS alerting trigger is a traffic limit.
phone	String	Phone number for SMS alerting. Up to three phone numbers can be set.

Example

```
(config-if)> traffic-counter action threshold sms-alert phone ▶  
+71112223344  
UsbQmi::TrafficCounter: "UsbQmi0": add phone number ▶  
"+71112223344" for action "threshold".
```

History

Version	Description
3.06	The interface traffic-counter action sms-alert phone command has been introduced.

3.31.181 interface traffic-counter enable

Description

Enable the mobile traffic counter. By default, setting is disabled.

Command with **no** prefix disables the mobile traffic counter.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Usb

Synopsis

```
(config-if)> traffic-counter enable
```

```
(config-if)> no traffic-counter enable
```

Example

```
(config-if)> traffic-counter enable
UsbQmi::TrafficCounter: "UsbQmi0": enabled.
```

```
(config-if)> no traffic-counter enable
UsbQmi::TrafficCounter: "UsbQmi0": disabled.
```

History

Version	Description
3.06	The interface traffic-counter enable command has been introduced.

3.31.182 interface traffic-counter limit

Description

Set the traffic counter limit in megabytes, gigabytes or terabytes.

Command with **no** prefix resets configuration.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Usb

Synopsis

```
(config-if)> traffic-counter limit <value><unit>
```

```
(config-if)> no traffic-counter limit
```

Arguments

Argument	Value	Description
value	<i>Integer</i>	Limit traffic value.
unit	<i>String</i>	Limit value units: MB, GB, TB, MiB, GiB, TiB.

Example

```
(config-if)> traffic-counter limit 4 TB
UsbQmi::TrafficCounter: "UsbQmi0": set limit to 4 TB.
```

```
(config-if)> no traffic-counter limit
UsbQmi::TrafficCounter: "UsbQmi0": reset limit.
```

History

Version	Description
3.06	The interface traffic-counter limit command has been introduced.

3.31.183 interface traffic-counter monthly

Description

Set the day of the month to restart the traffic counter.

Command with **no** prefix resets configuration.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Usb

Synopsis

```
(config-if)> traffic-counter monthly <day-of-month>
(config-if)> no traffic-counter monthly
```

Arguments

Argument	Value	Description
day-of-month	<i>Integer</i>	The day of the month from 1 to 31 to restart the traffic counter.

Example

```
(config-if)> traffic-counter monthly 31
UsbQmi::TrafficCounter: "UsbQmi0": set day of month to "31".
```

```
(config-if)> no traffic-counter monthly
UsbQmi::TrafficCounter: "UsbQmi0": reset day of month.
```

History

Version	Description
3.06	The interface traffic-counter monthly command has been introduced.

3.31.184 interface traffic-counter set

Description Set the current value of the traffic counter.

Prefix no No

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

```
(config-if)> traffic-counter set <value> <unit>
```

Arguments

Argument	Value	Description
value	<i>Integer</i>	Numeric counter value (either integer or floating point).
unit	<i>String</i>	Limit value units: MB, GB, TB, MiB, GiB, TiB.

Example

```
(config-if)> traffic-counter set 1.54 GB
UsbQmi::TrafficCounter: "UsbQmi0": set value to 1.54 GB.
```

History

Version	Description
3.06	The interface traffic-counter set command has been introduced.

3.31.185 interface traffic-counter threshold

Description Set the traffic counter warning threshold.

Command with **no** prefix resets configuration.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

```
(config-if)> traffic-counter threshold <threshold>
```

```
(config-if)> no traffic-counter threshold
```

Arguments

Argument	Value	Description
threshold	<i>Integer</i>	Threshold value as a percentage of the limit. Can take values from 1 to 99 percent.

Example

```
(config-if)> traffic-counter threshold 99
UsbQmi::TrafficCounter: "UsbQmi0": set threshold to 99 percent ▶
of the limit.
```

```
(config-if)> no traffic-counter threshold
UsbQmi::TrafficCounter: "UsbQmi0": reset threshold.
```

History

Version	Description
3.06	The interface traffic-counter threshold command has been introduced.

3.31.186 interface traffic-shape

Description Set the limit of data rate on a specified interface in both directions. By default speed is not limited.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

<pre>(config-if)> traffic-shape rate <rate> [asymmetric <upstream-rate>]</pre>	<pre>[schedule <schedule>]</pre>
<pre>(config-if)> no traffic-shape</pre>	

Arguments

Argument	Value	Description
rate	<i>Integer</i>	Value of data download rate in Kbps. Limit should be in the range from 64 Kbps to 1 Gbps.
upstream-rate	<i>Integer</i>	Data upload rate in Kbps. Value can be in the range from 64 Kbps to 1 Gbps.
schedule	<i>Schedule name</i>	The name of the schedule that was created with schedule group of commands.

Example

```
(config-if)> traffic-shape rate 5000
TrafficControl::Manager: "Bridge0" interface rate limited to ▶
5000 kbit/s.
```

```
(config-if)> traffic-shape rate 5000 asymmetric 500
TrafficControl::Manager: "Bridge0" interface rate limited to ▶
5000/500 kbit/s.
```

```
(config-if)> no traffic-shape
TrafficControl::Manager: Rate limit removed for "Bridge0" ▶
interface.
```

History	Version	Description
	2.05	The interface traffic-shape command has been introduced.
	3.04	The upstream-rate argument was added.

3.31.187 interface tunnel destination

Description Set the remote end of tunnel. If it is used in conjunction with an automatic *IPSec* connection associated with the tunnel, remote host becomes the initiator of an *IPSec* connection.

Command with **no** prefix resets the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Tunnel

Synopsis

```
(config-if)> tunnel destination <destination>
(config-if)> no tunnel destination
```

Arguments	Argument	Value	Description
	destination	String	IP address or domain name of the remote host.

Example

```
(config-if)> tunnel destination example.net
Network::Interface::Tunnel: "Gre0": destination set to ▶
example.net.
```

```
(config-if)> no tunnel destination
Network::Interface::Tunnel: "Gre0": destination was reset.
```

History	Version	Description
	2.08	The interface tunnel destination command has been introduced.

3.31.188 interface tunnel eoip id

Description Set identifier of EoIP tunnel.

Command with **no** prefix resets the setting.

Prefix no Yes

Change settings	Yes						
Multiple input	No						
Interface type	Eoip						
Synopsis	<pre>(config-if)> tunnel eoip id <id> (config-if)> no tunnel eoip id</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>id</td> <td><i>Integer</i></td> <td>Tunnel ID.</td> </tr> </tbody> </table>	Argument	Value	Description	id	<i>Integer</i>	Tunnel ID.
Argument	Value	Description					
id	<i>Integer</i>	Tunnel ID.					
Example	<pre>(config-if)> tunnel eoip id 50 Network::Interface::Tunnel: "Gre0": eoip id interface set to auto. (config-if)> no tunnel eoip id Network::Interface::Tunnel: "Gre0": eoip id was reset.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.08</td> <td>The interface tunnel eoip id command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.08	The interface tunnel eoip id command has been introduced.		
Version	Description						
2.08	The interface tunnel eoip id command has been introduced.						

3.31.189 interface tunnel gre keepalive

Description	Enable support of Cisco-like keepalive for GRE tunnel. By default, interval is set to 5, count is set to 3. Command with no prefix removes the setting.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Interface type	Tunnel						
Synopsis	<pre>(config-if)> tunnel gre keepalive <interval> [count] (config-if)> no tunnel gre keepalive</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>interval</td> <td><i>Integer</i></td> <td>The interval of sending keepalive packets in seconds. Can take values from 0 to 60. If 0 is set, then GRE keepalive replies is enabled only and the router will not react on the tunnel state change.</td> </tr> </tbody> </table>	Argument	Value	Description	interval	<i>Integer</i>	The interval of sending keepalive packets in seconds. Can take values from 0 to 60. If 0 is set, then GRE keepalive replies is enabled only and the router will not react on the tunnel state change.
Argument	Value	Description					
interval	<i>Integer</i>	The interval of sending keepalive packets in seconds. Can take values from 0 to 60. If 0 is set, then GRE keepalive replies is enabled only and the router will not react on the tunnel state change.					

Argument	Value	Description
count	<i>Integer</i>	Number of attempts to send keepalive packets. Can take values from 1 to 20.

Example

```
(config-if)> tunnel gre keepalive 10 7
Network::Interface::Gre: "Gre0": set GRE keepalive to 10 s (7 ▶
retries).

(config-if)> no tunnel gre keepalive
Network::Interface::Gre: "Gre0": disable GRE keepalive.

(config-if)> tunnel gre keepalive 0
Network::Interface::Gre: "Gre0": enable only GRE keepalive ▶
replies.
```

History

Version	Description
2.10	The interface tunnel gre keepalive command has been introduced.

3.31.190 interface tunnel source

Description

Set the local end of tunnel. If it is used in conjunction with an automatic *IPSec* connection associated with the tunnel, then the reception mode of IPsec IKE connections is activated to establish a secure tunnel.

Command with **no** prefix resets the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Tunnel

Synopsis

```
(config-if)> tunnel source (auto | <interface> | <address> )
(config-if)> no tunnel source
```

Arguments

Argument	Value	Description
auto	<i>Keyword</i>	Set the current working WAN interface.
interface	<i>Interface name</i>	Full interface name or an alias.
address	<i>IP-address</i>	Local IP-adress of the tunnel.

Example

```
(config-if)> tunnel source auto
Network::Interface::Tunnel: "Gre0": source interface set to auto.
```

```
(config-if)> no tunnel source
Network::Interface::Tunnel: "Gre0": source was reset.
```

History

Version	Description
2.08	The interface tunnel source command has been introduced.
2.09	The auto argument has been added.

3.31.191 interface tx-burst

Description	Enable Wi-Fi packet aggregation (Tx Burst). By default, the setting is disabled. Command with no prefix disables the setting.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config-if)> tx-burst (config-if)> no tx-burst</pre>
Example	<pre>(config-if)> tx-burst Network::Interface::Rtx::WifiMaster: Tx Burst enabled.</pre>

History

Version	Description
2.07	The interface tx-burst command has been introduced.

3.31.192 interface tx-queue length

Description	Set the size of the queue of outgoing packets on the interface. By default 1000 is set. Command with no prefix resets to default.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config-if)> tx-queue length <length> (config-if)> no tx-queue length</pre>

Arguments

Argument	Value	Description
length	<i>Integer</i>	Queue length can take values from 0 to 65536.

Example

```
(config-if)> tx-queue length 255
Network::Interface::Base: "L2TP0": TX queue length is 255.
```

```
(config-if)> no tx-queue length
Network::Interface::Base: "L2TP0": TX queue length reset to ▶
default.
```

History

Version	Description
3.06	The interface tx-queue length command has been introduced.

3.31.193 interface tx-queue scheduler cake

Description

Set the **CAKE** package scheduler for the interface. By default, the value **cake** is used for DSL and USB-modem interfaces, **fq_codel** — for all others.

Command with **no** prefix resets the scheduler to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-if)> tx-queue scheduler cake
```

```
(config-if)> no tx-queue scheduler cake
```

Example

```
(config-if)> tx-queue scheduler cake
Network::Interface::Base: "L2TP0": set TX queue scheduler to ▶
"cake".
```

```
(config-if)> no tx-queue scheduler cake
```

Network::Interface::Base: "L2TP0": set default TX queue scheduler.

History

Version	Description
3.06	The interface tx-queue scheduler cake command has been introduced.

3.31.194 interface tx-queue scheduler fq_codel

Description

Set the **FQ_CODEL** package scheduler for the interface. By default, the value **cake** is used for DSL and USB-modem interfaces, **fq_codel** — for all others.

Command with **no** prefix resets the scheduler to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-if)> tx-queue scheduler fq_codel
(config-if)> no tx-queue scheduler fq_codel
```

Example

```
(config-if)> tx-queue scheduler fq_codel
Network::Interface::Base: "L2TP0": set TX queue scheduler to ▶
"fq_codel".
(config-if)> no tx-queue scheduler fq_codel
Network::Interface::Base: "L2TP0": set default TX queue scheduler.
```

History	Version	Description
	3.06	The interface tx-queue scheduler fq_codel command has been introduced.

3.31.195 interface up

Description Enable the network interface and persist the state “up” to the settings.

Command with **no** prefix disables the the network interface and deletes “up” from settings. Also **interface down** command can be used.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-if)> up
(config-if)> no up
```

Example

```
(config-if)> up
Interface enabled.
```

History	Version	Description
	2.00	The interface up command has been introduced.

3.31.196 interface usb acq

Description Lock 3G/LTE mode for Huawei USB-modems.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

```
| (config-if)> usb acq <acq>
| (config-if)> no usb acq
```

Arguments

Argument	Value	Description
acq	gsm	2G network.
	umts	3G network.
	lte	4G network.

Example

```
(config-if)> usb acq lte
Network:::Interface::Usb: "UsbLte0": ACQ saved.
```

```
(config-if)> no usb acq
Network:::Interface::Usb: "UsbLte0": ACQ cleared.
```

History

Version	Description
2.09	The interface usb acq command has been introduced.

3.31.197 interface usb apn

Description Set access point name (APN) for USB-modems in NDIS mode. Modem reboots after applying the command.

Command with **no** prefix resets the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

```
| (config-if)> usb apn <apn>
```

```
(config-if)> no usb apn
```

Arguments

Argument	Value	Description
apn	<i>String</i>	Access point name.

Example

```
(config-if)> usb apn example.net
Network::Interface::Usb: "UsbModem0": APN saved.
```

```
(config-if)> no usb apn
Network::Interface::Usb: "UsbModem0": APN cleared.
```

History

Version	Description
2.05	The interface usb apn command has been introduced.

3.31.198 interface usb device-id

Description

Assign vendor and model ID to the UsbModem interface. It is necessary for modem and interface binding.

If there is an interface UsbModem[N] with the appropriate DeviceID, then automatic binding is occur. If there is no such interface, it will be created automatically with the appropriate DeviceID.

Command with **no** prefix deletes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

```
(config-if)>   usb device-id <vendor> <model>
(config-if)> no usb device-id
```

Arguments

Argument	Value	Description
vendor	<i>String</i>	Vendor info.
model	<i>String</i>	Model info.

Example

```
(config-if)> usb device-id 12d1 1001
Device ID saved.
```

History

Version	Description
2.00	The interface usb device-id command has been introduced.

3.31.199 interface usb power-cycle

Description Turn off power on the usb-modem for a specified period of time. This function is used to hardware reset usb-modem in case of freezing.

Prefix no No

Change settings No

Multiple input No

Interface type Usb

Synopsis

(config-if)>	usb power-cycle <pause>
--------------	--------------------------------------

Arguments

Argument	Value	Description
pause	<i>Integer</i>	Period of time in which usb-modem will be disabled, in milliseconds.

Example

```
(config-if)> usb power-cycle 3000
Network::Interface::Usb: "UsbLte0": started 3000 ms. power cycle.
```

History

Version	Description
2.03	The interface usb power-cycle command has been introduced.

3.31.200 interface usb power-fail

Description Specify further actions in case the usb-modem power-off did not help.

Prefix no No

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

(config-if)>	usb power-fail <interval> (retry <pause> reboot)
--------------	---

Arguments	Argument	Value	Description
	interval	<i>Integer</i>	Time to wait for modem detection after its power reset, in seconds. Can take values in the range from 0 to 60 inclusively.
	pause	<i>Integer</i>	Period of time in which usb-modem will be disabled, in seconds. Can take values in the range from 0 to 60 inclusively.
	reboot	<i>Keyword</i>	Reboot of the entire system.

Example	(config-if)> usb power-fail 60 reboot Network::Interface::Usb: "YotaOne1": enabled power fail action: ► reboot.
---------	---

History	Version	Description
	2.10	The interface usb power-fail command has been introduced.

3.31.201 interface usb wwan-force-connected

Description Disable CDC-modem link polling via HTTP. By default, the feature is disabled.
Command with **no** prefix disables the function.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Usb

Synopsis

(config-if)>	usb wwan-force-connected
(config-if)>	no usb wwan-force-connected

Example

(config-if)> usb wwan-force-connected Network::Interface::Usb: "UsbLte0": force WWAN link status.

(config-if)> no usb wwan-force-connected Network::Interface::Usb: "UsbLte0": unforce WWAN link status.
--

History	Version	Description
	2.12	The interface wwan-force-connected command has been introduced.

3.31.202 interface vdsl snr-margin

Description Configure the signal-to-noise ratio for VDSL line. By default, 8 value is used.

Command with **no** prefix resets the signal-to-noise ratio.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Dsl

Synopsis

(config-if)>	vdsl snr-margin <margin>
(config-if)>	no vdsl snr-margin

Arguments

Argument	Value	Description
margin	<i>Integer</i>	Value measured in dB and indicating the signal-to-noise ratio. Can take values in the range from 4 to 30 dB.

Example

(config-if)>	vdsl snr-margin 30
Network::Interface::Tc3262::Dsl: VDSL SNR margin is set to 30 dB.	
(config-if)>	no vdsl snr-margin
Network::Interface::Tc3262::Dsl: VDSL SNR margin reset to default.	

History

Version	Description
3.03	The interface vdsl snr-margin command has been introduced.

3.31.203 interface wireguard listen-port

Description Specify **UDP** port number to which incoming connections are accepted. By default, port number is not defined.

Command with **no** prefix resets the port.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Wireguard

Synopsis

(config-if)>	wireguard listen-port <port>
--------------	---

```
(config-if)> no wireguard listen-port
```

Arguments

Argument	Value	Description
port	<i>Integer</i>	Port number. Can take values from 1 to 65535 inclusively.

Example

```
(config-if)> wireguard listen-port 11633
Wireguard::Interface: "Wireguard4": set listen port to "11633".
```

```
(config-if)> no wireguard listen-port
Wireguard::Interface: "Wireguard4": reset listen port.
```

History

Version	Description
3.03	The interface wireguard listen-port command has been introduced.

3.31.204 interface wireguard peer

Description Add the remote peer public key to configure the secure connection using the *WireGuard* protocol.

Command with **no** prefix removes specified key.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type Wireguard

Group entry (config-wg-peer)

Synopsis

```
(config-if)> wireguard peer <key>
```

```
(config-if)> no wireguard peer <key>
```

Arguments

Argument	Value	Description
key	<i>String</i>	Value of the key. Latin letters, numbers and equal signs are acceptable. The key length is 44 characters (Base64-encoded 32-byte string representation).

Example

```
(config-if)> wireguard peer >
gbplgW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm0g=
(config-wg-peer)>
```

```
(config-if)> no wireguard peer ▶
gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm0g=
Wireguard::Interface: "Wireguard4": removed peer ▶
"gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmmg0=". 
```

History	Version	Description
	3.03	The interface wireguard peer command has been introduced.

3.31.204.1 interface wireguard peer allow-ips

Description Add the subnet of IP-addresses to which the transmission of packets inside the tunnel is allowed.

Note: You can add `0.0.0.0/0` subnet to allow transmission to any addresses.

Command with **no** prefix removes the subnet. If you use no argument, the entire list of subnets will be removed.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type Wireguard

Synopsis

```
(config-wg-peer)> allow-ips <address> <mask>
```

```
(config-wg-peer)> no allow-ips [ <address> <mask> ] 
```

Arguments	Argument	Value	Description
	address	<i>IP-address</i>	Together with mask <i>mask</i> sets the subnet of IP-addresses to be translated.
	mask	<i>IP-mask</i>	Mask of subnet. There are two ways to enter the mask: the canonical form (for example, <code>255.255.255.0</code>) and the form of prefix bit length (for example, <code>/24</code>).

Example

```
(config-wg-peer)> allow-ips 0.0.0.0/0
Wireguard::Interface: "Wireguard4": add allowed IPs ▶
"0.0.0.0/0.0.0.0" from peer ▶
"gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=". 
```

```
(config-wg-peer)> allow-ips 192.168.11.0 255.255.255.0
Wireguard::Interface: "Wireguard4": add allowed IPs ▶
"192.168.11.0/255.255.255.0" from peer ▶
"gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=". 
```

```
(config-wg-peer)> no allow-ips
Wireguard::Interface: "Wireguard4": clear allowed IPs of peer ▶
"gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=".
```

History	Version	Description
	3.03	The interface wireguard peer allow-ips command has been introduced.

3.31.204.2 interface wireguard peer endpoint

Description Set the remote peer address to which the *WireGuard* connection will be established.

Command with **no** prefix removes the endpoint.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Wireguard

Synopsis

```
(config-wg-peer)> endpoint <address> [:<port>]
```

```
(config-wg-peer)> no endpoint
```

Arguments	Argument	Value	Description
	address	<i>IP-address</i>	IP-address or domain name of the server.
	port	<i>Integer</i>	The <i>UDP</i> server port.

Example

```
(config-wg-peer)> endpoint 10.0.1.10:11635
Wireguard::Interface: "Wireguard4": set peer ▶
"gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=" endpoint to ▶
"10.0.1.10:11635".
```

```
(config-wg-peer)> no endpoint
Wireguard::Interface: "Wireguard4": reset endpoint for peer ▶
"gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=".
```

History	Version	Description
	3.03	The interface wireguard peer endpoint command has been introduced.

3.31.204.3 interface wireguard peer keepalive-interval

Description Set the interval of keepalive packet sending for [WireGuard](#) connection monitoring. By default, the interval is not set.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Wireguard

Synopsis

```
(config-wg-peer)> keepalive-interval <interval>
(config-wg-peer)> no keepalive-interval
```

Arguments	Argument	Value	Description
	interval	<i>Integer</i>	The interval of keepalive packet sending in seconds. Can take values from 3 to 3600 inclusively.

Example

```
(config-wg-peer)> keepalive-interval 3
Wireguard::Interface: "Wireguard4": set peer ▶
"gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=" keepalive interval ▶
to "3".
```

```
(config-wg-peer)> no keepalive-interval
Wireguard::Interface: "Wireguard4": reset persistent keepalive ▶
interval for peer "gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=".
```

History	Version	Description
	3.03	The interface wireguard peer keepalive-interval command has been introduced.

3.31.204.4 interface wireguard peer preshared-key

Description Set preshared key for [WireGuard](#) connection to remote peer. The preshared key (PSK) is an optional security improvement as per the [WireGuard](#) protocol and should be a unique PSK per client for highest security. By default, PSK is not used.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input	No						
Interface type	Wireguard						
Synopsis	<pre>(config-wg-peer)> preshared-key <preshared-key> (config-wg-peer)> no preshared-key</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>preshared-key</td><td><i>String</i></td><td>Secret PSK key value. Latin letters, numbers and equal signs are acceptable. The key length is 44 characters.</td></tr> </tbody> </table>	Argument	Value	Description	preshared-key	<i>String</i>	Secret PSK key value. Latin letters, numbers and equal signs are acceptable. The key length is 44 characters.
Argument	Value	Description					
preshared-key	<i>String</i>	Secret PSK key value. Latin letters, numbers and equal signs are acceptable. The key length is 44 characters.					
Example	<pre>(config-wg-peer)> preshared-key ▶ WY2fkhJZuDCbYew7L8whBMzkReVf8KKzWJrmaR79F8z= Wireguard::Interface: "Wireguard4": set preshared key for peer ▶ "gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=". (config-wg-peer)> no preshared-key Wireguard::Interface: "Wireguard4": reset preshared key for peer ▶ "gbp1gW3pBQKssrAdah1hiib13Jl123ZM8dBIjjPmm2g=".</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>3.03</td><td>The interface wireguard peer preshared-key command has been introduced.</td></tr> </tbody> </table>	Version	Description	3.03	The interface wireguard peer preshared-key command has been introduced.		
Version	Description						
3.03	The interface wireguard peer preshared-key command has been introduced.						

3.31.205 interface wireguard private-key

Description	Set or generate the private key to connect to the remote peers via WireGuard protocol. By default, private key is not configured.						
Prefix no	No						
Change settings	No						
Multiple input	No						
Interface type	Wireguard						
Synopsis	<pre>(config-if)> wireguard private-key [<private-key>]</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>private-key</td><td><i>String</i></td><td>A new private key value. Latin letters, numbers and equal signs are acceptable. The key length is 44 characters.</td></tr> </tbody> </table>	Argument	Value	Description	private-key	<i>String</i>	A new private key value. Latin letters, numbers and equal signs are acceptable. The key length is 44 characters.
Argument	Value	Description					
private-key	<i>String</i>	A new private key value. Latin letters, numbers and equal signs are acceptable. The key length is 44 characters.					

Example	<pre>(config-if)> wireguard private-key Wireguard::Interface: "Wireguard4": generated new private key.</pre>
----------------	--

```
(config-if)> wireguard private-key >
UshaeghezaiJ7reo8iK6ear0eomujohkeen8jahX5uo=
Wireguard::Interface: "Wireguard4": set private key.
```

History

Version	Description
3.03	The interface wireguard private-key command has been introduced.

3.31.206 interface wmm

Description Enable [WMM](#) on the interface.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Access Point

Synopsis

```
(config-if)> wmm
(config-if)> no wmm
```

Example

```
(config-if)> wmm
WMM extensions enabled.
```

History

Version	Description
2.00	The interface wmm command has been introduced.

3.31.207 interface wpa-eap radius secret

Description Specify the shared secret for secure communication between a [RADIUS](#) server and a [RADIUS](#) client.

Command with **no** prefix deletes the shared secret.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Bridge

Synopsis

```
(config-if)> wpa-eap radius secret <secret>
(config-if)> no wpa-eap radius secret
```

Arguments

Argument	Value	Description
secret	<i>String</i>	The value of RADIUS shared secret. Maximum key length is 64 characters.

Example

```
(config-if)> wpa-eap radius secret >
(>R#G`}-JNxru'i8i|lK}wBN9E^X0Xa{xF0G-N^%FaTnr|S(e(q$/lP2/tbX/#Q
Network::Interface::Rtx::WpaEap: Bridge0 RADIUS secret applied.
```

```
(config-if)> no wpa-eap radius secret
Network::Interface::Rtx::WpaEap: Bridge0 RADIUS secret cleared.
```

History

Version	Description
3.01	The interface wpa-eap radius secret command has been introduced.

3.31.208 interface wpa-eap radius server

Description Specify **RADIUS** server address.Command with **no** prefix deletes the address.**Prefix no** Yes**Change settings** Yes**Multiple input** No**Interface type** Bridge**Synopsis**

```
(config-if)> wpa-eap radius server <address>[:<port>]
(config-if)> no wpa-eap radius server
```

Arguments

Argument	Value	Description
address	<i>IP-address</i>	RADIUS server IP-address.
port	<i>Integer</i>	RADIUS server port.

Example

```
(config-if)> wpa-eap radius server 192.168.10.10
Network::Interface::Rtx::WpaEap: Bridge0 RADIUS server set to >
192.168.10.10.
```

```
(config-if)> wpa-eap radius server 192.168.10.10:1111
Network::Interface::Rtx::WpaEap: Bridge0 RADIUS server set to >
192.168.10.10:1111.
```

```
(config-if)> no wpa-eap radius server
Network::Interface::Rtx::WpaEap: Bridge0 RADIUS server cleared.
```

History	Version	Description
	3.01	The interface wpa-eap radius server command has been introduced.

3.31.209 interface wps

Description Enable *WPS* functionality.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFi

Synopsis

```
(config-if)> wps
```

```
(config-if)> no wps
```

Example

```
(config-if)> wps
WPS functionality enabled.
```

History	Version	Description
	2.00	The interface wps command has been introduced.

3.31.210 interface wps auto-self-pin

Description Enable *WPS* auto-self-pin mode. By default auto-self-pin mode is enabled.

Command with **no** prefix disables this mode.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type WiFi

Synopsis

```
(config-if)> wps auto-self-pin
```

```
(config-if)> no wps auto-self-pin
```

Example

```
(config-if)> wps auto-self-pin
Network::Interface::Rtx::Wps: an auto self PIN mode enabled.
```

History	Version	Description
	2.04	The interface wps auto-self-pin command has been introduced.

3.31.211 interface wps button

Description Start WPS process using a software button. Process takes 2 minutes or until the first connection occurred.

Prefix no No

Change settings No

Multiple input No

Interface type WiFi

Synopsis

(config-if)>	wps button <direction>
--------------	------------------------

Arguments	Argument	Value	Description
	direction	send	Send WiFi configuration.
		receive	Receive WiFi configuration from Peak DSL.

Example

(config-if)> wps button send

Sending WiFi configuration process started (software button mode).

History	Version	Description
	2.00	The interface wps button command has been introduced.

3.31.212 interface wps peer

Description Start WPS process using remote peer's PIN. Process takes 2 minutes or until the first connection occurred. By default, WPS PIN is disabled.

Prefix no No

Change settings No

Multiple input No

Interface type WiFi

Synopsis

(config-if)>	wps peer <direction> <pin>
--------------	----------------------------

Arguments

Argument	Value	Description
direction	send	Send WiFi configuration.
	receive	Receive WiFi configuration from the remote peer.
pin	<i>String</i>	PIN code of the remote peer.

Example

```
(config-if)> wps peer send 53794141
Network::Interface::Rtx::Wps: "WifiMaster0/AccessPoint0": peer ►
PIN WPS session started.
```

History

Version	Description
2.04	The interface wps peer command has been introduced.

3.31.213 interface wps self-pin

Description Start WPS process using self PIN. Process takes 2 minutes or until the first connection occur.

Prefix no No

Change settings No

Multiple input No

Interface type WiFi

Synopsis

(config-if)>	wps self-pin <direction>
--------------	---------------------------------------

Arguments

Argument	Value	Description
direction	send	Send WiFi configuration.
	receive	Receive WiFi configuration from Peak DSL.

Example

```
(config-if)> wps self-pin receive
Receiving WiFi configuration process started (self PIN mode).
```

History

Version	Description
2.00	The interface wps self-pin command has been introduced.

3.32 ip arp

Description Set static mapping between an IP-address and a MAC-address for hosts that do not support dynamic [ARP](#).

Command with **no** prefix removes entry from ARP table. If you use no arguments, the whole list of ARP entries will be removed.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

(config)>	ip arp <ip> <mac>
(config)>	no ip arp [<ip>]

Arguments	Argument	Value	Description
	ip	<i>IP-address</i>	IP-address in four-part dotted decimal format corresponding to the local data-link address.
	mac	<i>MAC-address</i>	MAC-address as six groups of two hexadecimal digits separated by colons.

Example

(config)>	ip arp 192.168.2.50 a1:2e:84:85:f4:21
	Network:::ArpTable: Static ARP entry saved.

(config)>	no ip arp 192.168.2.50
	Network:::ArpTable: Static ARP entry deleted for 192.168.2.50.

(config)>	no ip arp
	Network:::ArpTable: Static ARP table cleared.

History	Version	Description
	2.00	The ip arp command has been introduced.

3.33 ip dhcp class

Description Access to a group of commands to configure **DHCP** vendor class (option 60). If specified class name is not found, the command tries to create it.

Command with **no** prefix removes selected class.

Prefix no Yes

Change settings No

Multiple input Yes

Group entry (config-dhcp-class)

Synopsis

(config)>	ip dhcp class <class>
-----------	------------------------------------

```
(config)> no ip dhcp class <class>
```

Arguments

Argument	Value	Description
class	<i>String</i>	The vendor-class name.

Example

```
(config)> ip dhcp class STB-One
Dhcp::Server: Vendor class "STB-One" has been created.
```

History

Version	Description
2.00	The ip dhcp class command has been introduced.

3.33.1 ip dhcp class option

Description Set an option 60 to match the vendor-class.

Command with **no** prefix removes selected option.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config-dhcp-class)> option <number> hex <data>
```

```
(config-dhcp-class)> no option <number>
```

Arguments

Argument	Value	Description
number	<i>Integer</i>	Option number. Now the only 60 value is used.
data	<i>String</i>	Value of an option.

Example

```
(config-dhcp-class)> option 60 hex FF
Dhcp::Server: Option 60 is set to FF.
```

History

Version	Description
2.00	The ip dhcp class option command has been introduced.

3.34 ip dhcp host

Description Configure static linking of IP-address to MAC-address of the host. If the host with the specified name is not found, the command tries to create it. If the

specified IP-address is not in range of any pool, the command will remain in the settings, but will not affect the [DHCP-server](#) functioning.

The command allows one to change the MAC-address, leaving the old value IP-address and vice versa — to change the IP-address, leaving the old MAC-address value intact.

Command with **no** prefix removes the host.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config)> ip dhcp host <host> [ mac ] [ ip ]
```

```
(config)> no ip dhcp host <host>
```

Arguments

Argument	Value	Description
host	<i>String</i>	Arbitrary host name, used to identify a MAC-IP pair in the settings.
mac	<i>MAC-address</i>	MAC-address of the host for static linking of IP-address. If not specified, the value is taken from the previous configuration.
ip	<i>IP-address</i>	IP-address of the host. If not specified, the value is taken from the previous configuration.

Example

```
(config)> ip dhcp host HOST 192.168.1.44
new host "HOST" has been created.
```

History

Version	Description
2.00	The ip dhcp host command has been introduced.

3.35 ip dhcp pool

Description

Access to a group of commands to configure DHCP-pool. If the pool is not found, the command tries to create it. For a pool one sets a list of DNS-servers ([dns-server](#) command), default gateway ([default-router](#) command) and the lease time ([lease](#) command), as well as a range of dynamic IP-addresses ([range](#) command).

Having configured the pool, it is necessary to enable the [DHCP](#) service using the [service dhcp](#) command.

You can enter up to 32 pools. Maximum pool name length is 32 characters.

Note: In the current version of the system no more than one pool per interface is supported. For *DHCP-server* to function correctly it is required that the range of IP-addresses set by *range* command belong to the network that is configured on one of the device's Ethernet-interfaces.

Command with **no** prefix removes the pool.

Prefix no Yes

Change settings Yes

Multiple input Yes

Group entry (config-dhcp-pool)

Synopsis

(config)> ip dhcp pool <name>
(config)> no ip dhcp pool <name>

Arguments	Argument	Value	Description
	name	<i>String</i>	DHCP pool name.

Example

(config)> ip dhcp pool test_pool
pool "test_pool" has been created.

History	Version	Description
	2.00	The ip dhcp pool command has been introduced.

3.35.1 ip dhcp pool bind

Description Bind the pool to specified interface.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

(config-dhcp-pool)> bind <interface>
(config-dhcp-pool)> no bind <interface>

Arguments	Argument	Value	Description
	interface	<i>Interface name</i>	Full interface name or an alias.

Example

```
(config-dhcp-pool)> bind Dsl0
pool "test_pool" bound to interface Dsl0.
```

History

Version	Description
2.00	The ip dhcp pool bind command has been introduced.

3.35.2 ip dhcp pool bootfile

Description

Set boot file path on TFTP server for DHCP client (option 67).

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

Ethernet

Synopsis

```
(config-dhcp-pool)> bootfile <bootfile>
(config-dhcp-pool)> no bootfile
```

Arguments

Argument	Value	Description
bootfile	<i>Filename</i>	The boot file path.

Example

```
(config-dhcp-pool)> bootfile test.cnf
Dhcp::Pool: "_WEBADMIN": set bootfile option to "test.cnf".
```

```
(config-dhcp-pool)> no bootfile
Dhcp::Pool: "_WEBADMIN": cleared bootfile option.
```

History

Version	Description
2.11	The ip dhcp pool bootfile command has been introduced.

3.35.3 ip dhcp pool class

Description

Access to a group of commands to configure *DHCP* vendor class for selected pool. If specified class name is not found, the command tries to create it.

To work correctly class name should be the same as for **ip dhcp class** command.

Command with **no** prefix removes selected class.

Prefix no	Yes						
Change settings	Yes						
Multiple input	Yes						
Group entry	(config-dhcp-pool-class)						
Synopsis	<pre>(config-dhcp-pool)> class <class> (config-dhcp-pool)> no class <class></pre>						
Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>class</td><td>String</td><td>The vendor-class name.</td></tr></tbody></table>	Argument	Value	Description	class	String	The vendor-class name.
Argument	Value	Description					
class	String	The vendor-class name.					
Example	<pre>(config-dhcp-pool)> class STB-One Dhcp::Server: Vendor class "STB-One" has been created.</pre>						
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.00</td><td>The ip dhcp pool class command has been introduced.</td></tr></tbody></table>	Version	Description	2.00	The ip dhcp pool class command has been introduced.		
Version	Description						
2.00	The ip dhcp pool class command has been introduced.						

3.35.3.1 ip dhcp pool class option

Description Set additional options for [DHCP](#) client in case of vendor-class matching.
Command with **no** prefix removes selected option.

Prefix no	Yes
Change settings	Yes
Multiple input	Yes
Synopsis	<pre>(config-dhcp-pool-class)> option <number> <type> <data> (config-dhcp-pool-class)> no option <number></pre>

Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>number</td><td>6</td><td>6 option, DNS server.</td></tr><tr><td></td><td>42</td><td>42 option, NTP server.</td></tr><tr><td></td><td>43</td><td>43 option, vendor specific information.</td></tr><tr><td>type</td><td>ip</td><td>Type of data is IP-address. This type is not used for 43 option.</td></tr><tr><td></td><td>hex</td><td>Type of data is hexadecimal number.</td></tr><tr><td>data</td><td>String</td><td>Value of an option.</td></tr></tbody></table>	Argument	Value	Description	number	6	6 option, DNS server.		42	42 option, NTP server.		43	43 option, vendor specific information.	type	ip	Type of data is IP-address. This type is not used for 43 option.		hex	Type of data is hexadecimal number.	data	String	Value of an option.
Argument	Value	Description																				
number	6	6 option, DNS server.																				
	42	42 option, NTP server.																				
	43	43 option, vendor specific information.																				
type	ip	Type of data is IP-address. This type is not used for 43 option.																				
	hex	Type of data is hexadecimal number.																				
data	String	Value of an option.																				

Example

```
(config-dhcp-pool-class)> option 6 ip 192.168.1.1
Dhcp::Server: Option 6 is set to 192.168.1.1.
```

History

Version	Description
2.00	The ip dhcp pool class option command has been introduced.

3.35.4 ip dhcp pool debug

Description	Add debug messages to the system log. By default, the setting is disabled. Command with no prefix disables debugging.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config-dhcp-pool)> debug (config-dhcp-pool)> no debug</pre>

History

Version	Description
2.01	The ip dhcp pool debug command has been introduced.

3.35.5 ip dhcp pool default-router

Description	Configure default gateway IP-address. If not specified, the address of the Ethernet-interface determined automatically for a given range range will be used. Command with no prefix cancels the setting.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(config-dhcp-pool)> default-router <address> (config-dhcp-pool)> no default-router</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>address</td> <td><i>IP-address</i></td> <td>Default gateway address.</td> </tr> </tbody> </table>	Argument	Value	Description	address	<i>IP-address</i>	Default gateway address.
Argument	Value	Description					
address	<i>IP-address</i>	Default gateway address.					

Example	(config-dhcp-pool)> default-router 192.168.1.88 pool "test_pool" router address has been saved.
----------------	---

History	Version	Description
	2.00	The ip dhcp pool default-router command has been introduced.

3.35.6 ip dhcp pool dns-server

Description Configure IP-addresses of the DNS servers (DHCP option 6). If not specified, the address of the Ethernet-interface determined automatically for a given range **range** will be used.

Command with **no** prefix cancels the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config-dhcp-pool)>	dns-server (<i><address1> [<i>address2</i>] disable</i>)
(config-dhcp-pool)>	no dns-server

Arguments	Argument	Value	Description
	address1	<i>IP-address</i>	Address of primary DNS-server.
	address2	<i>IP-address</i>	Address of secondary DNS-server.
	disable	<i>Keyword</i>	Disable DHCP option 6.

Example	(config-dhcp-pool)> dns-server 192.168.1.88 pool "test_pool" name server list has been saved.
----------------	---

History	Version	Description
	2.00	The ip dhcp pool dns-server command has been introduced.
	2.11	Disable argument has been added.

3.35.7 ip dhcp pool domain

Description Specify the domain name that client should use when resolving hostnames via DNS (option 15).

Command with **no** prefix cancels the setting.

Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(config-dhcp-pool)> domain <domain> (config-dhcp-pool)> no domain</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>domain</td><td><i>String</i></td><td>Local domain name.</td></tr> </tbody> </table>	Argument	Value	Description	domain	<i>String</i>	Local domain name.
Argument	Value	Description					
domain	<i>String</i>	Local domain name.					
Example	<pre>(config-dhcp-pool)> domain example.net Dhcp::Pool: Domain option has been saved.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.05</td><td>The ip dhcp pool domain command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.05	The ip dhcp pool domain command has been introduced.		
Version	Description						
2.05	The ip dhcp pool domain command has been introduced.						

3.35.8 ip dhcp pool enable

Description	Start to use the pool in the system. Command with no prefix disables pool using.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Synopsis	<pre>(config-dhcp-pool)> enable (config-dhcp-pool)> no enable</pre>				
Example	<pre>(config-dhcp-pool)> enable Dhcp::Server: pool "111" is enabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.03</td><td>The ip dhcp pool enable command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.03	The ip dhcp pool enable command has been introduced.
Version	Description				
2.03	The ip dhcp pool enable command has been introduced.				

3.35.9 ip dhcp pool lease

Description	Set the lease time of DHCP pool IP-address. By default, 25200 value is used (7 hours).
--------------------	--

Command with **no** prefix resets lease time to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config-dhcp-pool)>	lease <lease>
(config-dhcp-pool)>	no lease

Arguments	Argument	Value	Description
	lease	<i>Integer</i>	Lease time in seconds. Can take values from 1 to 259200 seconds (3 days).

Example

```
(config-dhcp-pool)> lease 259200
Dhcp::Pool: "_WEBADMIN": set lease time: 259200 seconds.
```

```
(config-dhcp-pool)> no lease
Dhcp::Pool: "_WEBADMIN": lease time reset to default (25200 ▶
seconds).
```

History	Version	Description
	2.00	The ip dhcp pool lease command has been introduced.

3.35.10 ip dhcp pool next-server

Description Set TFTP server address for DHCP client (option 66).

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type Ethernet

Synopsis

(config-dhcp-pool)>	next-server <address>
(config-dhcp-pool)>	no next-server

Arguments	Argument	Value	Description
	address	<i>IP-address</i>	TFTP server address.

Example

```
(config-dhcp-pool)> next-server 10.1.1.11
Dhcp::Pool: "_WEBADMIN": set next server address: 10.1.1.11.

(config-dhcp-pool)> no next-server
Dhcp::Pool: "_WEBADMIN": cleared next server address.
```

History

Version	Description
2.11	The ip dhcp pool next-server command has been introduced.

3.35.11 ip dhcp pool option

Description

Set additional options for DHCP client.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Interface type

Ethernet

Synopsis

```
(config-dhcp-pool)> option <number> <type> <data>
(config-dhcp-pool)> no option <number>
```

Arguments

Argument	Value	Description
number	4	4 option, Time server.
	6	6 option, DNS server.
	42	42 option, NTP server.
	44	44 option, NetBIOS server.
	26	26 option, MTU.
	121	121 option, Classless Static Routes.
	249	249 option, MS Routes.
type	ip	Type of data is IP-address. It is not applicable to 26 option.
	hex	Type of data is hexadecimal number.
	ascii	Type of data is ASCII number.
	mtu	Type of data is Maximum Transmit Unit size.
data	<i>String</i>	Value of an option.

Example

```
(config-dhcp-pool)> option 4 hex 00010203
```

```
(config-dhcp-pool)> option 4 ascii test
(config-dhcp-pool)> option 6 8.8.8.8,8.8.4.4,192.168.1.1
(config-dhcp-pool)> no option 6 8.8.8.8,8.8.4.4,192.168.1.1
```

History

Version	Description
2.09	The ip dhcp pool option command has been introduced.

3.35.12 ip dhcp pool range

Description

Configure the range of dynamic addresses issued to DHCP-clients of a subnet. The range is set by start and end IP-addresses or the start address and size. The network interface to which the settings are applied is chosen automatically. Address of the chosen interface is used as the default gateway and DNS-server, if other addresses are not specified using commands **ip dhcp pool default-router** and **ip dhcp pool dns-server**.

Command with **no** prefix removes the range.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-dhcp-pool)> range <begin>(<end> | <size>)
(config-dhcp-pool)> no range
```

Arguments

Argument	Value	Description
begin	<i>IP-address</i>	Pool's start address.
end	<i>IP-address</i>	Pool's end address.
size	<i>Integer</i>	Pool size.

Example

```
(config-dhcp-pool)> range 192.168.15.43 3
pool "_WEBADMIN" range has been saved.
```

History

Version	Description
2.00	The ip dhcp pool range command has been introduced.

3.35.13 ip dhcp pool update-dns

Description

Add static records into DNS-proxy when DHCP-address is assigned. The name of record is the hostname of the DHCP-request. By default, the feature is disabled.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config-dhcp-pool)>	update-dns
(config-dhcp-pool)>	no update-dns

Example

(config-dhcp-pool)>	update-dns
Dhcp::Pool: DNS update has been enabled.	

History	Version	Description
	2.06	The ip dhcp pool update-dns command has been introduced.

3.35.14 ip dhcp pool wpad

Description Configure DHCP option 252 — [WPAD](#) protocol. By default, the option is disabled.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config-dhcp-pool)>	wpad <wpad>
(config-dhcp-pool)>	no wpad

Arguments	Argument	Value	Description
	wpad	<i>String</i>	URL of proxy.

Example

(config-dhcp-pool)>	wpad http://wpad/wpad.dat
Dhcp::Pool: WPAD option has been saved.	

History	Version	Description
	2.05	The ip dhcp pool wpad command has been introduced.

3.36 ip dhcp relay lan

Description Specify which network interface the DHCP relay will use to handle client's requests. Several "lan" interfaces can be specified, to which end the command should be entered several times, enumerating all desired interfaces one by one.

Command with **no** prefix disables the DHCP relay on the specified interface. If you use no argument, the DHCP relay will be removed from all interfaces.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config)> ip dhcp relay lan <interface>
(config)> no ip dhcp relay lan [ interface ]
```

Arguments	Argument	Value	Description
	interface	<i>Interface name</i>	Full name or an alias of Ethernet interface, through which DHCP relay will accept requests from clients.

Example

```
(config)> ip dhcp relay lan Home
added LAN interface Home.
```

History	Version	Description
	2.00	The ip dhcp relay lan command has been introduced.

3.37 ip dhcp relay server

Description Specify the IP-address of the *DHCP-server*, to which the relay will forward client requests from the LAN.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> ip dhcp relay server <address>
(config)> no ip dhcp relay server [ address ]
```

Arguments

Argument	Value	Description
address	<i>IP-address</i>	IP-address of the DHCP-server .

Example

```
(config)> ip dhcp relay server 192.168.1.11
using DHCP server 192.168.1.11.
```

History

Version	Description
2.00	The ip dhcp relay server command has been introduced.

3.38 ip dhcp relay wan

Description

Specify the network interface through which DHCP relay will interact with higher level [DHCP-server](#). There can be only one interface of such type in the system. If exact address of the server is not specified (see [ip dhcp relay server](#)), the requests will be broadcasted. It is recommended to specify server address.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> ip dhcp relay wan <interface>
(config)> no ip dhcp relay wan [ <interface> ]
```

Arguments

Argument	Value	Description
interface	<i>Interface name</i>	Full name or an alias of Ethernet interface, on which requests from the DHCP-clients will be sent.

Example

```
(config)> ip dhcp relay wan Dsl0
using WAN interface Dsl0.
```

History

Version	Description
2.00	The ip dhcp relay wan command has been introduced.

3.39 ip esp alg enable

Description

Enable [IPsec Passthrough](#) mode for [IPsec ESP](#) tunnel. By default, the setting is disabled.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
| (config)> ip esp alg enable  
| (config)> no ip esp alg enable
```

Example

```
(config)> ip esp alg enable  
Esp::Alg: Enabled.
```

```
(config)> no ip esp alg enable  
Esp::Alg: Disabled.
```

History	Version	Description
	3.05	The ip esp alg enable command has been introduced.

3.40 ip flow-cache timeout active

Description Set timeout of active sessions in cache. By default, the value 10 is used.

Command with **no** prefix resets the setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
| (config)> ip flow-cache timeout active <timeout>  
| (config)> no ip flow-cache timeout active
```

Arguments	Argument	Value	Description
	timeout	<i>Integer</i>	The timeout value, in minutes. Can take value in the range from 1 to 30.

Example

```
(config)> ip flow-cache timeout active 1  
Netflow::Manager: Active timeout set to "1" min.
```

```
(config)> no ip flow-cache timeout active  
Netflow::Manager: Active timeout reset to "10" min.
```

History	Version	Description
	2.11	The ip flow-cache timeout active command has been introduced.

3.41 ip flow-cache timeout inactive

Description Set timeout of inactive sessions in cache. By default, the value 20 is used.

Command with **no** prefix resets the setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> ip flow-cache timeout inactive <timeout>
(config)> no ip flow-cache timeout inactive
```

Arguments	Argument	Value	Description
	timeout	<i>Integer</i>	The timeout value, in seconds. Can take value in the range from 1 to 600.

Example

```
(config)> ip flow-cache timeout inactive 1
Netflow::Manager: Inactive timeout set to "1" s.
```

```
(config)> no ip flow-cache timeout inactive
Netflow::Manager: Inactive timeout reset to "20" s.
```

History	Version	Description
	2.11	The ip flow-cache timeout inactive command has been introduced.

3.42 ip flow-export destination

Description Set parameters of *NetFlow* collector.

Command with **no** prefix removes collector's parameters.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> ip flow-export destination <address> <port>
(config)> no ip flow-export destination
```

Arguments

Argument	Value	Description
address	<i>IP-address</i>	IP-address of the data collector.
port	<i>Integer</i>	Collector's UDP port number. Can take values 2055, 2056, 4432, 4739, 9025, 9026, 9995, 9996, 6343.

Example

```
(config)> ip flow-export destination 192.168.101.31 4739
Netflow::Manager: Export destination is set to ▶
192.168.101.31:4739.
```

```
(config)> no ip flow-export destination
Netflow::Manager: Export destination is unset.
```

History

Version	Description
2.11	The ip flow-export destination command has been introduced.

3.43 ip flow-export version

Description

Set version of *NetFlow* collector. By default, 5 value is used.

Command with **no** prefix resets version to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> ip flow-export version <version>
(config)> no ip flow-export version
```

Arguments

Argument	Value	Description
version	<i>String</i>	Version of protocol.

Example

```
(config)> ip flow-export version 9
Netflow::Manager: Set export protocol version to 9.
```

```
(config)> no ip flow-export version
Netflow::Manager: Reset export version to 5.
```

History

Version	Description
3.05	The ip flow-export version command has been introduced.

3.44 ip ftp

Description

Access to a group of commands to configure access to **ftp**.

Prefix no

No

Change settings

No

Multiple input

No

Interface type

IP

Group entry

(config-ftp)

Synopsis

```
| (config)> ip ftp
```

Example

```
(config)> ip ftp
(config-ftp)>
```

History

Version	Description
2.08	The ip ftp command has been introduced.

3.44.1 ip ftp client-charset

Description

Set default encoding on FTP-server. By default, the UTF-8 is used.

Command with **no** prefix resets encoding to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
| (config-ftp)> client-charset <charset>
| (config-ftp)> no client-charset
```

Arguments

Argument	Value	Description
charset	utf-8	Encoding type.
	utf-16	

Argument	Value	Description
	utf-16le	
	utf-16be	
	utf-32	
	utf-32le	
	utf-32be	
	iso-8859-1	
	iso-8859-2	
	iso-8859-3	
	iso-8859-4	
	iso-8859-5	
	iso-8859-6	
	iso-8859-7	
	iso-8859-8	
	iso-8859-9	
	iso-8859-10	
	iso-8859-11	
	iso-8859-12	
	iso-8859-13	
	iso-8859-14	
	iso-8859-15	
	iso-8859-16	
	cp-037	
	cp-424	
	cp-437	
	cp-500	
	cp-737	
	cp-775	
	cp-850	
	cp-852	
	cp-852	
	cp-855	
	cp-856	
	cp-857	
	cp-860	
	cp-861	

Argument	Value	Description
	cp-862	
	cp-863	
	cp-864	
	cp-865	
	cp-866	
	cp-869	
	cp-874	
	cp-1026	
	cp-1250	
	cp-1251	
	cp-1252	
	cp-1253	
	cp-1254	
	cp-1255	
	cp-1256	
	cp-1257	
	cp-1258	
	koi8-r	
	koi8-u	
	kz-1048	
	nextstep	
	mac-ceptic	
	mac-centeuro	
	mac-croatian	
	mac-cyrillic	
	mac-gaelic	
	mac-greek	
	mac-icelandic	
	mac-inuit	
	mac-roman	
	mac-romanian	
	mac-turkish	
	mac-ukrainian	

Example

```
(config-ftp)> client-charset utf-16
Ftp::Server: Set client charset to "utf-16".
```

```
(config-ftp)> no client-charset
Ftp::Server: Reset client charset to default.
```

History

Version	Description
2.11	The ip ftp client-charset command has been introduced.

3.44.2 ip ftp lockout-policy

Description Set FTP-server bruteforce detection parameters for public interfaces. By default, feature is enabled.

Command with **no** prefix disables bruteforce detection.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

<pre>(config-ftp)> lockout-policy <threshold> [<duration> [<observation-window>]]</pre>
<pre>(config-ftp)> no lockout-policy</pre>

Arguments

Argument	Value	Description
threshold	<i>Integer</i>	The number of failed attempts to log in. By default, 5 value is used.
duration	<i>Integer</i>	An authorization ban duration for the specified IP in minutes. By default, 15 value is used.
observation-window	<i>Integer</i>	Duration of suspicious activity observation in minutes. By default, 3 value is used.

Example

```
(config-ftp)> lockout-policy 10 30 2
Ftp::Server: Bruteforce detection is enabled.
```

```
(config-ftp)> no lockout-policy
Ftp::Server: Bruteforce detection is disabled.
```

History

Version	Description
2.12	The ip ftp lockout-policy command has been introduced.

3.44.3 ip ftp permissive

Description Access to the FTP-server for all users without authentication.

Command with **no** prefix denies access.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

(config-ftp)>	permissive
(config-ftp)>	no permissive

Example

(config-ftp)> permissive
(config-ftp)> no permissive

History	Version	Description
	2.08	The ip ftp permissive command has been introduced.

3.44.4 ip ftp security-level

Description Set FTP security level. By default, **private** value is set.

Prefix no No

Change settings Yes

Multiple input No

Interface type IP

Synopsis

(config-ftp)>	security-level (public private protected)
---------------	--

Arguments	Argument	Value	Description
	public	<i>Keyword</i>	Access to the FTP-server is allowed for public, private and protected interfaces.
	private	<i>Keyword</i>	Access to the FTP-server is allowed for private interfaces.
	protected	<i>Keyword</i>	Access to the FTP-server is allowed for private and protected interfaces.

Example

```
(config-ftp)> security-level protected
Ftp::Manager: Security level changed to protected.
```

History

Version	Description
2.08	The ip ftp security-level command has been introduced.

3.45 ip host

Description Add a domain name and address as a DNS-record.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config)> ip host <domain> <address>
(config)> no ip host [<domain> <address>]
```

Arguments

Argument	Value	Description
domain	<i>String</i>	A domain name of a host.
address	<i>IP-address</i>	An IP-address of a host.

Example

```
(config)> ip host keenetic.local 192.168.1.22
Dns::Manager: Added static record for "keenetic.local", address ▶
192.168.1.22.
```

```
(config)> no ip host keenetic.local 192.168.1.22
Dns::Manager: Record "keenetic.local", address 192.168.1.22 ▶
deleted.
```

History

Version	Description
2.00	The ip host command has been introduced.

3.46 ip hotspot

Description Enter the Hotspot configuration command group.

Prefix no No

Change settings No

Multiple input No

Interface type IP

Group entry (config-hotspot)

Synopsis (config)> **ip hotspot**

Example

(config)> ip hotspot
(config-hotspot)>

History	Version	Description
	2.06	The ip hotspot command has been introduced.

3.46.1 ip hotspot auto-scan interface

Description Enable subnetwork passive scanning on interface. By default is enabled.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Synopsis

(config-hotspot)> auto-scan interface <interface>
(config-hotspot)> no auto-scan interface <interface>

Arguments	Argument	Value	Description
	interface	<i>Interface name</i>	Full interface name or an alias.

Example

(config-hotspot)> auto-scan interface WifiMaster0/AccessPoint1
Hotspot::Discovery::Manager: Subnetwork scanning on interface >
"WifiMaster0/AccessPoint1" is unchanged.

(config-hotspot)> auto-scan interface WifiMaster0/AccessPoint1
Hotspot::Discovery::Manager: Subnetwork scanning on interface >
"WifiMaster0/AccessPoint1" is disabled.

History	Version	Description
	2.08	The ip hotspot auto-scan interface command has been introduced.

3.46.2 ip hotspot auto-scan interval

Description Set interval for probes of online hosts.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-hotspot)> auto-scan interval <interval>
(config-hotspot)> no auto-scan interval
```

Arguments

Argument	Value	Description
interval	<i>Integer</i>	Auto-scan probe interval in seconds. By default, the value 30 is used.

Example

```
(config-hotspot)> auto-scan interval 10
Hotspot::Discovery::Manager: Auto-scan probe interval is set to ▶
10 s.
```

```
(config-hotspot)> no auto-scan interval
Hotspot::Discovery::Manager: Auto-scan probe interval reset to ▶
default.
```

History

Version	Description
2.08	The ip hotspot auto-scan interval command has been introduced.

3.46.3 ip hotspot auto-scan passive

Description Set passive autoscan rate in hosts per seconds.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-hotspot)> auto-scan passive <rate> hps
(config-hotspot)> no auto-scan passive
```

Arguments

Argument	Value	Description
rate	<i>Integer</i>	Passive autoscan rate. By default, the value 3 is used.

Example

```
(config-hotspot)> auto-scan passive 5 hps
Hotspot::Discovery::Manager: Auto-scan rate is set to 5 hps.

(config-hotspot)> no auto-scan passive
Hotspot::Discovery::Manager: Auto-scan rate reset to default.
```

History

Version	Description
2.08	The ip hotspot auto-scan passive command has been introduced.

3.46.4 ip hotspot auto-scan timeout

Description Set offline timeout for hosts. After the specified time, the missing host is removed from the online host list.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

<pre>(config-hotspot)> auto-scan timeout <timeout></pre>
<pre>(config-hotspot)> no auto-scan timeout</pre>

Arguments

Argument	Value	Description
timeout	<i>Integer</i>	Offline timeout in seconds. By default, the value 35 is used.

Example

```
(config-hotspot)> auto-scan timeout 31
Hotspot::Discovery::Manager: Auto-scan host offline timeout is set to 31 s.

(config-hotspot)> no auto-scan timeout
Hotspot::Discovery::Manager: Auto-scan host offline timeout reset to default.
```

History

Version	Description
2.08	The ip hotspot auto-scan timeout command has been introduced.

3.46.5 ip hotspot default-policy

Description

Define the Hotspot policy for all interfaces or assign IP Policy. Policy applies to all hosts that have no explicitly configured access rule, [ip hotspot policy](#).

Default policy: permit.

Command with **no** prefix resets policy to default.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Interface type

IP

Synopsis

```
(config-hotspot)> default-policy (<access> | <policy>)
(config-hotspot)> no default-policy
```

Arguments

Argument	Value	Description
access	permit	Permit access to the internet.
	deny	Deny access to the internet.
policy	<i>Policy name</i>	Name of IP Policy profile.

Example

```
(config-hotspot)> default-policy permit
FHotspot::Manager: Default policy "permit" applied.
```

```
(config-hotspot)> default-policy deny
Hotspot::Manager: Default policy "deny" applied.
```

```
(config-hotspot)> default-policy Policy0
Hotspot::Manager: Default policy "Policy0" applied.
```

```
(config-hotspot)> no default-policy
Hotspot::Manager: Default policy cleared.
```

History

Version	Description
2.09	The ip hotspot default-policy command has been introduced.
2.12	Argument <i>policy</i> was added.

3.46.6 ip hotspot host

Description Setup bypass or block rules for specific Hotspot clients. Host rules override interface based policy (see [ip hotspot policy](#) command).

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Synopsis

(config-hotspot)>	host <mac> (<access> schedule <schedule> policy <policy>)
-------------------	--

(config-hotspot)> no host <mac> (<access> schedule policy)
--

Arguments

Argument	Value	Description
mac	<i>MAC-address</i>	Host MAC address. Host must be registered via known host in advance.
access	permit	Permit access to the internet.
	deny	Deny access to the internet.
schedule	<i>Schedule name</i>	The name of the schedule that was created with schedule group of commands.
policy	<i>Policy name</i>	Name of IP Policy profile.

Example

```
(config)> known host MYTEST 54:e4:3a:8a:f3:a7
Hotspot::Manager: Policy "permit" applied to interface "Home".
```

```
(config-hotspot)> host 54:e4:3a:8a:f3:a7 permit
Hotspot::Manager: Rule "permit" applied to host ▶
"54:e4:3a:8a:f3:a7".
```

```
(config-hotspot)> host 54:e4:3a:8a:f3:a7 deny
Hotspot::Manager: Rule "deny" applied to host "54:e4:3a:8a:f3:a7".
```

```
(config-hotspot)> host 54:e4:3a:8a:f3:a7 schedule MYSCHEDULE
Hotspot::Manager: Schedule "MYSCHEDULE" applied to host ▶
"54:e4:3a:8a:f3:a7".
```

```
(config-hotspot)> no host 54:e4:3a:8a:f3:a7 schedule
Hotspot::Manager: Host "54:e4:3a:8a:f3:a7" schedule disabled.
```

```
(config-hotspot)> host 54:e4:3a:8a:f3:a7 policy Policy0
Hotspot::Manager: Policy "Policy0" applied to host ▶
"54:e4:3a:8a:f3:a7".
```

```
(config-hotspot)> no host 54:e4:3a:8a:f3:a7 policy
Hotspot::Manager: Policy removed from host "54:e4:3a:8a:f3:a7".
```

History

Version	Description
2.06	The ip hotspot host command has been introduced.
2.12	Arguments permit, deny, schedule, policy were added.

3.46.7 ip hotspot host service-class

Description

Assign a specific class to all traffic bound to a registered host. The class is represented by an integer from 1 to 6. Registration of a host is performed in advance by the **known host** command.

Command with **no** prefix removes the class.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config-hotspot)> host <mac> service-class <service-class>
(config-hotspot)> no host <mac> service-class
```

Arguments

Argument	Value	Description
mac	MAC-address	Host MAC-address.
service-class	1	Minimum latency (VoIP).
	2	Real-time interactive (Games, Video conferencing).
	3	Broadcast services (YouTube, NetFlix).
	4	Low latency data (Database, SSH).
	5	High-throughput data (Web traffic).
	6	Low-priority data (File sharing, BitTorrent).

Example

```
(config-hotspot)> host 04:d4:c4:54:bc:11 service-class 3
Hotspot::Manager: Service class "3" applied to host ▶
"04:d4:c4:54:bc:11".
```

```
(config-hotspot)> no host 04:d4:c4:54:bc:59 service-class
Hotspot::Manager: Service class removed from host ▶
"04:d4:c4:54:bc:59".
```

History

Version	Description
3.05	The ip hotspot host service-class command has been introduced.

3.46.8 ip hotspot policy

Description

Define the Hotspot policy for a specific interface. Policy applies to all hosts that have no explicitly configured access rule, **ip hotspot host**.

Default policy: permit.

Command with **no** prefix resets policy to default.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Interface type

IP

Synopsis

```
(config-hotspot)> policy <interface> (<access> | <policy>)
(config-hotspot)> no policy <interface>
```

Arguments

Argument	Value	Description
interface	<i>Interface name</i>	Ethernet interface full name or an alias.
access	permit	Permit access to the internet.
	deny	Deny access to the internet.
policy	<i>Policy name</i>	Name of IP Policy profile.

Example

```
(config-hotspot)> policy Home permit
Hotspot::Manager: Policy "permit" applied to interface "Home".
(config-hotspot)> policy Home deny
Hotspot::Manager: Policy "deny" applied to interface "Home".
(config-hotspot)> policy Home Policy0
Hotspot::Manager: Policy "Policy0" applied to interface "Home".
(config-hotspot)> no policy Home
Hotspot::Manager: Interface "Home" policy cleared.
```

History

Version	Description
2.06	The ip hotspot policy command has been introduced.
2.12	Argument policy was added.

3.46.9 ip hotspot wake

Description Send Wake-on-LAN packet to private and protected interfaces of the host.

Prefix no No

Change settings No

Multiple input No

Interface type IP

Synopsis

```
(config-hotspot)> wake <mac>
```

Arguments

Argument	Value	Description
mac	MAC-address	Host MAC address.

Example

```
(config-hotspot)> wake a8:1e:84:11:f1:22  
Hotspot::Manager: WoL sent to host: a8:1e:84:11:f1:22.
```

History

Version	Description
2.08	The ip hotspot wake command has been introduced.

3.47 ip http lockout-policy

Description Set HTTP bruteforce detection parameters for public interfaces. By default, feature is enabled.

Command with **no** prefix disables bruteforce detection.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config)> ip http lockout-policy <threshold> [<duration>  
[<observation-window>]]
```

```
(config)> no ip http lockout-policy
```

Arguments

Argument	Value	Description
threshold	Integer	The number of failed attempts to log in. By default, 5 value is used.

Argument	Value	Description
duration	<i>Integer</i>	An authorization ban duration for the specified IP in minutes. By default, 15 value is used.
observation-window	<i>Integer</i>	Duration of suspicious activity observation in minutes. By default, 3 value is used.

Example

```
(config)> ip http lockout-policy 10 30 2
Http::Manager: Bruteforce detection is enabled.
```

```
(config)> no ip http lockout-policy
Http::Manager: Bruteforce detection is disabled.
```

History

Version	Description
2.08	The ip http lockout-policy command has been introduced.

3.48 ip http log access

Description Enable debug mode for web-server (nginx). By default, feature is disabled.
Command with **no** prefix disables the debug mode.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config)> ip http log access
(config)> no ip http log access
```

Example

```
(config)> ip http log access
Http::Manager: Enabled access logging.
```

```
(config)> no ip http log access
Http::Manager: Disabled access logging.
```

History

Version	Description
3.00	The ip http log access command has been introduced.

3.49 ip http log auth

Description Enable logging of failed authorization attempts to the system. By default, feature is disabled.

Command with **no** prefix disables logging.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
| (config)> ip http log auth
```

```
| (config)> no ip http log auth
```

Example

```
(config)> ip http log auth
Http::Manager: Auth logging enabled.
```

```
(config)> no ip http log auth
Http::Manager: Auth logging disabled.
```

History

	Version	Description
	2.08	The ip http log auth command has been introduced.

3.50 ip http log webdav

Description Enable logging of failed connection attempts to the *WebDAV* server. By default, feature is disabled.

Command with **no** prefix disables logging.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
| (config)> ip http log webdav
```

```
| (config)> no ip http log webdav
```

Example

```
(config)> ip http log webdav
WebDav::Server: Enabled request tracing.
```

```
(config)> no ip http log webdav
WebDav::Server: Disabled request tracing.
```

History

Version	Description
3.04	The ip http log webdav command has been introduced.

3.51 ip http port

Description Assign HTTP port for Web interface of Peak DSL. By default, 80 value is used.

Command with **no** prefix resets HTTP port to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
| (config)> ip http port <port>
| (config)> no ip http port
```

Arguments

Argument	Value	Description
port	<i>Integer</i>	New HTTP port.

Example

```
(config)> ip http port 8080
Http::Manager: Port changed to 8080.
```

```
(config)> no ip http port
Http::Manager: Port reset to 80.
```

History

Version	Description
2.08	The ip http port command has been introduced.

3.52 ip http proxy

Description Access to a group of commands to configure HTTP proxy. If the proxy is not found, the command tries to create it.

Command with **no** prefix removes the proxy.

Prefix no Yes

Change settings Yes

Multiple input	Yes						
Interface type	IP						
Group entry	(config-http-proxy)						
Synopsis	<pre> (config)> ip http proxy <name> (config)> no ip http proxy <name></pre>						
Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>name</td><td>String</td><td>HTTP proxy name.</td></tr></tbody></table>	Argument	Value	Description	name	String	HTTP proxy name.
Argument	Value	Description					
name	String	HTTP proxy name.					
Example	<pre>(config)> ip http proxy TEST Http::Manager: Proxy "TEST" successfully created.</pre>						
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.08</td><td>The ip http proxy command has been introduced.</td></tr></tbody></table>	Version	Description	2.08	The ip http proxy command has been introduced.		
Version	Description						
2.08	The ip http proxy command has been introduced.						

3.52.1 ip http proxy auth

Description	Enable authorization for HTTP proxy. By default, the setting is disabled. Command with no prefix disables HTTP proxy authorization.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	IP
Synopsis	<pre> (config-http-proxy)> auth (config-http-proxy)> no auth</pre>
Example	<pre>(config-http-proxy)> auth Http::Manager: Proxy password auth is enabled.</pre> <pre>(config-http-proxy)> no auth Http::Manager: Proxy password auth is disabled.</pre>

History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.10</td><td>The ip http proxy auth command has been introduced.</td></tr></tbody></table>	Version	Description	2.10	The ip http proxy auth command has been introduced.
Version	Description				
2.10	The ip http proxy auth command has been introduced.				

3.52.2 ip http proxy domain

Description Set domain name that specifies the *FQDN* of the virtual host.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

(config-http-proxy)>	domain static <domain>
(config-http-proxy)>	no domain

Arguments	Argument	Value	Description
	domain	<i>String</i>	A domain name.

Example

(config-http-proxy)>	domain static example.net
(config-http-proxy)>	no domain

Http::Manager: Configured base domain for proxy: test.
Http::Manager: Removed ndns domain for proxy: test.

History	Version	Description
	2.08	The ip http proxy domain command has been introduced.

3.52.3 ip http proxy domain ndns

Description Set HTTP proxy domain through NDNS. If enabled, setting [ip http proxy domain](#) is deleted.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

(config-http-proxy)>	domain ndns
(config-http-proxy)>	no domain ndns

Example

```
(config-http-proxy)> domain ndns
Http::Manager: Configured ndns domain for proxy: test.
```

```
(config-http-proxy)> no domain
Http::Manager: Removed ndns domain for proxy: test.
```

History

Version	Description
2.08	The ip http proxy domain ndns command has been introduced.

3.52.4 ip http proxy force-host

Description

Enable the Host header rewriting for the upstream.

Command with **no** prefix disables the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config-http-proxy)> force-host <force-host>
```

```
(config-http-proxy)> no force-host
```

Arguments

Argument	Value	Description
force-host	<i>String</i>	IP-address or domain name.

Example

```
(config-http-proxy)> force-host 192.168.8.1
Http::Proxy: "modem": enabled Host header enforcing to ▶
"192.168.8.1".
```

```
(config-http-proxy)> force-host modem.keenetic.pro
Http::Proxy: "modem": enabled Host header enforcing to ▶
"modem.keenetic.pro".
```

```
(config-http-proxy)> no force-host
Http::Proxy: "modem": disabled Host header enforcing.
```

History

Version	Description
3.06	The ip http proxy force-host command has been introduced.

3.52.5 ip http proxy preserve-host

Description	Set option to save the original header for the host when passing through a proxy. Command with no prefix disable option.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Interface type	IP				
Synopsis	<pre>(config-http-proxy)> preserve-host (config-http-proxy)> no preserve-host</pre>				
Example	<pre>(config-http-proxy)> preserve-host Http::Manager: Proxy HTTP Host header preservation is enabled. (config-http-proxy)> no preserve-host Http::Manager: Proxy HTTP Host header preservation is disabled.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.13</td> <td>The ip http proxy preserve-host command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.13	The ip http proxy preserve-host command has been introduced.
Version	Description				
2.13	The ip http proxy preserve-host command has been introduced.				

3.52.6 ip http proxy security-level

Description	Set the security level for HTTP proxy service. By default, private value is set. Command with no prefix resets setting to default.		
Prefix no	Yes		
Change settings	Yes		
Multiple input	No		
Interface type	IP		
Synopsis	<pre>(config-http-proxy)> security-level (public private) (config-http-proxy)> no security-level</pre>		
Arguments	Argument	Value	Description
	public	<i>Keyword</i>	Access to the HTTP proxy is allowed for public, private and protected interfaces.

Argument	Value	Description
private	Keyword	Access to the HTTP proxy is allowed for private interfaces only.

Example

```
(config-http-proxy)> security-level public
Http::Proxy: "test1": set public security level.
```

```
(config-http-proxy)> no security-level
Http::Proxy: "test1": unset public security level.
```

History

Version	Description
3.05	The ip http proxy security-level command has been introduced.

3.52.7 ip http proxy upstream

Description Set HTTP or HTTPS server address for request redirecting.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-http-proxy)> upstream (http | https) (<mac> | <ip> | <fqdn>) [<port>]
(config-http-proxy)> no upstream
```

Arguments

Argument	Value	Description
http	Keyword	HTTP server.
https	Keyword	HTTPS server.
mac	MAC-address	MAC-address of server.
ip	IP-address	IP-address of server.
fqdn	FQDN	Full domain name of server.
port	Integer	The port number.

Example

```
(config-http-proxy)> upstream http 192.168.1.1 8080
Http::Manager: Proxy "TEST" upstream was set.
```

```
(config-http-proxy)> upstream https google.com 443
Http::Proxy: "modem": set https upstream google.com, port 443.
```

```
(config-http-proxy)> no upstream
Http::Manager: Remove upstream info for proxy "test".
```

History

Version	Description
2.08	The ip http proxy upstream command has been introduced.
3.05	https keyword was added.

3.52.8 ip http proxy x-real-ip

Description Enable X-Real-IP and X-Forwarded-For header support for HTTP proxy.

Command with **no** prefix disables headers.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-http-proxy)> x-real-ip
(config-http-proxy)> no x-real-ip
```

Example

```
(config-http-proxy)> x-real-ip
Http::Proxy: "test1": enabled X-Real-IP and X-Forwarded-For ►
headers.
```

```
(config-http-proxy)> no x-real-ip
Http::Proxy: "test1": disabled X-Real-IP and X-Forwarded-For ►
headers.
```

History

Version	Description
3.05	The ip http proxy x-real-ip command has been introduced.

3.53 ip http security-level

Description Set the security level for remote access to the Keenetic web interface. By default, **private** value is set.

Prefix no No

Change settings Yes

Multiple input	No															
Interface type	IP															
Synopsis	(config)> ip http security-level (public [ssl] private protected)															
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>public</td><td><i>Keyword</i></td><td>Access to the web interface is allowed for public, private and protected interfaces via HTTP and HTTPS.</td></tr> <tr> <td>private</td><td><i>Keyword</i></td><td>Access to the web interface is allowed for private interfaces.</td></tr> <tr> <td>protected</td><td><i>Keyword</i></td><td>Access to the web interface is allowed for private and protected interfaces.</td></tr> <tr> <td>ssl</td><td><i>Keyword</i></td><td>Access to the web interface is allowed for public interfaces via HTTPS only.</td></tr> </tbody> </table>	Argument	Value	Description	public	<i>Keyword</i>	Access to the web interface is allowed for public, private and protected interfaces via HTTP and HTTPS.	private	<i>Keyword</i>	Access to the web interface is allowed for private interfaces.	protected	<i>Keyword</i>	Access to the web interface is allowed for private and protected interfaces.	ssl	<i>Keyword</i>	Access to the web interface is allowed for public interfaces via HTTPS only.
Argument	Value	Description														
public	<i>Keyword</i>	Access to the web interface is allowed for public, private and protected interfaces via HTTP and HTTPS.														
private	<i>Keyword</i>	Access to the web interface is allowed for private interfaces.														
protected	<i>Keyword</i>	Access to the web interface is allowed for private and protected interfaces.														
ssl	<i>Keyword</i>	Access to the web interface is allowed for public interfaces via HTTPS only.														

Example	(config)> ip http security-level protected Http::Manager: Security level changed to protected.
	(config)> ip http security-level public ssl Http::Manager: Security level set to public SSL.

History	Version	Description
	2.08	The ip http security-level command has been introduced.
	3.00	Parameter ssl was added.

3.54 ip http ssl acme get

Description Generate and sign SSL certificate for the specified domain name (by default, KeenDNS). Access from the Internet should be granted.

Prefix no No

Change settings No

Multiple input No

Synopsis (config)> **ip http ssl acme get [<domain>]**

Arguments	Argument	Value	Description
	domain	<i>String</i>	KeenDNS domain name.

Example

```
(config)> ip http ssl acme get mytest.keenetic.pro
Acme::Client: Obtaining certificate for domain ▶
"mytest.keenetic.pro" is started.
```

History

Version	Description
2.11	The ip http ssl acme get command has been introduced.

3.55 ip http ssl acme revoke

Description Revoke and remove SSL certificate for the specified domain name (KeenDNS, by default).

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(config)> ip http ssl acme revoke <domain>
```

Arguments

Argument	Value	Description
domain	<i>String</i>	KeenDNS domain name.

Example

```
(config)> ip http ssl acme revoke mytest.keenetic.pro
Acme::Client: Revoking certificate for domain ▶
"mytest.keenetic.pro" is started.
```

History

Version	Description
2.11	The ip http ssl acme revoke command has been introduced.

3.56 ip http ssl acme list

Description Show a list of free Let`s Encrypt certificates in the system.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(config)> ip http ssl acme list
```

Example

```
(config)> ip http ssl acme list
certificate:
```

```

        domain: cc6b5a71a7644903b51a5454.keenetic.io
should-be-renewed: no
is-expired: no
issue-time: 2018-06-20T09:16:30.000Z
expiration-time: 2018-09-17T09:16:30.000Z

certificate:
        domain: mytest.keenetic.pro
should-be-renewed: no
is-expired: no
issue-time: 2018-06-28T16:36:56.000Z
expiration-time: 2018-09-25T16:36:56.000Z

```

History	Version	Description
	2.11	The ip http ssl acme list command has been introduced.

3.57 ip http ssl enable

Description Enable HTTP SSL server. By default, the server is disabled.

Command with **no** prefix disables SSL server.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```

(config)> ip http ssl enable
(config)> no ip http ssl enable

```

Example

```

(config)> ip http ssl enable
Http::Manager: Enabled SSL service.

```

```

(config)> no ip http ssl enable
Http::Manager: Disabled SSL service.

```

History	Version	Description
	2.07	The ip http ssl enable command has been introduced.

3.58 ip http ssl redirect

Description Enable automatic redirection on domains with SSL certificate. By default, the redirection is enabled.

Command with **no** prefix disables redirection.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config)> ip http ssl redirect
```

```
(config)> no ip http ssl redirect
```

Example

```
(config)> ip http ssl redirect
Http::Manager: Redirect to SSL is enabled.
```

```
(config)> no ip http ssl redirect
Http::Manager: Redirect to SSL is disabled.
```

History

Version	Description
2.11	The ip http ssl redirect command has been introduced.

3.59 ip http webdav

Description Access to a group of commands to configure *WebDAV* server.

Prefix no No

Change settings No

Multiple input No

Interface type IP

Group entry (config-webdav)

Synopsis

```
(config)> ip http webdav
```

Example

```
(config)> ip http webdav
Core::Configurator: Done.
(config-webdav)>
```

History

Version	Description
3.04	The ip http webdav command has been introduced.

3.59.1 ip http webdav enable

Description Enable *WebDAV* server. By default, the server is disabled.

Command with **no** prefix disables *WebDAV* server.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
| (config-webdav)> enable
| (config-webdav)> no enable
```

Example

```
(config-webdav)> enable
WebDav::Server: Enabled.
```

```
(config-webdav)> no enable
WebDav::Server: Disabled.
```

History

	Version	Description
	3.04	The ip http webdav enable command has been introduced.

3.59.2 ip http webdav permissive

Description Access to the *WebDAV* server for all users without authentication.

Command with **no** prefix denies anonymous access.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
| (config-webdav)> permissive
| (config-webdav)> no permissive
```

Example

```
(config-webdav)> permissive
WebDav::Server: Enabled permissive mode.
```

```
(config-webdav)> no permissive
WebDav::Server: Disabled permissive mode.
```

History

Version	Description
3.04	The ip http webdav permissive command has been introduced.

3.59.3 ip http webdav security-level

Description Set the security level for remote access to the *WebDAV* server. By default, private value is set.

Prefix no No

Change settings Yes

Multiple input No

Interface type IP

Synopsis

(config-webdav)>	security-level (public private)
------------------	--

Arguments

Argument	Value	Description
public	<i>Keyword</i>	Access to the WebDAV server is allowed for public, private and protected interfaces.
private	<i>Keyword</i>	Access to the WebDAV server is allowed for private interfaces.

Example

```
(config-webdav)> security-level public
Http::Manager: WebDAV security level set to public.
```

History

Version	Description
3.04	The ip http webdav security-level command has been introduced.

3.60 ip http x-frame-options

Description Set X-Frame-Options header value for web-server (nginx) in Home network segment.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
| (config)> ip http x-frame-options <x-frame-options>
| (config)> no ip http x-frame-options <x-frame-options>
```

Arguments

Argument	Value	Description
x-frame-options	String	The X-Frame-Option value.

Example

```
(config)> ip http x-frame-options DENY
Http::Manager: Set X-Frame-Options to "DENY".
```

```
(config)> no ip http x-frame-options DENY
Http::Manager: Disabled X-Frame-Options header.
```

History

Version	Description
3.05	The ip http x-frame-options command has been introduced.

3.61 ip name-server

Description

Configure DNS server IP-addresses. Addresses saved in this fashion are called static as opposite to dynamic — as registered by [PPP](#) or [DHCP](#) services.

Active, that addressed being used are the ones that have been registered most recently as compared to the others. Usually, the system uses the addresses which were obtained by several recent successfully connected [PPP](#) or [DHCP](#) services. If none of the services registers [DNS](#) addresses, static settings will be active. However, if after registering dynamic addresses the static settings are changed by the user, they become active until the new dynamic addresses are registered.

ip name-server command can be entered multiple times if several DNS-server addresses need to be setup. Moreover, each entered address can be associated with one or more domain names for working with specific areas, such as local names in the corporate network.

Command with **no** prefix removes the specified DNS server address from the static and the active lists if the command is furnished with arguments. If you use no arguments, the entire list of static addresses will be removed.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Interface type

IP

Synopsis

```
(config)> ip name-server <address>[:<port>][<domain>[on <interface>]]
(config)> no ip name-server [<address>[:<port>]][<domain>[on <interface>]]
```

Arguments

Argument	Value	Description
address	<i>IP-address</i>	Name server address.
port	<i>Integer</i>	Name server port.
domain	<i>String</i>	Domain for which the server will be used. In resolving names the DNS-proxy first selects the address of the server with name best matching the requested domain. If the domain is not specified, the server will be used for all requests. Use "" as default domain. The maximum number of domains per one DNS entry is 16.
interface	<i>Interface name</i>	Interface name to configure.

Example

```
(config)> ip name-server 8.8.8.8 "" on ISP
Dns::InterfaceSpecific: Name server 8.8.8.8 added, domain ▶
(default), interface ISP.

(config)> no ip name-server
Dns::Manager: Static name server list cleared.
```

History

Version	Description
2.00	The ip name-server command has been introduced.
2.14	Argument port was added.

3.62 ip nat

Description

Enable translation of "local" addresses of network *network* or network behind the interface *interface*. For example, command `ip nat Home` means that all packets from the network Home, passing through the router will undergo IP spoofing.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Interface type

IP

Synopsis

```
(config)> ip nat (<interface> | <address><mask>)
```

```
(config)> no ip nat (<interface> | <address> <mask> )
```

Arguments	Argument	Value	Description
	interface	<i>Interface name</i>	Source interface name (full name or an alias).
	address	<i>IP-address</i>	Together with mask <i>mask</i> sets the range of source IP-addresses to be translated.
	mask	<i>IP-mask</i>	Mask of a translation range. There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).

Example

```
(config)> ip nat Home
Network:::Nat: A NAT rule added.
```

```
(config)> no ip nat Home
Network:::Nat: A NAT rule removed.
```

History

Version	Description
2.00	The ip nat command has been introduced.

3.63 ip nat full-cone

Description Enable mode *Full Cone NAT*. By default, the mode is disabled.

Command with **no** prefix disables the mode.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config)> ip nat full-cone
(config)> no ip nat full-cone
```

Example

```
(config)> ip nat full-cone
Network:::Nat: Full cone mode enabled.
```

```
(config)> no ip nat full-cone
Network:::Nat: Full cone mode disabled.
```

History

Version	Description
3.01	The ip nat full-cone command has been introduced.

3.64 ip nat restricted-cone

Description

Enable mode *Restricted NAT*. By default, the mode is disabled.

Command with **no** prefix disables the mode.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config)> ip nat restricted-cone
```

```
(config)> no ip nat restricted-cone
```

Example

```
(config)> ip nat restricted-cone
```

Network::Nat: Restricted cone mode enabled.

```
(config)> no ip nat restricted-cone
```

Network::Nat: Restricted cone mode disabled.

History

Version	Description
3.01	The ip nat restricted-cone command has been introduced.

3.65 ip nat sstp

Description

Enable translation for *SSTP* clients.

Command with **no** prefix removes the rule.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config)> ip nat sstp
```

```
(config)> no ip nat sstp
```

Example

```
(config)> ip nat sstp
SstpServer::Nat: SSTP VPN NAT enabled.
```

```
(config)> no ip nat sstp
SstpServer::Nat: SSTP VPN NAT disabled.
```

History

Version	Description
2.12	The ip nat sstp command has been introduced.

3.66 ip nat vpn

Description

Enable translation for VPN clients.

Command with **no** prefix removes the rule.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config)> ip nat vpn
(config)> no ip nat vpn
```

Example

```
(config)> ip nat vpn
VpnServer::Nat: PPTP VPN NAT enabled.
```

```
(config)> no ip nat vpn
VpnServer::Nat: PPTP VPN NAT disabled.
```

History

Version	Description
2.04	The ip nat vpn command has been introduced.

3.67 ip policy

Description

Access to a group of commands to configure IP Policy — a default route selection rules for hosts and home network segments. If the IP Policy profile is not found, the command tries to create it. You can enter up to 16 profiles.

Command with **no** prefix removes the defined IP Policy profile from the list.

Prefix no

Yes

Change settings

Yes

Multiple input	Yes						
Group entry	(config-policy)						
Synopsis	<pre> (config)> ip policy <name> (config)> no ip policy <name></pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>name</td><td><i>Policy name</i></td><td>IP Policy name. Latin letters, numbers, hyphens and underscores are acceptable. Not more than 32 characters.</td></tr> </tbody> </table>	Argument	Value	Description	name	<i>Policy name</i>	IP Policy name. Latin letters, numbers, hyphens and underscores are acceptable. Not more than 32 characters.
Argument	Value	Description					
name	<i>Policy name</i>	IP Policy name. Latin letters, numbers, hyphens and underscores are acceptable. Not more than 32 characters.					
Example	<pre>(config)> ip policy Policy0 Network::PolicyTable: Created policy "Policy0". (config)> no ip policy Policy0 Network::PolicyTable: Removed policy "Policy0".</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.12</td><td>The ip policy command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.12	The ip policy command has been introduced.		
Version	Description						
2.12	The ip policy command has been introduced.						

3.67.1 ip policy description

Description	Assign an arbitrary description to the specified IP Policy profile. Command with no prefix removes description.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Interface type	IP						
Synopsis	<pre> (config-policy)> description <description> (config-policy)> no description</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>description</td><td><i>String</i></td><td>An arbitrary description of the IP Policy. Latin letters, numbers, hyphens and underscores are acceptable. Not more than 256 characters.</td></tr> </tbody> </table>	Argument	Value	Description	description	<i>String</i>	An arbitrary description of the IP Policy. Latin letters, numbers, hyphens and underscores are acceptable. Not more than 256 characters.
Argument	Value	Description					
description	<i>String</i>	An arbitrary description of the IP Policy. Latin letters, numbers, hyphens and underscores are acceptable. Not more than 256 characters.					
Example	<pre>(config-policy)> description PolicyOne Network::PolicyTable: "Policy0": updated description.</pre>						

```
(config-policy)> no description
Network:::PolicyTable: "Policy0": updated description.
```

History

Version	Description
2.12	The ip policy description command has been introduced.

3.67.2 ip policy multipath

Description Enable the function of simultaneous use of WAN connections in the balancing mode.

Command with **no** prefix disables the function.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

(config-policy)> multipath
(config-policy)> no multipath

Example

```
(config-policy)> multipath
Network:::PolicyTable: "Policy0": enable multipath.
```

```
(config-policy)> no multipath
Network:::PolicyTable: "Policy0": disable multipath.
```

History

Version	Description
2.14	The ip policy multipath command has been introduced.

3.67.3 ip policy permit

Description Permit IP Policy for the global interface. If single IP Policy is permitted for multiple interfaces, you can specify a priority for each of them.

Command with **no** prefix denies the IP Policy for specified interface. If you use no arguments, IP Policy will be denied for the entire list of interfaces.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Synopsis

```
(config-policy)> permit global <interface> [ order <order> ]
(config-policy)> no permit [ global <interface> ]
```

Arguments

Argument	Value	Description
interface	<i>Interface name</i>	Full interface name or an alias.
order	<i>Integer</i>	The priority of global interface to which the IP Policy is permitted. Can take values from 1 to 65534, but not more than the number of global interfaces.

Example

```
(config-policy)> permit global L2TP0 order 0
Network:::PolicyTable: "Policy0": set permission to use L2TP0.

(config-policy)> no permit global L2TP0
Network:::PolicyTable: "Policy0": set no permission to use L2TP0.
```

History

Version	Description
2.12	The ip policy permit command has been introduced.

3.67.4 ip policy permit auto

Description Permit new connections for the IP Policy automatically. By default, the feature is disabled.

Command with **no** prefix removes auto permission.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-policy)> permit auto
(config-policy)> no permit auto
```

Example

```
(config-policy)> permit auto
Network:::PolicyTable: "Policy0": set auto permission.
```

```
(config-policy)> no permit auto
Network:::PolicyTable: "Policy0": set auto permission.
```

History

Version	Description
2.12	The ip policy permit auto command has been introduced.

3.67.5 ip policy rate-limit input

Description Add the input rate-limiting parameters to global interfaces of the IP Policy.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

(config-policy)>	rate-limit <interface> input (<rate> auto)
(config-policy)>	rate-limit <interface> no input

Arguments

Argument	Value	Description
interface	<i>Interface name</i>	The name of a global IP interface to rate-limit its traffic for a group of policy assignees.
rate	<i>Integer</i>	The ingress rate limit in kbps. Can take values in the range from 64 to 1000000.
auto	<i>Keyword</i>	Auto-ingress mode.

Example

```
(config-policy)> rate-limit WifiMaster1/WifiStation0 input auto
Network::PolicyTable: "Policy0": set input rate limit to "auto".
```

```
(config-policy)> rate-limit WifiMaster1/WifiStation0 input 100000
Network::PolicyTable: "Policy0": set input rate limit to "100000" ▶
kbps .
```

```
(config-policy)> rate-limit WifiMaster1/WifiStation0 no input
Network::PolicyTable: "Policy0": reset input rate limit.
```

History

Version	Description
3.05	The ip policy rate-limit input command has been introduced.

3.67.6 ip policy rate-limit output

Description Add output rate-limiting parameters to global interfaces of the IP Policy.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

(config-policy)>	rate-limit <interface> output <rate>
(config-policy)>	rate-limit <interface> no output

Arguments

Argument	Value	Description
interface	<i>Interface name</i>	The name of a global IP interface to rate-limit its traffic for a group of policy assignees.
rate	<i>Integer</i>	The ingress rate limit in kbps. Can take values in the range from 64 to 1000000.

Example

```
(config-policy)> rate-limit WifiMaster1/WifiStation0 output 1000
Network::PolicyTable: "Policy0": set output rate limit to "1000" ▶
kbps .
```

```
(config-policy)> rate-limit WifiMaster1/WifiStation0 no output
Network::PolicyTable: "Policy0": reset ouput rate limit.
```

History

Version	Description
3.05	The ip policy rate-limit output command has been introduced.

3.68 ip route

Description Add a static route to the routing table to describe a rule of IP-packets transmission through a particular gateway or network interface.

As the destination network, one can specify default keyword. In this case, a default route will be created.

Command with **no** prefix removes the route with the specified parameters.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Synopsis

```
(config)> ip route (<network> <mask> | <host> | default) (<gateway> [ interface ] | <interface>) [auto] [metric]
```

```
(config)> no ip route (<network> <mask> | <host> | default) [<gateway> | <interface>] [metric]
```

Arguments

Argument	Value	Description
network	<i>IP-address</i>	IP-address of the destination network.
mask	<i>IP-mask</i>	Mask of the destination network. There are two ways to enter the mask: in the canonical form (for example, 255.255.255.0) and in the form of prefix bit length (for example, /24).
host	<i>IP-address</i>	IP-address of the destination node.
default	<i>Keyword</i>	Helps specify default routes.
interface	<i>Interface name</i>	Interface full name or an alias. Specified as the direction of the packet transferring, if the interface has a point-to-point channel connected that requires no additional addressing within the channel. If priority interface ip global is set on the interface, the route is added to the system table only if there is no other higher priority route with the same address.
gateway	<i>IP-address</i>	IP-address of the router in a directly connected network. Can be specified along with the interface name, if it is required to specify interface ip global priority. If no interface is specified, the system determines it automatically based on the current IP settings.
auto	<i>Keyword</i>	Allows you to apply the route when specified gateway becomes available.
metric	<i>Integer</i>	Route metrics. Ignored in the current implementation.

Example

```
(config)> ip route default Home
Network:::RoutingTable: Added static route: 0.0.0.0/0 via Home.
```

```
(config)> ip route default Home
```

History

Version	Description
2.00	The ip route command has been introduced.

3.69 ip search-domain

Description Assign search domain to resolve hostnames that are not fully qualified.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config)>	ip search-domain <domain>
(config)>	no ip search-domain

Arguments	Argument	Value	Description
	domain	String	The domain name to assign.

Example

(config)> ip search-domain my.example
(config)> no ip search-domain my.example

History	Version	Description
	2.00	The ip search-domain command has been introduced.

3.70 ip sip alg direct-media

Description Replace IP address in Owner field of SDP. This feature is used to not configure port forwarding separately for VoIP traffic. By default, the setting is disabled.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config)>	ip sip alg direct-media
(config)>	no ip sip alg direct-media

Example

(config)> ip sip alg direct-media
Sip::Alg: Direct media enabled.

(config)> no ip sip alg direct-media
Sip::Alg: Direct media disabled.

History

Version	Description
2.11	The ip sip alg direct-media command has been introduced.

3.71 ip sip alg port

Description Specify a port number for SIP messages other than the default port. By default, port number is 5060.

Command with **no** prefix resets port to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config)>	ip sip alg port <port>
(config)>	no ip sip alg port

Arguments

Argument	Value	Description
port	Integer	The port number.

Example

```
(config)> ip sip alg port 7090
Sip::Alg: Port set to 7090.
```

```
(config)> no ip sip alg port
Sip::Alg: Port reset to default.
```

History

Version	Description
2.12	The ip sip alg port command has been introduced.

3.72 ip ssh

Description Access to a group of commands to manage SSH-server.

Prefix no No

Change settings No

Multiple input No

Interface type IP

Group entry (config-ssh)

Synopsis

```
(config)> ip ssh
```

Example

```
(config)> ip ssh
(config-ssh)>
```

History

Version	Description
2.12	The ip ssh command has been introduced.

3.72.1 ip ssh cipher

Description Set a symmetric key cipher for SSH session.

Command with **no** prefix removes the specified cipher.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Synopsis

```
(config-ssh)> cipher <cipher>
```

```
(config-ssh)> no cipher <cipher>
```

Arguments

Argument	Value	Description
cipher	chacha20-poly1305@openssh.com	An encryption algorithm ChaCha20-Poly1305.
	aes128-ctr	An encryption algorithm AES128-CTR.
	aes256-ctr	An encryption algorithm AES1256-CTR.
	aes128-gcm@openssh.com	An encryption algorithm AES128-GCM.
	aes256-gcm@openssh.com	An encryption algorithm AES256-GCM.

Example

```
(config-ssh)> cipher chacha20-poly1305@openssh.com
Ssh::Manager: Added cipher "chacha20-poly1305@openssh.com".
```

```
(config-ssh)> no cipher chacha20-poly1305@openssh.com
Ssh::Manager: Use default ciphers.
```

History

Version	Description
3.04	The ip ssh cipher command has been introduced.

Version	Description
3.05	New encryption algorithms aes128-gcm@openssh.com, aes256-gcm@openssh.com were added.

3.72.2 ip ssh keygen

Description Regeneration of a given type key.

Prefix no No

Change settings Yes

Multiple input No

Interface type IP

Synopsis (config-ssh)> **keygen <keygen>**

Arguments

Argument	Value	Description
keygen	default	Automatic generation of a new open key RSA2048 + ECDSA-NISTP521.
	rsa-1024	Automatic generation of a new open RSA-key with a length of 1024 bits.
	rsa-2048	Automatic generation of a new open RSA-key with a length of 2048 bits.
	rsa-4096	Automatic generation of a new open RSA-key with a length of 4096 bits.
	ecdsa-nistp256	Automatic generation of a new open ECDSA-key with a length of 256 bits.
	ecdsa-nistp384	Automatic generation of a new open ECDSA-key with a length of 384 bits.
	ecdsa-nistp521	Automatic generation of a new open ECDSA-key with a length of 521 bits.
	ed25519	Automatic generation of a new open ED25519 key with a length of 256 bits.

Example

```
(config-ssh)> keygen default
Ssh::Manager: Key generation is in progress...
```

History

Version	Description
2.12	The ip ssh keygen command has been introduced.

3.72.3 ip ssh lockout-policy

Description Set SSH bruteforce detection parameters for public interfaces. By default, feature is enabled.

Command with **no** prefix disables bruteforce detection.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

<pre>(config)> ip ssh lockout-policy <threshold> [<duration> [<observation-window>]]</pre>
<pre>(config)> no ip ssh lockout-policy</pre>

Arguments	Argument	Value	Description
	threshold	<i>Integer</i>	The number of failed attempts to log in. By default, 5 value is used.
	duration	<i>Integer</i>	An authorization ban duration for the specified IP in minutes. By default, 15 value is used.
	observation-window	<i>Integer</i>	Duration of suspicious activity observation in minutes. By default, 3 value is used.

Example

<pre>(config-ssh)> lockout-policy 10 30 2</pre>
<p>Ssh::Manager: Bruteforce detection is reconfigured.</p>

<pre>(config-ssh)> no lockout-policy</pre>
<p>Ssh::Manager: Bruteforce detection is disabled.</p>

History	Version	Description
	2.12	The ip ssh lockout-policy command has been introduced.

3.72.4 ip ssh port

Description Specify port number for SSH connection. By default, 22 port number is used.

Command with **no** prefix resets port number to default.

Prefix no Yes

Change settings Yes

Multiple input

No

Interface type

IP

Synopsis(config-ssh)> **port <number>**(config-ssh)> **no port****Arguments**

Argument	Value	Description
number	<i>Integer</i>	Port number. Can take values from 1 to 65535 inclusively.

Example(config-ssh)> **port 2626**
Ssh::Manager: Port changed to 2626.(config-ssh)> **no port**
Ssh::Manager: Port reset to 22.**History**

Version	Description
2.12	The ip ssh port command has been introduced.

3.72.5 ip ssh security-level

Description

Set SSH security level. By default, private value is set.

Prefix no

No

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis(config-ssh)> **security-level (public | private | protected)****Arguments**

Argument	Value	Description
public	<i>Keyword</i>	Access to the SSH-server is allowed for public, private and protected interfaces.
private	<i>Keyword</i>	Access to the SSH-server is allowed for private interfaces.
protected	<i>Keyword</i>	Access to the SSH-server is allowed for private and protected interfaces.

Example(config-ssh)> **security-level protected**
Ssh::Manager: Security level changed to protected.

History	Version	Description
	2.12	The ip ssh security-level command has been introduced.

3.72.6 ip ssh session timeout

Description Set the lifetime of inactive session for SSH connection. By default, 300 value is used, i.e. the function of activity tracking within a session is disabled.

Command with **no** prefix resets timeout to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config-ssh)> session timeout <timeout>
(config-ssh)> no session timeout
```

Arguments	Argument	Value	Description
	timeout	<i>Integer</i>	The lifetime of inactive session. Can take values from 5 to 2^{32} - 1 seconds inclusively.

Example

```
(config-ssh)> session timeout 123456
Ssh::Manager: A session timeout value set to 123456 seconds.
```

```
(config-ssh)> no session timeout
Ssh::Manager: A session timeout reset.
```

History	Version	Description
	3.03	The ip ssh session timeout command has been introduced.

3.72.7 ip ssh sftp

Description Access to a group of commands to manage [SFTP](#) server.

Prefix no No

Change settings No

Multiple input No

Interface type IP

Group entry (config-sftp)**Synopsis** (config)> ip ssh sftp**Example**(config)> ip ssh sftp
(config-sftp)>

History	Version	Description
	3.04	The ip ssh sftp command has been introduced.

3.72.7.1 ip ssh sftp enable

Description Enable *SFTP* server.
Command with **no** prefix disables the server.**Prefix no** Yes**Change settings** Yes**Multiple input** No**Interface type** IP**Synopsis** (config-sftp)> enable
(config-sftp)> no enable**Example**(config-sftp)> enable
Ssh::Manager: Enabled SFTP server.
(config-sftp)> no enable
Ssh::Manager: Disabled SFTP server.

History	Version	Description
	3.04	The ip ssh sftp enable command has been introduced.

3.72.7.2 ip ssh sftp permissive

Description Access to the *SFTP* server for all users without authentication.
Command with **no** prefix denies access.**Prefix no** Yes**Change settings** Yes**Multiple input** No

Interface type	IP				
Synopsis	<pre>(config-sftp)> permissive</pre> <pre>(config-sftp)> no permissive</pre>				
Example	<pre>(config-sftp)> permissive</pre> <pre>(config-sftp)> no permissive</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>3.04</td><td>The ip ssh sftp permissive command has been introduced.</td></tr> </tbody> </table>	Version	Description	3.04	The ip ssh sftp permissive command has been introduced.
Version	Description				
3.04	The ip ssh sftp permissive command has been introduced.				

3.72.7.3 ip ssh sftp root

Description	Set root directory on SFTP server by default. Command with no prefix resets root directory.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Interface type	IP						
Synopsis	<pre>(config-sftp)> root (<directory> <directory>)</pre> <pre>(config-sftp)> no root</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>directory</td><td>String</td><td>Path to default root directory.</td></tr> </tbody> </table>	Argument	Value	Description	directory	String	Path to default root directory.
Argument	Value	Description					
directory	String	Path to default root directory.					
Example	<pre>(config-sftp)> root files(ssd):/</pre> <p>Sftp::Server: A default root directory set to "files_ssdd:/".</p> <pre>(config-sftp)> no root files(ssd):/</pre> <p>Sftp::Server: A default root directory reset.</p>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>3.04</td><td>The ip ssh sftp root command has been introduced.</td></tr> </tbody> </table>	Version	Description	3.04	The ip ssh sftp root command has been introduced.		
Version	Description						
3.04	The ip ssh sftp root command has been introduced.						

3.73 ip static

Description Define translation rule for global and local IP-addresses. If *interface* or *network* corresponds to the interface with **secutity level** public, then the destination address translation (DNAT) will occure. If *to-address* corresponds to the interface with **secutity level** public, then source address translation (SNAT) will occure. TCP/UDP port number is always treated as the destination port.

If *network* corresponds to a single address and this address is equal to *to-address*, then this rule will prohibit the translation of the specified address, which could have been done based on the specified rules **ip nat**.

ip static rules have higher priority than the **ip nat** rules.

Prefix no Yes

Change settings Yes

Multiple input Yes

Interface type IP

Synopsis

```
(config)> ip static [<protocol>](<interface> | (<address><mask>) )
      (<port> through <end-port>(<to-address> | <to-host>) |
       [port](<to-address> | <to-host>) [to-port] |
       <to-address> | <to-host> | <to-interface>)

(config)> no ip static [<protocol>](<interface> | (<address><mask>) )
      (<port> through <end-port>(<to-address> | <to-host>) |
       [port](<to-address> | <to-host>) [to-port] |
       <to-address> | <to-host> | <to-interface>)
```

Arguments

Argument	Value	Description
protocol	tcp	TCP protocol.
	udp	UDP protocol.
interface	Interface name	Input interface name (full name or alias).
comment	String	User's notes with symbol ! before them.
address	IP-address	Along with mask <i>mask</i> sets the range of destination IP-addresses that are to be translated.
mask	IP-mask	Translation range mask. There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).

Argument	Value	Description
port	<i>Integer</i>	TCP/UDP port number for which a translation request comes. If not specified, all incoming requests will be translated.
end-port	<i>Integer</i>	The end of the range of ports.
to-address	<i>IP-address</i>	The destination address after translation.
to-host	<i>MAC-address</i>	The destination MAC-address after translation. Only MAC-address from known hosts are accepted. If the known host is deleted, then the associated rules will be deleted too.
to-port	<i>Integer</i>	TCP/UDP port number after translation. If not specified, the destination port remains the same.

Example

Let there be a router between the “local” network 172.16.1.0/24 ([security level private](#)) and “global” network 10.0.0.0/16 ([security level public](#)). It is required that all requests coming to the “global” interface of this router on port 80 to be broadcast to the “local” server with the address 172.16.1.33. The sequence of commands to implement the required schema might look like this:

```
(config)> interface Home ip address 192.168.1.1/24
Network::Interface::Ip: "Bridge0": IP address is 192.168.1.1/24.

(config)> ip static tcp ISP 80 172.16.1.33 80
Network::StaticNat: Static NAT rule has been added.

(config)> ip static tcp ISP 21 00:0e:c6:a1:22:11 !test
Network::StaticNat: Static NAT rule is already there.

(config)> ip static disable
Network::StaticNat: Static NAT disable unchanged.

(config)> no ip static
Network::StaticNat: Static NAT rules have been removed.
```

History

Version	Description
2.00	The ip static command has been introduced.
2.06	The to-host argument has been added.

3.74 ip static rule

Description

Disable IP-address translation rule or set rule operation time by schedule.

Command with **no** prefix enables the rule or removes the rule schedule.

Prefix no	Yes												
Change settings	Yes												
Multiple input	Yes												
Interface type	IP												
Synopsis	<pre>(config)> ip static rule <index> (disable schedule <schedule>) (config)> no ip static rule <index> (disable schedule)</pre>												
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>index</td><td><i>Integer</i></td><td>The translation rule number.</td></tr> <tr> <td>disable</td><td><i>Keyword</i></td><td>Disable the translation rule.</td></tr> <tr> <td>schedule</td><td><i>Schedule name</i></td><td>The name of the schedule that was created with schedule group of commands.</td></tr> </tbody> </table>	Argument	Value	Description	index	<i>Integer</i>	The translation rule number.	disable	<i>Keyword</i>	Disable the translation rule.	schedule	<i>Schedule name</i>	The name of the schedule that was created with schedule group of commands.
Argument	Value	Description											
index	<i>Integer</i>	The translation rule number.											
disable	<i>Keyword</i>	Disable the translation rule.											
schedule	<i>Schedule name</i>	The name of the schedule that was created with schedule group of commands.											
Example	<pre>(config)> ip static rule 0 schedule test_schedule Network::StaticNat: Static NAT rule schedule applied.</pre> <pre>(config)> ip static rule 0 disable Network::StaticNat: Static NAT rule disabled.</pre> <pre>(config)> no ip static rule 0 disable Network::StaticNat: Static NAT rule enabled.</pre> <pre>(config)> no ip static rule 0 schedule Network::StaticNat: Static NAT rule schedule removed.</pre>												
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.08</td><td>The ip static rule command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.08	The ip static rule command has been introduced.								
Version	Description												
2.08	The ip static rule command has been introduced.												

3.75 ip telnet

Description	Access to a group of commands to manage Telnet-server.
Prefix no	No
Change settings	No
Multiple input	No
Interface type	IP
Group entry	(config-telnet)

Synopsis

```
(config)> ip telnet
```

Example

```
(config)> ip telnet
(config-telnet)>
```

History

Version	Description
2.08	The ip telnet command has been introduced.

3.75.1 ip telnet lockout-policy

Description Set Telnet bruteforce detection parameters for public interfaces. By default, feature is enabled.

Command with **no** prefix disables bruteforce detection.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config)> ip telnet lockout-policy <threshold> [<duration>
[<observation-window>]]
```

```
(config)> no ip telnet lockout-policy
```

Arguments

Argument	Value	Description
threshold	Integer	The number of failed attempts to log in. By default, 5 value is used.
duration	Integer	An authorization ban duration for the specified IP in minutes. By default, 15 value is used.
observation-window	Integer	Duration of suspicious activity observation in minutes. By default, 3 value is used.

Example

```
(config)> ip telnet lockout-policy 10 30 2
Telnet::Manager: Bruteforce detection is reconfigured.
```

History

Version	Description
2.08	The ip telnet lockout-policy command has been introduced.

3.75.2 ip telnet port

Description Specify port number for telnet connection. By default, 23 port number is used.

Command with **no** prefix resets port number to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
| (config-telnet)> port <number>
| (config-telnet)> no port
```

Arguments

Argument	Value	Description
number	<i>Integer</i>	Port number. Can take values from 1 to 65535 inclusively.

Example

```
(config-telnet)> port 2525
Telnet::Server: Port unchanged.
```

```
(config-telnet)> no port
Telnet::Server: Port unchanged.
```

History

Version	Description
2.08	The ip telnet port command has been introduced.

3.75.3 ip telnet security-level

Description Set Telnet security level. By default, private value is set.

Prefix no No

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
| (config-telnet)> security-level (public | private | protected)
```

Arguments	Argument	Value	Description
	public	<i>Keyword</i>	Access to the Telnet-server is allowed for public, private and protected interfaces.
	private	<i>Keyword</i>	Access to the Telnet-server is allowed for private interfaces.
	protected	<i>Keyword</i>	Access to the Telnet-server is allowed for private and protected interfaces.

Example	(config-telnet)> security-level protected Telnet::Manager: Security level changed to protected.
---------	---

History	Version	Description
	2.08	The ip telnet security-level command has been introduced.

3.75.4 ip telnet session max-count

Description Set the maximal number of simultaneous sessions for telnet connection. By default, 4 is used.

Command with **no** prefix resets count to default.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

(config-telnet)>	session max-count <count>
(config-telnet)>	no session max-count

Arguments	Argument	Value	Description
	count	<i>Integer</i>	The maximal number of simultaneous sessions. Can take values from 1 to 4 inclusively.

Example	(config-telnet)> session max-count 4 Telnet::Server: The maximum session count set to 4.
---------	--

	(config-telnet)> no session max-count Telnet::Server: The maximum session count reset to 4.
--	---

History

Version	Description
2.08	The ip telnet session max-count command has been introduced.

3.75.5 ip telnet session timeout

Description

Set the lifetime of inactive session for telnet connection. By default, 300 value is used which means that the function of activity tracking within a session is disabled.

Command with **no** prefix resets timeout to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Interface type

IP

Synopsis

```
(config-telnet)> session timeout <timeout>
```

```
(config-telnet)> no session timeout
```

Arguments

Argument	Value	Description
timeout	<i>Integer</i>	The lifetime of inactive session. Can take values from 5 to $2^{32} - 1$ seconds inclusively.

Example

```
(config-telnet)> session timeout 600
Telnet::Server: A session timeout value set to 600 seconds.
```

```
(config-telnet)> no session timeout
Telnet::Server: A session timeout reset.
```

History

Version	Description
2.08	The ip telnet session timeout command has been introduced.

3.76 ip traffic-shape host

Description

Set the limit of data rate on a specified known host in both directions. By default speed is not limited.

Command with **no** prefix removes the setting for specified host. If you use no arguments, the entire list of rate limits for all hosts will be removed.

Prefix no

Yes

Change settings	Yes															
Multiple input	Yes															
Interface type	IP															
Synopsis	<pre>(config)> ip traffic-shape host <mac> rate <rate> [asymmetric <upstream-rate>] [schedule <schedule>]</pre> <pre>(config)> no ip traffic-shape host [<mac>]</pre>															
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>mac</td><td>MAC-address</td><td>MAC-address of the known host.</td></tr> <tr> <td>rate</td><td><i>Integer</i></td><td>Value of data download rate in Kbps. Limit should be in the range from 64 Kbps to 1 Gbps.</td></tr> <tr> <td>upstream-rate</td><td><i>Integer</i></td><td>Data upload rate in Kbps. Value can be in the range from 64 Kbps to 1 Gbps.</td></tr> <tr> <td>schedule</td><td><i>Schedule name</i></td><td>The name of the schedule that was created with schedule group of commands.</td></tr> </tbody> </table>	Argument	Value	Description	mac	MAC-address	MAC-address of the known host.	rate	<i>Integer</i>	Value of data download rate in Kbps. Limit should be in the range from 64 Kbps to 1 Gbps.	upstream-rate	<i>Integer</i>	Data upload rate in Kbps. Value can be in the range from 64 Kbps to 1 Gbps.	schedule	<i>Schedule name</i>	The name of the schedule that was created with schedule group of commands.
Argument	Value	Description														
mac	MAC-address	MAC-address of the known host.														
rate	<i>Integer</i>	Value of data download rate in Kbps. Limit should be in the range from 64 Kbps to 1 Gbps.														
upstream-rate	<i>Integer</i>	Data upload rate in Kbps. Value can be in the range from 64 Kbps to 1 Gbps.														
schedule	<i>Schedule name</i>	The name of the schedule that was created with schedule group of commands.														
Example	<pre>(config)> ip traffic-shape host a8:1e:82:81:f1:21 rate 80 TrafficControl::Manager: "a8:1e:82:81:f1:21" host rate limited ▶ to DL 80 / UL 80 Kbits/sec.</pre> <pre>(config)> ip traffic-shape host a8:1e:82:81:f1:21 rate 80 ▶ asymmetric 64 TrafficControl::Manager: "a8:1e:82:81:f1:21" host rate limited ▶ to DL 80 / UL 64 Kbits/sec..</pre> <pre>(config)> ip traffic-shape host a8:1e:82:81:f1:21 rate 80 ▶ asymmetric 64 schedule Update TrafficControl::Manager: "a8:1e:82:81:f1:21" host rate limited ▶ to DL 80 / UL 64 Kbits/sec (controlled by schedule Update).</pre> <pre>(config)> no ip traffic-shape host a8:1e:82:81:f1:21 TrafficControl::Manager: Rate limit removed for host ▶ "a8:1e:82:81:f1:21".</pre> <pre>(config)> no ip traffic-shape host a8:1e:82:81:f1:21 TrafficControl::Manager: Rate limit removed for host ▶ "a8:1e:82:81:f1:21".</pre> <pre>(config)> no ip traffic-shape host TrafficControl::Manager: Rate limits for all hosts removed.</pre>															
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.05</td><td>The ip traffic-shape host command has been introduced.</td></tr> <tr> <td>2.08</td><td>The schedule argument was added.</td></tr> </tbody> </table>	Version	Description	2.05	The ip traffic-shape host command has been introduced.	2.08	The schedule argument was added.									
Version	Description															
2.05	The ip traffic-shape host command has been introduced.															
2.08	The schedule argument was added.															

Version	Description
3.04	The upstream-rate argument was added.

3.77 ip traffic-shape unknown-host

Description Set the data rate limitation for unregistered devices in both directions. By default, speed is unlimited.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config)> ip traffic-shape unknown-host rate <rate> [ asymmetric
<upstream-rate> ]
(config)> no ip traffic-shape unknown-host rate
```

Arguments

Argument	Value	Description
rate	<i>Integer</i>	The data download rate in Kbps. Value should be in the range from 64 Kbps to 1 Gbps.
upstream-rate	<i>Integer</i>	Data upload rate in Kbps. Value can be in the range from 64 Kbps to 1 Gbps.

Example

```
(config)> ip traffic-shape unknown-host rate 80
TrafficControl::Manager: Rate limit for unknown hosts set to 80 ▶
Kbits/sec.
```

```
(config)> ip traffic-shape unknown-host rate 80 asymmetric 64
TrafficControl::Manager: Rate limit for unknown hosts set to ▶
80/64 Kbits/sec.
```

```
(config)> no ip traffic-shape unknown-host rate
TrafficControl::Manager: Rate limit for unknown hosts removed.
```

History

Version	Description
2.09	The ip traffic-shape unknown-host command has been introduced.
3.04	The upstream-rate argument was added.

3.78 ipv6 firewall

Description Enable IPv6 firewall. By default, the setting is enabled.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config)>	ipv6 firewall
(config)>	no ipv6 firewall

Example

(config)>	ipv6 firewall
(config)>	no ipv6 firewall

History

Version	Description
2.06	The ipv6 firewall command has been introduced.

3.79 ipv6 local-prefix

Description Configure a local (ULA) prefix. Argument can be a literal prefix or **default**, which generates a persistent unique prefix automatically.

Command with **no** prefix disables the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config)>	ipv6 local-prefix (default <prefix>)
(config)>	no ipv6 local-prefix [default <prefix>]

Arguments

Argument	Value	Description
default	<i>Keyword</i>	Generate persistent unique prefix.
prefix	<i>Prefix</i>	Local ULA prefix. Must be a valid prefix in the block fd00::/8 with a prefix length no longer than 48.

Example

(config)>	ipv6 local-prefix default
(config)>	Ip6::Prefixes: Default ULA prefix enabled.

```
(config)> ipv6 local-prefix fd01:db8:43::/48
Ip6::Prefixes: Added static prefix: fd01:db8:43::/48.
```

```
(config)> no ipv6 local-prefix default
Ip6::Prefixes: Default ULA prefix disabled.
```

```
(config)> no ipv6 local-prefix fd01:db8:43::/48
Ip6::Prefixes: Deleted static prefix: fd01:db8:43::/48.
```

History

Version	Description
2.00	The ipv6 local-prefix command has been introduced.

3.80 ipv6 name-server

Description

Configure DNS server IPv6-addresses. Addresses saved in this fashion are called static as opposite to dynamic — as registered by [PPP](#) or [DHCP](#) services.

ipv6 name-server command can be entered multiple times if several DNS-server addresses need to be setup.

Command with **no** prefix removes the specified DNS server address from the static and the active lists if the command is furnished with arguments, or clears the list of static addresses if the command has no arguments.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(config)> ipv6 name-server <address> [<domain>]
```

```
(config)> no ipv6 name-server [<address> [<domain>]]
```

Arguments

Argument	Value	Description
address	<i>IPv6-address</i>	Name server address.
domain	<i>String</i>	Domain for which the server will be used. In resolving names the DNS-proxy first selects the address of the server with name best matching the requested domain. If the domain is not specified, the server will be used for all requests. Use " " as default domain.

Example

```
(config)> ipv6 name-server 2001:4860:4860::8888
Dns::Manager: Name server 2001:4860:4860::8888 added, domain ▶
(default).
```

```
(config)> ipv6 name-server 2001:4860:4860::8888 google.com
Dns::Manager: Name server 2001:4860:4860::8888 added, domain >
google.com.
```

```
(config)> no ipv6 name-server
Dns::Manager: Static name server list cleared.
```

History

Version	Description
2.00	The ipv6 name-server command has been introduced.

3.81 ipv6 pass

Description Enable Pass Through mode on the router for IPv6-packets. By default, the feature is disabled.

Command with **no** prefix disables the function.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> ipv6 pass through <wan-iface><lan-iface>
(config)> no ipv6 pass
```

Arguments

Argument	Value	Description
wan-iface	<i>Interface name</i>	Full WAN-interface name or an alias.
lan-iface	<i>Interface name</i>	Full LAN-interface name or an alias.

Example

```
(config)> ipv6 pass through ISP Home
Ip6::Pass: Configured pass from "GigabitEthernet1" to "Bridge0".
(config)> no ipv6 pass
Ip6::Pass: Disabled.
```

History

Version	Description
2.06	The ipv6 pass command has been introduced.

3.82 ipv6 route

Description	Add a static route to the routing table to describe a rule of IPv6-packets transmission through a particular gateway or network interface.															
	As the destination network keyword default can be specified. In this case, a default route will be created.															
	Command with no prefix removes the route with the specified parameters.															
Prefix no	Yes															
Change settings	Yes															
Multiple input	Yes															
Synopsis	<pre>(config)> ipv6 route (<prefix> default)(<interface> [<gateway>] <gateway>) (config)> no ipv6 route (<prefix> default)(<interface> [<gateway>] <gateway>)</pre>															
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>prefix</td><td><i>Prefix</i></td><td>IPv6 prefix.</td></tr> <tr> <td>default</td><td><i>Keyword</i></td><td>Default prefix.</td></tr> <tr> <td>interface</td><td><i>Interface name</i></td><td>Full interface name or an alias.</td></tr> <tr> <td>gateway</td><td><i>IP-address</i></td><td>IP-address of the router in a directly connected network.</td></tr> </tbody> </table>	Argument	Value	Description	prefix	<i>Prefix</i>	IPv6 prefix.	default	<i>Keyword</i>	Default prefix.	interface	<i>Interface name</i>	Full interface name or an alias.	gateway	<i>IP-address</i>	IP-address of the router in a directly connected network.
Argument	Value	Description														
prefix	<i>Prefix</i>	IPv6 prefix.														
default	<i>Keyword</i>	Default prefix.														
interface	<i>Interface name</i>	Full interface name or an alias.														
gateway	<i>IP-address</i>	IP-address of the router in a directly connected network.														
Example	<pre>(config)> ipv6 route 2002:c100:aeb5::/48 ISP route added</pre> <pre>(config)> no ipv6 route 2002:c100:aeb5::/48 ISP route erased</pre> <pre>(config)> ipv6 route 2002:c100:aeb5:100::/56 2002:c100:aeb5::33 route added</pre> <pre>(config)> no ipv6 route 2002:c100:aeb5:100::/56 2002:c100:aeb5::33 route erased</pre>															
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.00</td><td>The ipv6 route command has been introduced.</td></tr> <tr> <td>2.11</td><td>gateway argument has been added.</td></tr> </tbody> </table>	Version	Description	2.00	The ipv6 route command has been introduced.	2.11	gateway argument has been added.									
Version	Description															
2.00	The ipv6 route command has been introduced.															
2.11	gateway argument has been added.															

3.83 ipv6 static

Description Define the rule to allow incoming connection to a specified port of a registered home network device.

ipv6 firewall should be enabled.

Command with **no** prefix removes the rule.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> ipv6 static <protocol> [<interface>] <mac> <port> [ through <end-port> ]
```

```
(config)> no ipv6 static [<protocol> [<interface>] <mac> <port> [ through <end-port> ]]
```

Arguments

Argument	Value	Description
protocol	tcp	TCP protocol.
	udp	UDP protocol.
interface	Interface name	Input interface name (full name or an alias).
mac	MAC-address	MAC-address of host.
port	Integer	TCP/UDP port number for which incoming request comes.
end-port	Integer	The end of the range of ports.

Example

```
(config)> ipv6 static tcp ISP 64:a2:f9:51:b4:8a 80 through 80
Ip6::Firewall: Rule updated.
```

```
(config)> no ipv6 static tcp ISP 64:a2:f9:51:b4:8a 80 through 80
Ip6::Firewall: Static rule removed.
```

History

Version	Description
2.12	The ipv6 static command has been introduced.

3.84 ipv6 subnet

Description Access to a group of commands to configure a LAN IPv6 segment. If the segment is not found, the command tries to create it.

Prefix no Yes

Change settings	Yes						
Multiple input	Yes						
Group entry	(config-subnet)						
Synopsis	<pre> (config)> ipv6 subnet <name> (config)> no ipv6 subnet [<name>]</pre>						
Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>name</td><td><i>String</i></td><td>Subnet name or an alias.</td></tr></tbody></table>	Argument	Value	Description	name	<i>String</i>	Subnet name or an alias.
Argument	Value	Description					
name	<i>String</i>	Subnet name or an alias.					

Example	<pre>(config)> ipv6 subnet Default (config-subnet)></pre>
----------------	---

History	Version	Description
	2.00	The ipv6 subnet command has been introduced.

3.84.1 ipv6 subnet bind

Description	Bind the subnet to an interface. Command with no prefix cancels binding.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre> (config-subnet)> bind <bind> (config-subnet)> no bind</pre>						
Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>bind</td><td><i>Interface name</i></td><td>Full interface name or an alias.</td></tr></tbody></table>	Argument	Value	Description	bind	<i>Interface name</i>	Full interface name or an alias.
Argument	Value	Description					
bind	<i>Interface name</i>	Full interface name or an alias.					

Example	<pre>(config-subnet)> bind WifiMaster0/AccessPoint1 Ip6::Subnets: Interface "WifiMaster0/AccessPoint1" bound to ▶ subnet "Default". (config-subnet)> no bind Ip6::Subnets: Interface unbound from subnet "Default".</pre>
----------------	---

History

Version	Description
2.00	The ipv6 subnet bind command has been introduced.

3.84.2 ipv6 subnet mode

Description

Select the address configuration mode for hosts in the subnet. Exclusive options are **dhcp** and **slaac**. The former will enable a local DHCPv6 server for the purposes of address assignment, and the latter will enable SLAAC (Stateless Address Autoconfiguration).

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-subnet)> mode <mode>
(config-subnet)> no mode
```

Arguments

Argument	Value	Description
mode	slaac	Enable SLAAC (stateless autoconfiguration).
	dhcp	Enable DHCPv6 server (stateful autoconfiguration).

Example

```
(config-subnet)> mode dhcp
Ip6::Subnets: Subnet "Default" enabled as DHCP.
```

```
(config-subnet)> no mode
Ip6::Subnets: Subnet "Default" disabled.
```

History

Version	Description
2.00	The ipv6 subnet mode command has been introduced.

3.84.3 ipv6 subnet number

Description Assign the subnet ID, which will determine the advertised prefix for the segment. Must be unique across subnets.

Prefix no No

Change settings Yes

Multiple input No

Synopsis

```
(config-subnet)> number <number>
```

Arguments

Argument	Value	Description
number	<i>Integer</i>	Unique subnet ID.

Example

```
(config-subnet)> number 2
Ip6::Subnets: Number 2 assigned to subnet "Default".
```

History

Version	Description
2.00	The ipv6 subnet number command has been introduced.

3.85 isolate-private

Description Prohibit data transfer between any interfaces with [security level](#) private.
Enabled by default.

Command with **no** prefix cancels the command, allowing data transfer between private interfaces.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> isolate-private
(config)> no isolate-private
```

Example

```
(config)> isolate-private
Netfilter::Manager: Private networks isolated.
```

```
(config)> no isolate-private
Netfilter::Manager: Private networks not isolated.
```

History

Version	Description
2.00	The isolate-private command has been introduced.

3.86 kabinet

Description Access to a group of commands to configure KABiNET authenticator parameters.

Command with **no** prefix resets all parameters to default.

Prefix no Yes

Change settings Yes

Multiple input	No				
Group entry	(kabinet)				
Synopsis	<pre> (config)> kabinet (config)> no kabinet</pre>				
Example	<pre>(config)> kabinet (kabinet)> (config)> no kabinet Kabinet::Authenticator: A configuration reset.</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.02</td> <td>The kabinet command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.02	The kabinet command has been introduced.
Version	Description				
2.02	The kabinet command has been introduced.				

3.86.1 kabinet access-level

Description	Set an access level for KABiNET authenticator. By default, access level <code>internet</code> is used. Command with no prefix resets level to default.							
Prefix no	Yes							
Change settings	Yes							
Multiple input	No							
Synopsis	<pre> (kabinet)> access-level <level> (kabinet)> no access-level</pre>							
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td rowspan="2">level</td> <td>lan</td> <td rowspan="2">Access level value.</td> </tr> <tr> <td>internet</td> </tr> </tbody> </table>	Argument	Value	Description	level	lan	Access level value.	internet
Argument	Value	Description						
level	lan	Access level value.						
	internet							
Example	<pre>(kabinet)> access-level lan Kabinet::Authenticator: An access level set to "lan".</pre>							
	<pre>(kabinet)> access-level internet Kabinet::Authenticator: An access level set to "internet".</pre>							
	<pre>(kabinet)> no access-level Kabinet::Authenticator: An access level reset to "internet".</pre>							

History

Version	Description
2.02	The kabinet access-level command has been introduced.

3.86.2 kabinet interface

Description Bind KABiNET authenticator to the specified interface.

Command with **no** prefix unbinds interface.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(kabinet)> interface <interface>
(kabinet)> no interface
```

Arguments

Argument	Value	Description
interface	<i>Interface name</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(kabinet)> interface [Tab]
```

Usage template:
 interface {interface}

Choose:
 GigabitEthernet1
 ISP
 WifiMaster0/AccessPoint2
 WifiMaster1/AccessPoint1
 WifiMaster0/AccessPoint3
 WifiMaster0/AccessPoint0
 AccessPoint

```
(kabinet)> interface ISP
Kabinet::Authenticator: Bound to GigabitEthernet1.
```

```
(kabinet)> no interface
Kabinet::Authenticator: Interface binding cleared.
```

History

Version	Description
2.02	The kabinet interface command has been introduced.

3.86.3 kabinet password

Description	Set a password for KABiNET authenticator. By default, password is not set. Command with no prefix clears the password.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(kabinet)> password <password> (kabinet)> no password</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>password</td><td><i>String</i></td><td>The password for authentication.</td></tr> </tbody> </table>	Argument	Value	Description	password	<i>String</i>	The password for authentication.
Argument	Value	Description					
password	<i>String</i>	The password for authentication.					
Example	<pre>(kabinet)> password 123456789 Kabinet::Authenticator: A password set.</pre> <pre>(kabinet)> no password Kabinet::Authenticator: A password cleared.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.02</td><td>The kabinet password command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.02	The kabinet password command has been introduced.		
Version	Description						
2.02	The kabinet password command has been introduced.						

3.86.4 kabinet port

Description	Set the server port for KABiNET authenticator. By default, values 8314 or 8899 are used. Command with no prefix resets port to default.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(kabinet)> port <port> (kabinet)> no port</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>port</td><td><i>Integer</i></td><td>The port number.</td></tr> </tbody> </table>	Argument	Value	Description	port	<i>Integer</i>	The port number.
Argument	Value	Description					
port	<i>Integer</i>	The port number.					

Example

```
(kabinet)> port 12345
Kabinet::Authenticator: A server port set.
```

```
(kabinet)> no port
Kabinet::Authenticator: A server port reset.
```

History

Version	Description
2.14	The kabinet port command has been introduced.

3.86.5 kabinet protocol-version

Description Set version of KABiNET authenticator protocol. By default, protocol version 2 is used.

Command with **no** prefix resets protocol to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(kabinet)> protocol-version <version>
(kabinet)> no protocol-version
```

Arguments

Argument	Value	Description
version	String	Version of protocol.

Example

```
(kabinet)> protocol-version 1
Kabinet::Authenticator: A protocol version set to "1".
```

```
(kabinet)> no protocol-version
Kabinet::Authenticator: A protocol version reset to "2".
```

History

Version	Description
2.02	The kabinet protocol-version command has been introduced.

3.86.6 kabinet server

Description Set an IP-address of KABiNET authentication server. By default, IP 10.0.0.1 is used.

Command with **no** prefix resets the address.

Prefix no Yes

Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(kabinet)> server <address> (kabinet)> no server</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>address</td><td><i>IP-address</i></td><td>Authentication server address.</td></tr> </tbody> </table>	Argument	Value	Description	address	<i>IP-address</i>	Authentication server address.
Argument	Value	Description					
address	<i>IP-address</i>	Authentication server address.					
Example	<pre>(kabinet)> server 77.222.111.1 Kabinet::Authenticator: A server address set.</pre> <pre>(kabinet)> no server Kabinet::Authenticator: A server address reset.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.02</td><td>The kabinet server command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.02	The kabinet server command has been introduced.		
Version	Description						
2.02	The kabinet server command has been introduced.						

3.87 known host

Description	Set known host.									
Prefix no	Yes									
Change settings	Yes									
Multiple input	Yes									
Synopsis	<pre>(config)> known host <name> <mac> (config)> no known host [mac]</pre>									
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>name</td><td><i>String</i></td><td>Arbitrary host name.</td></tr> <tr> <td>mac</td><td><i>MAC-address</i></td><td>MAC-address.</td></tr> </tbody> </table>	Argument	Value	Description	name	<i>String</i>	Arbitrary host name.	mac	<i>MAC-address</i>	MAC-address.
Argument	Value	Description								
name	<i>String</i>	Arbitrary host name.								
mac	<i>MAC-address</i>	MAC-address.								
Example	<pre>(config)> known host MY 00:0e:c6:a2:22:a1 Core::KnownHosts: New host "MY" has been created.</pre> <pre>(config)> no known host 00:0e:c6:a2:22:a1 Core::KnownHosts: Host 00:0e:c6:a1:26:a8 has been removed.</pre>									

History

Version	Description
2.00	The known host command has been introduced.

3.88 mdns

DescriptionAccess to a group of commands to manage *mDNS* service.**Prefix no**

No

Change settings

No

Multiple input

No

Group entry

(config-mdns)

Synopsis

```
(config)> mdns
```

Example

```
(config)> mdns
Core::Configurator: Done.
(config-mdns)>
```

History

Version	Description
3.07	The mdns command has been introduced.

3.88.1 mdns reflector disable

DescriptionForcibly disable transparency mode between home network segments, irrespective of segment isolation (see the [interface security-level](#) command).Command with **no** prefix disables the setting.**Prefix no**

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-mdns)> reflector disable
(config-mdns)> no reflector disable
```

Example

```
(config-mdns)>reflector disable
Mdns::Manager: Reflector disabled.
```

```
(config-mdns)>no reflector disable
Mdns::Manager: Reflector enabled.
```

History	Version	Description
	3.07	The mdns reflector disable command has been introduced.

3.88.2 mdns reflector enforce

Description	Forcibly enable transparency mode between home network segments, irrespective of segment isolation (see the interface security-level command). Command with no prefix disables the setting.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config-mdns)> reflector enforce (config-mdns)> no reflector enforce</pre>
Example	<pre>(config-mdns)>reflector enforce Mdns::Manager: Reflector enforced. (config-mdns)>no reflector enforce Mdns::Manager: Reflector unenforced.</pre>

History	Version	Description
	3.07	The mdns reflector enforce command has been introduced.

3.89 mws acquire

Description	Attach new device to MWS . Command with no prefix stops the acquisition.
Prefix no	Yes
Change settings	No
Multiple input	No
Synopsis	<pre>(config)> mws acquire <candidate> [eula-accept] [dpn-accept] [no-update] (config)> no mws acquire <candidate></pre>

Arguments

Argument	Value	Description
candidate	<i>String</i>	Device ID — MAC-address or CID.
eula-accept	<i>Keyword</i>	Send eula accept command.
dpn-accept	<i>Keyword</i>	Send Device Privacy Notice accept.
no-update	<i>Keyword</i>	Acquisition without firmware update confirmation.

Example

```
(config)> mws acquire ab1409a2-0f87-11e8-8f23-3d5f5921b253 >
eula-accept
Mws::Controller: Candidate "ab1409a2-0f87-11e8-8f23-3d5f5921b253" >
acquire started.

(config)> mws acquire 7207838e-af7d-11e6-8029-25463bd03811 >
eula-accept dpn-accept no-update
Mws::Controller: Candidate "7207838e-af7d-11e6-8029-25463bd03811" >
acquire started.

(config)> no mws acquire 60:31:97:3f:36:00
Mws::Controller: Candidate "60:31:97:3f:36:00" acquire stopped.
```

History

Version	Description
2.15	The mws acquire command has been introduced.

3.90 mws backhaul shutdown

Description

Disable hidden wireless backhaul access points for *MWS* service. By default, the setting is enabled.

Command with **no** prefix enables hidden wireless backhaul access points.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> mws backhaul shutdown
(config)> no mws backhaul shutdown
```

Example

```
(config)> mws backhaul shutdown
Mws::Controller: Backhaul disabled.

(config)> no mws backhaul shutdown
Mws::Controller: Backhaul enabled.
```

History

Version	Description
3.04	The mws backhaul shutdown command has been introduced.

3.91 mws log stp

Description

Enable STP logging for the interface. Allows you to track sent and received BPDU packets.

Command with **no** prefix disables logging for specified interface. If you use no argument, the entire list of STP logging will be removed.

Prefix no

Yes

Change settings

No

Multiple input

Yes

Synopsis

```
(config)> mws log stp <interface>
(config)> no mws log stp [ <interface> ]
```

Arguments

Argument	Value	Description
interface	<i>Interface name</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(config)> mws log stp Bridge0
Network::Interface::Rtx::WifiController: Enabled STP logging for ▶ "Bridge0".
(config)> no mws log stp Bridge0
Network::Interface::Rtx::WifiController: Disabled STP logging ▶ for "Bridge0".
(config)> no mws log stp
Network::Interface::Rtx::WifiController: Disabled all STP logging.
```

History

Version	Description
3.06	The mws log stp command has been introduced.

3.92 mws member

Description

Command with **no** prefix removes **MWS** member. If you use no argument, the entire list of members will be cleared.

Prefix no

Yes

Change settings No**Multiple input** No**Synopsis** (config)> **no mws member [member]****Arguments**

Argument	Value	Description
member	String	Device ID — MAC-address or CID.

Example

```
(config)> mws no member 2937a388-0d00-11e7-8029-7119319f930e
Mws::MemberList: Member 2937a388-0d00-11e7-8029-7119319f930e ▶
pending factory reset.
```

History

Version	Description
2.15	The mws member command has been introduced.

3.93 mws member check-update

Description Initiate an update check for [MWS](#) member.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (config)> **mws member <member> check-update****Arguments**

Argument	Value	Description
member	String	Device ID — MAC-address or CID.

Example

```
(config)> mws member ab1409a2-0f87-11e8-8f23-3d5f5921b253 ▶
check-update
Mws::MemberList: Member "50:ff:20:08:7a:6a" ▶
(ab1409a2-0f87-11e8-8f23-3d5f5921b253) checking for an update.
```

History

Version	Description
2.15	The mws member check-update command has been introduced.

3.94 mws member debug

Description Enable [MWS](#) member debug. By default, setting is disabled.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config)>	mws member <member> debug
(config)>	no mws member <member> debug

Arguments	Argument	Value	Description
	member	<i>String</i>	Device ID — MAC-address or CID.

Example

(config)>	mws member 60:31:97:3c:11:12 debug
Mws::MemberList:	Member "60:31:97:3c:11:12" ▶
	(7207838e-af7d-11e6-8011-25463bd03812) RCI debug enabled.
(config)>	no mws member 60:31:97:3c:11:12 debug
Mws::MemberList:	Member "60:31:97:3c:11:12" ▶
	(7207838e-af7d-11e6-8011-25463bd03812) RCI debug disabled.

History	Version	Description
	3.05	The mws member debug command has been introduced.

3.95 mws member dpn-accept

Description Accept *DPN* for *MWS* member.

Prefix no No

Change settings No

Multiple input No

Synopsis

(config)>	mws member <member> dpn-accept
-----------	---

Arguments	Argument	Value	Description
	member	<i>String</i>	Device ID — MAC-address or CID.

Example

(config)>	mws member 7207838e-af7d-11e6-8029-25463bd03828 ▶ dpn-accept
Mws::Controller:	Candidate "ab1409a2-0f87-11e8-8f23-3d5f5921b253" ▶
	acquire started.

History

Version	Description
3.05	The mws member dpn-accept command has been introduced.

3.96 mws revisit

Description Re-read status of potential *MWS* member.**Prefix no** Yes**Change settings** No**Multiple input** No

Synopsis

```
(config)> mws revisit <candidate>
(config)> no mws revisit <candidate>
```

Arguments

Argument	Value	Description
candidate	String	Device ID — MAC-address or CID.

Example

```
(config)> mws revisit 50:ff:20:08:71:62
Mws::Controller: Candidate "50:ff:20:08:71:62" revisit started.

(config)> mws no revisit 50:ff:20:08:71:62
Mws::Controller: Candidate "50:ff:20:08:71:62" revisit stopped.
```

History

Version	Description
2.15	The mws revisit command has been introduced.

3.97 mws zone

Description Limit the connection area of the client device within the specified *MWS* members.

Command with **no** prefix removes the specified setting. If you use no arguments, the entire list of restrictions will be removed.

Prefix no Yes**Change settings** No**Multiple input** Yes

Synopsis

```
(config)> mws zone <mac> <cid>
```

```
(config)> no mws zone [ <mac> <cid> ]
```

Arguments

Argument	Value	Description
mac	MAC-address	MAC-address of client device. It must be listed as a known host.
cid	CID	Identifier of <i>MWS</i> member.

Example

```
(config)> mws zone 11:22:33:ec:58:e2 ▶
12298f60-d886-11e7-9396-176971eeb8d6
Mws::Controller: Added zone 11:22:33:ec:58:e2 ▶
12298f60-d886-11e7-9396-176971eeb8d6.
```

```
(config)> no mws zone 11:22:33:ec:58:e2 ▶
12298f60-d886-11e7-9396-176971eeb8d6
Mws::Controller: Deleted zone 11:22:33:ec:58:e2 ▶
12298f60-d886-11e7-9396-176971eeb8d6.
```

```
(config)> no mws zone
Mws::Controller: Cleared all zones.
```

History

Version	Description
3.06	The mws zone command has been introduced.

3.98 ndns

Description

Access to a group of commands to manage KeenDNS service.

Prefix no

No

Change settings

No

Multiple input

No

Group entry

(ndns)

Synopsis

```
(config)> ndns
```

Example

```
(config)> ndns
Core::Configurator: Done.
```

History

Version	Description
2.07	The ndns command has been introduced.

3.98.1 ndns book-name

Description	Reserve Public DNS device hostname allocation. For hostname transmission to another Keenetic device transfer-code parameter is used.																		
	To transfer hostname it is necessary: 1. Execute command with transfer-code on the transmitting side. 2. Execute the same command with the same parameters on the receiving side.																		
	Lifetime of transfer-code is 1 week.																		
Prefix no	No																		
Change settings	Yes																		
Multiple input	No																		
Synopsis	(ndns)> book-name <name> <domain> [<access>] [<ipv6 access6>] <transfer-code>]																		
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>name</td> <td><i>String</i></td> <td>The hostname for allocation.</td> </tr> <tr> <td>domain</td> <td><i>String</i></td> <td>Second-level domain.</td> </tr> <tr> <td>access</td> <td>auto cloud direct</td> <td>Automatic access type. Hostname is registered on the cloud server IP-address, HTTP traffic is tunneled to the Peak DSL. Hostname is registered on the Peak DSL WAN-address.</td> </tr> <tr> <td>access6</td> <td>cloud</td> <td>Enable cloud mode for IPv6 address.</td> </tr> <tr> <td>transfer-code</td> <td><i>Hexadecimal number</i></td> <td>Code for domain transmission to another Keenetic device. The length is 32 symbols.</td> </tr> </tbody> </table>	Argument	Value	Description	name	<i>String</i>	The hostname for allocation.	domain	<i>String</i>	Second-level domain.	access	auto cloud direct	Automatic access type. Hostname is registered on the cloud server IP-address, HTTP traffic is tunneled to the Peak DSL. Hostname is registered on the Peak DSL WAN-address.	access6	cloud	Enable cloud mode for IPv6 address.	transfer-code	<i>Hexadecimal number</i>	Code for domain transmission to another Keenetic device. The length is 32 symbols.
Argument	Value	Description																	
name	<i>String</i>	The hostname for allocation.																	
domain	<i>String</i>	Second-level domain.																	
access	auto cloud direct	Automatic access type. Hostname is registered on the cloud server IP-address, HTTP traffic is tunneled to the Peak DSL. Hostname is registered on the Peak DSL WAN-address.																	
access6	cloud	Enable cloud mode for IPv6 address.																	
transfer-code	<i>Hexadecimal number</i>	Code for domain transmission to another Keenetic device. The length is 32 symbols.																	

Example

```
(ndns)> book-name myhome23 keenetic.pro

done, layout = view, title = NDSS::ndns/bookName ▶
(Public DNS Hostname Booking), sub-title = The name booking was ▶
successful.:
client, geo = RU, ip = 193.0.174.200, format = ▶
clean, date = 2019-05-23T09:46:54.536Z, standalone = false:

fields:
field, name = name, title = Public Name:
field, name = domain, title = Domain Name:
```

```

                field, name = updated, title = Updated, type ►
= date, variant = date:
                field, name = address, title = IP Address:
                field, name = access, title = Access Mode ►
IP4, default = unknown:
                field, name = address6, title = IPv6 Address:
                field, name = access6, title = Access Mode ►
IPv6, default = unknown:
                field, name = transfer, title = Transfer:

                name: myhome23
                domain: keenetic.pro
                acme: LE
                updated: 2019-05-23T09:46:51.013Z
                address: 193.0.174.200
                access: direct
                access6: none
                transfer: false

suffix, layout = message, code = 200, message = ►
The name booking was successful.:
                detail, layout = list:
                    columns:
                        column, id = type, title = Type:
                        column, id = peer, title = Peer:
                        column, id = detail, title = Detail:
                        column, id = elapsed, title = Time, ►
variant = period, scale = 1:
                item, elapsed = 18, origin = ►
[TaskUdpSingle "ndss111h2.ndm9.xyz" [MsgNdssMessage ►
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ►
/ started], type = reply-final,
peer = ndss111h2.ndm9.xyz, detail = [MsgCack]:


                item, elapsed = 19, origin = ►
[TaskBookName, ►
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ►
type = prepare-reply, peer = ndss111h2.ndm9.xyz, detail = success
reply: [MsgCack], quorumLeft=3:


                item, elapsed = 27, origin = ►
[TaskUdpSingle "ndss112o1.ndm9.xyz" [MsgNdssMessage ►
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ►
/ started], type = reply-final,
peer = ndss112o1.ndm9.xyz, detail = [MsgCack]:


                item, elapsed = 27, origin = ►
[TaskBookName, ►
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ►
type = prepare-reply, peer = ndss112o1.ndm9.xyz, detail = success

```

```

reply: [MsgCack], quorumLeft=2:

                item, elapsed = 67, origin = ▶
[TaskUdpSingle "ndss111r3.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ▶
/ started], type = reply-final,
peer = ndss111r3.ndm9.xyz, detail = [MsgCack]:


                item, elapsed = 68, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = prepare-reply, peer = ndss111r3.ndm9.xyz, detail = success
reply: [MsgCack], quorumLeft=1:


                item, elapsed = 70, origin = ▶
[TaskUdpSingle "ndss112r3.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ▶
/ started], type = reply-final,
peer = ndss112r3.ndm9.xyz, detail = [MsgCack]:


                item, elapsed = 79, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = done, peer = local, detail = finalize: the name allocation
committed.:


                item, elapsed = 91, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = complete, peer = finalizer, detail = address updated:
193.0.174.200:


                item, elapsed = 91, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = finalize, peer = local, detail = post-process triggers
executed.:


                item, elapsed = 91, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = prepare-reply, peer = ndss112r3.ndm9.xyz, detail = success
reply: [MsgCack]:


                item, elapsed = 97, origin = ▶
[TaskUdpSingle "ndss112o1.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookFinalize","014635737374513","myhome23","keenetic.pro","193.0.174.200",":2",undefined,"2019-05-23T09:46:51.013Z"]] / started], type = reply-final, peer = ▶
ndss112o1.ndm9.xyz, detail = [MsgCack]:


                item, elapsed = 106, origin = ▶
[TaskUdpSingle "ndss111h2.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookFinalize","014635737374513","myhome23","keenetic.pro","193.0.174.200",":2",undefined,"2019-05-23T09:46:51.013Z"]] / started], type = reply-final, peer = ▶

```

```

ndss111h2.ndm9.xyz, detail = [MsgCack]:
    item, elapsed = 153, origin = ►
[TaskUdpSingle "ndss112r3.ndm9.xyz" [MsgNdssMessage ►
["ndns/bookFinalize","014635737374513","myhome23","keenetic.pro","193.0.174.200",":2",undefined,"2019-05-
23T09:46:51.013Z"]] / started], type = reply-final, peer = ►
ndss112r3.ndm9.xyz, detail = [MsgCack]:
    item, elapsed = 153, origin = ►
[TaskUdpSingle "ndss111r3.ndm9.xyz" [MsgNdssMessage ►
["ndns/bookFinalize","014635737374513","myhome23","keenetic.pro","193.0.174.200",":2",undefined,"2019-05-
23T09:46:51.013Z"]] / started], type = reply-final, peer = ►
ndss111r3.ndm9.xyz, detail = [MsgCack]:
    item, elapsed = 3465, origin = ►
[TaskUdpSingle "ndss112h2.ndm9.xyz" [MsgNdssMessage ►
["ndns/bookFinalize","014635737374513","myhome23","keenetic.pro","193.0.174.200",":2",undefined,"2019-05-
23T09:46:51.013Z"]] / started], type = reply-final, peer = ►
ndss112h2.ndm9.xyz, detail = [MsgCack]:
    item, elapsed = 3520, origin = ►
[TaskUdpSingle "ndss112h2.ndm9.xyz" [MsgNdssMessage ►
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ►
/ started], type = reply-final,
peer = ndss112h2.ndm9.xyz, detail = [MsgCack]:
    item, elapsed = 3521, origin = ►
[TaskBookName, ►
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ►
type = prepare-reply, peer = ndss112h2.ndm9.xyz, detail = success
reply: [MsgCack]:
    item, elapsed = 3521, origin = ►
[TaskBookName, ►
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ►
type = complete, peer = *, detail = All done.:
Ndns::Client: Booked "myhome23.keenetic.pro".
(ndns)> book-name nnttnn keenetic.pro ►
121d567f901a345b289c121b567c903c

    done, layout = view, title = NDSS::ndns/bookName ►
(Public DNS Hostname Booking), sub-title =
The name booking was successful.: client, geo = RU, ip = ►
193.0.174.137, format =
clean, date = 2018-12-13T09:04:41.939Z, standalone = false:
    fields:
        field, name = name, title = Public Name:
        field, name = domain, title = Domain Name:
        field, name = updated, title = Updated, type ►
= date, variant = date:
        field, name = address, title = IP Address:

```

```

        field, name = access, title = Access Mode ►
IP4, default = unknown:
            field, name = address6, title = IPv6 Address:
                field, name = access6, title = Access Mode ►
IPv6, default = unknown:
                    field, name = transfer, title = Transfer:

                        name: nnttnn
                        domain: keenetic.pro
                        acme: LE
                        updated: 2018-12-13T08:47:11.014Z
                        address: 0.0.0.0
                        access: cloud
                        access6: none
                        transfer: true

                suffix, layout = message, code = 200, message = ►
The name booking was successful.:
                    detail, layout = list:
                        columns:
                            column, id = o, title = Operation:
                                column, id = d, title = Detail:
                                    column, id = t, title = Time, variant ►
= period, scale = 1:

                            item, hl = false, o = start, d = ►
[TaskBookName, {"name":"nnttnn","domain":►
"keenetic.pro","license":"730102642155400"}], t = 0:

                            item, hl = false, o = lock-local, d = ►
the name is locked (for current transaction), t = 1:

                            item, hl = false, o = cluster, d = ►
quorumRemaining: 2, quorumPossible: 4, quorumTotal: 4, t = 1:

                    item, hl = false, o = lock-reply, d = ►
Success: prepare, [NDSS
(key=Binary('PuR10V/kVezuoVCE'), alt=Binary('0gJ/Wh1606jlAm1M'), ►
dst="/192.168.21.14:17047")], [MsgCack], quorumLeft=2, t = 10:

                    item, hl = false, o = lock-reply, d = ►
Success: prepare, [NDSS
(key=Binary('EbxdtB4ne4ef/+p/'), alt=Binary('1c+3/pP6zaUjuE5w'), ►
dst="/88.198.177.100:17047")], [MsgCack], quorumLeft=1, t = 57:

                    item, hl = false, o = lock-reply, d = ►
Quorum reached, finalizing, t = 57:

                    item, hl = false, o = finalize, d = ►
local changes committed., t = 65:

```

```

                item, hl = false, o = refreshed, d = ►
address updated: 0.0.0.0, t = 77:

                item, hl = false, o = finalize, d = ►
post-process triggers executed., t = 77:

                item, hl = false, o = lock-reply, d = ►
Success: prepare, [NDSS
(key=Binary('+sSJ50ow6hn05f6n'), alt=Binary('7FsVtTpEppYeP7aj'),
dst="/46.105.148.85:17047")], [MsgCack], quorumLeft=0, t = 78:

                item, hl = false, o = lock-reply, d = ►
Success: prepare, [NDSS
(key=Binary('KveTxYekUYk2BwXz'), alt=Binary('s10R6mJvMmfQSe0s'),
dst="/88.198.177.100:16047")], [MsgCack], quorumLeft=0, t = 78:

                item, hl = false, o = lock-reply, d = ►
Done, all replies collected., t = 79:

                item, hl = false, o = commit-reply, d ►
= Success: finalize, [NDSS
(key=Binary('PuR10V/kVezuoVCE'), alt=Binary('0gJ/Wh1606jlAm1M'),
dst="/192.168.21.14:17047")], [MsgCack], t = 84:

                item, hl = false, o = commit-reply, d ►
= Success: finalize, [NDSS
(key=Binary('EbxdtB4ne4ef/+p/'), alt=Binary('1c+3/pP6zaUjuE5w'),
dst="/88.198.177.100:17047")], [MsgCack], t = 126:

                item, hl = false, o = commit-reply, d ►
= Success: finalize, [NDSS
(key=Binary('+sSJ50ow6hn05f6n'), alt=Binary('7FsVtTpEppYeP7aj'),
dst="/46.105.148.85:17047")], [MsgCack], t = 133:

                item, hl = false, o = commit-reply, d ►
= Success: finalize, [NDSS
(key=Binary('KveTxYekUYk2BwXz'), alt=Binary('s10R6mJvMmfQSe0s'),
dst="/88.198.177.100:16047")], [MsgCack], t = 145:

                item, hl = false, o = commit-reply, d ►
= Commit stage complete., t = 146:

                item, hl = false, o = complete, d = All ►
done., t = 146:

Ndns::Client: Booked "nnttnn.keenetic.pro".

```

```

(ndns)> book-name myhome23 keenetic.pro cloud ipv6 cloud

        done, layout = view, title = NDSS::ndns/bookName ►
(Public DNS Hostname Booking), sub-title = The name booking was ►
successful.:
            client, geo = RU, ip = 193.0.174.200, format = ►
clean, date = 2019-05-23T09:12:29.145Z, standalone = false:

```

```
fields:
    field, name = name, title = Public Name:
    field, name = domain, title = Domain Name:
    field, name = updated, title = Updated, type ▶
= date, variant = date:
    field, name = address, title = IP Address:
    field, name = access, title = Access Mode ▶
IP4, default = unknown:
    field, name = address6, title = IPv6 Address:
    field, name = access6, title = Access Mode ▶
IPv6, default = unknown:
    field, name = transfer, title = Transfer:

        name: myhome23
        domain: keenetic.pro
        acme: LE
        updated: 2019-05-23T09:12:16.197Z
        address: 0.0.0.0
        access: cloud
        address6: :::
        access6: cloud
        transfer: false

    suffix, layout = message, code = 200, message = ▶
The name booking was successful.:
    detail, layout = list:
        columns:
            column, id = type, title = Type:
            column, id = peer, title = Peer:
            column, id = detail, title = Detail:
            column, id = elapsed, title = Time, ▶
variant = period, scale = 1:
    item, elapsed = 11, origin = ▶
[TaskUdpSingle "ndss112h2.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ▶
/ started], type = reply-final,
peer = ndss112h2.ndm9.xyz, detail = [MsgCack]:

    item, elapsed = 11, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = prepare-reply, peer = ndss112h2.ndm9.xyz, detail = success
reply: [MsgCack], quorumLeft=3:

    item, elapsed = 17, origin = ▶
[TaskUdpSingle "ndss112o1.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ▶
/ started], type = reply-final,
peer = ndss112o1.ndm9.xyz, detail = [MsgCack]:
```

```

item, elapsed = 18, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = prepare-reply, peer = ndss112o1.ndm9.xyz, detail = success
reply: [MsgCack], quorumLeft=2:

item, elapsed = 18, origin = ▶
[TaskUdpSingle "ndss111o1.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ▶
/ started], type = reply-final,
peer = ndss111o1.ndm9.xyz, detail = [MsgCack]:


item, elapsed = 19, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = prepare-reply, peer = ndss111o1.ndm9.xyz, detail = success
reply: [MsgCack], quorumLeft=1:

item, elapsed = 25, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = done, peer = local, detail = finalize: the name allocation
committed.:


item, elapsed = 40, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = complete, peer = finalizer, detail = address updated: ▶
0.0.0.0:


item, elapsed = 40, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = finalize, peer = local, detail = post-process triggers
executed.:


item, elapsed = 49, origin = ▶
[TaskUdpSingle "ndss112o1.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookFinalize","014635737374513","myhome23","keenetic.pro","0.0.0.0",":",undefined,"2019-05-23T09:12:28.977Z"]] / started], type = reply-final, peer = ▶
ndss112o1.ndm9.xyz, detail = [MsgCack]:


item, elapsed = 49, origin = ▶
[TaskUdpSingle "ndss111o1.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookFinalize","014635737374513","myhome23","keenetic.pro","0.0.0.0",":",undefined,"2019-05-23T09:12:28.977Z"]] / started], type = reply-final, peer = ▶
ndss111o1.ndm9.xyz, detail = [MsgCack]:


item, elapsed = 50, origin = ▶
[TaskUdpSingle "ndss111r3.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ▶
/ started], type = reply-final,
peer = ndss111r3.ndm9.xyz, detail = [MsgCack]:
```

```

item, elapsed = 50, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = prepare-reply, peer = ndss111r3.ndm9.xyz, detail = success
reply: [MsgCack]:


item, elapsed = 50, origin = ▶
[TaskUdpSingle "ndss112r3.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookPrepare","014635737374513","myhome23","keenetic.pro",undefined]] ▶
/ started], type = reply-final,
peer = ndss112r3.ndm9.xyz, detail = [MsgCack]:


item, elapsed = 51, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = prepare-reply, peer = ndss112r3.ndm9.xyz, detail = success
reply: [MsgCack]:


item, elapsed = 80, origin = ▶
[TaskUdpSingle "ndss112r3.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookFinalize","014635737374513","myhome23","keenetic.pro","0.0.0.0","",undefined,"2019-05-23T09:12:28.977Z"]]] / started], type = reply-final, peer = ▶
ndss112r3.ndm9.xyz, detail = [MsgCack]:


item, elapsed = 122, origin = ▶
[TaskUdpSingle "ndss112h2.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookFinalize","014635737374513","myhome23","keenetic.pro","0.0.0.0","",undefined,"2019-05-23T09:12:28.977Z"]]] / started], type = reply-final, peer = ▶
ndss112h2.ndm9.xyz, detail = [MsgCack]:


item, elapsed = 165, origin = ▶
[TaskUdpSingle "ndss111r3.ndm9.xyz" [MsgNdssMessage ▶
["ndns/bookFinalize","014635737374513","myhome23","keenetic.pro","0.0.0.0","",undefined,"2019-05-23T09:12:28.977Z"]]] / started], type = reply-final, peer = ▶
ndss111r3.ndm9.xyz, detail = [MsgCack]:


item, elapsed = 166, origin = ▶
[TaskBookName, ▶
{"name":"myhome23","domain":"keenetic.pro","license":"014635737374513"}], ▶
type = complete, peer = *, detail = All done.:

Ndns::Client: Booked "myhome23.keenetic.pro".
```

History

Version	Description
2.07	The ndns book-name command has been introduced.
2.14	Parameter ipv6 was added.

3.98.2 ndns check-name

Description Check the availability of hostname for allocation.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(ndns)> check-name <name>
```

Arguments

Argument	Value	Description
name	String	The hostname for allocation.

Example

```
(ndns)> check-name testname
```

```
list:
    item:
        domain: keenetic.link
        name: testname
        available: yes
        acme: yes

    item:
        domain: keenetic.name
        name: testname
        available: yes
        acme: yes

    item:
        domain: keenetic.pro
        name: testname
        available: no
        acme: yes
```

```
Ndns::Client: Check completed.
```

History

Version	Description
2.07	The ndns check-name command has been introduced.

3.98.3 ndns drop-name

Description Drop Public DNS device hostname allocation.

Prefix no No

Change settings Yes

Multiple input

No

Synopsis(ndns)> **drop-name <name> <domain>****Arguments**

Argument	Value	Description
name	<i>String</i>	The hostname for dropping.
domain	<i>String</i>	Second-level domain.

Example

```
(ndns)> drop-name testname mykeenetic.net

        done, title = NDSS::ndns/dropName (Delete DNS ►
Hostname Booking), code = 200,
icon = tick, hl = true, layout = message:
            client, geo = RU, ip = 81.200.27.56, format = ►
clean, date = 2016-09-
22T10:52:35.685Z, standalone = false:
            reason: The name is un-booked.

        detail, layout = list:
            columns:
                column, id = o, title = Operation:
                column, id = d, title = Detail:
                column, id = t, title = Time, variant = ►
period, scale = 1:

            item, hl = false, o = start, d = ►
[TaskDropName, {"name":"testname",
"domain":"mykeenetic.net","license":"243992935221479"}], t = 0:
            item, hl = false, o = lock-local, d = the ►
name is locked (for current
transaction), t = 1:
            item, hl = false, o = cluster, d = ►
quorumRemaining: 2, quorumPossible: 4,
quorumTotal: 4, t = 1:
            item, hl = false, o = lock-reply, d = ►
Success: prepare, [NDSS
(key=Binary('vNEqUcIAWtrIaC50'), alt=Binary('L2hVqanJmGJrzvKh'),
dst="/148.251.63.154:17047")], [MsgAck], quorumLeft=2, t = 55:
            item, hl = false, o = lock-reply, d = ►
Success: prepare, [NDSS
(key=Binary('yp/ghaehx5EtXyc'), alt=Binary('t+JluEWuGguJ+28h'),
dst="/46.105.148.81:17047")], [MsgAck], quorumLeft=1, t = 72:
            item, hl = false, o = lock-reply, d = Quorum ►
reached, finalizing, t = 73:
            item, hl = false, o = finalize, d = local ►
changes commited., t = 79:
            item, hl = false, o = refreshed, d = address ►
cleared, t = 85:
            item, hl = false, o = finalize, d = ►
post-process triggers executed., t = 85:
            item, hl = false, o = commit-reply, d = ►
```

```

Success: finalize, [NDSS
(key=Binary('vNEqUcIAWtrIaC50'), alt=Binary('L2hVqanJmGJrzvKh'),
dst="/148.251.63.154:17047")], [MsgCack], t = 134:
           item, hl = false, o = commit-reply, d = ►
Success: finalize, [NDSS
(key=Binary('yp/ghaeixe5EtXyc'), alt=Binary('t+JluEWuGguJ+28h'),
dst="/46.105.148.81:17047")], [MsgCack], t = 161:
           item, hl = false, o = lock-reply, d = ►
Success: prepare, [NDSS
(key=Binary('SyptNue2bys/mxi0'), alt=Binary('yPrQwfa/4yn676wk'),
dst="/148.251.129.152:17047")], [MsgCack], quorumLeft=0, t = 231:
           item, hl = false, o = commit-reply, d = ►
Success: finalize, [NDSS
(key=Binary('SyptNue2bys/mxi0'), alt=Binary('yPrQwfa/4yn676wk'),
dst="/148.251.129.152:17047")], [MsgCack], t = 235:
           item, hl = false, o = commit-reply, d = ►
Success: finalize, [NDSS
(key=Binary('pLNIsTXD+OP4D9Fc'), alt=Binary('kGIMY2U/LublZ/Zr'),
dst="/91.218.112.118:17047")], [MsgCack], t = 3608:
           item, hl = false, o = commit-reply, d = ►
Commit stage complete., t = 3608:
           item, hl = false, o = complete, d = All ►
done., t = 3608:

Ndns::Client: Dropped "testname.mykeenetic.net".

```

History

Version	Description
2.07	The ndns drop-name command has been introduced.

3.98.4 ndns get-booked

Description Get actual info from the server about current booked Public DNS hostname.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (ndns)> **get-booked****Example** (ndns)> **get-booked**

```

done, layout = view, title = ►
NDSS::ndns/updateBooking (Update Name Booking
Address and Expiration):
           client, geo = RU, ip = 41.189.34.56, format = ►
xml, date = 2017-09-
14T08:30:19.266Z, standalone = false:
           menu, src = ►

```

```
/index?__auth=force&__role=context-
menu&ref=%2fndns%2fupdateBooking:

    fields:
        field, name = name, title = Public Name:
        field, name = domain, title = Domain Name:
        field, name = address, title = IP Address:
        field, name = updated, title = Updated, type ▶
= date, variant = date:
        field, name = access, title = Access Mode, ▶
default = unknown:
        field, name = transfer, title = Transfer:
        name: testname
        domain: mykeenetic.com
        address: 41.189.34.56
        updated: 2017-09-11T11:27:32.167Z
        access: direct
        transfer: false

Ndns::Client: Get-booked completed.
```

History

Version	Description
2.08	The ndns get-booked command has been introduced.

3.98.5 ndns get-update

Description Update Public DNS device hostname allocation on the server.

Prefix no No

Change settings No

Multiple input No

Synopsis (ndns)> **get-update** [<access> [**ipv6** <access6>]]

Arguments

Argument	Value	Description
access	auto	Automatic access type.
	cloud	Hostname is registered on the cloud server IP-address, HTTP traffic is tunneled to the Peak DSL.

Argument	Value	Description
	direct	Hostname is registered on the Peak DSL WAN-address. This command allows to enable support for the <i>Static NAT (NAT 1-1)</i> on the server side in the KeenDNS account parameters.
access6	cloud	Enable cloud mode for IPv6 address.

Example

```
(ndns)> get-update auto

done, layout = view, title = ►
NDSS::ndns/updateBooking (Update Name Booking
Address and Expiration):
client, geo = RU, ip = 81.200.27.56, format = ►
xml, date = 2016-09-
22T12:07:32.746Z, standalone = false:
menu, src = ►
/index?__auth=force&__role=context-
menu&ref=%2fndns%2fupdateBooking:

fields:
field, name = name, title = Public Name:
field, name = domain, title = Domain Name:
field, name = address, title = IP Address:
field, name = updated, title = Updated, type ►
= date, variant = date:
field, name = access, title = Access Mode, ►
default = unknown:
field, name = transfer, title = Transfer:

name: testname
domain: mykeenetic.net
address: 81.200.27.56
updated: 2016-09-22T12:07:32.744Z
access: direct
transfer: false

Ndns::Client: Get-update completed.
```

```
(ndns)> get-update cloud ipv6 cloud

done, layout = view, title = ►
NDSS::ndns/updateBooking (Update Name Booking Address and ►
Expiration):
client, geo = RU, ip = 193.0.174.168, format = ►
xml, date = 2019-05-21T15:26:45.552Z, standalone = false:
menu, src = ►
/index?__auth=force&__role=context-menu&ref=%2fndns%2fupdateBooking:

fields:
field, name = name, title = Public Name:
field, name = domain, title = Domain Name:
```

```

                field, name = updated, title = Updated, type ▶
= date, variant = date:
                field, name = address, title = IP Address:
                field, name = access, title = Access Mode ▶
(ip4), default = unknown:
                field, name = address6, title = IPv6 Address:
                field, name = access6, title = Access Mode ▶
(ipv6), default = unknown:
                field, name = transfer, title = Transfer:

                name: mytest
                domain: keenetic.pro
                acme: LE
                address: 0.0.0.0
                access: cloud
                address6: :::
                access6: cloud
                updated: 2019-05-21T15:26:45.547Z
                transfer: false

Ndns::Client: Get-update completed.

(ndns)> get-update direct

done, layout = view, title = ▶
NDSS::ndns/updateBooking (Update Name Booking Address and ▶
Expiration):
    client, geo = RU, ip = 193.0.174.159, format = ▶
xml, date = 2019-11-13T16:53:30.782Z, standalone = false:
    menu, src = ▶
/index?__auth=force&__role=context-menu&ref=%2fndns%2fupdateBooking:

fields:
    field, name = name, title = Public Name:
    field, name = domain, title = Domain Name:
    field, name = updated, title = Updated, type ▶
= date, variant = date:
    field, name = address, title = IP Address:
    field, name = access, title = Access Mode ▶
(ip4), default = unknown:
    field, name = address6, title = IPv6 Address:
    field, name = access6, title = Access Mode ▶
(ipv6), default = unknown:
    field, name = transfer, title = Transfer:

    name: myworknow
    domain: keenetic.link
    acme: LE
    address: 193.0.174.159
    access: direct
    access6: none
    updated: 2019-11-13T16:50:34.298Z
    transfer: false

```

History

Version	Description
2.07	The ndns get-update command has been introduced.
2.14	Parameter ipv6 was added.

3.99 ntce

Description Access to a group of commands to configure the **NTCE** service.**Prefix no** No**Change settings** No**Multiple input** No**Group entry** (config-ntce)**Synopsis** (config)> **ntce****Example** (config)> **ntce**
(config-ntce)>**History**

Version	Description
3.07	The ntce command has been introduced.

3.99.1 ntce debug

Description Enable debug for the **NTCE** service. By default, setting is disabled.Command with **no** prefix disables the feature.**Prefix no** Yes**Change settings** Yes**Multiple input** No**Synopsis** (config-ntce)> **debug**(config-ntce)> **no debug****Example** (config-ntce)> **debug**
Ntce::Manager: Enabled debug.(config-ntce)> **no debug**
Ntce::Manager: Disabled debug.

History

Version	Description
3.07	The ntce debug command has been introduced.

3.99.2 ntce qos enable

Description

Enable IntelliQoS, which ensures inbound, and outbound bandwidth for prioritized applications and tasks via pre-defined category groups presets. By default the service is disabled.

Command with **no** prefix disables the feature.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-ntce)> qos enable
(config-ntce)> no qos enable
```

Example

```
(config-ntce)> qos enable
Ntce::Manager: Enabled QoS.

(config-ntce)> no qos enable
Ntce::Manager: Disabled QoS.
```

History

Version	Description
3.07	The ntce qos enable command has been introduced.

3.99.3 ntce qos priority

Description

Set priorities for traffic categories.

Command with **no** prefix removes the setting.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(config-ntce)> qos priority <category> <priority>
(config-ntce)> no qos priority
```

Arguments

Argument	Value	Description
category	calling	① Minimum latency.

Argument	Value	Description
	gaming	② Real time interactive.
	streaming	③ Broadcast services.
	work	④ Low latency.
	surfing	⑤ High-throughput data.
	filetransferring	⑥ Low priority data.
priority	<i>Integer</i>	Priority value. Can take values from 1 to 6.

Example

```
(config-ntce)> qos priority calling 1
Ntce::Manager: Set priority "1" to "calling".
```

```
(config-ntce)> no qos priority
Ntce::Manager: Reset QoS priority list.
```

History

Version	Description
3.07	The ntce qos priority command has been introduced.

3.100 ntp

Description

Access to configure *NTP*-client.

Command with **no** prefix resets *NTP*-client configuration to default.

Prefix no

Yes

Change settings

No

Multiple input

No

Synopsis

```
| (config)> no ntp
```

Example

```
(config)> no ntp
Ntp::Client: Configuration reset.
```

History

Version	Description
2.00	The ntp command has been introduced.

3.100.1 ntp server

Description

Add a new *NTP*-server to the list. You can enter up to 8 *NTP*-servers.

Command with **no** prefix deletes *NTP*-server from the list. If you use no argument, the entire list of *NTP*-servers will be removed.

Prefix no	Yes						
Change settings	Yes						
Multiple input	Yes						
Synopsis	<pre>(config)> ntp server <server> (config)> no ntp server [<server>]</pre>						
Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>server</td><td><i>String</i></td><td>Host of <i>NTP</i>-server.</td></tr></tbody></table>	Argument	Value	Description	server	<i>String</i>	Host of <i>NTP</i> -server.
Argument	Value	Description					
server	<i>String</i>	Host of <i>NTP</i> -server.					
Example	<pre>(config)> ntp server pool.ntp.org Ntp::Client: Server "pool.ntp.org" has been added.</pre> <pre>(config)> no ntp server Ntp::Client: All NTP servers removed.</pre>						
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.00</td><td>The ntp server command has been introduced.</td></tr></tbody></table>	Version	Description	2.00	The ntp server command has been introduced.		
Version	Description						
2.00	The ntp server command has been introduced.						

3.100.2 ntp sync-period

Description	Set a period for time synchronization. By default, 1 week is used. Command with no prefix resets time synchronization to default.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(config)> ntp sync-period <period> (config)> no ntp sync-period</pre>						
Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>period</td><td><i>Integer</i></td><td>Time synchronization, in minutes. Can take values from 60 minutes to 1 month.</td></tr></tbody></table>	Argument	Value	Description	period	<i>Integer</i>	Time synchronization, in minutes. Can take values from 60 minutes to 1 month.
Argument	Value	Description					
period	<i>Integer</i>	Time synchronization, in minutes. Can take values from 60 minutes to 1 month.					
Example	<pre>(config)> ntp sync-period 60 Ntp::Client: A synchronization period set to 60 minutes.</pre> <pre>(config)> no ntp sync-period Ntp::Client: Synchronization period value reset.</pre>						

History

Version	Description
2.00	The ntp sync-period command has been introduced.

3.101 ntp server

Description	Add a new <i>NTP</i> -server to the list. You can enter up to 8 <i>NTP</i> -servers. Command with no prefix deletes <i>NTP</i> -server from the list. If you use no argument, the entire list of <i>NTP</i> -servers will be removed.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	Yes						
Synopsis	<pre>(config)> ntp server <server> (config)> no ntp server [<server>]</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>server</td> <td><i>String</i></td> <td>Host of <i>NTP</i>-server.</td> </tr> </tbody> </table>	Argument	Value	Description	server	<i>String</i>	Host of <i>NTP</i> -server.
Argument	Value	Description					
server	<i>String</i>	Host of <i>NTP</i> -server.					

Example

```
(config)> ntp server pool.ntp.org
Ntp::Client: Server "pool.ntp.org" has been added.
```

```
(config)> no ntp server
Ntp::Client: All NTP servers removed.
```

History

Version	Description
2.00	The ntp server command has been introduced.

3.102 ntp sync-period

Description	Set a period for time synchronization. By default, 1 week is used. Command with no prefix resets time synchronization to default.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config)> ntp sync-period <period></pre>

```
| (config)> no ntp sync-period
```

Arguments

Argument	Value	Description
period	Integer	Time synchronization, in minutes. Can take values from 60 minutes to 1 month.

Example

```
(config)> ntp sync-period 60
Ntp::Client: A synchronization period set to 60 minutes.
```

```
(config)> no ntp sync-period
Ntp::Client: Synchronization period value reset.
```

History

Version	Description
2.00	The ntp sync-period command has been introduced.

3.103 opkg chroot

Description

Enable chroot for [opkg](#). If enabled, root directory is changed to /opt before executing any opkg script. By default, the setting is disabled.

Command with **no** prefix disables chroot mode.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
| (config)> opkg chroot
```

```
| (config)> no opkg chroot
```

Example

```
(config)> opkg chroot
Opkg::Manager: Chroot enabled.
```

```
(config)> no opkg chroot
Opkg::Manager: Chroot disabled.
```

History

Version	Description
2.05	The opkg chroot command has been introduced.

3.104 opkg disk

Description

Configure partition for [opkg](#) software. This setting is required to install and run [opkg](#).

Once configured, the partition will be mounted to /opt using **mount --bind**, and the **initrc** script executed immediately, see also [Section 3.106 on page 404](#).

If /opt/install directory is not empty, all contained *.ipk and *.tgz archives are unpacked to /opt before running **initrc**. Archives are deleted after installation.

Command with **no** prefix disables the opkg feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config)>	opkg disk (<disk> <disk>)
-----------	------------------------------------

(config)>	no opkg disk
-----------	---------------------

Arguments	Argument	Value	Description
	disk	<i>String</i>	Partition label or UUID.

Example

(config)>	opkg disk ext4_opkg:/
-----------	------------------------------

Opkg::Manager: Disk is set to: ext4_opkg:/.

(config)>	no opkg disk
-----------	---------------------

Opkg::Manager: Disk is unset.

History	Version	Description
	2.05	The opkg disk command has been introduced.

3.105 opkg dns-override

Description Disable **TCP** and **UDP** 53 port for DNS proxy.

Disables port allows to replace embedded DNS proxy with a custom service, such as BIND or Dnsmasq of **opkg**.

Command with **no** prefix returns port work for DNS proxy.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config)>	opkg dns-override
-----------	--------------------------

(config)>	no opkg dns-override
-----------	-----------------------------

Example

```
(config)> opkg dns-override
Opkg::Manager: DNS override enabled.
```

```
(config)> no opkg dns-override
Opkg::Manager: DNS override disabled.
```

History

Version	Description
2.05	The opkg dns-override command has been introduced.

3.106 opkg initrc

Description

Set initial script. Default value — /opt/etc/initrc.

When the **opkg disk** is mounted, and the packages are installed, the system will execute the initial script. If *path* is a directory, the system will execute all contained scripts in alphabetic order.

Command with **no** prefix resets initrc to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> opkg initrc <path>
```

```
(config)> no opkg initrc
```

Arguments

Argument	Value	Description
path	<i>Filename</i>	Initial script file or directory.

Example

```
(config)> opkg initrc /opt/etc/init.d/rc.unslung
Opkg::Manager: Configured init script: ▶
"/opt/etc/init.d/rc.unslung".
(config)> no opkg initrc
Opkg::Manager: Init script reset to default: /opt/etc/initrc.
```

History

Version	Description
2.05.C.3	The opkg initrc command has been introduced.

3.107 opkg timezone

Description

Configure TZ environment variable and /opt/var/TZ file for **opkg** software. Default — timezone is undefined.

It depends on the *opkg* C library, how timezone is interpreted. The value of TZ can be either a POSIX timezone specification in the form stdoffset[dst[offset]][,start[/time],end[/time]]], or the name of a zoneinfo-binary-format timezone file (the form used by glibc and almost all GNU systems).

Command with **no** prefix resets timezone to undefined.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config)>	opkg timezone (auto <timezone>)
(config)>	no opkg timezone

Arguments	Argument	Value	Description
	timezone	String	Timezone specification to be assigned to the TZ environment variable and written to /opt/var/TZ.
	auto	Keyword	Automatic timezone assignment. Specification is generated from system wide settings, see Section 3.143.3 on page 580 .

Example

```
(config)> opkg timezone auto
Opkg::Manager: Enabled automatic timezone.
(config)> opkg timezone UTC
Opkg::Manager: Enabled timezone "UTC".
(config)> no opkg timezone
Opkg::Manager: Timezone reset to undefined.
```

History	Version	Description
	2.05.C.3	The opkg timezone command has been introduced.

3.108 ping-check profile

Description Access to a group of commands to configure *Ping Check* profile. If the profile is not found, the command tries to create it.

Command with **no** prefix removes *Ping Check* profile.

Prefix no Yes

Change settings Yes

Multiple input

Yes

Group entry

(config-pchk)

Synopsis

```
(config)> ping-check profile <name>
```

```
(config)> no ping-check profile <name>
```

Arguments

Argument	Value	Description
name	String	<i>Ping Check</i> profile name. You can see the list of available profiles with help of ping-check profile [Tab] command.

Example

```
(config)> ping-check profile [Tab]
```

Usage template:
profile {name}

Choose:

TEST
MYMY

```
(config)> ping-check profile new_prof
```

PingCheck::Client: Profile "new_prof" has been created.

```
(config-pchk)>
```

```
(config)> no ping-check profile new_prof
```

PingCheck::Client: Profile "new_prof" has been deleted.

History

Version	Description
2.04	The ping-check profile command has been introduced.

3.108.1 ping-check profile host

Description

Assign hostname for testing. By default, hostname is assigned according to country code.

Command with **no** prefix removes the hostname.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-pchk)> host <host>
```

```
(config-pchk)> no host [ <host> ]
```

Arguments

Argument	Value	Description
host	<i>Hostname</i>	Name or address of remote host.

Example

```
(config-pchk)> host 8.8.8.8
PingCheck::Profile: "test": add host "8.8.8.8" for testing.
```

```
(config-pchk)> host google.com
PingCheck::Profile: "test": add host "google.com" for testing.
```

```
(config-pchk)> no host
PingCheck::Profile: "test": hosts cleared.
```

History

Version	Description
2.04	The ping-check profile host command has been introduced.

3.108.2 ping-check profile max-fails

Description

Specify the number of consecutive failed requests to a remote host by obtaining of which the Internet at the interface considered absent. By default, value 5 is used.

Command with **no** prefix resets to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-pchk)> max-fails <count>
```

```
(config-pchk)> no max-fails
```

Arguments

Argument	Value	Description
count	<i>Integer</i>	Amount of failed requests. Can take values from 1 to 10 inclusively.

Example

```
(config-pchk)> max-fails 7
PingCheck::Profile: "test": uses 7 fail count for disabling ▶
interface.
```

```
(config-pchk)> no max-fails
PingCheck::Profile: "test": fail count is reset to 5.
```

History	Version	Description
	2.04	The ping-check profile max-fails command has been introduced.

3.108.3 ping-check profile min-success

Description Specify the number of consecutive success requests to a remote host by obtaining of which the Internet at the interface considered present. By default, value 5 is used.

Command with **no** prefix resets to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
| (config-pchk)> min-success <count>
| (config-pchk)> no min-success
```

Arguments	Argument	Value	Description
	count	<i>Integer</i>	Amount of success requests. Can take values from 1 to 10 inclusively.

Example

```
(config-pchk)> min-success 3
PingCheck::Profile: "test": uses 3 success count for enabling ▶
interface.
```

```
(config-pchk)> no min-success
PingCheck::Profile: "test": success count is reset to 5.
```

History	Version	Description
	2.04	The ping-check profile min-success command has been introduced.

3.108.4 ping-check profile mode

Description Set *Ping Check* mode. By default, icmp value is used.

Prefix no No

Change settings Yes

Multiple input No

Synopsis

```
(config-pchk)> mode <mode>
```

Arguments

Argument	Value	Description
mode	icmp	The availability testing of remote host will be done by ICMP-echo request (ping) sending.
	connect	The availability testing of remote host will be done by TCP-connection establishing to specified port.

Example

```
(config-pchk)> mode connect
PingCheck::Profile: "TEST": uses connect mode.
```

History

Version	Description
2.04	The ping-check profile mode command has been introduced.

3.108.5 ping-check profile port

Description Specify port for connection to the remote host. Setting has a meaning for connect mode of [Ping Check](#) (see [ping-check profile mode](#) command).

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-pchk)> port <port>
```

```
(config-pchk)> no port
```

Arguments

Argument	Value	Description
port	Integer	Port number. Can take values from 1 to 65534 inclusively.

Example

```
(config-pchk)> port 80
PingCheck::Profile: "test": uses port 80 for testing.
```

```
(config-pchk)> no port
PingCheck::Profile: "test": port is cleared.
```

History

Version	Description
2.04	The ping-check profile port command has been introduced.

3.108.6 ping-check profile power-cycle

Description

Enable power-cycle for USB network interface. Enabled by default.

Command with **no** prefix disables the feature.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-pchk)> power-cycle
```

```
(config-pchk)> no power-cycle
```

Example

```
(config-pchk)> power-cycle
```

PingCheck::Profile: "test": enabled USB power cycle.

```
(config-pchk)> power-cycle
```

PingCheck::Profile: "test": disabled USB power cycle.

History

Version	Description
2.04	The ping-check profile power-cycle command has been introduced.

3.108.7 ping-check profile timeout

Description

Set the maximum response time of the remote host for a single request in seconds. By default, 2 value is used.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-pchk)> timeout <timeout>
```

```
(config-pchk)> no timeout
```

Arguments	Argument	Value	Description
	timeout	<i>Integer</i>	Response time in seconds. Can take values from 1 to 10 inclusively.

Example	(config-pchk)> timeout 4 PingCheck::Profile: "test": timeout is changed to 4 seconds.
	(config-pchk)> no timeout PingCheck::Profile: "test": timeout is reset to 2.

History	Version	Description
	2.04	The ping-check profile timeout command has been introduced.

3.108.8 ping-check profile update-interval

Description	Set periodicity of <i>Ping Check</i> performing.
Prefix no	No
Change settings	Yes
Multiple input	No
Synopsis	(config-pchk)> update-interval <seconds>

Arguments	Argument	Value	Description
	seconds	<i>Integer</i>	Refresh period in seconds. Can take values from 3 to 3600 inclusively.

Example	(config-pchk)> update-interval 60 PingCheck::Profile: "test": update interval is changed to 60 ► seconds.
---------	---

History	Version	Description
	2.04	The ping-check profile update-interval command has been introduced.

3.109 ppe

Description	Enable Packet Processing Engine. By default, the setting is turned on for SWNAT and HWNAT both. Command with no prefix disables specified accelerator.
-------------	--

Prefix no	Yes										
Change settings	Yes										
Multiple input	No										
Synopsis	<pre> (config)> ppe <engine> (config)> no ppe [<engine>]</pre>										
Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td rowspan="3">engine</td><td>software</td><td>Software accelerator.</td></tr><tr><td>hardware</td><td>Hardware accelerator.</td></tr><tr><td>hardware-ipv6</td><td>Hardware accelerator for IPv6. Disabled by default.</td></tr></tbody></table>	Argument	Value	Description	engine	software	Software accelerator.	hardware	Hardware accelerator.	hardware-ipv6	Hardware accelerator for IPv6. Disabled by default.
Argument	Value	Description									
engine	software	Software accelerator.									
	hardware	Hardware accelerator.									
	hardware-ipv6	Hardware accelerator for IPv6. Disabled by default.									
Example	<pre>(config)> ppe software Network::Interface::Rtx::Ppe: Software PPE enabled.</pre> <pre>(config)> no ppe Network::Interface::Rtx::Ppe: All PPE disabled.</pre> <pre>(config)> ppe hardware-ipv6 Network::Interface::Rtx::Ppe: Hardware-ipv6 PPE enabled.</pre> <pre>(config)> no ppe hardware-ipv6 Network::Interface::Rtx::Ppe: Hardware-ipv6 PPE disabled.</pre>										
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.00</td><td>The ppe command has been introduced.</td></tr><tr><td>2.05</td><td>Argument engine was implemented.</td></tr><tr><td>2.07</td><td>Parameter hardware-ipv6 was implemented.</td></tr></tbody></table>	Version	Description	2.00	The ppe command has been introduced.	2.05	Argument engine was implemented.	2.07	Parameter hardware-ipv6 was implemented.		
Version	Description										
2.00	The ppe command has been introduced.										
2.05	Argument engine was implemented.										
2.07	Parameter hardware-ipv6 was implemented.										

3.110 pppoe pass

Description	Enable PPPoE Pass Through function. You can enter up to 10 network nodes. Command with no prefix disables the function.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Interface type	Ethernet

Synopsis

```
(config)> pppoe pass through <wan-iface><lan-iface>
(config)> no pppoe pass through
```

Arguments

Argument	Value	Description
wan-iface	<i>Interface name</i>	The starting interface — full WAN-interface name or an alias.
lan-iface	<i>Interface name</i>	The finishing interface — full LAN-interface name or an alias.

Example

```
(config)> pppoe pass through Home ISP
Pppoe::Pass: Configured pass from "Bridge0" to "GigabitEthernet1".
(config)> no pppoe pass
Pppoe::Pass: Disabled.
```

History

Version	Description
2.00	The pppoe pass command has been introduced.

3.111 printer

Description

Access to a group of commands to configure the printer. If the printer is not found, the command tries to create it.

Command with **no** prefix deletes the printer.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Group entry

(config-printer)

Synopsis

```
(config)> printer <id>
(config)> no printer <id>
```

Arguments

Argument	Value	Description
id	<i>String</i>	Printer ID.

Example

```
(config)> printer 0924:3cf4
(config-printer)>
```

History

Version	Description
2.00	The printer command has been introduced.

3.111.1 printer bidirectional

Description

Enable bidirectional mode for printer.

Command with **no** prefix disables bidirectional mode.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-printer)> bidirectional
```

```
(config-printer)> no bidirectional
```

Example

```
(config-printer)> bidirectional
```

Printer::Manager: A bidirectional mode enabled.

```
(config-printer)> no bidirectional
```

Printer::Manager: A bidirectional mode disabled.

History

Version	Description
2.04	The printer bidirectional command has been introduced.

3.111.2 printer debug

Description

Enable debug mode for printer. If you use no argument, debug level 1 will be set.

Command with **no** prefix disables debug mode.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config-printer)> debug [ level <level> ]
```

```
(config-printer)> no debug
```

Arguments

Argument	Value	Description
level	<i>Integer</i>	The debug level. Can take values from 1 to 3 inclusively.

Example

```
(config-printer)> debug level 3
Printer::Manager: a debug level set to 3.
```

```
(config-printer)> no debug
Printer::Manager: A debug mode disabled.
```

History

Version	Description
2.04	The printer debug command has been introduced.

3.111.3 printer firmware

Description Set printer firmware file.**Prefix no** Yes**Change settings** Yes**Multiple input** No**Synopsis**

```
(config-printer)> firmware <firmware>
```

```
(config-printer)> no firmware
```

Arguments

Argument	Value	Description
firmware	<i>String</i>	Path to firmware file.

Example

```
(config-printer)> firmware storage:sihp1018.dl
Printer::Manager: A printer firmware set.
```

```
(config-printer)> no firmware
Printer::Manager: A printer firmware set.
```

History

Version	Description
2.00	The printer firmware command has been introduced.

3.111.4 printer name

Description Assign an arbitrary name to the printer.**Prefix no** No**Change settings** Yes**Multiple input** No**Synopsis**

```
(config-printer)> name <name>
```

Arguments

Argument	Value	Description
name	<i>String</i>	Arbitrary printer name.

Example

```
(config-printer)> name Canon
Printer::Manager: A printer name set.
```

History

Version	Description
2.00	The printer name command has been introduced.

3.111.5 printer port

Description Set printer port if printer type is direct. By default, TCP-port is 9100.

Prefix no No

Change settings Yes

Multiple input No

Synopsis

```
(config-printer)> port <port>
```

Arguments

Argument	Value	Description
port	<i>Integer</i>	Printer port.

Example

```
(config-printer)> port 2012
Printer::Manager: A port set.
```

History

Version	Description
2.00	The printer port command has been introduced.

3.111.6 printer status-polling

Description Enable printer status polling. By default, status polling is enabled.

Command with **no** prefix disables printer status polling.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-printer)> status-polling
```

```
(config-printer)> no status-polling
```

Example

```
(config-printer)> status-polling
Printer::Manager: Status polling enabled.
```

```
(config-printer)> no status-polling
Printer::Manager: Status polling disabled.
```

History

Version	Description
3.04	The printer status-polling command has been introduced.

3.111.7 printer type

Description Set printer type.**Prefix no** No**Change settings** Yes**Multiple input** No**Synopsis**

```
(config-printer)> type <type>
```

Arguments

Argument	Value	Description
type	cifs	Printer connected via CIFS .
	direct	Printer connected directly to device.

Example

```
(config-printer)> type direct
Printer::Manager: A printer type set.
```

History

Version	Description
2.00	The printer type command has been introduced.

3.112 schedule

Description Access to a group of commands to configure the schedule. If the schedule is not found, the command tries to create it.Command with **no** prefix deletes the schedule.**Prefix no** Yes**Change settings** Yes

Multiple input	Yes						
Group entry	(config-sched)						
Synopsis	<pre>(config)> schedule <name> (config)> no schedule <name></pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>name</td><td><i>String</i></td><td>A schedule name.</td></tr> </tbody> </table>	Argument	Value	Description	name	<i>String</i>	A schedule name.
Argument	Value	Description					
name	<i>String</i>	A schedule name.					
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.06</td><td>The schedule command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.06	The schedule command has been introduced.		
Version	Description						
2.06	The schedule command has been introduced.						

3.112.1 schedule action

Description	Specify the actions to be performed according to the selected schedule. Command with no prefix cancels the action.																	
Prefix no	Yes																	
Change settings	Yes																	
Multiple input	Yes																	
Synopsis	<pre>(config-sched)> action <action> <min> <hour> <dow> (config-sched)> no action [<action> <min> <hour> <dow>]</pre>																	
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td rowspan="2">action</td><td>start</td><td>Action of the beginning.</td></tr> <tr> <td>stop</td><td>Action of the end.</td></tr> <tr> <td>min</td><td><i>Integer</i></td><td>The minutes.</td></tr> <tr> <td>hour</td><td><i>Integer</i></td><td>The hours.</td></tr> <tr> <td>dow</td><td><i>Integer</i></td><td>Days of the week, separated by commas. 0 and 7 mean Sunday. * means daily.</td></tr> </tbody> </table>	Argument	Value	Description	action	start	Action of the beginning.	stop	Action of the end.	min	<i>Integer</i>	The minutes.	hour	<i>Integer</i>	The hours.	dow	<i>Integer</i>	Days of the week, separated by commas. 0 and 7 mean Sunday. * means daily.
Argument	Value	Description																
action	start	Action of the beginning.																
	stop	Action of the end.																
min	<i>Integer</i>	The minutes.																
hour	<i>Integer</i>	The hours.																
dow	<i>Integer</i>	Days of the week, separated by commas. 0 and 7 mean Sunday. * means daily.																
Example	<pre>(config-sched)> action start 0 9 1,2,3,4,5 Core::Schedule::Manager: Updated schedule "WIFI".</pre>																	
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.06</td><td>The schedule action command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.06	The schedule action command has been introduced.													
Version	Description																	
2.06	The schedule action command has been introduced.																	

3.112.2 schedule description

Description	Set description for the selected schedule. Command with no prefix deletes the description.							
Prefix no	Yes							
Change settings	No							
Multiple input	No							
Synopsis	<pre>(config-sched)> description <description> (config-sched)> no description</pre>							
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>description</td> <td><i>String</i></td> <td>Text of the description.</td> </tr> </tbody> </table>		Argument	Value	Description	description	<i>String</i>	Text of the description.
Argument	Value	Description						
description	<i>String</i>	Text of the description.						
Example	<pre>(config-sched)> description "Schedule for on/off Access Point" Core::Schedule::Manager: Updated description of schedule "WIFI".</pre>							
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.06</td> <td>The schedule description command has been introduced.</td> </tr> </tbody> </table>		Version	Description	2.06	The schedule description command has been introduced.		
Version	Description							
2.06	The schedule description command has been introduced.							

3.112.3 schedule led

Description	Set LED indication for the scheduled events. SelectedSchedule control should be chosen with system led command. Command with no prefix removes LED indication.									
Prefix no	Yes									
Change settings	Yes									
Multiple input	No									
Synopsis	<pre>(config-sched)> led <action> (config-sched)> no led</pre>									
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td rowspan="2">action</td> <td>start</td> <td>LED shows the beginning of the scheduled event.</td> </tr> <tr> <td>stop</td> <td>LED shows the end of the scheduled event.</td> </tr> </tbody> </table>		Argument	Value	Description	action	start	LED shows the beginning of the scheduled event.	stop	LED shows the end of the scheduled event.
Argument	Value	Description								
action	start	LED shows the beginning of the scheduled event.								
	stop	LED shows the end of the scheduled event.								

Example

```
(config-sched)> led start  
Core::Schedule::Led: Selected schedule "111".
```

History

Version	Description
2.08	The schedule led command has been introduced.

3.113 service afp

Description Enable *AFP* service.**Prefix no** Yes**Change settings** Yes**Multiple input** No**Synopsis**

```
(config)> service afp  
(config)> no service afp
```

Example

```
(config)> service afp  
Afp::Server: Enabled.
```

History

Version	Description
2.06	The service afp command has been introduced.

3.114 service cifs

Description Enable *CIFS* service.**Prefix no** Yes**Change settings** Yes**Multiple input** No**Synopsis**

```
(config)> service cifs  
(config)> no service cifs
```

Example

```
(config)> service cifs  
Cifs::ServerTsmb: Enabled.
```

```
(config)> no service cifs  
Cifs::ServerTsmb: Disabled.
```

History

Version	Description
2.00	The service cifs command has been introduced.

3.115 service dhcp

Description

Enable **DHCP-server**. If there is not enough settings to start the service (see **ip dhcp pool**), the service will not respond to the network. As soon as there are enough settings, the service will be enabled automatically.

Command with **no** prefix stops the service.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
| (config)> service dhcp
```

```
| (config)> no service dhcp
```

Example

```
(config)> service dhcp
service enabled.
```

History

Version	Description
2.00	The service dhcp command has been introduced.

3.116 service dhcp-relay

Description

Enable DHCP-relay. If there are not enough settings to start the service (see **ip dhcp relay lan**, **ip dhcp relay server**, **ip dhcp relay wan**), it will not respond within the network. As soon as there are enough settings, the service will be enabled automatically.

Command with **no** prefix stops the service.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
| (config)> service dhcp-relay
```

```
| (config)> no service dhcp-relay
```

Example

```
(config)> service dhcp-relay
service enabled.
```

History

Version	Description
2.00	The service dhcp-relay command has been introduced.

3.117 service dlna

Description

Enable **DLNA** service. If there are not enough settings to start the service (see [dlna](#)), it will not respond within the network. As soon as there are enough settings, the service will be enabled automatically.

Command with **no** prefix stops the service.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
| (config)> service dlna
| (config)> no service dlna
```

Example

```
(config)> service dlna
DLNA server enabled.
```

History

Version	Description
2.00	The service dlna command has been introduced.

3.118 service dns-proxy

Description

Enable DNS-proxy. To configure the parameters of the service, use [Section 3.23 on page 119](#) group of commands.

Prefix no

No

Change settings

Yes

Multiple input

No

Synopsis

```
| (config)> service dns-proxy
```

Example

```
(config)> service dns-proxy
Dns::Manager: DNS proxy enabled.
```

History

Version	Description
2.00	The service dns-proxy command has been introduced.

3.119 service ftp

Description	Enable FTP-server that provides the user with access to connected USB-drives, configuration files and a file with firmware update.
	Command with no prefix stops the service.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config)> service ftp (config)> no service ftp</pre>
Example	<pre>(config)> service ftp FTP server enabled.</pre>

History

Version	Description
2.00	The service ftp command has been introduced.

3.120 service http

Description	Enable HTTP-server that provides the user with Web-interface to configure Peak DSL.
	Command with no prefix stops the service.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config)> service http (config)> no service http</pre>
Example	<pre>(config)> service http HTTP server enabled.</pre>

History

Version	Description
2.00	The service http command has been introduced.

3.121 service igmp-proxy

Description	Enable IGMP-proxy. For the service functioning it is necessary to have one upstream interface and at least one downstream interface. If there are not enough settings to run the service, the service will not function. As soon as there are enough settings, the service will start automatically.
	Command with no prefix stops the service.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config)> service igmp-proxy (config)> no service igmp-proxy</pre>
Example	<pre>(config)> service igmp-proxy IGMP proxy enabled.</pre>

History	Version	Description
	2.00	The service igmp-proxy command has been introduced.

3.122 service internet-checker

Description	Enable the Internet-checker to monitor the state of Internet connection on the device. By default, service is enabled.
	Command with no prefix stops the service.
Prefix no	Yes
Change settings	Yes
Multiple input	No
Synopsis	<pre>(config)> service internet-checker (config)> no service internet-checker</pre>
Example	<pre>(config)> service internet-checker Network::InternetChecker: Hosts check enabled. (config)> no service internet-checker Network::InternetChecker: Hosts check disabled.</pre>

History	Version	Description
	2.13	The service internet-checker command has been introduced.

3.123 service ipsec

Description Enable *IPsec* service. By default, service is disabled.

Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> service ipsec
(config)> no service ipsec
```

Example

```
(config)>service ipsec
IpSec::Manager: Service enabled.
```

History	Version	Description
	2.06	The service ipsec command has been introduced.

3.124 service kabinet

Description Enable KABiNET authenticator service. By default it is disabled.

Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config)> service kabinet
(config)> no service kabinet
```

Example

```
(config)> service kabinet
Kabinet::Authenticator: Authenticator enabled.
```

```
(config)> service kabinet
Kabinet::Authenticator: Authenticator disabled.
```

History

Version	Description
2.02	The service kabinet command has been introduced.

3.125 service mdns

Description

Enable *mDNS* service. By default, service is enabled.

Command with **no** prefix stops the service.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
| (config)> service mdns
```

```
| (config)> no service mdns
```

Example

```
(config)>service mdns
```

```
(config)>no service mdns
```

History

Version	Description
2.15	The service mdns command has been introduced.

3.126 service mws

Description

Enable *MWS* service. By default, service is disabled.

Command with **no** prefix stops the service.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
| (config)> service mws
```

```
| (config)> no service mws
```

Example

```
(config)> service mws
Mws::Controller: Enabled.
```

```
(config)> no service mws
Mws::Controller: Disabled.
```

History

Version	Description
2.15	The service mws command has been introduced.

3.127 service ntce

Description Enable **NTCE** service. By default it is disabled.Command with **no** prefix stops the service.**Prefix no** Yes**Change settings** Yes**Multiple input** No

Synopsis

```
| (config)> service ntce
| (config)> no service ntce
```

Example

```
(config)> service ntce
Ntce::Manager: Enabled.
```

History

Version	Description
2.09	The service ntce command has been introduced. Previous command name is service dpi .

3.128 service ntp-client

Description Enable **NTP**-client.Command with **no** prefix stops the service.**Prefix no** Yes**Change settings** Yes**Multiple input** No

Synopsis

```
| (config)> service ntp-client
| (config)> no service ntp-client
```

Example

```
(config)> service ntp-client
NTP client enabled.
```

History

Version	Description
2.00	The service ntp-client command has been introduced.

3.129 service snmp

Description

Enable **SNMP** service. By default, the service is disabled.

Command with **no** prefix stops the service.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
| (config)> service snmp
```

```
| (config)> no service snmp
```

Example

```
(config)> service snmp
Snmp::Manager: SNMP service was enabled.
(config)> no service snmp
Snmp::Manager: SNMP service was disabled.
```

History

Version	Description
2.08	The service snmp command has been introduced.

3.130 service ssh

Description

Enable the SSH server that provides the user with command line interface to configure the device.

Command with **no** prefix stops the service.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
| (config)> service ssh
```

```
| (config)> no service ssh
```

Example

```
(config)> service ssh
Ssh::Manager: SSH server enabled.
```

```
(config)> no service ssh
Ssh::Manager: SSH server disabled.
```

History

Version	Description
2.12	The service ssh command has been introduced.

3.131 service sstp-server

Description

Enable *SSTP*-server.

Command with **no** prefix stops the service.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> service sstp-server
(config)> no service sstp-server
```

Example

```
(config)> service sstp-server
SstpServer::Manager: Service enabled.

(config)> no service sstp-server
SstpServer::Manager: Service disabled.
```

History

Version	Description
2.12	The service sstp-server command has been introduced.

3.132 service telnet

Description

Enable the telnet server that provides the user with command line interface to configure the device.

Command with **no** prefix stops the service.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> service telnet
(config)> no service telnet
```

Example

```
(config)> service tel  
Telnet server enabled.
```

History

Version	Description
2.00	The service telnet command has been introduced.

3.133 service torrent

Description Enable BitTorrent-client that provides the user with peer-to-peer sharing of very large files, such as entire movies and TV shows.
Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
| (config)> service torrent  
| (config)> no service torrent
```

Example

```
(config)> service torrent  
server enabled.
```

History

Version	Description
2.00	The service torrent command has been introduced.

3.134 service udpxy

Description Enable *udp* service.
Command with **no** prefix stops the service.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
| (config)> service udp  
| (config)> no service udp
```

Example

```
(config)> service udp  
UdpManager: a service enabled.
```

History

Version	Description
2.03	The service udpfy command has been introduced.

3.135 service upnp

Description

Enable *UPnP* service.

Command with **no** prefix stops the service.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
| (config)> service upnp
```

```
| (config)> no service upnp
```

History

Version	Description
2.00	The service upnp command has been introduced.

3.136 service vpn-server

Description

Enable VPN-server.

Command with **no** prefix stops the service.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
| (config)> service vpn-server
```

```
| (config)> no service vpn-server
```

Example

```
(config)> service vpn-server
VpnServer::Manager: Service enabled.
```

```
(config)> no service vpn-server
VpnServer::Manager: Service disabled.
```

History

Version	Description
2.04	The service vpn-server command has been introduced.

3.137 show

Description	Access to a group of commands to display various diagnostic information about system. All commands of this group do not change system settings.				
Prefix no	No				
Change settings	No				
Multiple input	No				
Group entry	(show)				
Synopsis	(config)> show				
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.00</td><td>The show command has been introduced.</td></tr></tbody></table>	Version	Description	2.00	The show command has been introduced.
Version	Description				
2.00	The show command has been introduced.				

3.137.1 show access

Description Show user access for directory on USB drive.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **access <directory>**

Arguments	Argument	Value	Description
	directory	String	Path to the folder on USB drive.

Example (show)> **access PENDRIVE:doc**

```
        user:  
            name: admin  
            assigned: write  
            effective: write  
            exists: yes  
        user:  
            name: test  
            assigned: read  
            effective: read  
            exists: yes
```

History

Version	Description
2.00	The show access command has been introduced.

3.137.2 show acme

Description Show *ACME* client status.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (show)> acme

```
(show)> acme
acme:
    real-time: yes
    ndns-domain: mytest.keenetic.pro
    ndns-domain-acme: yes
    ndns-domain-error: no
        default-domain: cc6b5a71a7644903b51a5454.keenetic.io
        account-pending: no
        account-running: no
        get-pending: no
        get-running: no
        revoke-pending: no
        revoke-running: no
    reissue-queue-size: 0
    revoke-queue-size: 0
    retries: 0
    checker-timer: 82499
    apply-timer: 0
    acme-account: 36902346
```

History

Version	Description
2.11	The show acme command has been introduced.

3.137.3 show adguard-dns availability

Description Check and show *AdGuard DNS* availability.**Prefix no** No**Change settings** No**Multiple input** No

Synopsis(show)> **adguard-dns availability****Example**(show)> **adguard-dns availability**
available: yes
port: 53**History**

Version	Description
2.12	The show adguard-dns availability command has been introduced.

3.137.4 show adguard-dns profiles

Description Show *AdGuard DNS* profiles.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis**(show)> **adguard-dns profiles****Example**(show)> **adguard-dns profiles**
profiles:
profile: default

profile: standard

profile: family**History**

Version	Description
2.11	The show adguard-dns profiles command has been introduced.

3.137.5 show afp

Description Show *AFP* server status.**Prefix no** No**Change settings** No**Multiple input** No

Synopsis

```
(show)> afp
```

Example

```
(show)> afp
      enabled: yes
      automount: yes
      permissive: yes

      share:
        mount: C253-062D:
        label: FLASH
      timemachine: yes
      description:
        active: yes

      share:
        mount: C253-062D:/F0R_AFP
        label: AFP
      timemachine: yes
      description:
        active: yes
```

History

Version	Description
2.06	The show afp command has been introduced.

3.137.6 show associations

Description Show list of wireless stations associated with an access point. If you use no argument, the entire list of wireless stations will be displayed.

Prefix no No

Change settings No

Multiple input No

Interface type Access Point

Synopsis

```
(show)> associations [ <name> ]
```

Arguments

Argument	Value	Description
name	String	An access point name. You can see the list of available access points with help of associations [Tab] command.

Example

```
(show)> associations [Tab]
```

Usage template:

```
associations [{name}]
```

Choose:

- WifiMaster0/AccessPoint2
- WifiMaster1/AccessPoint1
- WifiMaster0/AccessPoint3
- WifiMaster0/AccessPoint0
 - AccessPoint
- WifiMaster1/AccessPoint2
- WifiMaster0/AccessPoint1
 - GuestWiFi
- WifiMaster1/AccessPoint3
- WifiMaster1/AccessPoint0
 - AccessPoint_5G

```
(show)> associations WifiMaster0/AccessPoint0
```

```
station:
  mac: ec:1f:72:d3:6d:3f
  ap: WifiMaster0/AccessPoint0
authenticated: 1
  txrate: 130
  uptime: 3804
  txbytes: 2058837
  rxbytes: 25023483
  ht: 20
  mode: 11n
  gi: 800
  rssi: -26
  mcs: 15

station:
  mac: 20:aa:4b:5c:09:0e
  ap: WifiMaster0/AccessPoint0
authenticated: 1
  txrate: 270
  uptime: 19662
  txbytes: 19450396
  rxbytes: 70800065
  ht: 40
  mode: 11n
  gi: 800
  rssi: -41
  mcs: 15
```

History

Version	Description
2.00	The show associations command has been introduced.

3.137.7 show button

Description	Show information about specified system button. If you use no argument, the entire list of all buttons on the device will be displayed. Available buttons depend on hardware configuration.						
Prefix no	No						
Change settings	No						
Multiple input	No						
Synopsis	(show)> button [<name>]						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>name</td><td><i>String</i></td><td>The button name.</td></tr> </tbody> </table>	Argument	Value	Description	name	<i>String</i>	The button name.
Argument	Value	Description					
name	<i>String</i>	The button name.					

Example	(show)> button FN1
	<pre> buttons: button, name = FN1: is_switch: no position: 2 position_count: 2 clicks: 0 elapsed: 0 hold_delay: 3000 </pre>

History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.00</td><td>The show button command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.00	The show button command has been introduced.
Version	Description				
2.00	The show button command has been introduced.				

3.137.8 show button bindings

Description	Show a list of actions associated with device buttons.
Prefix no	No
Change settings	No
Multiple input	No
Synopsis	(show)> button bindings

Example	(show)> button bindings
	<pre> bindings: binding, index = 0: </pre>

```
        button: RESET
        action: click
active_handler: Reboot
default_handler: Reboot
protected: yes

        binding, index = 1:
            button: RESET
            action: hold
active_handler: FactoryReset
default_handler: FactoryReset
protected: yes

        binding, index = 2:
            button: WLAN
            action: click
active_handler: WpsStartMainAp
default_handler: WpsStartMainAp
protected: no

        binding, index = 3:
            button: WLAN
            action: double-click
active_handler: WpsStartMainAp5
default_handler: WpsStartMainAp5
protected: no

        binding, index = 4:
            button: WLAN
            action: hold
active_handler: WifiToggle
default_handler: WifiToggle
protected: no

        binding, index = 5:
            button: FN1
            action: click
active_handler: UnmountUsb1
default_handler: UnmountUsb1
protected: no

        binding, index = 6:
            button: FN1
            action: double-click
active_handler:
default_handler:
protected: no

        binding, index = 7:
            button: FN1
            action: hold
active_handler:
default_handler:
protected: no
```

```

        binding, index = 8:
            button: FN2
            action: click
        active_handler: UnmountUsb2
        default_handler: UnmountUsb2
            protected: no

        binding, index = 9:
            button: FN2
            action: double-click
        active_handler:
        default_handler:
            protected: no

        binding, index = 10:
            button: FN2
            action: hold
        active_handler:
        default_handler:
            protected: no
    
```

History

Version	Description
2.03	The show button bindings command has been introduced.

3.137.9 show button handlers

Description Show a list of available button handlers in the system.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (show)> **button handlers****Example** (show)> **button handlers**

```

        handlers:
            handler, name = LedToggle:
            short_description: toggle system LED states
                protected: no
                switch_related: no

            handler, name = FactoryReset:
            short_description: reset a configuration to factory ▶
        defaults
                protected: yes
    
```

```
switch_related: no

    handler, name = UnmountUsb1:
short_description: unmount USB 1 port storages
    protected: no
    switch_related: no

    handler, name = UnmountUsb2:
short_description: unmount USB 2 port storages
    protected: no
    switch_related: no

    handler, name = Reboot:
short_description: reboot the system
    protected: yes
    switch_related: no

    handler, name = DlnaDirectoryRescan:
short_description: rescan DLNA directory for newer media ►
files
    protected: no
    switch_related: no

    handler, name = DlnaDirectoryFullRescan:
short_description: remove a DLNA database and rescan a ►
DLNA directory
    protected: no
    switch_related: no

    handler, name = DectHandsetRegistrationToggle:
short_description: toggle a DECT handset registration
    protected: no
    switch_related: no

    handler, name = DectHandsetPagingToggle:
short_description: toggle a DECT handset paging
    protected: no
    switch_related: no

    handler, name = OpkgRunScript:
short_description: run Opkg script
    protected: no
    switch_related: no

    handler, name = TorrentAltSpeedToggle:
short_description: toggle a Torrent alternative speed ►
mode
    protected: no
    switch_related: no

    handler, name = TorrentClientStateToggle:
short_description: toggle a Torrent client state
    protected: no
    switch_related: no
```

```

        handler, name = WifiToggle:
short_description: on/off all Wi-Fi interfaces
protected: no
switch_related: no

        handler, name = WpsStartMainAp:
short_description: start WPS (2.4 GHz main access point)
protected: no
switch_related: no

        handler, name = WpsStartMainAp5:
short_description: start WPS (5 GHz main access point)
protected: no
switch_related: no

        handler, name = WifiGuestApToggle:
short_description: toggle a guest access point state ▶
(2.4 GHz)
protected: no
switch_related: no

        handler, name = WpsStartStation:
short_description: start WPS (2.4 GHz Wi-Fi station)
protected: no
switch_related: no

        handler, name = WpsStartStation5:
short_description: start WPS (5 GHz Wi-Fi station)
protected: no
switch_related: no

```

History

Version	Description
2.03	The show button handlers command has been introduced.

3.137.10 show chilli profiles

Description Show the list of available *RADIUS*-server profiles.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (show)> **chilli profiles****Example** (show)> **chilli profiles**

```

profile:
    name: Iron Wi-Fi
    url: https://www.ironwifi.com/
    description: Hosted RADIUS and Captive Portal

    preset:
        uamserver: ▶
        https://europe-west3.ironwifi.com/api/pages/uam/

    radius:
        server1: 35.198.88.176

    radiuslocationid:

        dns:
            dns1: 8.8.8.8
            dns2: 8.8.4.4

        custom: uamsecret

        custom: radiussecret

        custom: radiusnasid

```

History

Version	Description
2.10	The show chilli profiles command has been introduced.

3.137.11 show cifs**Description** Show **CIFS** server status.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (show)> **cifs****Example** (show)> **cifs**

```

        enabled: yes

        master: no

        automount: yes

        permissive: yes

        share:

```

```

mount: 9430B54530B52EDC:
label: 9430B54530B52EDC
description:
active: no

```

History	Version	Description
	2.00	The show cifs command has been introduced.

3.137.12 show clock date

Description Show the current system date.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **clock date**

Example (show)> **clock date**

```

weekday: 4
day: 18
month: 1
year: 2018
hour: 8
min: 46
sec: 2
msec: 660
dst: inactive

```

```

tz:
locality: GMT
stdoffset: 0
dstoffset: 0
usesdst: no
rule: GMT0
custom: no

```

History	Version	Description
	2.00	The show clock date command has been introduced.

3.137.13 show clock timezone-list

Description Show the list of available timezones.

Prefix no No

Change settings No**Multiple input** No**Synopsis** (show)> **clock timezone-list****Example** (show)> **clock timezone-list**

```
timezones:  
    tz:  
        locality: Adak  
        stdoffset: -36000  
        dstoffset: -32400  
    tz:  
        locality: Aden  
        stdoffset: 10800  
        dstoffset: -1  
    tz:  
        locality: Almaty  
        stdoffset: 21600  
        dstoffset: -1  
    tz:  
        locality: Amsterdam  
        stdoffset: 3600  
        dstoffset: 7200  
    tz:  
        locality: Anadyr  
        stdoffset: 43200  
        dstoffset: -1  
    ...  
    ...  
    ...
```

History

Version	Description
2.00	The show clock timezone-list command has been introduced.

3.137.14 show cloudflare-dns availability

Description Check and show *Cloudflare DNS* availability.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (show)> **cloudflare-dns availability**

Example

```
(show)> cloudflare-dns availability

    available: yes
    doh-supported: yes
    doh-available: yes
    dot-supported: yes
    dot-available: yes
    blocked-name: ▶
    31bd8460-89fd-e2de-8865-63ffb93d1c9e.is-cf.cloudflareresolve.com
    ipv6-supported: no
    ipv6-enabled: no
```

History

Version	Description
3.05	The show cloudflare-dns availability command has been introduced.

3.137.15 show cloudflare-dns profiles

Description Show *Cloudflare DNS* profiles.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (show)> **cloudflare-dns profiles****Example**

```
(show)> cloudflare-dns profiles
```

```
profiles:
    profile: default
    profile: standard
    profile: malware
    profile: family
```

History

Version	Description
3.05	The show cloudflare-dns profiles command has been introduced.

3.137.16 show configurator status

Description Show information about system configurator.**Prefix no** No

Change settings	No				
Multiple input	No				
Synopsis	(show)> configurator status				
Example	<pre>(show)> configurator status touch: Thu, 18 Oct 2018 14:37:25 GMT header, name = Model: Keenetic Giga header, name = Version: 2.06.1 header, name = Agent: http/rcl header, name = Last change: Thu, 18 Oct 2018 14:37:25 ▶ GMT serving: name: Session /var/run/ndm.core.socket time: 0.000397 request, host = 192.168.1.42, name = admin: parse: show configurator status</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.06</td> <td>The show configurator status command has been introduced.</td> </tr> </tbody> </table>	Version	Description	2.06	The show configurator status command has been introduced.
Version	Description				
2.06	The show configurator status command has been introduced.				

3.137.17 show credits

Description	Show the license information about specified installed package in KeeneticOS. If you use no argument, the entire list of all installed packages on the device will be displayed.						
Prefix no	No						
Change settings	No						
Multiple input	No						
Synopsis	(show)> credits [<package>]						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>package</td> <td><i>String</i></td> <td>Package name.</td> </tr> </tbody> </table>	Argument	Value	Description	package	<i>String</i>	Package name.
Argument	Value	Description					
package	<i>String</i>	Package name.					

Example

```
(show)> credits

package:
    name: accel-ppp
    title: High performance accel-ppp VPN server
    homepage: https://accel-ppp.org/

package:
    name: accel-ppp-l2tp
    title: L2TP plugin for accel-ppp
    homepage: https://accel-ppp.org/

package:
    name: accel-ppp-pptp
    title: PPTP plugin for accel-ppp
    homepage: https://accel-ppp.org/

package:
    name: accel-ppp-sstp
    title: SSTP plugin for accel-ppp
    homepage: https://accel-ppp.org/

package:
    name: avahi-daemon
    title: An mDNS/DNS-SD implementation (daemon)
    homepage: http://www.avahi.org/

package:
    name: coova-chilli
    title: Wireless LAN HotSpot controller (Coova ▶
Chilli Version)
    homepage: http://www.coova.org/CoovaChilli

package:
    name: crconf
    title: Netlink-based CryptoAPI userspace ▶
management utility
    homepage:

package:
    name: dhcpcv6
    title: DHCPv6 client + server
    homepage: http://wide-dhcpcv6.sourceforge.net/

package:
    name: dropbear
    title: Small SSH2 client/server
    homepage: http://matt.ucc.asn.au/dropbear/

package:
    name: iperf3-ssl
    title: Internet Protocol bandwidth measuring ▶
tool with iperf_auth support
    homepage: https://github.com/esnet/iperf
```

```
package:  
    name: kernel  
    title: Linux kernel  
    homepage: http://www.kernel.org/  
  
package:  
    name: kmod-ipt-account  
    title: ACCOUNT netfilter module  
    homepage:  
  
package:  
    name: kmod-ipt-chaos  
    title: CHAOS netfilter module  
    homepage:  
  
package:  
    name: kmod-ipt-compat-xtables  
    title: API compatibility layer netfilter module  
    homepage:  
  
package:  
    name: kmod-ipt-condition  
    title: Condition netfilter module  
    homepage:  
  
package:  
    name: kmod-ipt-delude  
    title: DELUDE netfilter module  
    homepage:  
  
package:  
    name: kmod-ipt-dhcpmac  
    title: DHCPMAC netfilter module  
    homepage:  
  
package:  
    name: kmod-ipt-dnetmap  
    title: DNETMAP netfilter module  
    homepage:  
  
package:  
    name: kmod-ipt-fuzzy  
    title: fuzzy netfilter module  
    homepage:  
  
package:  
    name: kmod-ipt-geoip  
    title: geoip netfilter module  
    homepage:  
  
package:  
    name: kmod-ipt-iface  
    title: iface netfilter module
```

```
homepage:

package:
    name: kmod-ipt-ipmark
    title: IPMARK netfilter module
    homepage:

package:
    name: kmod-ipt-ipp2p
    title: IPP2P netfilter module
    homepage:

package:
    name: kmod-ipt-ipv4options
    title: ipv4options netfilter module
    homepage:

package:
    name: kmod-ipt-length2
    title: length2 netfilter module
    homepage:

package:
    name: kmod-ipt-logmark
    title: LOGMARK netfilter module
    homepage:

package:
    name: kmod-ipt-lscan
    title: lscan netfilter module
    homepage:

package:
    name: kmod-ipt-netflow
    title: Netflow netfilter module for Linux kernel
    homepage: http://ipt-netflow.sourceforge.net/

package:
    name: kmod-ipt-psd
    title: psd netfilter module
    homepage:

package:
    name: kmod-ipt-quota2
    title: quota2 netfilter module
    homepage:

package:
    name: kmod-ipt-sysrq
    title: SYSRQ netfilter module
    homepage:

package:
    name: kmod-ipt-tarpit
```

```
        title: TARPIT netfilter module
        homepage:

    package:
        name: kmod-nf-nathelper-rtsp
        title: RTSP Conntrack and NAT helpers
        homepage: https://github.com/maru-sama/rtsp-linux

    package:
        name: kmod-wireguard
        title: WireGuard kernel module
        homepage:

    package:
        name: libattr
        title: Extended attributes (xattr) manipulation ▶
library
        homepage: http://savannah.nongnu.org/projects/attr

    package:
        name: libav
        title: This package contains Libav library
        homepage: https://libav.org/

    package:
        name: libavahi
        title: An mDNS/DNS-SD implementation (No D-Bus)
        homepage: http://www.avahi.org/

    package:
        name: libcurl
        title: A client-side URL transfer library
        homepage: http://curl.haxx.se/

    package:
        name: libdaemon
        title: A lightweight C library that eases the ▶
writing of UNIX daemons
        homepage: ▶
http://0pointer.de/lennart/projects/libdaemon/

    package:
        name: libdb47
        title: Berkeley DB library (4.7)
        homepage: http://www.sleepycat.com/products/db.shtml

    package:
        name: libevent
        title: Event notification library
        homepage: http://www.monkey.org/~provos/libevent/

    package:
        name: libexif
        title: Library for JPEG files with EXIF tags
```

```

        homepage: https://libexif.github.io

    package:
        name: libexpat
        title: An XML parsing library
        homepage: https://libexpat.github.io/

    package:
        name: libgcrypt
        title: GNU crypto library
        homepage: ▶
http://directory.fsf.org/security/libgcrypt.html

    package:
        name: libgpg-error
        title: GnuPG error handling helper library
        homepage: ▶
http://www.gnupg.org/related\_software/libgpg-error/

    package:
        name: libid3tag
        title: An ID3 tag manipulation library
        homepage: https://www.underbit.com/products/mad/

    package:
        name: libjpeg
        title: The Independent JPEG Group's JPEG runtime ▶
library
        homepage: http://www.ijg.org/

    package:
        name: liblzo
        title: A real-time data compression library
        homepage: http://www.oberhumer.com/opensource/lzo/

    package:
        name: libnnghttp2
        title: Library implementing the framing layer ▶
of HTTP/2
        homepage: https://nghttp2.org/

    package:
        name: libopenssl
        title: Open source SSL toolkit (libraries ▶
(libcrypto.so, libssl.so))
        homepage: http://www.openssl.org/

    package:
        name: libpcap
        title: Low-level packet capture library
        homepage: http://www.tcpdump.org/

    package:
        name: libtommath

```

```
title: A free number theoretic multiple-precision ►
integer library
homepage: https://www.libtom.net/

package:
    name: libusb
    title: A library for accessing Linux USB devices
homepage: http://libusb.info/

package:
    name: mini_snmpd
    title: Lightweight SNMP daemon
homepage: http://troglbit.github.io/mini-snmpd.html

package:
    name: minidlna
    title: UPnP A/V & DLNA Media Server
homepage: http://minidlna.sourceforge.net/

package:
    name: miniupnpd
    title: Lightweight UPnP daemon
homepage: http://miniupnp.tuxfamily.org/

package:
    name: netatalk
    title: netatalk
homepage: http://netatalk.sourceforge.net

package:
    name: nginx
    title: Nginx web server
homepage: http://nginx.org/

package:
    name: nginx-stream-module
    title: Nginx stream module
homepage:

package:
    name: openvpn
    title: Open source VPN solution using OpenSSL
homepage: http://openvpn.net

package:
    name: pjproject
    title: PJSIP
homepage: http://www.pjsip.org/

package:
    name: pureftpd
    title: FTP server
homepage: http://www.pureftpd.org
```

```

        package:
            name: radvd
            title: Router advertisement daemon
            homepage: http://www.litech.org/radvd/

        package:
            name: sstp-client
            title: SSTP client for Linux
            homepage: http://sstp-client.sourceforge.net/

        package:
            name: strongswan
            title: Strongswan IKEv1/IKEv2 ISAKMP and IPSec ▶
suite
            homepage: https://www.strongswan.org/

        package:
            name: transmission-daemon
            title: A free, lightweight BitTorrent client
            homepage: http://www.transmissionbt.com

        package:
            name: tspc
            title: TSP client
            homepage: http://www.broker.ipv6.ac.uk

        package:
            name: tzdata
            title: Timezone data files
            homepage: https://www.iana.org/time-zones

        package:
            name: udpxy
            title: Convert UDP IPTV streams into HTTP stream
            homepage: http://sourceforge.net/projects/udpxy

        package:
            name: zlib
            title: Library implementing the deflate ▶
compression method
            homepage: http://www.zlib.net/

```

```

(show)> credits nginx

        copying: /*
                    * Copyright (C) 2002-2019 Igor Sysoev
                    * Copyright (C) 2011-2019 Nginx, Inc.
                    * All rights reserved.
                    *
                    * Redistribution and use in source and binary ▶
forms, with or without
                    * modification, are permitted provided that ▶
the following conditions
                    * are met:

```

```

        * 1. Redistributions of source code must ►
retain the above copyright
        *     notice, this list of conditions and the ►
following disclaimer.
        * 2. Redistributions in binary form must ►
reproduce the above copyright
        *     notice, this list of conditions and the ►
following disclaimer in the
        *     documentation and/or other materials ►
provided with the distribution.
        *
        * THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND ►
CONTRIBUTORS ``AS IS'' AND
        * ANY EXPRESS OR IMPLIED WARRANTIES, ►
INCLUDING, BUT NOT LIMITED TO, THE
        * IMPLIED WARRANTIES OF MERCHANTABILITY AND ►
FITNESS FOR A PARTICULAR PURPOSE
        * ARE DISCLAIMED. IN NO EVENT SHALL THE ►
AUTHOR OR CONTRIBUTORS BE LIABLE
        * FOR ANY DIRECT, INDIRECT, INCIDENTAL, ►
SPECIAL, EXEMPLARY, OR CONSEQUENTIAL
        * DAMAGES (INCLUDING, BUT NOT LIMITED TO, ►
PROCUREMENT OF SUBSTITUTE GOODS
        * OR SERVICES; LOSS OF USE, DATA, OR PROFITS; ►
OR BUSINESS INTERRUPTION)
        * HOWEVER CAUSED AND ON ANY THEORY OF ►
LIABILITY, WHETHER IN CONTRACT, STRICT
        * LIABILITY, OR TORT (INCLUDING NEGLIGENCE ►
OR OTHERWISE) ARISING IN ANY WAY
        * OUT OF THE USE OF THIS SOFTWARE, EVEN IF ►
ADVISED OF THE POSSIBILITY OF
        * SUCH DAMAGE.
        */

```

History

Version	Description
3.01	The show credits command has been introduced.

3.137.18 show crypto ike key

Description	Show info about selected <i>IKE</i> key. If you use no argument, the entire list of <i>IKE</i> keys will be displayed.
Prefix no	No
Change settings	No
Multiple input	No
Synopsis	(show)> crypto ike key [name]

Arguments

Argument	Value	Description
name	<i>String</i>	Name of selected <i>IKE</i> key.

Example

```
(show)> crypto ike key

IpSec:
    ike_key, name = test:
        type: address
        id: 10.10.10.10

    ike_key, name = test2:
        type: any
        id: ▶
```

History

Version	Description
2.06	The show crypto ike key command has been introduced.

3.137.19 show crypto map

Description Show info about selected *IPsec* crypto map. If you use no argument, the entire list of *IPsec* crypto maps will be displayed.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **crypto map [map-name]**

Arguments

Argument	Value	Description
map-name	<i>String</i>	Name of selected crypto map.

Example

```
(show)> crypto map test

IpSec:
    crypto_map, name = test:
        config:
            remote_peer: ipsec.example.com
        crypto_ipsec_profile_name: prof1
            mode: tunnel

        local_network:
            net: 172.16.200.0
            mask: 24
            protocol: IPv4
```

```

        remote_network:
            net: 172.16.201.0
            mask: 24
            protocol: IPv4

        status:
        primary_peer: true

        phase1:
            name: test
            unique_id: 572
            ike_state: ESTABLISHED
            establish_time: 1451301596
            rekey_time: 0
            reauth_time: 1451304277
            local_addr: 10.10.10.15
            remote_addr: 10.10.10.20
            ike_version: 2
            local_spi: 00a6ebfc9d90f1c2
            remote_spi: 3cd201ef496df75c
            local_init: yes
            ike_cypher: aes-cbc-256
            ike_hmac: sha1
            ike_dh_group: 2

        phase2_sa_list:
            phase2_sa, index = 0:
                unique_id: 304
                request_id: 185
                sa_state: INSTALLED
                mode: TUNNEL
                protocol: ESP
                encapsulation: yes
                local_spi: ca59bfcc
                remote_spi: cde23d83
                ipsec_cypher: esp-aes-256
                ipsec_hmac: esp-sha1-hmac
                ipsec_dh_group:
                    in_bytes: 7152
                    in_packets: 115
                    in_time: 1451302507
                    out_bytes: 6008
                    out_packets: 98
                    out_time: 1451302507
                    rekey_time: 1451305159
                    local_ts: 172.16.200.0/24
                    remote_ts: 172.16.201.0/24

            state: PHASE2_ESTABLISHED

```

History

Version	Description
2.06	The show crypto map command has been introduced.

3.137.20 show defaults

Description Show the general default wireless and system parameters.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **defaults**

Example (show)> **defaults**

```
servicetag: 014635737374***  
servicehost: ndss.keenetic.ndmsystems.com  
servicepass: *****  
wlanssid: Keenetic-0000  
wlankey: xFxTH***  
wlanwps: 75534***  
country: RU  
ndmhwid: KN-1010  
ctrlsum: 4712e0849ccea477ccdd18e2fedb***  
serial: S1749WF***  
signature: valid  
integrity: ok  
locked: yes
```

History

	Version	Description
	2.00	The show defaults command has been introduced.

3.137.21 show dlna

Description Show DLNA server status.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **dlna**

Example (show)> **dlna**

```
running: yes
```

History

Version	Description
2.00	The show dnla command has been introduced.

3.137.22 show dns-proxy

Description Show a list of current *DNS over TLS* and *DNS over HTTPS* servers.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **dns-proxy**

Example

```
(show)> dns-proxy

    proxy-status:
        proxy-name: System

    proxy-config:

rpc_port = 54321
rpc_ttl = 10000
rpc_wait = 10000
timeout = 7000
proceed = 500
stat_file = /var/ndnproxymain.stat
stat_time = 10000
dns_server = 127.0.0.1:40500 .
dns_server = 127.0.0.1:40501 .
dns_server = 127.0.0.1:40508 .
dns_server = 127.0.0.1:40509 .
static_a = my.keenetic.net 78.47.125.180
static_a = cc6b5a71a7644903b51a5454.keenetic.io 78.47.125.180
static_a = myhome23.keenetic.pro 78.47.125.180
set-profile-ip 127.0.0.1 0
set-profile-ip ::1 0
dns_tcp_port = 53
dns_udp_port = 53

    proxy-stat:

# ndnproxy statistics file

Total incoming requests: 809
Proxy requests sent:      659
Cache hits ratio:         0.192 (155)
Memory usage:              44.41K

DNS Servers
```

```

          Ip    Port   R.Sent  A.Rcvd  NX.Rcvd ▶
Med.Resp Avg.Resp Rank
          127.0.0.1  40500    2       2       0       ▶
40ms      40ms     10
          127.0.0.1  40501   652     651     0       ▶
17ms      17ms     10
          127.0.0.1  40508    2       0       0       ▶
0ms       0ms      4
          127.0.0.1  40509    3       1       0       ▶
326ms     326ms    3

proxy-safe:

proxy-tls:
server-tls:
  address: 1.1.1.1
  port: 853
  sni: cloudflare-dns.com
  spki:
  interface:

server-tls:
  address: 8.8.8.8
  port: 853
  sni: dns.google.com
  spki:
  interface:

proxy-tls-filters:

proxy-https:
server-https:
  uri: https://dns.adguard.com/dns-query
  format: dnsmsg
  spki:
  interface:

server-https:
  uri: ▶
https://cloudflare-dns.com/dns-query?ct=application/dns-json
  format: json
  spki:
  interface:

proxy-https-filters:

```

History

Version	Description
3.01	The show dns-proxy command has been introduced.

3.137.23 show dpn document

Description Show *DPN* agreement text.

Prefix no No

Change settings No

Multiple input No

Synopsis

(show)>	dpn document [<i><version></i>] [<i><language></i>]
---------	--

Arguments

Argument	Value	Description
version	<i>String</i>	Version of <i>DPN</i> . If not specified, the latest version is shown.
language	<i>String</i>	The language of <i>DPN</i> . If not specified, the English version is shown.

Example

```
(show)> dpn document
20200330

DEVICE PRIVACY NOTICE

Last update 2020-30-03

This End User License Agreement (this "Agreement") constitutes ▶
a valid and
binding agreement between Keenetic Limited, including all ▶
affiliates and
subsidiaries ("Keenetic", "us", "our" or "we") and You (as ▶
defined below)
of the Software (as defined below), including the Software ▶
installed onto
any one of our Keenetic products (the "Product") and/or the ▶
Software
legally obtained from or provided by an App Platform (as defined ▶
below)
authorised by Keenetic. Keenetic and You shall be collectively ▶
referred to
as the "Parties", and individually as a "Party".
```

```
(show)> dpn document 20200330 es
20200330

CONTRATO DE LICENCIA DEL USUARIO FINAL

Última actualización 30/03/2020

El presente contrato de licencia del usuario final (el presente ▶
Contrato")
constituye un acuerdo válido y vinculante celebrado entre Keenetic
```

Limited, incluidas todas las filiales y sucursales ("Keenetic", "nosotros", "nuestro/a" o "nos") y Usted (tal y como se define a continuación) del Software (tal y como se define a continuación), ► incluido el Software instalado en cualquiera de nuestros productos de ► Keenetic (el "Producto") y/o el Software obtenido o proporcionado legalmente ► por la Plataforma de la aplicación (tal y como se define a continuación) autorizado por Keenetic. Se referirá a Keenetic y Usted, en ► conjunto, como las "Partes" y, de forma individual, como una "Parte".

History	Version	Description
	3.05	The show dpn document command has been introduced.

3.137.24 show dpn list

Description Show the list of *DPN* available in the system.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **dpn list**

Example

```
(show)> dpn list
      dpn:
      version: 20200330

      document:
          lang: de

          format: txt

          format: md

      document:
          lang: en

          format: txt

          format: md

      document:
          lang: es

          format: txt
```

```
        format: md

document:
    lang: fr

        format: txt

        format: md

document:
    lang: it

        format: txt

        format: md

document:
    lang: pl

        format: txt

        format: md

document:
    lang: pt

        format: txt

        format: md

document:
    lang: ru

        format: txt

        format: md

document:
    lang: sv

        format: txt

        format: md

document:
    lang: tr

        format: txt

        format: md

document:
    lang: uk
```

format: txt

format: md

History

Version	Description
3.05	The show dpn list command has been introduced.

3.137.25 show dot1x

Description Show 802.1x client status on the interface. To manage 802.1x client status on the interface authentication must be configured with **interface authentication** group of commands.

Prefix no No

Change settings No

Interface type Ethernet

Multiple input No

Synopsis (show)> **dot1x [interface]**

Arguments

Argument	Value	Description
interface	<i>Interface name</i>	An Ethernet interface name. You can see the list of available Ethernet interfaces with help of dot1x [Tab] command.

Example

(show)> **dot1x [Tab]**

Usage template:
dot1x [{name}]

Choose:
GigabitEthernet1
ISP
WifiMaster0/AccessPoint2
WifiMaster1/AccessPoint1
WifiMaster0/AccessPoint3
WifiMaster0/AccessPoint0
AccessPoint

(show)> **dot1x ISP**

dot1x:
id: Dsl0
state: CONNECTING

History

Version	Description
2.02	The show dot1x command has been introduced.

3.137.26 show drivers

Description Show the list of loaded kernel drivers.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (show)> **drivers****Example**

```
(show)> drivers

        module:
            name: rt2860v2_sta
            size: 546736
            used: 0
            subs: -
        module:
            name: rt2860v2_ap
            size: 554192
            used: 2
            subs: -
        module:
            name: rndis_host
            size: 5024
            used: 0
            subs: -
        module:
            name: dwc_otg
            size: 68416
            used: 0
            subs: -
        module:
            name: lm
            size: 1344
            used: 1
            subs: dwc_otg,[permanent]
        ...
        ...
        ...
```

History

Version	Description
2.00	The show drivers command has been introduced.

3.137.27 show dyndns updaters

Description Show the list of available DynDNS providers.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **dyndns updaters**

Example

```
(show)> dyndns updaters

        updater:
            type: dyndns
            url: https://account.dyn.com/dns/dyndns
            api: http://members.dyndns.org/nic/update

        updater:
            type: noip
            url: https://www.noip.com/
            api: http://dynupdate.no-ip.com/nic/update
```

History

	Version	Description
	2.12	The show dyndns updaters command has been introduced.

3.137.28 show easyconfig status

Description Show EasyConfig status and settings.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **easyconfigstatus**

Example

```
(show)> easyconfig status

        easyconfig:
            checked: Tue Aug  6 11:50:21 2019
            enabled: yes
            reliable: yes
            gateway-accessible: yes
            dns-accessible: yes
            host-accessible: yes
            internet: yes
```

```

        gateway:
        interface: GigabitEthernet1
            address: 193.0.175.2
            failures: 0
        accessible: yes
        excluded: no

        hosts:
        host:
            name: google.com
            failures: 0
            resolved: no
        accessible: no
    
```

History

Version	Description
2.00	The show easyconfig status command has been introduced.

3.137.29 show eula document

Description Show *EULA* agreement text.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (show)> **eula document** [*version*] [*language*]**Arguments**

Argument	Value	Description
version	<i>String</i>	Version of <i>EULA</i> . If not specified, the latest version is shown.
language	<i>String</i>	The language of <i>EULA</i> . If not specified, the English version is shown.

Example

```
(show)> eula document 20181001
20181001

KEENETIC LIMITED
End User License Agreement

This End User License Agreement (this "Agreement") constitutes ▶
a valid and binding agreement between Keenetic Limited, including ▶
all affiliates and subsidiaries ("Keenetic", "us", "our" or "we") ▶
and You (as ▶
defined below) of the Software (as defined below), including the ▶
Software installed onto any one of our Keenetic products (the ▶
"Product") and/or the Software legally obtained from or provided ▶
```

by an App Platform
 (as defined below) authorised by Keenetic. Keenetic and You shall ▶
 be collectively referred to as the “Parties”, and individually ▶
 as a “Party”.

```
(show)> eula document 20181001 ru
20181001
```

KEENETIC LIMITED

Лицензионное соглашение с конечным пользователем

Настоящее Лицензионное соглашение с конечным пользователем ▶
 (настоящее «Соглашение») представляет собой действительное и ▶
 обязательное соглашение между Keenetic Limited, включая все ▶
 связанные с ней компании и все
 её подразделения («Keenetic», «нам», «наш» или «мы»), и Вами ▶
 (как определено ниже) о Программном обеспечении (как определено ▶
 ниже), включая Программное обеспечение, устанавливаемое на любом ▶
 из продуктов
 производства Keenetic («Продукт») и/или Программное обеспечение, ▶
 полученное на законных основаниях или предоставленное Магазином ▶
 Приложений (как определено ниже), авторизованной Keenetic. ▶
 Keenetic и Вы вместе
 упоминаетесь как «Стороны», а по отдельности – «Сторона».

History

	Version	Description
	2.15	The show eula document command has been introduced.

3.137.30 show eula list

Description Show the list of *EULA* available in the system.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(show)> eula list
```

Example

```
(show)> eula list
      eula:
      version: 20181001
```

```
      document:
          lang: en
```

```
          format: md
```

```
          format: txt
```

```

document:
    lang: ru

        format: md

        format: txt

document:
    lang: tr

        format: md

        format: txt

document:
    lang: uk

        format: md

        format: txt

```

History

Version	Description
2.15	The show eula list command has been introduced.

3.137.31 show interface

Description Show information of specified interface. If you use no argument, the entire list of all network interfaces will be displayed.

Prefix no No

Change settings No

Multiple input No

Interface type IP

Synopsis (show)> **interface <name>**

Arguments

Argument	Value	Description
name	<i>Interface name</i>	Full name or an alias of the interface to display.

Example**Example 3.1. Review the status of switch ports**

The command **show interface** displays different information depending on the interface type. In particular, for GigabitEthernet0/Vlan1 switch it shows

current state of physical ports, speed and duplex, on top of general information.

```
(config)> show interface GigabitEthernet0/Vlan1

        id: GigabitEthernet0
        index: 0
        type: GigabitEthernet
    description:
interface-name: GigabitEthernet0
        link: up
        connected: yes
        state: up
        mtu: 1500
    tx-queue: 2000

        port, name = 1:
            id: GigabitEthernet0/0
            index: 0
        interface-name: 1
            type: Port
            link: up
            speed: 1000
            duplex: full
        auto-negotiation: on
            flow-control: on
                eee: off
            last-change: 4578.185413
        last-overflow: 0
            public: no

        port, name = 2:
            id: GigabitEthernet0/1
            index: 1
        interface-name: 2
            type: Port
            link: down
            last-change: 4590.205656
        last-overflow: 0
            public: no

        port, name = 3:
            id: GigabitEthernet0/2
            index: 2
        interface-name: 3
            type: Port
            link: up

        role, for = GigabitEthernet0/Vlan2: inet

            speed: 100
            duplex: full
        auto-negotiation: on
            flow-control: off
```

```

        eee: off
        last-change: 4570.078144
        last-overflow: 0
        public: yes

        port, name = 4:
            id: GigabitEthernet0/3
            index: 3
        interface-name: 4
            type: Port
            link: down
        last-change: 4590.202571
        last-overflow: 0
        public: no
    
```

History	Version	Description
	2.00	The show interface command has been introduced.

3.137.32 show interface antennas

Description Show antenna signal strength.

Prefix no No

Change settings No

Multiple input No

Interface type Usb

Synopsis `(show)> interface <name> antennas`

Arguments	Argument	Value	Description
	name	<i>Interface name</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Output	Element	Description
	channel	Antenna number.
	rssi	Received signal strength indicator.
	rsrq	Reference signal received quality for 4G only.
	rsrp	Reference signal received power for 4G only.
	phase	Offset phase for 4G only.
	ecio	Ratio of the received/good energy to the interference/bad energy for 3G only.

Example

```
(show)> interface UsbQmi0 antennas

    antenna:
        channel: 0
        rssi: -61
        rsrp: -81
        rsrq: -8
        phase: 0

    antenna:
        channel: 1
        rssi: -94
        rsrp: -120
        rsrq: -10
        phase: 6
```

History

Version	Description
3.05	The show interface antennas command has been introduced.

3.137.33 show interface bands

Description Show available 3G/LTE bands.**Prefix no** No**Change settings** No**Multiple input** No**Interface type** Usb**Synopsis** (show)> **interface <name> bands****Arguments**

Argument	Value	Description
name	<i>Interface name</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(show)> interface UsbQmi0 bands

    umts:
        band: 1
        enabled: yes

    umts:
        band: 5
        enabled: yes
```

```

    lte:
      band: 1
    enabled: yes

    lte:
      band: 3
    enabled: yes

    lte:
      band: 7
    enabled: yes

    lte:
      band: 20
    enabled: yes
  
```

History

Version	Description
3.05	The show interface bands command has been introduced.

3.137.34 show interface bridge

Description Display interface bridge status.**Prefix no** No**Change settings** No**Multiple input** No**Interface type** Bridge**Synopsis** (show)> **interface <name> bridge****Arguments**

Argument	Value	Description
name	<i>Interface name</i>	Full name or an alias of the interface to display.

Output

Element	Value
members	Root node.
interface	Interface name.
link	Link state of interface.
inherited	Attribute of inheritance.

Example(show)> **interface Bridge1 bridge**

```

members:
    interface, link = no, inherited = yes:
        WifiMaster0/AccessPoint2
    interface, link = yes: UsbLte0

```

History	Version	Description
	2.03	The show interface bridge command has been introduced.

3.137.35 show interface cable-diagnostics

Description Show a current diagnostic status on a port.

Prefix no No

Change settings No

Multiple input No

Interface type Ethernet

Synopsis

(show)>	interface [<name>]cable-diagnostic
---------	---

Arguments

Argument	Value	Description
name	<i>Interface name</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(show)> interface GigabitEthernet0/1 cable-diagnostic
```

```

cable-diagnostic:
    finished: Jun 30 19:12:13
    state: DONE
    speed: 0

    pair:
        name: A
        status: OPEN
        length: 0.8

    pair:
        name: B
        status: OPEN
        length: 0.8

    pair:
        name: C
        status: OPEN
        length: 0.8

```

```

pair:
  name: D
  status: OPEN
  length: 0.8

```

History	Version	Description
	3.07	The show interface cable-diagnostics command has been introduced.

3.137.36 show interface cells

Description Show base stations in mobile networks.

Prefix no No

Change settings No

Multiple input No

Interface type Usb

Synopsis (show)> **interface <name> cells**

Arguments	Argument	Value	Description
	name	<i>Interface name</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Output	Element	Description
	phy-id	Cell identity (Cell ID).
	rssi	Received signal strength indicator.

Example (show)> **interface UsbQmi0 cells**

```

cells:
  phy-id: fc
  rssi: -71

```

```

cells:
  phy-id: 15b
  rssi: -71

```

```

cells:
  phy-id: 187
  rssi: -72

```

History

Version	Description
3.05	The show interface cells command has been introduced.

3.137.37 show interface channels

Description Show information about the specified wireless interface channels.

Prefix no No

Change settings No

Multiple input No

Interface type Radio

Synopsis

(show)>	interface <name> channels
---------	--

Arguments

Argument	Value	Description
name	<i>Interface name</i>	Full name or an alias of the interface to display.

Output

Element	Value
channels	Root node.
channel, index	Record number in the list.
number	Channel number.
ext-40-above	Ability to expand channel above.
ext-40-below	Ability to expand channel below.
vhc-80	Ability to expand channel up to 80 MHz.

Example

```
(show)> interface WifiMaster0 channels
```

```
    channels:
        channel, index = 0:
            number: 1
            ext-40-above: yes
            ext-40-below: no
            vht-80: yes
```

```
        channel, index = 1:
            number: 2
            ext-40-above: yes
            ext-40-below: yes
            vht-80: yes
```

```
        channel, index = 2:
            number: 3
```

```

        ext-40-above: yes
        ext-40-below: yes
        vht-80: yes

    channel, index = 3:
        number: 4
    ext-40-above: yes
    ext-40-below: yes
        vht-80: yes

    channel, index = 4:
        number: 5
    ext-40-above: yes
    ext-40-below: yes
        vht-80: yes

    channel, index = 5:
        number: 6
    ext-40-above: yes
    ext-40-below: yes
        vht-80: yes

    channel, index = 6:
        number: 7
    ext-40-above: yes
    ext-40-below: yes
        vht-80: yes

    channel, index = 7:
        number: 8
    ext-40-above: yes
    ext-40-below: yes
        vht-80: yes
...
...
...

```

History

Version	Description
2.03	The show interface channels command has been introduced.

3.137.38 show interface chilli

Description	Show information about statistics of connected clients to the RADIUS hotspot.
Prefix no	No
Change settings	No
Multiple input	No

Synopsis

(show)> interface <name> chilli
--

Arguments

Argument	Value	Description
name	<i>Interface name</i>	Full name or an alias of the interface.

Example

(show)> interface Chillio0 chilli
<pre> host: session-id: 4bf7c55f00000006 user: 44w3c1 ip: 10.1.30.3 mac: 55:a3:f9:51:b4:11 start-time: 3884 end-time: 0 idle-time: 9 idle-time-limit: 0 tx-bytes: 695682 tx-bytes-limit: 0 rx-bytes: 1627453 rx-bytes-limit: 0 tx-speed: 0 tx-speed-limit: 0 rx-speed: 0 rx-speed-limit: 0 </pre>

History

Version	Description
2.10	The show interface chilli command has been introduced.

3.137.39 show interface country-codes

Description Show the list of available country codes on a radio interface.

Prefix no No

Change settings No

Multiple input No

Interface type Radio

Synopsis

(show)> interface <name> country-codes

Arguments

Argument	Value	Description
name	<i>Interface name</i>	Full name or an alias of the interface to display.

Output

Element	Value
country-codes	Root node.
code	Country code.
country	Country name.

Example

```
(show)> interface WifiMaster0 country-codes

    country-codes:
        country-code:
            code: AL
            country: Albania

        country-code:
            code: DZ
            country: Algeria

        country-code:
            code: AR
            country: Argentina

        country-code:
            code: AM
            country: Armenia

        country-code:
            code: AU
            country: Australia
...
...
...
```

History

Version	Description
2.03	The show interface country-codes command has been introduced.

3.137.40 show interface dsl disconnect-report

Description Show current reporting state for DSL connection.

Prefix no No

Change settings No

Multiple input No

Interface type Dsl

Synopsis (show)> **interface [<name>]dsl disconnect-report**

Arguments

Argument	Value	Description
name	<i>Interface name</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(show)> interface Dsl0 dsl disconnect-report

    device: READY
        state: WAIT_FOR_DISCONNECT
    finished:
        file:

    upload:
        file:
        time:
    state: IDLE
```

History

Version	Description
3.07	The show interface dsl disconnect-report command has been introduced.

3.137.41 show interface mac

Description Show the table of MAC-addresses of the switch.

Prefix no No

Change settings No

Multiple input No

Interface type Switch

Synopsis

```
(show)> interface <name> mac
```

Arguments

Argument	Value	Description
name	<i>Interface name</i>	Full name or an alias of the interface to display.

Example

```
(show)> interface GigabitEthernet0 mac
```

```
=====
Port  MAC                               Aging
=====
0    b0:b2:dc:70:c4:28      6
0    f0:1b:21:6d:9a:c5      4
0    00:0c:43:76:20:77      6
0    b4:18:d1:6e:b5:6a      3
0    40:4a:03:78:01:af      2
```

0	84:8e:0c:3f:79:05	5
0	ec:43:f6:73:0a:99	6
0	ec:43:f6:04:2b:05	6
0	b2:b2:dc:5f:09:b3	1
0	ec:43:f6:72:4e:51	6
0	00:30:48:93:91:a7	6
0	f0:c1:f1:95:c3:fb	5
0	b8:ca:3a:8a:c7:43	6
0	ec:43:f6:da:78:79	5
0	10:7b:ef:59:7b:61	2
0	ec:43:f6:ff:f8:8b	6
0	58:8b:f3:65:8c:91	5
0	ec:43:f6:cf:0e:ef	2
0	00:ee:bd:a1:18:51	6
0	ec:43:f6:72:4e:69	6
0	90:e2:ba:07:9a:81	6
0	00:00:5e:00:01:01	6
0	00:08:9b:dc:8d:17	4
0	50:e5:49:58:2b:5a	6
0	90:e2:ba:07:99:55	6
0	ec:43:f6:04:36:8d	6
0	ec:43:f6:05:44:49	6
0	de:06:21:02:b3:e2	6
0	40:4a:03:60:80:05	6
0	00:0c:29:d5:84:c0	6
0	00:08:9b:dc:92:55	6
0	00:08:9b:dc:92:56	6
0	00:1b:0c:7f:b6:41	6
0	10:2a:b3:a6:86:18	5
0	10:7b:ef:df:83:a7	1
0	01:00:5e:00:00:fb	0
.....		

History

Version	Description
2.00	The show interface mac command has been introduced.

3.137.42 show interface operators

Description	Show list of available mobile operators. Before running this command, you must first run the network scan command interface mobile scan . After the scan is complete, the list will be available until the modem is restarted.
Prefix no	No
Change settings	No
Multiple input	No
Interface type	Usb

Synopsis

```
(show)> interface <name> operators
```

Arguments

Argument	Value	Description
name	<i>Interface name</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(show)> interface UsbQmi0 operators
```

```

scanning: complete
age: 80

operator:
    plmn: 25011
    name: YOTA
    mobile: 4G

status: used

status: preferred

operator:
    plmn: 25099
    name: Beeline
    mobile: 4G

status: available

status: roaming

status: forbidden

operator:
    plmn: 25020
    name: Tele2
    mobile: 3G

status: available

status: roaming

status: forbidden

operator:
    plmn: 25001
    name: MTS
    mobile: 3G

status: available

status: roaming

```

```

        status: forbidden

operator:
    plmn: 25099
    name: Beeline
    mobile: 3G

        status: available

        status: roaming

        status: forbidden

operator:
    plmn: 25020
    name: Tele2
    mobile: 4G

        status: available

        status: roaming

        status: forbidden

operator:
    plmn: 25001
    name: MTS
    mobile: 4G

        status: available

        status: roaming

        status: forbidden

```

History

Version	Description
2.12	The show interface operators command has been introduced.

3.137.43 show interface rf e2p

Description	Show the current contents of all calibration data cells.
Prefix no	No
Change settings	No
Multiple input	No
Interface type	Radio

Synopsis

```
(show)> interface <name> rf e2p
```

Arguments

Argument	Value	Description
name	<i>Interface name</i>	Full name or an alias of the interface to display.

Example

```
(show)> interface WifiMaster0 rf e2p
```

```
[0x0000]:5392 [0x0002]:0103 [0x0004]:43EC [0x0006]:04F6
[0x0008]:042B [0x000A]:5392 [0x000C]:1814 [0x000E]:8001
[0x0010]:0000 [0x0012]:5392 [0x0014]:1814 [0x0016]:0000
[0x0018]:0001 [0x001A]:FF6A [0x001C]:0213 [0x001E]:FFFF
[0x0020]:FFFF [0x0022]:FFC1 [0x0024]:9201 [0x0026]:FFFF
[0x0028]:43EC [0x002A]:04F6 [0x002C]:052B [0x002E]:FFFF
[0x0030]:758E [0x0032]:4301 [0x0034]:FF22 [0x0036]:0025
[0x0038]:FFFF [0x003A]:012D [0x003C]:FFFF [0x003E]:FAD9
[0x0040]:88CC [0x0042]:FFFF [0x0044]:FF0A [0x0046]:0000
[0x0048]:0000 [0x004A]:0000 [0x004C]:0000 [0x004E]:FFFF
[0x0050]:FFFF [0x0052]:1111 [0x0054]:1111 [0x0056]:1111
[0x0058]:1011 [0x005A]:1010 [0x005C]:1010 [0x005E]:1010
[0x0060]:1111 [0x0062]:1211 [0x0064]:1212 [0x0066]:1312
[0x0068]:1313 [0x006A]:1413 [0x006C]:1414 [0x006E]:2264
[0x0070]:00F1 [0x0072]:1133 [0x0074]:0000 [0x0076]:FC62
[0x01E8]:FFFF [0x01EA]:FFFF [0x01EC]:FFFF [0x01EE]:FFFF
[0x01F0]:FFFF [0x01F2]:FFFF [0x01F4]:FFFF [0x01F6]:FFFF
[0x01F8]:FFFF [0x01FA]:FFFF [0x01FC]:FFFF [0x01FE]:FFFF
.....
```

History

Version	Description
2.04	The show interface rf e2p command has been introduced.

3.137.44 show interface rrd

Description Show network interface loading on the principle of Round Robin Database.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(show)> interface <name>rrd <attribute> [<detail>]
```

Arguments

Argument	Value	Description
name	<i>Interface name</i>	Full name or an alias of the interface.

Argument	Value	Description
attribute	rxspeed	Value of data rate type.
	txspeed	
detail	0	Level of detail is 1 second.
	1	Level of detail is 2 seconds.
	2	Level of detail is 3 seconds.
	3	Level of detail is 5 seconds.
	4	Level of detail is 15 seconds.
	5	Level of detail is 30 seconds.
	6	Level of detail is 1 minute.
	7	Level of detail is 2 minutes.
	8	Level of detail is 3 minutes.
	9	Level of detail is 5 minutes.
	10	Level of detail is 15 minutes.
	11	Level of detail is 30 minutes.

Example(show)> **interface GigabitEthernet1 rrd rxspeed**

```

data:
t: 90083.990183
v: 200880

data:
t: 90082.990128
v: 152392

data:
t: 90081.990193
v: 110976

data:
t: 90080.990142
v: 48000

data:
t: 90079.990178
v: 38366

```

(show)> **interface GigabitEthernet1 rrd txspeed**

```

data:
t: 87771.249486
v: 148202

data:
t: 87768.248974

```

```

        v: 10694

    data:
        t: 87765.248977
        v: 19070

    data:
        t: 87762.249105
        v: 48909

    data:
        t: 87759.249105
        v: 149277

```

```
(show)> interface GigabitEthernet1 rrd rxspeed 1

    data:
        t: 90176.990054
        v: 164766

    data:
        t: 90174.990061
        v: 121828

    data:
        t: 90172.990052
        v: 95430

    data:
        t: 90170.990085
        v: 57559

    data:
        t: 90168.990119
        v: 97759

```

History	Version	Description
	2.10	The show interface rrd command has been introduced.

3.137.45 show interface stat

Description	Show interface statistics.
Prefix no	No
Change settings	No
Multiple input	No
Synopsis	(show)> interface <name> stat

Arguments

Argument	Value	Description
name	<i>Interface name</i>	Full name or an alias of the interface.

Example

```
(show)> interface WifiMaster0/AccessPoint0 stat
```

```

    rxpackets: 137033
        rxbytes: 23915722
        rxerrors: 0
        rxdropped: 0
        txpackets: 847802
            txbytes: 1192583473
            txerrors: 0
            txdropped: 0
            timestamp: 11754.721178
```

History

Version	Description
2.00	The show interface stat command has been introduced.

3.137.46 show interface traffic-counter

Description Show detailed information about the traffic counter status.

Prefix no No

Change settings No

Multiple input No

Interface type Usb

Synopsis

```
(show)> interface <name>traffic-counter
```

Arguments

Argument	Value	Description
name	<i>Interface name</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(show)> interface UsbQmi0 traffic-counter
```

```

        enabled: true
        value: 1.47
        threshold: 3.96
        limit: 4
        remaining: 2.46
        unit: GiB

        trigger:
```

```
limit: false
threshold: false

saved: Fri Feb 19 18:56:29 2021
```

History	Version	Description
	3.06	The show interface traffic-counter command has been introduced.

3.137.47 show interface wps pin

Description Show the access point WPS PIN.

Prefix no No

Change settings No

Multiple input No

Interface type WiFi

Synopsis (show)> **interface <name> wps pin**

Arguments	Argument	Value	Description
	name	<i>Interface name</i>	Full name or an alias of the interface.

Output	Element	Value
	pin	Pin number.

Example (show)> **interface WifiMaster0/AccessPoint0 wps pin**

```
pin: 60180360
```

History	Version	Description
	2.00	The show interface wps pin command has been introduced.

3.137.48 show interface wps status

Description Show the access point WPS status.

Prefix no No

Change settings No

Multiple input

No

Interface type

WiFi

Synopsis(show)> **interface <name> wps status****Arguments**

Argument	Value	Description
name	<i>Interface name</i>	Full name or an alias of the interface.

Output

Element	Value
wps	Root node.
configured	WPS is configured for Access Point.
auto-self-pin	Auto-self-pin mode state.
status	disabled enabled active
direction	send receive
mode	pbc self-pin peer
left	Time to session closure in seconds.

Example(show)> **interface WifiMaster0/AccessPoint0 wps status**

```

wps:
  configured: yes
  auto-self-pin: yes
    status: active
  direction: send
    mode: self-pin
    left: infinite

```

History

Version	Description
2.00	The show interface wps status command has been introduced.

3.137.49 show internet status

Description Check for an Internet connection on the device. The "Internet" LED (the globe) lights up as a result of connecting to popular internet sites.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **internet status**

Example

```
(show)> internet status

        checked: Tue Apr 24 17:14:37 2018
        reliable: yes
gateway-accessible: yes
        dns-accessible: yes
        host-accessible: yes
        internet: yes

        gateway:
            interface: GigabitEthernet1
            address: 192.168.1.1
            failures: 0
            accessible: yes
            excluded: no

        hosts:
            host:
                name: example.net
                failures: 0
                resolved: yes
                accessible: yes

            host:
                name: google.com
                failures: 0
                resolved: no
                accessible: no
```

History

Version	Description
2.11	The show internet status command has been introduced.

3.137.50 show ip arp

Description Display the contents of the **ARP** cache.

Prefix no	No																																							
Change settings	No																																							
Multiple input	No																																							
Synopsis	(show)> ip arp																																							
Example	(show)> ip arp =====																																							
	<table border="1"> <thead> <tr> <th>IP</th> <th>MAC</th> <th>Interface</th> </tr> </thead> <tbody> <tr><td>192.168.75.209</td><td>9c:b7:0d:91:e7:31</td><td>Home</td></tr> <tr><td>82.135.72.150</td><td>00:0e:0c:09:db:60</td><td>ISP</td></tr> <tr><td>192.168.75.106</td><td>88:53:2e:5e:07:1d</td><td>Home</td></tr> <tr><td>192.168.75.201</td><td>7c:61:93:eb:6c:77</td><td>Home</td></tr> <tr><td>192.168.75.203</td><td>00:19:d2:48:d6:dc</td><td>Home</td></tr> <tr><td>10.10.30.34</td><td>a0:88:b4:40:9c:98</td><td>GuestWiFi</td></tr> <tr><td>192.168.75.203</td><td>7c:61:93:ee:88:67</td><td>Home</td></tr> <tr><td>192.168.75.211</td><td>00:26:c7:4a:e0:16</td><td>Home</td></tr> <tr><td>82.138.72.163</td><td>34:51:c9:c6:53:cf</td><td>ISP</td></tr> <tr><td>192.168.75.200</td><td>60:d8:19:cb:1b:36</td><td>Home</td></tr> <tr><td>192.168.75.204</td><td>4c:0f:6e:4b:3c:ba</td><td>Home</td></tr> <tr><td>82.138.72.129</td><td>00:30:48:89:b5:9f</td><td>ISP</td></tr> </tbody> </table>	IP	MAC	Interface	192.168.75.209	9c:b7:0d:91:e7:31	Home	82.135.72.150	00:0e:0c:09:db:60	ISP	192.168.75.106	88:53:2e:5e:07:1d	Home	192.168.75.201	7c:61:93:eb:6c:77	Home	192.168.75.203	00:19:d2:48:d6:dc	Home	10.10.30.34	a0:88:b4:40:9c:98	GuestWiFi	192.168.75.203	7c:61:93:ee:88:67	Home	192.168.75.211	00:26:c7:4a:e0:16	Home	82.138.72.163	34:51:c9:c6:53:cf	ISP	192.168.75.200	60:d8:19:cb:1b:36	Home	192.168.75.204	4c:0f:6e:4b:3c:ba	Home	82.138.72.129	00:30:48:89:b5:9f	ISP
IP	MAC	Interface																																						
192.168.75.209	9c:b7:0d:91:e7:31	Home																																						
82.135.72.150	00:0e:0c:09:db:60	ISP																																						
192.168.75.106	88:53:2e:5e:07:1d	Home																																						
192.168.75.201	7c:61:93:eb:6c:77	Home																																						
192.168.75.203	00:19:d2:48:d6:dc	Home																																						
10.10.30.34	a0:88:b4:40:9c:98	GuestWiFi																																						
192.168.75.203	7c:61:93:ee:88:67	Home																																						
192.168.75.211	00:26:c7:4a:e0:16	Home																																						
82.138.72.163	34:51:c9:c6:53:cf	ISP																																						
192.168.75.200	60:d8:19:cb:1b:36	Home																																						
192.168.75.204	4c:0f:6e:4b:3c:ba	Home																																						
82.138.72.129	00:30:48:89:b5:9f	ISP																																						

History	Version	Description
	2.00	The show ip arp command has been introduced.

3.137.51 show ip dhcp bindings

Description	Show <i>DHCP-server</i> status. If you use no argument, the entire list of issued IPs for all pools will be displayed.
Prefix no	No
Change settings	No
Multiple input	No
Synopsis	(show)> ip dhcp bindings [<pool>]

Arguments	Argument	Value	Description
	pool	String	The pool name.

Example	(show)> ip dhcp bindings _WEBADMIN lease: ip: 192.168.15.211 mac: 00:26:c7:4a:e0:16
----------------	---

```

        expires: 289
        hostname: lenovo
        lease:
            ip: 192.168.15.208
            mac: 00:19:d2:48:d6:dc
            expires: 258
        hostname: evo
    ...
    ...

```

History

Version	Description
2.00	The show ip dhcp bindings command has been introduced.

3.137.52 show ip dhcp pool

Description Show information about specified pool. If you use no argument, the information about all system pools will be displayed.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ip dhcp pool [<pool>]**

Arguments

Argument	Value	Description
pool	String	The pool name.

Example

```
(show)> ip dhcp pool 123

        pool, name = 123:
        interface, binding = auto:
            network: 0.0.0.0/0
            begin: 0.0.0.0
            end: 0.0.0.0
        router, default = yes: 0.0.0.0
        lease, default = yes: 25200
        state: down
        debug: no
```

History

Version	Description
2.03	The show ip dhcp pool command has been introduced.

3.137.53 show ip ftp

Description Show home directories for users with **ftp** tag.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ip ftp**

Example (show)> **ip ftp**

```
        enabled: yes
        permissive: yes
        root: ADATA SD600:
        path: /tmp/mnt/ADATA SD600

        user, index = 0:
        name: admin
        root: ADATA SD600:
        path: /tmp/mnt/ADATA SD600
```

History

	Version	Description
	2.08	The show ip ftp command has been introduced.

3.137.54 show ip hotspot

Description Show hotspot hosts.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ip hotspot**

Example (show)> **ip hotspot**

```
        host:
            mac: 24:92:0e:92:e5:44
            via: 24:92:0e:92:e5:44
            ip: 192.168.1.41
            hostname: android-41d997d510af8ff9
            name:

        interface:
            id: Bridge0
```

```
        name: Home
        description: Home network (Wired and wireless hosts)

        expires: 207328
registered: no
        access: permit
schedule:
        active: yes
        rxbytes: 0
        txbytes: 0
        uptime: 4911
        link: up
        ssid: Bewilderbeast
        ap: WifiMaster0/AccessPoint0
authenticated: yes
        txrate: 65
        ht: 20
        mode: 11n
        gi: 800
        rssi: -24
        mcs: 7

host:
        mac: 20:aa:4b:5c:09:0e
        via: 20:aa:4b:5c:09:0e
        ip: 192.168.1.51
        hostname: Julia-PC
        name:

interface:
        id: Bridge0
        name: Home
description: Home network (Wired and wireless hosts)

        expires: 212967
registered: no
        access: permit
schedule:
        active: yes
        rxbytes: 0
        txbytes: 0
        uptime: 884
        link: up
        ssid: Bewilderbeast
        ap: WifiMaster0/AccessPoint0
authenticated: yes
        txrate: 130
        ht: 20
        mode: 11n
        gi: 800
        rssi: -37
        mcs: 15
```

History

Version	Description
2.09	The show ip hotspot command has been introduced.

3.137.55 show ip hotspot rrd

Description Show registered host traffic information of Round Robin Database.

Prefix no No

Change settings No

Multiple input No

Synopsis `(show)> ip hotspot <mac> rrd <attribute> [<detail>]`

Arguments

Argument	Value	Description
mac	<i>MAC-address</i>	MAC-address of registered host.
attribute	rxspeed txspeed rxbytes txbytes	Data rate type.
detail	0 1 2 3 4 5 6 7 8 9 10	Level of detail is 1 second. Level of detail is 2 seconds. Level of detail is 3 seconds. Level of detail is 5 seconds. Level of detail is 15 seconds. Level of detail is 30 seconds. Level of detail is 1 minute. Level of detail is 2 minutes. Level of detail is 3 minutes. Level of detail is 5 minutes. Level of detail is 15 minutes.

Argument	Value	Description
	11	Level of detail is 30 minutes.

Example

```
(show)> ip hotspot a8:le:84:85:f2:11 rrd rxspeed
```

```
    data:
        t: 2180.491855
        v: 16298

    data:
        t: 2177.492050
        v: 9026

    data:
        t: 2174.491916
        v: 11450

    data:
        t: 2171.491843
        v: 626
```

```
(show)> ip hotspot a8:le:84:85:f2:11 rrd txspeed
```

```
    data:
        t: 2228.491841
        v: 952

    data:
        t: 2225.491920
        v: 8813

    data:
        t: 2222.492053
        v: 28746

    data:
        t: 2219.491845
        v: 22474
```

```
(show)> ip hotspot a8:le:84:85:f2:11 rrd rxbytes
```

```
    data:
        t: 2279.491860
        v: 4197

    data:
        t: 2276.492050
        v: 362

    data:
        t: 2273.492040
```

```

        v: 14337

    data:
        t: 2270.491862
        v: 3281

(show)> ip hotspot a8:1e:84:f2:11 rrd txbytes

    data:
        t: 2360.491865
        v: 3342

    data:
        t: 2357.491853
        v: 142

    data:
        t: 2354.491949
        v: 3333

    data:
        t: 2351.491847
        v: 3390

```

History

Version	Description
2.14	The show ip hotspot rrd command has been introduced.

3.137.56 show ip hotspot summary

Description Show the information about traffic usage for several registered hosts according to Round Robin Database. Sorting is in descending order.

Prefix no No

Change settings No

Multiple input No

Synopsis

<pre>(show)> ip hotspot summary <attribute> [detail <detail>] [count <count>]</pre>
--

Arguments

Argument	Value	Description
attribute	rxspeed	Value of data rate type.
	txspeed	
	rxbytes	
	txbytes	
detail	0	Level of detail is 3 seconds.

Argument	Value	Description
	1	Level of detail is 60 seconds.
	2	Level of detail is 180 seconds.
	3	Level of detail is 1440 seconds.
count	<i>Integer</i>	The number of hosts. If not specified, the entire list of hosts is displayed.

Example

```
(show)> ip hotspot summary rxspeed
```

```
t: 255
```

```
host:
  active: yes
    name: toshiba
  rxspeed: 143964
```

```
host:
  active: yes
    name: lnx
  rxspeed: 24749
```

```
host:
  active: yes
    name: oneplus6
  rxspeed: 2558
```

```
(show)> ip hotspot summary rxspeed detail 0
```

```
t: 0
```

```
host:
  active: yes
    name: toshiba
  rxspeed: 186519
```

```
host:
  active: yes
    name: oneplus6
  rxspeed: 94298
```

```
host:
  active: yes
    name: lnx
  rxspeed: 8237
```

```
(show)> ip hotspot summary rxspeed count 3
```

```
t: 255
```

```
host:
  active: yes
```

```

        name: toshiba
        rxspeed: 390322

    host:
        active: yes
        name: lnx
        rxspeed: 53518

    host:
        active: yes
        name: oneplus6
        rxspeed: 5284

```

History	Version	Description
	2.14	The show ip hotspot summary command has been introduced.

3.137.57 show ip http proxy

Description Show HTTP proxy status.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ip http proxy**

Example (show)> **ip http proxy**

```

proxy:
    name: modem
    domain: myhomemodem.keenetic.link
    upstream: http://192.168.8.1:80
    allow: public
    ndns: yes

```

History	Version	Description
	2.09	The show ip http proxy command has been introduced.

3.137.58 show ip http webdav

Description Show *WebDAV* server status.

Prefix no No

Change settings No

Multiple input

No

Synopsis(show)> **ip http webdav****Example**(show)> **ip http webdav**

```

        enabled: yes
        permissive: yes
            root: ext4-files:/
            path: /tmp/mnt/7a976f42-a16f-d501-3017-6b42a16fd501

            user, index = 0:
                name: admin
                root:
                path:

            user, index = 1:
                name: enpa
                root: ext4-files:/
                path: ▶
/tmp/mnt/7a976f42-a16f-d501-3017-6b42a16fd501

```

History

Version	Description
3.04	The show ip http webdav command has been introduced.

3.137.59 show ip name-server

Description Show a list of current addresses of DNS-servers in order of decreasing priority.**Prefix no**

No

Change settings

No

Multiple input

No

Synopsis(show)> **ip name-server****Example**(show)> **ip name-server**

```

server:
    address: 9.9.9.9
    port:
    domain:
    global: 0

server:
    address: 1.0.0.1
    port:
    domain: keenetic.net

```

```
global: 0
```

```
server:  
    address: 1.1.1.1  
    port:  
    domain:  
    global: 64509
```

History

Version	Description
2.00	The show ip name-server command has been introduced.

3.137.60 show ip nat

Description Show network address translation table.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ip nat [tcp]**

Arguments

Argument	Value	Description
tcp	Keyword	Only the records with <i>TCP</i> type will be displayed.

Example

(show)> ip nat						
Type	In	Source	Port	Destination	Port	Packets
		Out				
udp		10.1.30.34 111.221.77.159	6482 40005	111.221.77.159 82.138.7.164	40005 6482	1 1
udp		220.27.130.179 192.168.15.204	6896 28197	82.138.7.164 220.27.130.179	28197 6896	1 1
tcp		10.1.30.33 78.141.179.15	57474 12350	78.141.179.15 82.138.7.164	12350 57474	12 11
udp		10.1.30.34 84.201.228.162	6482 44423	84.201.228.162 82.138.7.164	44423 6482	11 16
tcp		10.1.30.34 96.55.147.21	46655 443	96.55.147.21 82.138.7.164	443 46655	2 0
udp		10.1.30.34	6482	213.199.179.158	40006	1

213.199.179.158	40006	82.138.7.164	6482	1
<hr/>				

History

Version	Description
2.00	The show ip nat command has been introduced.

3.137.61 show ip neighbour

Description Show the list of discovered hosts on the network at the OSI model network level.

Prefix no No

Change settings No

Multiple input No

Synopsis

(show)>	ip neighbour [alive]
---------	-----------------------------

Arguments

Argument	Value	Description
alive	<i>Keyword</i>	Show active hosts.

Example

```
(show)> ip neighbour

neighbour:
    id: 1
    via: b8:88:e1:2b:30:af
    mac: b8:88:e1:2b:30:af
    address-family: ipv4
        address: 192.168.22.16
        interface: Bridge0
        first-seen: 251387
        last-seen: 0
        leasetime: 7372
        expired: no
        wireless: no

neighbour:
    id: 4
    via: b8:88:e2:4b:30:af
    mac: b8:88:e2:4b:30:af
    address-family: ipv6

addresses:
    address:
        address: fe80::a022:a505:fae6:c891
        status: active
        last-seen: 3
```

```

        interface: Bridge0
        first-seen: 251371
        last-seen: 251371
        leasetime: 0
        expired: no
        wireless: no
    
```

History

Version	Description
2.10	The show ip neighbour command has been introduced.

3.137.62 show ip policy

Description Show the IP Policy profile status.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ip policy** [<policy>]

Arguments

Argument	Value	Description
policy	<i>Policy name</i>	Name of IP Policy profile.

Example

```

(show)> ip policy
policy, name = Policy0, description = VPN-OpenVPN:
    mark: fffffd00
    table: 42

    route:
    destination: 10.1.30.0/24
        gateway: 0.0.0.0
        interface: Guest
        metric: 0
        proto: boot
        floating: no

    route:
    destination: 172.16.3.33/32
        gateway: 0.0.0.0
        interface: L2TPVPN
        metric: 0
        proto: boot
        floating: no

    route:
    destination: 192.168.1.0/24
        gateway: 0.0.0.0
    
```

```
        interface: Home
        metric: 0
        proto: boot
        floating: no

    policy, name = Policy3, description = Home:
        mark: fffffd03
        table: 45

        route:
    destination: 10.1.30.0/24
        gateway: 0.0.0.0
        interface: Guest
        metric: 0
        proto: boot
        floating: no

        route:
    destination: 172.16.3.33/32
        gateway: 0.0.0.0
        interface: L2TPVPN
        metric: 0
        proto: boot
        floating: no

        route:
    destination: 192.168.1.0/24
        gateway: 0.0.0.0
        interface: Home
        metric: 0
        proto: boot
        floating: no
```

```
(show)> ip policy Policy0
policy, name = Policy0:
        mark: fffffd00
        table: 42

        route:
    destination: 0.0.0.0/0
        gateway: 193.0.174.1
        interface: ISP
        metric: 0
        proto: boot
        floating: no

        route:
    destination: 10.1.30.0/24
        gateway: 0.0.0.0
        interface: Guest
        metric: 0
        proto: boot
        floating: no
```

```

        route:
destination: 185.230.127.84/32
        gateway: 193.0.174.1
        interface: ISP
        metric: 0
        proto: boot
        floating: no

        route:
destination: 192.168.1.0/24
        gateway: 0.0.0.0
        interface: Home
        metric: 0
        proto: boot
        floating: no

        route:
destination: 193.0.174.0/24
        gateway: 0.0.0.0
        interface: ISP
        metric: 0
        proto: boot
        floating: no

        route:
destination: 193.0.175.0/25
        gateway: 193.0.174.10
        interface: ISP
        metric: 0
        proto: boot
        floating: no

        route:
destination: 193.0.175.22/32
        gateway: 193.0.174.1
        interface: ISP
        metric: 0
        proto: boot
        floating: no

```

History

Version	Description
2.12	The show ip policy command has been introduced.

3.137.63 show ip route

Description	Show the current routing table.
Prefix no	No
Change settings	No

Multiple input

No

Synopsis(show)> **ip route [sort <criteria> <direction>]****Arguments**

Argument	Value	Description
direction	ascending	Routing table records are sorted in ascending order.
	descending	Routing table records are sorted in descending order.
criteria	interface	Sorting criteria is the interface name.
	gateway	Sorting criteria is the gateway address.
	destination	Sorting criteria is the destination address.

Example(show)> **ip route sort destination ascending**

Destination	Gateway	Interface	Metric
0.0.0.0/0	82.138.7.129	ISP	0
10.1.30.0/24	0.0.0.0	GuestWiFi	0
82.138.7.27/32	0.0.0.0	PPTP0	0
82.138.7.32/32	0.0.0.0	PPTP0	0
82.138.7.128/26	0.0.0.0	ISP	0
82.138.7.132/32	82.138.7.129	ISP	0
82.138.7.141/32	82.138.7.129	ISP	0
89.179.183.128/26	82.138.7.138	ISP	0
192.168.15.0/24	0.0.0.0	Home	0

History

Version	Description
2.00	The show ip route command has been introduced.

3.137.64 show ipsec

DescriptionShow info about **IPsec/IKE** strongSwan service status.**Prefix no**

No

Change settings

No

Multiple input

No

Synopsis(show)> **ipsec****Example**(show)> **ipsec**

ipsec_statusall:

Status of IKE charon daemon (strongSwan 5.3.4, Linux 2.6.36, ▶

```

mips):
    uptime: 6 days, since Dec 22 10:23:36 2015
    worker threads: 11 of 16 idle, 5/0/0/0 working, job queue: ▶
0/0/0/0, scheduled: 10
    loaded plugins: charon aes des sha1 sha2 md5 random nonce ▶
openssl xcbc cmac hmac attr kernel-netlink socket-default stroke ▶
updown eap-mschapv2 eap-dynamic xauth-generic xauth-eap ▶
error-notify systime-fix
Listening IP addresses:
    192.168.1.1
    10.10.10.15
Connections:
    test: %any...ipsec.example.org IKEv2, dpddelay=10s
        test: local: [ipsec.example.org] uses pre-shared key ▶
authentication
        test: remote: [ipsec.example.com] uses pre-shared key ▶
authentication
        test: child: 172.16.200.0/24 === 172.16.201.0/24 TUNNEL, ▶
dpdaction=restart
Security Associations (1 up, 0 connecting):
    test[572]: ESTABLISHED 24 minutes ago, ▶
10.10.10.15[ipsec.example.org]...10.10.10.20[ipsec.example.com]
        test[572]: IKEv2 SPIs: 00a6ebfc9d90f1c2_i* ▶
3cd201ef496df75c_r, pre-shared key reauthentication in 20 minutes
        test[572]: IKE proposal: ▶
AES_CBC=256/HMAC_SHA1_96/PRF_HMAC_SHA1/MODP_1024/#
        test{304}: INSTALLED, TUNNEL, reqid 185, ESP in UDP SPIs: ▶
ca59bfcf_i cde23d83_o
        test{304}: AES_CBC_256/HMAC_SHA1_96, 10055 bytes_i (164 ▶
pkts, 0s ago), 10786 bytes_o (139 pkts, 0s ago), rekeying in 34 ▶
minutes
        test{304}: 172.16.200.0/24 === 172.16.201.0/24

```

History

Version	Description
2.06	The show ipsec command has been introduced.

3.137.65 show ipv6 addresses

Description Show a list of current IPv6-addresses.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ipv6 addresses**

Example (show)> **ipv6 addresses**

```

        address:
            address: 2001:db8::1
            interface: ISP
        valid-lifetime: infinite
        address:
            address: 2001:db8::ce5d:4eff:fe4f:aab2
            interface: Home
        valid-lifetime: infinite
        address:
            address: fd3c:4268:1559:0:ce5d:4eff:fe4f:aab2
            interface: Home
        valid-lifetime: infinite
        address:
            address: fd01:db8:43:0:ce5d:4eff:fe4f:aab2
            interface: Home
        valid-lifetime: infinite
    
```

History

Version	Description
2.00	The show ipv6 addresses command has been introduced.

3.137.66 show ipv6 prefixes**Description** Show a list of current IPv6-prefixes.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (show)> **ipv6 prefixes****Example** (show)> **ipv6 prefixes**

```

prefix:
    prefix: 2001:db8::/64
    interface: ISP
    valid-lifetime: infinite
    preferred-lifetime: infinite
    prefix:
        prefix: fd3c:4268:1559::/48
        interface:
        valid-lifetime: infinite
        preferred-lifetime: infinite
        prefix:
            prefix: fd01:db8:43::/48
            interface:
            valid-lifetime: infinite
            preferred-lifetime: infinite
    
```

History

Version	Description
2.00	The show ipv6 prefixes command has been introduced.

3.137.67 show ipv6 routes**Description** Show a list of current IPv6-routes.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (show)> **ipv6 routes****Example** (show)> **ipv6 routes**

```

route_:
destination: 2001:db8::/64
    gateway: ::
    interface: Home
route_:
destination: fd3c:4268:1559::/64
    gateway: ::
    interface: Home
route_:
destination: fd01:db8:43::/64
    gateway: ::
    interface: Home

```

History

Version	Description
2.00	The show ipv6 routes command has been introduced.

3.137.68 show kabinet status**Description** Check for the status and configuration of КАБиNET authenticator.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (show)> **kabinet status****Example** (show)> **kabinet status**

```

kabinet:

```

```

enabled: yes
wan: yes
state: STOPPED
server: 10.0.0.1
access-level: internet
protocol-version: 2

```

History

Version	Description
2.02	The show kabinet status command has been introduced.

3.137.69 show last-change

Description Show when and who made the latest changes in the settings.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **last-change**

Example (show)> **last-change**

```

date: Thu, 12 Jul 2012 10:01:47 GMT
agent: cli

```

History

Version	Description
2.00	The show last-change command has been introduced.

3.137.70 show led

Description Show information about specified LED in the system. If you use no argument, the entire list of all LEDs on the device will be displayed. Available LEDs depend on hardware configuration.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **led [<name>]**

Arguments

Argument	Value	Description
name	SYS	The LED name. The number of available indicators depends on the selected device.
	FN	
	FW_UPD	
	ACT_ACK	
	WAN	
	DSL	
	WLAN	
	WLAN5	
	WPS_1	
	WPS_2	
	WPS_3	
	WPS_4	
	WPS5_1	
	WPS5_2	
	WPS5_3	
	WPS5_4	
	USB_1	
	USB_2	
	LTE	

Example

```
(show)> led FN_1
    leds:
        led, index = 0:
            name: FN_1
            user_configurable: yes
            virtual: no
```

History

Version	Description
2.05	The show led command has been introduced.

3.137.71 show led bindings

Description	Show the control associated with the specified LED. If you use no argument, the entire list of all LEDs with theirs controls will be displayed.
Prefix no	No
Change settings	No

Multiple input

No

Synopsis(show)> **led [<name>]bindings****Arguments**

Argument	Value	Description
name	SYS	The LED name. Set of available indicators depends on the selected device.
	FN	
	FW_UPD	
	ACT_ACK	
	WAN	
	DSL	
	WLAN	
	WLAN5	
	WPS_1	
	WPS_2	
	WPS_3	
	WPS_4	
	WPS5_1	
	WPS5_2	
	WPS5_3	
	WPS5_4	
	USB_1	
	USB_2	
	LTE	

Example

```
(show)> led bindings

        bindings:

            binding, index = 0:
                led: SYS
            user_configurable: no
                active_control: SystemState
            default_control: SystemState

            binding, index = 1:
                led: FN_1
            user_configurable: yes
                active_control: Usb1PortDeviceAttached
            default_control: Usb1PortDeviceAttached

            binding, index = 2:
                led: FN_2
```

```
user_configurable: yes
    active_control: Usb2PortDeviceAttached
    default_control: Usb2PortDeviceAttached

        binding, index = 3:
            led: ACT_ACK
user_configurable: no
    active_control: ButtonActivityAcknowledgement
    default_control: ButtonActivityAcknowledgement

        binding, index = 4:
            led: FW_UPD
user_configurable: no
    active_control:
    default_control:

        binding, index = 5:
            led: WAN
user_configurable: no
    active_control: WanConnected
    default_control: WanConnected

        binding, index = 6:
            led: WLAN
user_configurable: no
    active_control: WlanActivity
    default_control: WlanActivity

        binding, index = 7:
            led: WPS_1
user_configurable: no
    active_control: WlanWps1Activity
    default_control: WlanWps1Activity

        binding, index = 8:
            led: WPS_2
user_configurable: no
    active_control: WlanWps2Activity
    default_control: WlanWps2Activity

        binding, index = 9:
            led: WPS_3
user_configurable: no
    active_control: WlanWps3Activity
    default_control: WlanWps3Activity

        binding, index = 10:
            led: WPS_4
user_configurable: no
    active_control: WlanWps4Activity
    default_control: WlanWps4Activity

        binding, index = 11:
            led: WPS_STA
```

```

        user_configurable: no
            active_control: WstaWpsActivity
            default_control: WstaWpsActivity

            binding, index = 12:
                led: WLAN5
        user_configurable: no
            active_control: Wlan5Activity
            default_control: Wlan5Activity

            binding, index = 13:
                led: WPS5_1
        user_configurable: no
            active_control: Wlan5Wps1Activity
            default_control: Wlan5Wps1Activity

            binding, index = 14:
                led: WPS5_2
        user_configurable: no
            active_control: Wlan5Wps2Activity
            default_control: Wlan5Wps2Activity

            binding, index = 15:
                led: WPS5_3
        user_configurable: no
            active_control: Wlan5Wps3Activity
            default_control: Wlan5Wps3Activity

            binding, index = 16:
                led: WPS5_4
        user_configurable: no
            active_control: Wlan5Wps4Activity
            default_control: Wlan5Wps4Activity

            binding, index = 17:
                led: WPS5_STA
        user_configurable: no
            active_control: Wsta5WpsActivity
            default_control: Wsta5WpsActivity

```

History

Version	Description
2.08	The show led bindings command has been introduced.

3.137.72 show led controls

Description	Show a list of LED controls in the system. Available controls depend on hardware configuration.
Prefix no	No
Change settings	No

Multiple input

No

Synopsis(show)> **led controls****Example**(show)> **led controls**

```
controls:
    control, index = 0:
        name: SystemState
    short_description: System state
        owner: ndm
    user_configurable: no

    control, index = 1:
        name: ButtonActivityAcknowledgement
    short_description: Button activity acknowledgement
        owner: ndm
    user_configurable: no

    control, index = 2:
        name: SelectedSchedule
    short_description: Selected schedule is active
        owner: ndm
    user_configurable: yes

    control, index = 3:
        name: SelectedWan
    short_description: Selected WAN interface has default route
        owner: ndm
    user_configurable: yes

    control, index = 4:
        name: BackupWan
    short_description: Backup WAN interface has default route
        owner: ndm
    user_configurable: yes

    control, index = 5:
        name: WanConnected
    short_description: WAN interface connected
        owner: ndm
    user_configurable: no

    control, index = 6:
        name: Usb1PortDeviceAttached
    short_description: USB port 1 known device attached
        owner: ndm
    user_configurable: yes

    control, index = 7:
        name: Usb2PortDeviceAttached
    short_description: USB port 2 known device attached
```

```
        owner: ndm
user_configurable: yes

        control, index = 8:
            name: UpdatesAvailable
short_description: Firmware updates available
            owner: ndm
user_configurable: yes

        control, index = 9:
            name: OpkgLedControl
short_description: OPKG LED control
            owner: ndm
user_configurable: yes

        control, index = 10:
            name: Wlan5Activity
short_description: WLAN 5GHz interface activity
            owner: mt7615_ap
user_configurable: no

        control, index = 11:
            name: Wlan5Wps1Activity
short_description: WLAN 5GHz SSID 1 WPS activity
            owner: mt7615_ap
user_configurable: no

        control, index = 12:
            name: Wlan5Wps2Activity
short_description: WLAN 5GHz SSID 2 WPS activity
            owner: mt7615_ap
user_configurable: no

        control, index = 13:
            name: Wlan5Wps3Activity
short_description: WLAN 5GHz SSID 3 WPS activity
            owner: mt7615_ap
user_configurable: no

        control, index = 14:
            name: Wlan5Wps4Activity
short_description: WLAN 5GHz SSID 4 WPS activity
            owner: mt7615_ap
user_configurable: no

        control, index = 15:
            name: WlanActivity
short_description: WLAN 2.4GHz interface activity
            owner: mt7615_ap
user_configurable: no

        control, index = 16:
            name: WlanWps1Activity
short_description: WLAN 2.4GHz SSID 1 WPS activity
```

```

        owner: mt7615_ap
user_configurable: no

control, index = 17:
    name: WlanWps2Activity
short_description: WLAN 2.4GHz SSID 2 WPS activity
    owner: mt7615_ap
user_configurable: no

control, index = 18:
    name: WlanWps3Activity
short_description: WLAN 2.4GHz SSID 3 WPS activity
    owner: mt7615_ap
user_configurable: no

control, index = 19:
    name: WlanWps4Activity
short_description: WLAN 2.4GHz SSID 4 WPS activity
    owner: mt7615_ap
user_configurable: no

control, index = 20:
    name: Wsta5WpsActivity
short_description: Station 5GHz WPS activity
    owner: mt7615_ap
user_configurable: no

control, index = 21:
    name: WstaWpsActivity
short_description: Station 2.4GHz WPS activity
    owner: mt7615_ap
user_configurable: no

```

History

Version	Description
2.08	The show led controls command has been introduced.

3.137.73 show log

Description	Show system log contents (records that are present in a circular buffer). The command executes in the background, that is, until forced to stop by the user pressing [Ctrl]+[C].
Prefix no	No
Change settings	No
Multiple input	No
Synopsis	(show)> log [<max-lines>] [once]

Arguments

Argument	Value	Description
max-lines	<i>Integer</i>	Limit for returned log items.
once	<i>Keyword</i>	Show current log and exit to the CLI.

Example

```
(show)> log
=====
Time           Message
=====
I [Jul 12 12:08:39] radvd[228]: attempting to reread config file
I [Jul 12 12:08:39] radvd[228]: resuming normal operation
I [Jul 12 12:08:40] wmond: WifiMaster0/AccessPoint0: ▶
STA(d8:b3:77:36:05:c1)
          occurred MIC different in key handshaking.
I [Jul 12 12:08:40] radvd[228]: attempting to reread config file
I [Jul 12 12:08:40] radvd[228]: resuming normal operation
I [Jul 12 12:08:41] wmond: WifiMaster0/AccessPoint0: ▶
STA(d8:b3:77:36:05:c1)
          occurred MIC different in key handshaking.
I [Jul 12 12:08:41] radvd[228]: attempting to reread config file
I [Jul 12 12:08:41] radvd[228]: resuming normal operation
I [Jul 12 12:08:44] wmond: WifiMaster0/AccessPoint0: ▶
STA(d8:b3:77:36:05:c1)
          pairwise key handshaking timeout.
I [Jul 12 12:08:44] wmond: WifiMaster0/AccessPoint0: ▶
STA(d8:b3:77:36:05:c1) had
          deauthenticated.
```

History

Version	Description
2.00	The show log command has been introduced.

3.137.74 show media

Description Show info about system USB-drives and their partitions.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (show)> media**Example**

```
(show)> media
=====
media:
      name: Media0
      port: 1
      state: ACTIVE
```

```

manufacturer: Western Digital
product: My Passport 074A
serial: 575832314139324D36383139
size: 1000202043392

partition:
    uuid: 01D55E919F06F5C0
    label: MyPassport
    fstype: ntfs
    state: MOUNTED
    total: 982291312640
    free: 285839884288

partition:
    uuid: dd5e899f-915e-d501-101e-899f915ed501
    label: fls_wd_ext4
    fstype: ext4
    state: MOUNTED
    total: 15756732416
    free: 15741890560

partition:
    uuid: 00000000-0000-0000-0000-000000000000
    label:
    fstype: swap
    state: MOUNTED
    total: 1081077760
    free: 1081077760

```

History	Version	Description
	3.04	The show media command has been introduced.

3.137.75 show mws associations

Description Show the list of Access Points on the repeater(s) associated with [MWS](#) controller.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **mws associations**

Example (show)> **mws associations**

```

station:
    mac: 51:ef:22:11:17:1a
    ap: WifiMaster1/Backhaul0

```

```

authenticated: yes
txrate: 585
rxrate: 270
uptime: 31
txbytes: 33569
rxbytes: 74324
ht: 80
mode: 11ac
gi: 800
rss: -27
mcs: 7
txss: 2
ebf: yes
mu: yes

```

History	Version	Description
	3.01	The show mws associations command has been introduced.

3.137.76 show mws candidate

Description Show the list of candidates or the description of specified candidate by the given identifier.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **mws candidate** [<candidate>]

Arguments	Argument	Value	Description
	candidate	String	Device ID — MAC-address or CID.

Example (show)> **mws candidate 50:ff:20:08:71:61**

```

candidate:
    mac: 50:ff:20:08:71:61
    cid:
    mode:
    model:
    state: DISCONNECTED

```

(show)> **mws candidate 50:ff:20:08:71:61**

```

candidate:
    mac: 50:ff:20:08:71:61
    cid: ab1409a2-0f87-11e8-8f23-3d5f5921b253

```

```

mode: ap
model: Extra (KN-1710)
state: COMPATIBLE
fw: 2.15.A.4.0-1
fw-available: 2.15.A.4.0-1
license: 273720056272398

```

History

Version	Description
2.15	The show mws candidate command has been introduced.

3.137.77 show mws log

Description Show log of connections and transitions from one Access Point to another within [MWS](#). The command executes in the background, that is, until forced to stop by the user pressing [Ctrl]+[C].

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **mws log** [*<max-lines>*] [**once**]

Arguments

Argument	Value	Description
max-lines	<i>Integer</i>	Limit of entries in the response.
once	<i>Keyword</i>	Show recent entries in the log.

Example

(show)> mws log 1
Time Message
[Jan 17 15:04:58] : 64:a2:f9:51:b1:82: associated -> ▶ 50:ff:20:00:11:82 (5 GHz)
(show)> mws log once
Time Message
[Jan 17 14:46:37] : 64:a2:f9:51:b1:82: associated -> ▶ 50:ff:20:00:11:82 (5 GHz)
[Jan 17 15:04:50] : 64:a2:f9:51:b1:82: 50:ff:20:00:11:82 (5 ▶ GHz) -> disassociated
[Jan 17 15:04:58] : 64:a2:f9:51:b1:82: associated -> ▶ 50:ff:20:00:11:82 (5 GHz)

History

Version	Description
2.15	The show mws log command has been introduced.

3.137.78 show mws member

Description Show the list of members or the description of specified member by the given identifier.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **mws member** [<*member*>]

Arguments

Argument	Value	Description
member	<i>String</i>	Device ID — MAC-address or CID.

Example

```
(show)> mws member ab1409a2-0f87-11e8-8f23-3d5f5921b253

        member:
            cid: ab1409a2-0f87-11e8-8f23-3d5f5921b253
            model: Extra (KN-1710)
            mac: 50:ff:20:08:7a:6a
            ip: 192.168.1.43
            mode: ap
            fw: 2.15.A.4.0-1
            fw-available: 2.15.A.4.0-1
            dual-band: yes

        system:
            cpuload: 3
            memory: 32680/131072
            uptime: 2696

        rci:
            errors: 0
```

History

Version	Description
2.15	The show mws member command has been introduced.

3.137.79 show ndns

Description Show KeenDNS parameters from the latest request to the server (see [ndns get-booked](#) and [ndns get-update](#) commands).

Prefix no	No
Change settings	No
Multiple input	No
Synopsis	(show)> ndns

Example	(show)> ndns name: testname booked: testname domain: mykeenetic.com address: 41.189.34.56 updated: yes access: direct ttp: direct: yes interface: GigabitEthernet1 address: 41.189.34.56
----------------	---

History	Version	Description
	2.07	The show ndns command has been introduced.

3.137.80 show netfilter

Description	Show information about the firewall working. Need to provide remote technical support.
Prefix no	No
Change settings	No
Multiple input	No
Synopsis	(show)> netfilter

History	Version	Description
	2.00	The show netfilter command has been introduced.

3.137.81 show ntce applications

Description	Show the list of applications supported by the NTCE service.
Prefix no	No
Change settings	No

Multiple input

No

Synopsis(show)> **ntce applications****Example**(show)> **ntce applications**

```

application:
    id-num: 1
        short: facebook
        long: Facebook
    group-id: 2065
    group-long: Social
    groupset-id: 4
groupset-short-id: surfing
groupset-long-id: Web surfing

application:
    id-num: 2
        short: magicjack
        long: magicJack
    group-id: 2054
    group-long: Voice over IP
    groupset-id: 0
groupset-short-id: calling
groupset-long-id: Calling and conferencing

application:
    id-num: 3
        short: itunes
        long: iTunes
    group-id: 2056
    group-long: Streaming
    groupset-id: 2
groupset-short-id: streaming
groupset-long-id: Video & Audio streaming

application:
    id-num: 4
        short: myspace
        long: MySpace
    group-id: 2065
    group-long: Social
    groupset-id: 4
groupset-short-id: surfing
groupset-long-id: Web surfing

application:
    id-num: 5
        short: facetime
        long: FaceTime
    group-id: 2054
    group-long: Voice over IP
    groupset-id: 0

```

```
groupset-short-id: calling
groupset-long-id: Calling and conferencing

application:
    id-num: 6
        short: truphone
        long: Truphone
    group-id: 2054
        group-long: Voice over IP
    groupset-id: 0
groupset-short-id: calling
groupset-long-id: Calling and conferencing

application:
    id-num: 7
        short: twitter
        long: Twitter
    group-id: 2065
        group-long: Social
    groupset-id: 4
groupset-short-id: surfing
groupset-long-id: Web surfing

application:
    id-num: 8
        short: xbox
        long: XBOX gaming console
    group-id: 2050
        group-long: Gaming
    groupset-id: 1
groupset-short-id: gaming
groupset-long-id: Gaming

application:
    id-num: 9
        short: realmedia
        long: RealMedia
    group-id: 2088
        group-long: Removed
    groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

application:
    id-num: 10
        short: google-mail
        long: Google Mail
    group-id: 2059
        group-long: Mail
    groupset-id: 3
groupset-short-id: work
groupset-long-id: Work & Learn from home
```

History

Version	Description
3.07	The show ntce applications command has been introduced.

3.137.82 show ntce attributes

Description Show the list of attributes supported by the **NTCE** service.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ntce attributes**

Example

```
(show)> ntce attributes

        attribute:
            id-num: 1
            short: encrypted
            long: Indicates that the current connection is ▶
encrypted traffic.

        attribute:
            id-num: 2
            short: audio
            long: Indicates that the current connection is ▶
an audio or voice signal.

        attribute:
            id-num: 3
            short: out
            long: Indicates that the current connection is ▶
a landline call, e.g. a call to a home phone.

        attribute:
            id-num: 4
            short: video
            long: Indicates that the current connection is ▶
a video signal.

        attribute:
            id-num: 5
            short: file-transfer
            long: Indicates that the current connection is ▶
a file transfer.

        attribute:
            id-num: 6
            short: web
```

```
        long: Indicates that the current connection is ►
a surf the Internet session.

        attribute:
            id-num: 7
            short: chat
            long: Indicates that the current connection is ►
a chat session.

        attribute:
            id-num: 8
            short: mail
            long: Indicates that the current connection is ►
mail traffic.

        attribute:
            id-num: 9
            short: stream
            long: Indicates that the current connection is ►
a continues unidirectional stream of audio and / or video.

        attribute:
            id-num: 10
            short: android
            long: Indicates that the client side uses the ►
operating system Android.

        attribute:
            id-num: 11
            short: ios
            long: Indicates that the client side uses the ►
operating system iOS.

        attribute:
            id-num: 12
            short: windows-mobile
            long: Indicates that the client side uses the ►
operating system Windows Mobile.

        attribute:
            id-num: 13
            short: blackberry
            long: Indicates that the client side uses the ►
operating system Blackberry.

        attribute:
            id-num: 14
            short: picture
            long: Indicates that the current connection ►
transfers pictures.

        attribute:
            id-num: 15
            short: ddl
```

```
        long: Indicates that the current connection is ►
a Direct Download Hoster.

        attribute:
            id-num: 16
            short: google
            long: Indicates that the current connection is ►
a Google service.

        attribute:
            id-num: 17
            short: outlook_web_access
            long: Indicates that the current connection ►
uses the Microsoft Exchange Outlook Web Access as authentication ►
mechanism.

        attribute:
            id-num: 18
            short: amazon-cloud
            long: Indicates that the current connection is ►
a service of Amazon Cloud.

        attribute:
            id-num: 19
            short: apache
            long: Indicates that the server side is an ►
Apache server.

        attribute:
            id-num: 20
            short: mysql-server
            long: Indicates that the server side is a MySQL ►
database server.

        attribute:
            id-num: 21
            short: mariadb-server
            long: Indicates that the server side is a ►
MariaDB database server.

        attribute:
            id-num: 22
            short: ntlm
            long: Current connection uses NTLM as ►
authentication mechanism.

        attribute:
            id-num: 23
            short: microsoft-windows
            long: Indicates that the client side is the ►
operating system Microsoft Windows.

        attribute:
            id-num: 24
```

```

        short: chrome
        long: Indicates that the client side is the ►
operating system Chrome.

attribute:
    id-num: 25
    short: akamai-cloud
    long: Indicates that the current connection is ►
a service of Akamai Cloud.

attribute:
    id-num: 26
    short: dox
    long: Indicates that the current connection is ►
DoT (DNS over TLS) or DoH (DNS over HTTPS).

attribute:
    id-num: 27
    short: rcs
    long: Indicates that the current connection is ►
RCS (Rich Communication Services).

```

History

Version	Description
3.07	The show ntce attributes command has been introduced.

3.137.83 show ntce groups

Description Show the list of groups supported by the *NTCE* service.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ntce groups**

Example (show)> **ntce groups**

```

group:
    id-num: 2048
    long: Generic
    groupset-id: 5
    groupset-short-id: other
    groupset-long-id: Other

group:
    id-num: 2049
    long: Peer to Peer

```

```
groupset-id: 6
groupset-short-id: filetransferring
groupset-long-id: File transfering

group:
    id-num: 2050
    long: Gaming
groupset-id: 1
groupset-short-id: gaming
groupset-long-id: Gaming

group:
    id-num: 2051
    long: Tunnel
groupset-id: 3
groupset-short-id: work
groupset-long-id: Work & Learn from home

group:
    id-num: 2052
    long: Business
groupset-id: 3
groupset-short-id: work
groupset-long-id: Work & Learn from home

group:
    id-num: 2053
    long: E-Commerce
groupset-id: 3
groupset-short-id: work
groupset-long-id: Work & Learn from home

group:
    id-num: 2054
    long: Voice over IP
groupset-id: 0
groupset-short-id: calling
groupset-long-id: Calling and conferencing

group:
    id-num: 2055
    long: Messaging
groupset-id: 0
groupset-short-id: calling
groupset-long-id: Calling and conferencing

group:
    id-num: 2056
    long: Streaming
groupset-id: 2
groupset-short-id: streaming
groupset-long-id: Video & Audio streaming

group:
```

```
        id-num: 2057
            long: Mobile
            groupset-id: 0
groupset-short-id: calling
groupset-long-id: Calling and conferencing

        group:
            id-num: 2058
                long: Remote Control
                groupset-id: 3
groupset-short-id: work
groupset-long-id: Work & Learn from home

        group:
            id-num: 2059
                long: Mail
                groupset-id: 3
groupset-short-id: work
groupset-long-id: Work & Learn from home

        group:
            id-num: 2060
                long: Network Management
                groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

        group:
            id-num: 2061
                long: Database
                groupset-id: 3
groupset-short-id: work
groupset-long-id: Work & Learn from home

        group:
            id-num: 2062
                long: Filetransfer
                groupset-id: 6
groupset-short-id: filetransferring
groupset-long-id: File transfering

        group:
            id-num: 2063
                long: Web
                groupset-id: 4
groupset-short-id: surfing
groupset-long-id: Web surfing

        group:
            id-num: 2064
                long: Conference
                groupset-id: 0
groupset-short-id: calling
groupset-long-id: Calling and conferencing
```

```
group:  
    id-num: 2065  
    long: Social  
    groupset-id: 4  
groupset-short-id: surfing  
groupset-long-id: Web surfing  
  
group:  
    id-num: 2066  
    long: Sharehosting  
    groupset-id: 6  
groupset-short-id: filetransferring  
groupset-long-id: File transfering  
  
group:  
    id-num: 2067  
    long: Deprecated  
    groupset-id: 5  
groupset-short-id: other  
groupset-long-id: Other  
  
group:  
    id-num: 2068  
    long: Industrial  
    groupset-id: 5  
groupset-short-id: other  
groupset-long-id: Other  
  
group:  
    id-num: 2069  
    long: Encrypted  
    groupset-id: 5  
groupset-short-id: other  
groupset-long-id: Other  
  
group:  
    id-num: 2070  
    long: Advertisement and Analytic Services  
    groupset-id: 5  
groupset-short-id: other  
groupset-long-id: Other  
  
group:  
    id-num: 2071  
    long: News  
    groupset-id: 4  
groupset-short-id: surfing  
groupset-long-id: Web surfing  
  
group:  
    id-num: 2072  
    long: Health and Fitness  
    groupset-id: 5
```

```
groupset-short-id: other
groupset-long-id: Other

    group:
        id-num: 2073
            long: Cloud and CDN Services
        groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

    group:
        id-num: 2074
            long: Navigation
        groupset-id: 4
groupset-short-id: surfing
groupset-long-id: Web surfing

    group:
        id-num: 2075
            long: Finance
        groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

    group:
        id-num: 2076
            long: Travel and Transportation
        groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

    group:
        id-num: 2077
            long: Pornography
        groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

    group:
        id-num: 2078
            long: Books and Magazines
        groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

    group:
        id-num: 2079
            long: Audio Entertainment
        groupset-id: 2
groupset-short-id: streaming
groupset-long-id: Video & Audio streaming

    group:
        id-num: 2080
```

```

        long: Education
        groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

        group:
            id-num: 2081
            long: M2M and IoT
            groupset-id: 3
groupset-short-id: work
groupset-long-id: Work & Learn from home

        group:
            id-num: 2082
            long: Device Security
            groupset-id: 4
groupset-short-id: surfing
groupset-long-id: Web surfing

        group:
            id-num: 2083
            long: Multimedia Service Providers
            groupset-id: 2
groupset-short-id: streaming
groupset-long-id: Video & Audio streaming

        group:
            id-num: 2084
            long: Organizers
            groupset-id: 3
groupset-short-id: work
groupset-long-id: Work & Learn from home

        group:
            id-num: 2085
            long: Enterprise Services
            groupset-id: 4
groupset-short-id: surfing
groupset-long-id: Web surfing

        group:
            id-num: 2086
            long: App-Stores and OS Updates
            groupset-id: 6
groupset-short-id: filetransferring
groupset-long-id: File transfering

        group:
            id-num: 2087
            long: Browsers
            groupset-id: 4
groupset-short-id: surfing
groupset-long-id: Web surfing

```

```

group:
    id-num: 2088
    long: Removed
    groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

group:
    id-num: 2089
    long: Moved
    groupset-id: 5
groupset-short-id: other
groupset-long-id: Other

```

History

Version	Description
3.07	The show ntce groups command has been introduced.

3.137.84 show ntce groupsets

Description Show the list of groupsets supported by the *NTCE* service.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ntce groupsets**

Example (show)> **ntce groupsets**

```

groupset:
    id-num: 0
    short: calling
    long: Calling and conferencing

groupset:
    id-num: 1
    short: gaming
    long: Gaming

groupset:
    id-num: 2
    short: streaming
    long: Video & Audio streaming

groupset:
    id-num: 3
    short: work
    long: Work & Learn from home

```

```

groupset:
    id-num: 4
    short: surfing
    long: Web surfing

groupset:
    id-num: 5
    short: other
    long: Other

groupset:
    id-num: 6
    short: filetransferring
    long: File transferring

```

History	Version	Description
	3.07	The show ntce groupsets command has been introduced.

3.137.85 show ntce hosts

Description	Show application statistics, which <i>NTCE</i> service has detected for hosts.
Prefix no	No
Change settings	No
Multiple input	No
Synopsis	<code>(show)> ntce hosts</code>

Example	<code>(show)> ntce hosts</code>
	<pre> host: mac: 04:d4:c4:54:31:12 application: id-num: 7 short: twitter long: Twitter group-id: 2065 group-long: Social groupset-id: 4 groupset-short-id: surfing groupset-long-id: Web surfing groupset-service-class: 2 rxbytes: 62274 txbytes: 6020 </pre>

```
application:  
    id-num: 43  
    short: instagram  
    long: Instagram  
    group-id: 2065  
    group-long: Social  
    groupset-id: 4  
    groupset-short-id: surfing  
    groupset-long-id: Web surfing  
groupset-service-class: 2  
    rxbytes: 57606  
    txbytes: 11148  
  
application:  
    id-num: 428  
    short: spotify  
    long: Spotify  
    group-id: 2079  
    group-long: Audio Entertainment  
    groupset-id: 2  
    groupset-short-id: streaming  
    groupset-long-id: Video & Audio streaming  
groupset-service-class: 2  
    rxbytes: 155317  
    txbytes: 80526  
  
application:  
    id-num: 438  
    short: whatsapp  
    long: WhatsApp  
    group-id: 2055  
    group-long: Messaging  
    groupset-id: 0  
    groupset-short-id: calling  
    groupset-long-id: Calling and conferencing  
groupset-service-class: 2  
    rxbytes: 826  
    txbytes: 706  
  
application:  
    id-num: 461  
    short: google-cloud  
    long: Google Cloud  
    group-id: 2073  
    group-long: Cloud and CDN Services  
    groupset-id: 5  
    groupset-short-id: other  
    groupset-long-id: Other  
groupset-service-class: 2  
    rxbytes: 313  
    txbytes: 352  
  
application:  
    id-num: 498
```

```

        short: telegram
        long: Telegram
        group-id: 2055
        group-long: Messaging
        groupset-id: 0
        groupset-short-id: calling
        groupset-long-id: Calling and conferencing
groupset-service-class: 2
        rxbytes: 109895
        txbytes: 15561

application:
        id-num: 559
        short: google-play
        long: Google Play
        group-id: 2086
        group-long: App-Stores and OS Updates
        groupset-id: 6
        groupset-short-id: filetransferring
        groupset-long-id: File transfering
groupset-service-class: 2
        rxbytes: 16736
        txbytes: 28451

application:
        id-num: 590
        short: yandex
        long: Yandex
        group-id: 2085
        group-long: Enterprise Services
        groupset-id: 4
        groupset-short-id: surfing
        groupset-long-id: Web surfing
groupset-service-class: 2
        rxbytes: 606
        txbytes: 200

application:
        id-num: 611
        short: zendesk
        long: ZenDesk
        group-id: 2052
        group-long: Business
        groupset-id: 3
        groupset-short-id: work
        groupset-long-id: Work & Learn from home
groupset-service-class: 2
        rxbytes: 101697
        txbytes: 187527

application:
        id-num: 621
        short: slack
        long: Slack

```

```
        group-id: 2064
        group-long: Conference
        groupset-id: 0
        groupset-short-id: calling
        groupset-long-id: Calling and conferencing
groupset-service-class: 2
        rxbytes: 30568
        txbytes: 3650

application:
        id-num: 632
        short: google-services
        long: Google Shared Services
        group-id: 2085
        group-long: Enterprise Services
        groupset-id: 4
        groupset-short-id: surfing
        groupset-long-id: Web surfing
groupset-service-class: 2
        rxbytes: 614512
        txbytes: 202174

application:
        id-num: 664
        short: microsoft-services
        long: Microsoft Services
        group-id: 2085
        group-long: Enterprise Services
        groupset-id: 4
        groupset-short-id: surfing
        groupset-long-id: Web surfing
groupset-service-class: 2
        rxbytes: 20243
        txbytes: 10699

application:
        id-num: 700
        short: fastly
        long: Fastly
        group-id: 2073
        group-long: Cloud and CDN Services
        groupset-id: 5
        groupset-short-id: other
        groupset-long-id: Other
groupset-service-class: 2
        rxbytes: 14859
        txbytes: 3147

application:
        id-num: 703
        short: cloudflare
        long: Cloudflare
        group-id: 2073
        group-long: Cloud and CDN Services
```

```
        groupset-id: 5
        groupset-short-id: other
        groupset-long-id: Other
groupset-service-class: 2
            rxbytes: 2172
            txbytes: 3593

application:
        id-num: 719
        short: google-apis
        long: Google APIs
        group-id: 2052
        group-long: Business
        groupset-id: 3
        groupset-short-id: work
        groupset-long-id: Work & Learn from home
groupset-service-class: 2
            rxbytes: 11837
            txbytes: 7602

application:
        id-num: 933
        short: bamtech-media
        long: BAMTech Media
        group-id: 2083
        group-long: Multimedia Service Providers
        groupset-id: 2
        groupset-short-id: streaming
        groupset-long-id: Video & Audio streaming
groupset-service-class: 2
            rxbytes: 4734
            txbytes: 6006

application:
        id-num: 1136
        short: cloud-mail-ru
        long: Cloud-Mail-Ru
        group-id: 2062
        group-long: Filetransfer
        groupset-id: 6
        groupset-short-id: filetransferring
        groupset-long-id: File transfering
groupset-service-class: 2
            rxbytes: 61161
            txbytes: 86671

application:
        id-num: 1281
        short: kaspersky-services
        long: Kaspersky Services
        group-id: 2082
        group-long: Device Security
        groupset-id: 4
        groupset-short-id: surfing
```

```

        groupset-long-id: Web surfing
groupset-service-class: 2
        rxbytes: 40
        txbytes: 70

        os-id: 3
os-long: Windows

host:
        mac: 04:d4:c4:54:31:12
        via: 04:d4:c4:54:31:12
        ip: 192.168.11.19
hostname: MyHost
name: MyHost

interface:
        id: Bridge0
        name: Home
description: Home network

dhcp:
        static: yes

registered: yes
        access: permit
schedule:
        active: yes
        rxbytes: 0
        txbytes: 0
        uptime: 9083
first-seen: 9097
last-seen: 1
        link: up
auto-negotiation: yes
        speed: 1000
        duplex: yes
        port: 2

traffic-shape:
        rx: 0
        tx: 0
        mode: mac
schedule:

```

History

Version	Description
3.07	The show ntce hosts command has been introduced.

3.137.86 show ntce oses**Description**Show the list of OSes supported by the **NTCE** service.

Prefix no	No
Change settings	No
Multiple input	No
Synopsis	(show)> ntce oses

Example (show)> **ntce oses**

```
os:  
id-num: 1  
long: Not detected  
  
os:  
id-num: 2  
long: Other  
  
os:  
id-num: 3  
long: Windows  
  
os:  
id-num: 4  
long: Linux  
  
os:  
id-num: 5  
long: OS X  
  
os:  
id-num: 6  
long: iOS  
  
os:  
id-num: 7  
long: Symbian  
  
os:  
id-num: 8  
long: Android  
  
os:  
id-num: 9  
long: Blackberry  
  
os:  
id-num: 10  
long: WindowsMobile  
  
os:  
id-num: 11  
long: WindowsPhone
```

```
os:  
id-num: 12  
long: Chrome
```

```
os:  
id-num: 13  
long: Darwin
```

History	Version	Description
	3.07	The show ntce oses command has been introduced.

3.137.87 show ntce status

Description Show *NTCE* service info.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ntce status**

Example (show)> **ntce status**

```
conntrack:  
    hosts: 2  
    applications: 16  
    applications-flows: 63  
    applications-events: 0  
    groups: 12  
    groups-flows: 64  
    groups-events: 0  
  
    memory:  
    applications-flows: 1512  
    applications-events: 0  
        applications: 512  
        groups-flows: 1536  
        groups-events: 0  
        groups: 384  
        hosts: 72  
        total: 4016  
  
    event:  
    count: 0  
  
    memory:  
    total: 0
```

```

database:
    hosts: 1
    applications: 54
    groups: 30
    attributes: 6

memory:
    applications: 2372976
    groups: 1318320
    attributes: 263664
    total: 3954960

```

History	Version	Description
	3.07	The show ntce status command has been introduced.

3.137.88 show ntp status

Description Show *NTP* system settings.

NTP state general info

- ① The time elapsed since the last synchronization in seconds.
- ② The indicator of the last synchronization.
- ③ The indicator of the initial synchronization.
- ④ Time is taken from NDSS server.
- ⑤ Time is set by the user manually.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ntp status**

Example (show)> **ntp status**

```

status:
    elapsed: 435146 ①
        server: 1.pool.ntp.org
        accurate: yes ②
    synchronized: yes ③
        ndstime: no ④
        usertime: no ⑤

```

History	Version	Description
	2.00	The show ntp status command has been introduced.

3.137.89 show nvox call-history

Description Show list of calls registered since the router is switched on.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **nvox call-history**

Example

```
(show)> nvox call-history

    call_history:
        revision: 13

        call:
            type: missed
            index: 0
            start_time: Thu Sep 14 12:13:23 2017
            line: SIPLab1
            hs: KX-TPA60
            other_party_number: 3254
            other_party_name:
            duration:
            release_code:
            release_reason: rejected

        call:
            type: accepted
            index: 1
            start_time: Thu Sep 14 12:13:32 2017
            line: SIPLab1
            hs: Gigaset A540CAT
            other_party_number: 3254
            other_party_name:
            duration: 3
            release_code:
            release_reason:

        call:
            type: internal
            index: 2
            start_time: Thu Sep 14 12:13:51 2017
            line: intercom
            hs: Gigaset A540CAT
            other_party_number: hs1
            other_party_name: KX-TGA250
            duration: 3
            release_code:
            release_reason:
```

```
call:  
    type: internal  
    index: 3  
    start_time: Thu Sep 14 12:14:07 2017  
    line: intercom  
    hs: Gigaset A540CAT  
other_party_number: hs2  
other_party_name: KX-TPA60  
duration: 2  
release_code:  
release_reason:  
  
call:  
    type: internal  
    index: 4  
    start_time: Thu Sep 14 12:14:24 2017  
    line: intercom  
    hs: Gigaset A540CAT  
other_party_number: hs*  
other_party_name:  
duration: 0  
release_code:  
release_reason:  
  
call:  
    type: internal  
    index: 5  
    start_time: Thu Sep 14 12:14:42 2017  
    line: intercom  
    hs: Gigaset A540CAT  
other_party_number: hs2  
other_party_name: KX-TPA60  
duration: 0  
release_code:  
release_reason:  
  
call:  
    type: outgoing  
    index: 6  
    start_time: Thu Sep 14 12:15:44 2017  
    line: Data Group  
    hs: Gigaset A540CAT  
other_party_number: 0443647362  
other_party_name:  
duration: 0  
release_code:  
release_reason:  
  
call:  
    type: missed  
    index: 7  
    start_time: Thu Sep 14 12:15:44 2017  
    line: Data Group  
    hs:
```

```

other_party_number: 3647362
other_party_name:
duration:
release_code:
release_reason:

call:
type: forwarded
index: 8
start_time: Thu Sep 14 12:17:30 2017
line: Data Group
hs:
other_party_number: 3647362
other_party_name:
duration:
release_code: 61773
release_reason: 0687852828

call:
type: outgoing
index: 9
start_time: Thu Sep 14 12:17:30 2017
line: Data Group
hs: Panasonic KX-TPA60
other_party_number: 0443647362
other_party_name:
duration: 0
release_code: 480
release_reason: Temporarily Not Available

```

History

Version	Description
2.06	The show dect call-history command has been introduced.
3.05	The command renamed to show nvox call-history .

3.137.90 show ping-check

Description	Show <i>Ping Check</i> profile status. If you use no arguments, the command displays information about all profiles.
Prefix no	No
Change settings	No
Multiple input	No
Synopsis	<code>(show)> ping-check [<profile_name>]</code>

Arguments

Argument	Value	Description
profile_name	String	Profile name.

Example

```
(show)> ping-check

pingcheck:
    profile: TEST
        host: 8.8.8.8
        port: 80
    max-fails: 7
        timeout: 1
        mode: connect

    interface: ISP
        fail count: 0
        status: pass

pingcheck:
    profile: TEST1
        mode: icmp

pingcheck:
    profile: TEST2
        mode: icmp
```

History

Version	Description
2.04	The show ping-check command has been introduced.

3.137.91 show ppe

Description Show Packet Processing Engine status.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> ppe

Example

```
(show)> ppe

hw_nat:

Total Entry Count = 2
IPv4_NAPT=1122 : 13.33.96.244:443->10.77.140.59:56457 => ▶
13.33.96.244:443->192.168.232.44:56457
IPv4_NAPT=5454 : 173.194.220.97:443->10.77.140.59:56553 => ▶
```

```
173.194.220.97:443->192.168.232.44:56553
done
```

History

Version	Description
2.03	The show ppe command has been introduced.

3.137.92 show printers

Description Show attached printer list.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **printers**

Example

```
(show)> printers

      printers:
          printer: Canon MF8300C Series
```

History

Version	Description
2.00	The show printers command has been introduced.

3.137.93 show processes

Description Show statistics of CPU usage by services and processes.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **processes**

Example

```
(show)> processes

      process, id = NETBIOS browser:
          name: nqnd

          arg: -i

          arg: 50ff20001e87
```

```
state: S (sleeping)
    pid: 629
    ppid: 192
vm-size: 3188 kB
vm-data: 1548 kB
    vm-stk: 136 kB
    vm-exe: 4 kB
    vm-lib: 1448 kB
    vm-swap: 0 kB
    threads: 1
        fds: 15

statistics:
    interval: 30

cpu:
    now: 17319.483753
    min: 0
    max: 0
    avg: 0
    cur: 0

service:
    configured: yes
        alive: yes
        started: yes
            state: STARTED

process, id = Dns::Proxy::Policy0:
    name: ndnproxy

    arg: -c

    arg: /var/ndnproxy_Policy0.conf

    arg: -p

    arg: /var/ndnproxy_Policy0.pid

state: S (sleeping)
    pid: 630
    ppid: 192
vm-size: 1676 kB
vm-data: 504 kB
    vm-stk: 136 kB
    vm-exe: 108 kB
    vm-lib: 896 kB
    vm-swap: 0 kB
    threads: 1
        fds: 10

statistics:
    interval: 30
```

```

cpu:
  now: 17319.483764
  min: 0
  max: 0
  avg: 0
  cur: 0

service:
  configured: yes
  alive: yes
  started: yes
  state: STARTED

```

History	Version	Description
	2.09	The show processes command has been introduced.

3.137.94 show running-config

Description Show current settings, that is file system:running-config contains, just like command **more** does.

Prefix no No

Change settings No

Multiple input No

Synopsis | (show)> **running-config**

Example

```

(show)> running-config
! $$$ Model: Keenetic Start
! $$$ Version: 2.06.1
! $$$ Agent: http/raci
! $$$ Last change: Fri, 12 Jan 2017 07:23:56 GMT
system
    set net.ipv4.ip_forward 1
    set net.ipv4.netfilter.ip_conntrack_max 4096
    set net.ipv4.netfilter.ip_conntrack_tcp_timeout_established ▶
1200
    set net.ipv4.netfilter.ip_conntrack_udp_timeout 60
    set net.ipv4.tcp_fin_timeout 30
    set net.ipv4.tcp_keepalive_time 120
    set net.ipv6.conf.all.forwarding 1
    hostname Keenetic
    domainname WORKGROUP
!
ntp server 0.pool.ntp.org
ntp server 1.pool.ntp.org
ntp server 2.pool.ntp.org
ntp server 3.pool.ntp.org

```

```
access-list _WEBADMIN_GuestWiFi
    deny tcp 0.0.0.0 0.0.0.0 10.1.30.1 255.255.255.255
!
access-list _WEBADMIN_ISP
    permit tcp 0.0.0.0 0.0.0.0 192.168.15.200 255.255.255.255 >
port eq 3389
    permit icmp 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0
!
isolate-private
dyndns profile _ABCD
!
dyndns profile _WEBADMIN
    type dyndns
!
interface GigabitEthernet0
    up
!
interface GigabitEthernet0/0
    switchport mode access
    switchport access vlan 1
!
interface GigabitEthernet0/1
    switchport mode access
    switchport access vlan 1
!
interface Bridge0
    name Home
    description "Home network"
    inherit GigabitEthernet0/Vlan1
    include AccessPoint
    security-level private
    ip address 192.168.15.43 255.255.255.0
    up
!
interface WiMax0
    description Yota
    security-level public
    ip address auto
    ip global 400
    up
!
interface PPTP0
    description "Office VPN"
    peer crypton.example.net
    lcp echo 30 3
    ipcp default-route
    ipcp name-servers
    ccp
    security-level public
    authentication identity "00441"
    authentication password 123456
    authentication mschap
    authentication mschap-v2
    encryption mppe
```

```
        ip tcp adjust-mss pmtu
        connect via ISP
        up
    !
    ip route 82.138.7.141 ISP auto
    ip route 82.138.7.132 ISP auto
    ip route 82.138.7.27 PPTP0 auto
    ip dhcp pool _WEBADMIN
        range 192.168.15.200 192.168.15.219
        bind Home
    !
    ip dhcp pool _WEBADMIN_GUEST_AP
        range 10.1.30.33 10.1.30.52
        bind GuestWiFi
    !
    ip dhcp host A 00:01:02:03:04:05 1.1.1.1
    ip dhcp host B 00:01:02:03:04:06 1.1.1.2
    ip nat Home
    ip nat GuestWiFi
    ipv6 subnet Default
        bind Home
        number 0
        mode slaac
    !
    ipv6 local-prefix default
no ppe
upnp lan Home
torrent
    rpc-port 8090
    peer-port 51413
!
user admin
    password md5 2320924ba6e5c1fec3957e587a21535b
    tag cli
    tag cifs
    tag http
    tag ftp
!
user test
    password md5 baadfb946f5d516379cf75e31e409d9
    tag readonly
!
service dhcp
service dns-proxy
service ftp
service cifs
service http
service telnet
service ntp-client
service upnp
cifs
    share 9430B54530B52EDC 9430B54530B52EDC:
    automount
    permissive
```

```
!
!
!
```

History

Version	Description
2.00	The show running-config command has been introduced.

3.137.95 show schedule

Description Show parameters of defined schedule. If you use no argument, the entire list of system schedules will be displayed.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **schedule** [<name>]

Arguments

Argument	Value	Description
name	String	A schedule name.

Example

```
(show)> schedule 123
      schedule, name = 123:
          action, type = start, left = 561514, next = yes:
              dow: Tue
              time: 01:29

          action, type = stop, left = 564274:
              dow: Tue
              time: 02:15
```

History

Version	Description
2.06	The show schedule command has been introduced.

3.137.96 show self-test

Description Show summary information about system activity. Need to provide remote technical support.

Prefix no No

Change settings No

Multiple input No**Synopsis** | (show)> **self-test**

History	Version	Description
	2.00	The show self-test command has been introduced.

3.137.97 show site-survey

Description Show available wireless networks.**Prefix no** No**Change settings** No**Multiple input** No**Interface type** Radio**Synopsis** | (show)> **site-survey <name>**

Arguments	Argument	Value	Description
	name	<i>Interface name</i>	Full name or an alias of the interface. You can see the list of available interfaces with help of site-survey [Tab] command.

Example(show)> **site-survey [Tab]**Usage template:
site-survey {name}Choose:
WifiMaster1
WifiMaster0(show)> **site-survey WifiStation0**

ESSID	MAC	Ch	Rate	Q
Gena	00:23:f8:5b:d3:f5	11	300Mbit/s	100
Keenetic-2034	00:23:f8:5b:d3:f4	11	300Mbit/s	100
Sonar	40:4a:03:b4:5d:18	4	54Mbit/s	34

History	Version	Description
	2.00	The show site-survey command has been introduced.

3.137.98 show ssh fingerprint

Description Show current SSH server keys.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ssh fingerprint**

Example (show)> **ssh fingerprint**

```
rsa: MD5:d0:b0:d4:f7:da:7b:c0:e0:d0:c8:8f:ea:85:3c:09:00
rsa: SHA1:Nhxg8KNeE62E8zAZJngImcrJkmA
rsa: SHA256:lM7MyrIaq4qFGT/dyF/t8TbJk5tCzreeGuh03zaydu4
ecdsa: ▶
MD5:a6:db:b4:fb:3c:b9:ae:31:ca:6d:ca:ed:62:73:a5:7e
ecdsa: SHA1:ndWg/dx/dP/P8rMkJcVC3XB8nFo
ecdsa: ▶
SHA256:Wp1K9d8MsquQBtlBeBlpVlyKdCN1Vay3BtBWbj0xs+o
```

History

Version	Description
2.12	The show ssh fingerprint command has been introduced.

3.137.99 show ssh sftp

Description Show home directories for users with **sftp** tag.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **ssh sftp**

Example (show)> **ssh sftp**

```
enabled: yes
permissive: yes
root: files_ssdf:/
path: /tmp/mnt/963b0583-4017-401b-9542-7ff1255add40
```

```

        user, index = 0:
            name: admin
            root:
            path: ▶

```

History	Version	Description
	3.04	The show ssh sftp command has been introduced.

3.137.100 show sstp-server

Description Show current connections to the *SSTP*-server.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **sstp-server**

Example (show)> **sstp-server**

```

        enabled: yes
        ndns-name: mymy.keenetic.link
has-ndns-certificate: yes

        tunnel:
        clientaddress: 172.16.3.33
            username: mymy
            uptime: 29

        statistic:
            rxpackets: 121
            rx-multicast-packets: 0
            rx-broadcast-packets: 0
                rxbytes: 14715
                rxerrors: 0
                rxdropped: 0
                txpackets: 78
            tx-multicast-packets: 0
            tx-broadcast-packets: 0
                txbytes: 48265
                txerrors: 0
                txdropped: 0
                timestamp: 104530.202229
                last-overflow: 0.000000

```

History

Version	Description
2.12	The show sstp-server command has been introduced.

3.137.101 show system

Description Show the general state of the system.

System state general info

- ① CPU load, percentage.
- ② Occupied and available memory info, kilobytes.
- ③ Swap file usage info, kilobytes.
- ④ System uptime from the start, seconds.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **system**

Example (config)> **show system**

```
hostname: Undefined
domainname: WORKGROUP
cpuload: 0 ①
memory: 13984/28976 ②
swap: 0/0 ③
uptime: 153787 ④
```

History

Version	Description
2.00	The show system command has been introduced.

3.137.102 show system cpustat

Description Show device CPU usage.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **system cpustat**

Example (show)> **system cpustat**

```
interval: 36

busy:
    cur: 1
    min: 0
    max: 11
    avg: 2

user:
    cur: 0
    min: 0
    max: 10
    avg: 1

nice:
    cur: 0
    min: 0
    max: 0
    avg: 0

system:
    cur: 0
    min: 0
    max: 2
    avg: 0

iowait:
    cur: 0
    min: 0
    max: 0
    avg: 0

irq:
    cur: 0
    min: 0
    max: 0
    avg: 0

sirq:
    cur: 0
    min: 0
    max: 0
    avg: 0
```

History

Version	Description
2.09	The show system cpustat command has been introduced.

3.137.103 show system zram

Description	Show system zRam swap status.
--------------------	-------------------------------

Prefix no	No
Change settings	No
Multiple input	No
Synopsis	(show)> system zram
Example	(show)> system zram <pre> zram: enabled: yes compression-algo: lzo disk-size: 268435456 compressed-size: 87 original-size: 4096 total-memory-used: 12288 compression-threads: 4 compressed-ratio-pcs: 300 </pre>

History	Version	Description
	2.09	The show system zram command has been introduced.

3.137.104 show tags

Description	Show available authentication tags.
Prefix no	No
Change settings	No
Multiple input	No
Synopsis	(show)> tags
Example	(show)> tags <pre> tag: cli tag: readonly tag: http-proxy tag: http tag: printers tag: cifs tag: ftp tag: ipsec-xauth tag: ipsec-l2tp tag: opt tag: sstp tag: torrent tag: vpn </pre>

History

Version	Description
2.00	The show tags command has been introduced.

3.137.105 show threads

Description Show the list of active threads in NDM.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **threads**

Example

```
(show)> threads

        thread:
            name: Cloud agent service
            tid: 518
            lock_list_complete: yes
            locks:

            statistics:
                interval: 30

            cpu:
                now: 17771.481435
                min: 0
                max: 0
                avg: 0
                cur: 0

        thread:
            name: FTP brute force detection
            tid: 519
            lock_list_complete: yes
            locks:

            statistics:
                interval: 30

            cpu:
                now: 17771.481440
                min: 0
                max: 0
                avg: 0
                cur: 0
```

History

Version	Description
2.09	The show threads command has been introduced.

3.137.106 show torrent status

Description Show BitTorrent client status.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (show)> **torrent status****Example**

```
(show)> torrent status
state: running
rpc-port: 8090
```

History

Version	Description
2.03	The show torrent status command has been introduced.

3.137.107 show upnp redirect

Description Show **UPnP** port translation rules. If you use no arguments, the entire list of translation rules will be displayed.**Prefix no** No**Change settings** No**Multiple input** No**Interface type** IP**Synopsis** (show)> **upnp redirect** [(<protocol><interface><port>) | <index>]**Arguments**

Argument	Value	Description
protocol	tcp	Rules with TCP protocol will be displayed.
	udp	Rules with UDP protocol will be displayed.
interface	<i>Interface name</i>	Rules with specified interface name will be displayed.
port	<i>Integer</i>	Rules with specified port will be displayed.

Argument	Value	Description
index	Integer	Rule with specified number in the list will be displayed.

Example

```
(show)> upnp redirect udp ISP 11175

    entry:
        index: 1
        interface: ISP
        protocol: udp
        port: 11175
        to-address: 192.168.15.206
        to-port: 11175
        description: Skype UDP at 192.168.12.286:11175 (2024)
        packets: 0
        bytes: 0
```

History

Version	Description
2.00	The show upnp redirect command has been introduced.

3.137.108 show usb

Description Show list of USB-devices.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **usb**

Example

```
(show)> usb

    device:
        name: 12F6-312F:
        label: PENDRIVE
        subsystem: storage
    device:
        name: 69f2894d-56a1-4632-9521-dbdc8ab5c53d:
        label: EXT3
        subsystem: storage
    device:
        name: 4FCC-A585:
        label: FAT32
        subsystem: storage
    device:
        name: 226F114C088FC43D:
```

```
label: NTFS
subsystem: storage
```

History

Version	Description
2.00	The show usb command has been introduced.

3.137.109 show version**Description** Show firmware version.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (show)> **version****Example**

```
(show)> version

release: 2.10.C.1.0-0
arch: mips

ndm:
exact: 0-d32118a
cdate: 11 Dec 2017

bsp:
exact: 0-cbe0525
cdate: 11 Dec 2017

ndw:
version: 4.2.3.92
features: ▶
wifi_button,flexible_menu,emulate_firmware_progress
components: ▶
ddns,dot1x,interface-extras,miniupnpd,nathelper-ftp,
▶
nathelper-pptp,nathelper-sip,ppe,trafficcontrol,
▶
cloudcontrol,base,components,corewireless,dhcpd,l2tp,
▶
igmp,easyconfig,pingcheck,ppp,pptp,pppoe,ydns

manufacturer: Keenetic Ltd.
vendor: Keenetic
series: KN
model: Start (KN-1110)
hw_version: 10118000
hw_id: KN-1110
```

```
device: Start
class: Internet Center
```

History

Version	Description
2.00	The show version command has been introduced.

3.137.110 show vpn-server

Description Show current connections to the VPN-server.

Prefix no No

Change settings No

Multiple input No

Synopsis (show)> **vpn-server**

Example (show)> **vpn-server**

```
tunnel:
clientaddress: 172.16.1.33
username: test
uptime: 3

statistic:
    rxpackets: 51
    rx-multicast-packets: 0
    rx-broadcast-packets: 0
        rxbytes: 5440
        rxerrors: 0
        rxdropped: 0
        txpackets: 46
    tx-multicast-packets: 0
    tx-broadcast-packets: 0
        txbytes: 9229
        txerrors: 0
        txdropped: 0
        timestamp: 146237.254244
last-overflow: 0.000000
```

History

Version	Description
2.04	The show vpn-server command has been introduced.

3.138 sms

Description Access to a group of commands to configure **SMS** on the interface.

Prefix no	No						
Change settings	No						
Multiple input	No						
Interface type	Usb						
Group entry	(sms)						
Synopsis	<pre> (config)> sms <name></pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>name</td> <td><i>Interface name</i></td> <td>Interface with SMS service.</td> </tr> </tbody> </table>	Argument	Value	Description	name	<i>Interface name</i>	Interface with SMS service.
Argument	Value	Description					
name	<i>Interface name</i>	Interface with SMS service.					
Example	<pre>(config)> sms UsbQmi0 (sms)></pre>						
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>3.03</td> <td>The sms command has been introduced.</td> </tr> </tbody> </table>	Version	Description	3.03	The sms command has been introduced.		
Version	Description						
3.03	The sms command has been introduced.						

3.138.1 sms delete

Description	Delete SMS message.						
Prefix no	No						
Change settings	No						
Multiple input	No						
Synopsis	<pre> (sms)> delete <id></pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>id</td> <td><i>String</i></td> <td>Message ID.</td> </tr> </tbody> </table>	Argument	Value	Description	id	<i>String</i>	Message ID.
Argument	Value	Description					
id	<i>String</i>	Message ID.					
Example	<pre>(sms)> delete sim-5 UsbQmi::Sms: "UsbQmi0": message deleted.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>3.03</td> <td>The sms delete command has been introduced.</td> </tr> </tbody> </table>	Version	Description	3.03	The sms delete command has been introduced.		
Version	Description						
3.03	The sms delete command has been introduced.						

3.138.2 sms list

Description Show a list of received SMS messages.

Prefix no No

Change settings No

Multiple input No

Synopsis (sms)> **list [unread] [id <id>] [no-content]**

Arguments

Argument	Value	Description
unread	<i>Keyword</i>	Show a list of unread SMS messages only.
id	<i>Keyword</i>	Show message with the given identifier.
no-content	<i>Keyword</i>	Disable message text output.

Example

```
(sms)> list

    nv-free-slots: 23
    nv-total-slots: 23
    sim-free-slots: 0
    sim-total-slots: 15

        messages, id = sim-0:
            read: yes
            from: +79658283425
            timestamp: Thu Aug 20 14:39:57 2020
            parts: 1
            total-parts: 1
            text: Accepted

        messages, id = sim-1:
            read: yes
            from: MegaFon
            timestamp: Wed Sep  9 13:57:21 2020
            parts: 2
            total-parts: 2
            text: 636-269 – your personal login code.
                  Do not share this code with anyone.

        messages, id = sim-3:
            read: yes
            from: +79658283425
            timestamp: Wed Sep  9 16:32:26 2020
            parts: 1
            total-parts: 1
            text: Our time to your time to yes to

        messages, id = sim-4:
```

```

        read: yes
        from: +79658283425
        timestamp: Mon Sep 14 17:14:11 2020
        parts: 1
        total-parts: 1
        text: Ok

messages, id = sim-5:
        read: yes
        from: MegaFon
        timestamp: Wed Sep 16 10:24:46 2020
        parts: 7
        total-parts: 7
        text: Listen to audiobooks on management, ►
leadership,           personal efficiency and self-development ►
2 weeks free!

Just subscribe to the MegaFon AudioBooks ►
and
listen to them without advertising on any ►
convenient device.           The cost after the trial period - 1 euro ►
/ day.

Payment from the phone account without ►
card binding. Cancel
days
of usage. Learn more:
http://i.megafon.com/Q2XadzRp9xusLwS1

messages, id = sim-12:
        read: no
        from: +79252384670
        timestamp: Fri Sep 18 19:02:27 2020
        parts: 3
        total-parts: 4
        text: This subscriber left you 18.09.2020 at ►
18:35
voice message. You can listen to it for ►
free by
number 0525. / Listen to podcasts and ►
book parodies in
convenient application without advertising ►
for 5 e/d. Detailed[...].

```

(sms)> **list id xnv-64**

```

nv-free-slots: 68
nv-total-slots: 128
sim-free-slots: 15
sim-total-slots: 15
messages-count: 1

```

```

messages, id = xnv-64:
    read: yes
    from: mTinkoff
    timestamp: Sat Jul  3 17:30:46 2021
    parts: 2
    total-parts: 2
    text: Replenishment: 10.00 €. Available: 31.00 €.

```

```

(sms)> list no-content

nv-free-slots: 12
nv-total-slots: 23
sim-free-slots: 10
sim-total-slots: 10
messages-count: 5

messages, id = nv-3:
    read: yes

messages, id = nv-7:
    read: yes

messages, id = nv-2:
    read: yes

messages, id = nv-0:
    read: yes

messages, id = nv-1:
    read: yes

```

History

Version	Description
3.03	The sms list command has been introduced.
3.07	The id and no-content arguments were added.

3.138.3 sms read

Description Mark SMS as read.
 Command with **no** prefix return unread SMS mark.

Prefix no Yes

Change settings No

Multiple input No

Synopsis (sms)> **read <id>**

Arguments

Argument	Value	Description
id	<i>String</i>	Message ID.

Example

```
(sms)> read sim-5
UsbQmi::Sms: "UsbQmi0": message marked as read.
```

```
(sms)> no read sim-5
UsbQmi::Sms: "UsbQmi0": message marked as unread.
```

History

Version	Description
3.03	The sms read command has been introduced.

3.138.4 sms send

Description

Send SMS to specified number. The maximum value of saved incoming SMS messages in the router's memory is 128. If the memory is full, the oldest SMS from the memory will be automatically deleted when a new SMS is received.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(sms)> send <to> <message>
```

Arguments

Argument	Value	Description
to	<i>String</i>	The receiver's phone number.
message	<i>String</i>	Text message to send.

Example

```
(sms)> send +79261122777 "hello world!"
UsbQmi::Sms: "UsbQmi0": message sent.
```

History

Version	Description
3.03	The sms send command has been introduced.

3.139 snmp community

Description

Set new name for **SNMP** community. By default, common name **public** is used.

Command with **no** prefix resets setting to default.

Prefix no

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> snmp community <community>
(config)> no snmp community
```

Arguments

Argument	Value	Description
community	<i>String</i>	New community name.

Example

```
(config)> snmp community Co_test
Snmp::Manager: SNMP community set to "Co_test".
(config)> no snmp community
Snmp::Manager: SNMP community reset to "public".
```

History

Version	Description
2.08	The snmp community command has been introduced.

3.140 snmp contact

DescriptionAssign the contact name of **SNMP** agent. By default, the name is not defined.Command with **no** prefix resets setting.**Prefix no**

Yes

Change settings

Yes

Multiple input

No

Synopsis

```
(config)> snmp contact <contact>
(config)> no snmp contact
```

Arguments

Argument	Value	Description
contact	<i>String</i>	SNMP contact info.

Example

```
(config)> snmp contact Cont_test
Snmp::Manager: SNMP contact info set to "Cont_test".
(config)> no snmp contact
Snmp::Manager: SNMP community info reset.
```

History

Version	Description
2.08	The snmp contact command has been introduced.

3.141 snmp location

Description Assign the location of [SNMP](#) agent. By default, the location is not defined.

Command with **no** prefix resets setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(config)>	snmp location < <i>location</i> >
(config)>	no snmp location

Arguments

Argument	Value	Description
location	<i>String</i>	SNMP device location.

Example

```
(config)> snmp location Odintsovo
Snmp::Manager: SNMP device location set to "Odintsovo".
(config)> no snmp location
Snmp::Manager: SNMP device location reset.
```

History

Version	Description
2.08	The snmp location command has been introduced.

3.142 sstp-server

Description Access to a group of commands to configure [SSTP](#)-server parameters.

Prefix no No

Change settings No

Multiple input No

Group entry (sstp-server)

Synopsis

(config)>	sstp-server
-----------	--------------------

History

Version	Description
2.12	The sstp-server command has been introduced.

3.142.1 sstp-server dhcp route

Description	Assign a route which is transmitted in DHCP INFORM messages to the <i>SSTP</i> -server clients.									
	Command with no prefix cancels the specified route. If you use no arguments, the entire list of routes will be cleared.									
Prefix no	Yes									
Change settings	Yes									
Multiple input	Yes									
Synopsis	<pre>(sstp-server)> dhcp route <address> <mask> (sstp-server)> no dhcp route [<address> <mask>]</pre>									
Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>address</td><td><i>IP-address</i></td><td>Network client address.</td></tr><tr><td>mask</td><td><i>IP-mask</i></td><td>Network client mask. There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).</td></tr></tbody></table>	Argument	Value	Description	address	<i>IP-address</i>	Network client address.	mask	<i>IP-mask</i>	Network client mask. There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).
Argument	Value	Description								
address	<i>IP-address</i>	Network client address.								
mask	<i>IP-mask</i>	Network client mask. There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).								
Example	<pre>(sstp-server)> dhcp route 192.168.2.0/24 SstpServer::Manager: Added DHCP INFORM route to ▶ 192.168.2.0/255.255.255.0.</pre> <pre>(sstp-server)> no dhcp route SstpServer::Manager: Cleared DHCP INFORM routes.</pre>									
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.12</td><td>The sstp-server dhcp route command has been introduced.</td></tr></tbody></table>	Version	Description	2.12	The sstp-server dhcp route command has been introduced.					
Version	Description									
2.12	The sstp-server dhcp route command has been introduced.									

3.142.2 sstp-server interface

Description	Bind <i>SSTP</i> -server to the specified interface.
	Command with no prefix unbinds the interface.
Prefix no	Yes
Change settings	Yes
Multiple input	No

Synopsis

```
(sstp-server)> interface <interface>
(sstp-server)> no interface
```

Arguments

Argument	Value	Description
interface	<i>Interface name</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(sstp-server)> interface [Tab]
```

Usage template:
interface {interface}

Choose:
GigabitEthernet1
ISP
WifiMaster0/AccessPoint2
WifiMaster1/AccessPoint1
WifiMaster0/AccessPoint3
WifiMaster0/AccessPoint0
AccessPoint
WifiMaster1/AccessPoint2
WifiMaster0/AccessPoint1
GuestWiFi

```
(sstp-server)> interface Bridge0
SstpServer::Manager: Bound to Bridge0.
```

History

Version	Description
2.12	The sstp-server interface command has been introduced.

3.142.3 sstp-server ipv6cp

Description Enable IPv6 support. DHCP IPv6 pools are created for each *SSTP*-server. By default, the setting is disabled.

Command with **no** prefix disables IPv6 support.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(sstp-server)> ipv6cp
```

```
(sstp-server)> no ipv6cp
```

Example

```
(sstp-server)> ipv6cp
SstpServer::Manager: IPv6 control protocol enabled.
```

```
(sstp-server)> no ipv6cp
SstpServer::Manager: IPv6 control protocol disabled.
```

History

Version	Description
3.00	The sstp-server ipv6cp command has been introduced.

3.142.4 sstp-server lcp echo

Description Specify the testing rules of the SSTP-connections with *LCP* echo tools.

Command with **no** prefix disables *LCP* echo.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(sstp-server)> lcp echo <interval> <count> [adaptive]
(sstp-server)> no lcp echo
```

Arguments

Argument	Value	Description
interval	<i>Integer</i>	Interval between sending <i>LCP</i> echo, in seconds. If within the specified time interval there is no <i>LCP</i> echo request from the remote location, the same request will be sent there asking for response <i>LCP</i> reply.
count	<i>Integer</i>	The number of consecutive requests <i>LCP</i> echo sent, for which no response <i>LCP</i> reply was received. If count of <i>LCP</i> echo requests goes unanswered, the connection is terminated.
adaptive	<i>Keyword</i>	Pppd will send LCP echo-request frames only if no traffic was received from the peer since the last echo-request was sent.

Example

```
(sstp-server)> lcp echo 5 3
SstpServer::Manager: LCP echo parameters updated.
```

History

Version	Description
2.12	The sstp-server lcp echo command has been introduced.

3.142.5 sstp-server lcp force-pap

Description Enforce the *PAP* authentication only for *SSTP*-server.Command with **no** prefix disables *PAP* authentication.**Prefix no** Yes**Change settings** Yes**Multiple input** No**Synopsis**

```
(sstp-server)> lcp force-pap
(sstp-server)> no lcp force-pap
```

Example

```
(sstp-server)> lcp force-pap
SstpServer::Manager: Forced PAP-only authentication.
```

```
(sstp-server)> no lcp force-pap
SstpServer::Manager: Disabled forcing PAP-only authentication.
```

History

Version	Description
3.05	The sstp-server lcp force-pap command has been introduced.

3.142.6 sstp-server mru

Description Set *MRU* value to be transmitted to *SSTP*-server. By default, 1350 value is used.Command with **no** prefix resets value to default.**Prefix no** Yes**Change settings** Yes**Multiple input** No**Synopsis**

```
(sstp-server)> mru <value>
(sstp-server)> no mru
```

Arguments

Argument	Value	Description
value	<i>Integer</i>	<i>MRU</i> value. Can take values from 128 to 1500 inclusively.

Example

```
(sstp-server)> mru 200
SstpServer::Manager: MRU set to 200.
```

History

Version	Description
2.12	The sstp-server mru command has been introduced.

3.142.7 sstp-server mtu

Description Set *MTU* value to be transmitted to *SSTP*-server. By default, 1350 value is used.

Command with **no** prefix resets value to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(sstp-server)> mtu <value>
(sstp-server)> no mtu

Arguments

Argument	Value	Description
value	<i>Integer</i>	<i>MTU</i> value. Can take values from 128 to 1500 inclusively.

Example

```
(sstp-server)> mtu 200
SstpServer::Manager: MTU set to 200.
```

History

Version	Description
2.12	The sstp-server mtu command has been introduced.

3.142.8 sstp-server multi-login

Description Allow connection to *SSTP*-server for multiple users from one account.

Command with **no** prefix disables this feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(sstp-server)> multi-login

```
(sstp-server)> no multi-login
```

Example

```
(sstp-server)> multi-login
SstpServer::Manager: Enabled multiple login.
```

History

Version	Description
2.12	The sstp-server multi-login command has been introduced.

3.142.9 sstp-server pool-range

Description Assign a pool of addresses for the clients that connect to the [SSTP](#)-server.

Command with **no** prefix removes a pool.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(sstp-server)> pool-range <begin> [<size>]
```

```
(sstp-server)> no pool-range
```

Arguments

Argument	Value	Description
begin	<i>IP-address</i>	Start address of pool.
size	<i>Integer</i>	Pool size. If not defined, size 10 is used.

Example

```
(sstp-server)> pool-range 192.168.1.22 7
SstpServer::Manager: Configured pool range 192.168.1.22 to ▶
192.168.1.28.
```

History

Version	Description
2.12	The sstp-server pool-range command has been introduced.

3.142.10 sstp-server static-ip

Description Bind IP-address to the user. User account must have **sstp** tag.

Command with **no** prefix removes binding.

Prefix no Yes

Change settings

Yes

Multiple input

Yes

Synopsis(sstp-server)> **static-ip** <name> <address>(sstp-server)> **no static-ip** <name>**Arguments**

Argument	Value	Description
name	<i>String</i>	Username.
address	<i>IP-address</i>	IP-address to bind.

Example

```
(sstp-server)> static-ip admin 192.168.1.22
SstpServer::Manager: Static IP 192.168.1.22 assigned to user ▶
"admin".
```

History

Version	Description
2.12	The sstp-server static-ip command has been introduced.

3.143 system

Description

Access to a group of commands to configure global parameters.

Prefix no

No

Change settings

No

Multiple input

No

Group entry

(system)

Synopsis(config)> **system****History**

Version	Description
2.00	The system command has been introduced.

3.143.1 system button

Description

Configure device buttons to handle specific actions. Available handlers depend on hardware configuration and installed modules.

Command with **no** prefix remove setting.**Prefix no**

Yes

Change settings

Yes

Multiple input

No

Synopsis(system)> **button** <button> **on** <action> **do** <handler>(system)> **no button** <button>**Arguments**

Argument	Value	Description
button	RESET	RESET button.
	WLAN	Wireless LAN button.
	FN	FN button.
action	click	Single click.
	double-click	Double click.
	hold	Push and hold for 3 seconds. RESET button hold is 10 seconds.
handler	FactoryReset	Reset system to factory defaults.
	Reboot	System reboot.
	WifiToggle	Switch Wi-Fi on/off.
	WifiGuestApToggle	Switch Guest Wi-Fi on/off.
	WpsStartMainAp	Start WPS (2.4GHz only).
	WpsStartMainAp5	Start WPS (5GHz only).
	WpsStartAllMainAp	Start WPS (all frequency bands).
	UnmountAll	Unmount all disks.
	DlnaDirectoryRescan	Search for new files.
	DlnaDirectoryFullRescan	Full rescan.
	TorrentAltSpeedToggle	Alternative speed on/off (component Transmission BitTorrent client required).
	TorrentClientStateToggle	Switch the BitTorrent client on/off (component Transmission BitTorrent client required).
	OpkgRunScript	Run the script on opkg-section, /etc/ndm/button.d/ folder (component OPKG required).

Example(system)> **button WLAN on double-click do WifiGuestApToggle**
Peripheral::Manager: "WLAN/double-click" handler set.

History

Version	Description
2.03	The system button command has been introduced.
2.06	The OpkgRunScript handler was added.

3.143.2 system clock date

Description Adjust system date and time.

Prefix no No

Change settings Yes

Multiple input No

Synopsis

```
(system)> clock date <date-and-time>
```

Arguments

Argument	Value	Description
date-and-time	<i>String</i>	Current date and time in DD MM YYYY HH:MM:SS format.

Example

```
(system)> clock date 18 07 2012 09:52:33
```

System date and time has been changed.

History

Version	Description
2.00	The system clock date command has been introduced.

3.143.3 system clock timezone

Description Set the system timezone.

Command with **no** prefix resets timezone to default (GMT).

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(system)> clock timezone <locality>
```

```
(system)> no clock timezone <locality>
```

Arguments

Argument	Value	Description
locality	<i>String</i>	Name of the city, indicating the time zone.

Example

```
(system)> clock timezone Dublin
the system timezone is set to "Dublin".
```

History

Version	Description
2.00	The system clock timezone command has been introduced.

3.143.4 system configuration factory-reset

Description Reset configuration to the factory settings for all modes.**Prefix no** No**Change settings** Yes**Multiple input** No**Synopsis**

```
(system)> configuration factory-reset
```

Example

```
(system)> configuration factory-reset
Core::Configuration: the system configuration reset to factory ▶
defaults.
```

History

Version	Description
2.00	The system configuration factory-reset command has been introduced.

3.143.5 system configuration save

Description Save the system configuration asynchronously.**Prefix no** No**Change settings** Yes**Multiple input** No**Synopsis**

```
(system)> configuration save
```

Example

```
(system)> configuration save
Saving configuration.
```

History

Version	Description
2.05.B.1	The system configuration save command has been introduced.

3.143.6 system debug

Description Enable system debug. By default, setting is disabled.

Command with **no** prefix disables the feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(system)> **debug**

(system)> **no debug**

Example

```
(system)> debug
Core::Debug: System debug enabled.
```

History

Version	Description
2.03	The system debug command has been introduced.

3.143.7 system description

Description Set the system description as an arbitrary string. By default, description Peak DSL (KN-2510) is used.

Command with **no** prefix resets description to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(system)> **description <description>**

(system)> **no description**

Arguments

Argument	Value	Description
description	<i>String</i>	System description no longer than 256 bytes.

Example

```
(system)> description DEVICE
Core::System::Info: Description saved.
```

```
(config)> show version
```

```
...
manufacturer: Keenetic Ltd.
```

```

        vendor: Keenetic
        series: KN
        model: Ultra (KN-1810)
hw_version: 10188000
        hw_id: KN-1810
        device: Ultra
        class: Internet Center
        region: RU
description: DEVICE

```

```

(config)> show running-config
...
    set vm.swappiness 60
    set vm.overcommit_memory 0
    set vm.vfs_cache_pressure 1000
    set dev.usb.force_usb2 0
    domainname WORKGROUP
    hostname Keenetic_Ultra
    description DEVICE
...

```

```

(system)> no description
Core::System::Info: Description reset to default.

```

```

(config)> show version
...
    manufacturer: Keenetic Ltd.
        vendor: Keenetic
        series: KN
        model: Ultra (KN-1810)
    hw_version: 10188000
        hw_id: KN-1810
        device: Ultra
        class: Internet Center
        region: RU
    description: Keenetic Ultra (KN-1810)

```

History

Version	Description
2.15	The system description command has been introduced.

3.143.8 system domainname

Description	Assign domain name for the system. Command with no prefix removes domain name.
Prefix no	Yes
Change settings	Yes
Multiple input	No

Synopsis(system)> **domainname** <domain>(system)> **no domainname****Arguments**

Argument	Value	Description
domain	String	The domain name to assign.

Example(system)> **domainname keenetic**

Domainname saved.

History

Version	Description
2.00	The system domainname command has been introduced.

3.143.9 system eject

Description Stop and eject SCSI/SATA USB-drive. To display all media drive names, use [show media](#) command.**Prefix no** No**Change settings** No**Multiple input** No**Synopsis** (system)> **eject** <name>**Arguments**

Argument	Value	Description
name	String	Name of media drive to eject.

Example(system)> **eject Media0**

Storage::Manager: Started "Media0" eject.

History

Version	Description
3.04	The system eject command has been introduced.

3.143.10 system hostname

Description Set the host name. Host name used to identify a node in the network. It is required to enable some of the built-in services, such as CIFS.Command with **no** prefix sets the default value, which depends on the model name.

Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(system)> hostname <hostname> (system)> no hostname</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>hostname</td><td><i>String</i></td><td>Name of the host.</td></tr> </tbody> </table>	Argument	Value	Description	hostname	<i>String</i>	Name of the host.
Argument	Value	Description					
hostname	<i>String</i>	Name of the host.					
Example	<pre>(system)> hostname KN1010 Core::System::Hostname: The host name set. (system)> no hostname Core::System::Hostname: The host name reset.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.00</td><td>The system hostname command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.00	The system hostname command has been introduced.		
Version	Description						
2.00	The system hostname command has been introduced.						

3.143.11 system led

Description	Configure general purpose LEDs. By default, LED FN shows the status of device connected to USB. Command with no prefix resets the setting to default.									
Prefix no	Yes									
Change settings	Yes									
Multiple input	Yes									
Synopsis	<pre>(system)> led <led> indicate <control> (system)> no led [<led> [indicate]]</pre>									
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>led</td><td>FN</td><td>LED name.</td></tr> <tr> <td>control</td><td>UpdatesAvailable BackupWan</td><td>LED notifies you the updates for your device are available. LED shows that backup connection is active at the moment.</td></tr> </tbody> </table>	Argument	Value	Description	led	FN	LED name.	control	UpdatesAvailable BackupWan	LED notifies you the updates for your device are available. LED shows that backup connection is active at the moment.
Argument	Value	Description								
led	FN	LED name.								
control	UpdatesAvailable BackupWan	LED notifies you the updates for your device are available. LED shows that backup connection is active at the moment.								

Argument	Value	Description
	SelectedWan	LED shows status of the interface defined with interface led wan command.
	SelectedSchedule	LED shows status of scheduled event assigned with schedule led command.
	OpkgLedControl	LED shows status of opkg .
	UsbPortDeviceAttached	LED shows status of device connected to USB.
indicate	<i>Keyword</i>	Turn off the indicator completely.

Example

```
(system)> led FN indicate SelectedWan
Peripheral::Manager: "SelectedWan" control bound to "FN" LED.
```

```
(system)> no led FN indicate
Peripheral::Manager: "FN" LED control binding removed.
```

History

Version	Description
2.08	The system led command has been introduced.

3.143.12 system led power schedule

Description Assign a schedule for the LEDs on the device. Schedule must be created and customized with **schedule action** command before execution.

Command with **no** prefix unbinds the schedule.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(system)> led power schedule <schedule>
(system)> no led power schedule
```

Arguments

Argument	Value	Description
schedule	<i>Schedule name</i>	The name of the schedule that was created with schedule group of commands.

Example

```
(system)> led power schedule schedule1
Core::Peripheral::Manager: Set LED power schedule "schedule1".
```

```
(system)> no led power schedule
Core::Peripheral::Manager: Clear LED power schedule.
```

History	Version	Description
	3.06	The system led power schedule command has been introduced.

3.143.13 system led power shutdown

Description Shutdown the LEDs on the device.
Command with **no** prefix turns LEDs on.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(system)> led power shutdown <mode>
(system)> no led power shutdown

Arguments	Argument	Value	Description
mode	all	Shutdown all the LEDs.	
	front	Shutdown the LEDs on the front panel.	
	back	Shutdown the LEDs on the back panel.	

Example

```
(system)> led power shutdown all
Core::Peripheral::Manager: Set LED shutdown mode to "all".
```

```
(system)> no led power shutdown
Core::Peripheral::Manager: Set LED shutdown mode to "none".
```

History	Version	Description
	3.06	The system led power shutdown command has been introduced. Previous command name is system led shutdown .

3.143.14 system log clear

Description Clear the system log.

Prefix no No

Change settings No

Multiple input	No				
Synopsis	(system)> log clear				
Example	(system)> log clear Syslog: the system log has been cleared.				
History	<table><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.00</td><td>The system log clear command has been introduced.</td></tr></tbody></table>	Version	Description	2.00	The system log clear command has been introduced.
Version	Description				
2.00	The system log clear command has been introduced.				

3.143.15 system log reduction

Description	Enable repeated message reduction. By default, the setting is enabled. Command with no prefix disables the feature.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Synopsis	(system)> log reduction (system)> no log reduction				
Example	(system)> log reduction (system)> no log reduction				
History	<table><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.04</td><td>The system log reduction command has been introduced.</td></tr></tbody></table>	Version	Description	2.04	The system log reduction command has been introduced.
Version	Description				
2.04	The system log reduction command has been introduced.				

3.143.16 system log server

Description	Add remote log server.
Prefix no	Yes
Change settings	Yes
Multiple input	Yes
Synopsis	(system)> log server <address> [:<port>] (system)> no log server [<address> [:<port>]]

Arguments	Argument	Value	Description
	address	<i>IP-address</i>	Remote log server address.
	port	<i>Integer</i>	Remote log server port.

Example

```
(system)> log server 192.168.1.1:8080
Syslog: server 192.168.1.1:8080 added.
```

History	Version	Description
	2.00	The system log server command has been introduced.

3.143.17 system log suppress

Description Add message suppression rule.

Command with **no** prefix removes the rule.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(system)> log suppress <ident>
(system)> no log suppress [<ident>]
```

Arguments	Argument	Value	Description
	ident	<i>String</i>	Process ID which messages need to suppress.

Example

```
(system)> log suppress kernel
Core::Syslog: Added suppression "kernel".
```

```
(system)> no log suppress kernel
Core::Syslog: Deleted suppression "kernel".
```

```
(system)> log suppress transmissiond
Core::Syslog: Added suppression "transmissiond".
```

```
(system)> no log suppress transmissiond
Core::Syslog: Deleted suppression "transmissiond".
```

History	Version	Description
	2.04	The system log suppress command has been introduced.

3.143.18 system mode

Description Select system operating mode for Peak DSL.

Prefix no No

Change settings Yes

Multiple input No

Synopsis

(system)>	mode <mode>
-----------	--------------------

Arguments

Argument	Value	Description
mode	router	Main mode.
	client	Network adapter mode to connect Ethernet devices to Wi-Fi network.
	repeater	Repeater mode to extend Wi-Fi network using a wireless connection.
	ap	Access point mode to extend Wi-Fi network using a wired Ethernet connection.

Example

(system)> **mode repeater**

Core::Mode: The system switched to "repeater" mode, reboot the device to apply the settings.

History

Version	Description
2.05	The system mode command has been introduced.

3.143.19 system mount

Description Mount USB-drive. To display all mounted drives use **show usb** command.

Command with **no** prefix unmount the drive.

Prefix no Yes

Change settings No

Multiple input No

Synopsis

(system)>	mount <filesystem>
-----------	---------------------------

(system)>	no mount <filesystem>
-----------	------------------------------

Arguments

Argument	Value	Description
filesystem	<i>String</i>	Name of filesystem to mount/unmount.

Example

```
(system)> mount 9430B54530B52EDC:  
Filesystem mounted
```

History

Version	Description
2.00	The system mount command has been introduced.

3.143.20 system ndss dump-report disable

Description Disable product improvement program. By default, setting is enabled.

Command with **no** prefix enables the program.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(system)> ndss dump-report disable  
(system)> no ndss dump-report disable
```

Example

```
(system)> ndss dump-report disable  
Core::Ndss: Dump-reporting disabled.
```

```
(system)> no ndss dump-report disable  
Core::Ndss: Dump-reporting enabled.
```

History

Version	Description
3.05	The system ndss dump-report disable command has been introduced. Previous command name is system dump-report disable .

3.143.21 system reboot

Description Reboot the system. If the parameter is set, reboot is executed after a timeout, in seconds. If the timer is already set, using of the command replaces the old value of the timer to the new one.

Using a scheduled reboot is convenient in the case when the device is under remote control, and the user doesn't understand the effect of the commands he/she is trying. The user can turn on a scheduled reboot for fear of losing

control over the device. After reboot the system will return to its original state and become available.

Command with **no** prefix cancels reboot or removes the reboot on schedule.

Prefix no Yes

Change settings No

Multiple input No

Synopsis

(system)>	reboot [<i><interval></i> schedule <i><schedule></i>]
(system)>	no reboot [schedule]

Arguments

Argument	Value	Description
interval	<i>Integer</i>	Timeout for reboot, in seconds. If not specified, the reboot will be executed immediately.
schedule	<i>Schedule name</i>	The name of the schedule that was created with schedule group of commands.

Example

```
(system)> reboot 20
Core::System::RebootManager: Rebooting in 20 seconds.
```

```
(system)> no reboot
Core::System::RebootManager: Reboot cancelled.
```

```
(system)> reboot schedule rebootroute
Core::System::RebootManager: Set reboot schedule "rebootroute".
```

```
(system)> no reboot schedule
Core::System::RebootManager: Schedule disabled.
```

History

Version	Description
2.00	The system reboot command has been introduced.
2.12	The schedule argument has been added.

3.143.22 system set

Description Set the value of the specified system parameter and save it in the current settings.

Command with **no** prefix returns the default value to the specified parameter (before the first change).

Prefix no Yes

Change settings Yes

Multiple input

Yes

Synopsis(system)> **set** <name> <value>(system)> **no set** <name>**Arguments**

Argument	Value	Description
name	<i>String</i>	Identifier of the system parameter.
value	<i>String</i>	New value of the system parameter.

Example

```
(config)> system
(system)> set net.ipv4.ip_forward 1
(system)> set net.ipv4.tcp_fin_timeout 30
(system)> set net.ipv4.tcp_keepalive_time 120
(system)> set >
net.ipv4.netfilter.ip_conntrack_tcp_timeout_established 1200
(system)> set net.ipv4.netfilter.ip_conntrack_udp_timeout 60
(system)> set net.ipv4.netfilter.ip_conntrack_max 4096
(system)> exit
(config)> show running-config
system
set net.ipv4.ip_forward 1
    set net.ipv4.tcp_fin_timeout 30
    set net.ipv4.tcp_keepalive_time 120
    set net.ipv4.netfilter.ip_conntrack_tcp_timeout_established ▶
1200
    set net.ipv4.netfilter.ip_conntrack_udp_timeout 60
    set net.ipv4.netfilter.ip_conntrack_max 4096
!
...
(config)>
```

History

Version	Description
2.00	The system set command has been introduced.

3.143.23 system swap

Description

Configure swap area. If the file is not found, the command tries to create it.

Command with **no** prefix disables the swap.**Prefix no**

Yes

Change settings

Yes

Multiple input

No

Synopsis(system)> **swap** (<area> | <area>) <size>

```
(system)> no swap
```

Arguments

Argument	Value	Description
area	<i>Filename</i>	Full path to the swap-file in <file system>:<path> format.
size	<i>Integer</i>	Swap-file size, in Kbytes.

Example

```
(system)> swap OPKG:/swap/swapfile 2097152
Storage::Swap::Manager: Swap is being initialized in background.
```

```
(system)> no swap
Storage::Swap::Manager: Swap area OPKG:/swap/swapfile disabled.
```

History

Version	Description
2.00	The system swap command has been introduced.

3.143.24 system trace lock threshold

Description Set a trace lock threshold for the system threads. If the threshold value is exceeded, information about this thread (for example, SCGI session) is saved in the system log. By default, setting is disabled.

Command with **no** prefix disables the trace lock threshold feature.

Prefix no Yes

Change settings No

Multiple input No

Synopsis

```
(system)> system trace lock threshold <threshold>
(system)> no system trace lock threshold
```

Arguments

Argument	Value	Description
threshold	<i>String</i>	Threshold value in milliseconds. Can take values from 100 to 100000000 inclusively. The threshold value is not saved into startup-config.

Example

```
(system)> system trace lock threshold 100
Lockable: Set threshold to 100 ms.
```

```
(system)> no trace lock threshold
Lockable: Reset threshold.
```

History

Version	Description
3.03	The system trace lock threshold command has been introduced.

3.143.25 system zram

Description Configure zRam swap file. If you use no argument, size of zRam file will be set automatically.

Command with **no** prefix removes zRam file.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(system)>	zram [<i>size</i>]
(system)>	no zram

Arguments

Argument	Value	Description
<i>size</i>	<i>Integer</i>	Size of zRam file, in Kbytes.

Example

(system)>	zram
Zram::Manager:	Enabled zram swap of size 262144Kb.

(system)>	no zram
Zram::Manager:	Zram swap disabled.

History

Version	Description
2.09	The system zram command has been introduced.

3.144 tools

Description Access to a group of commands to test the environment.

Prefix no No

Change settings No

Multiple input No

Group entry (tools)

Synopsis

(config)>	tools
-----------	--------------

History

Version	Description
2.00	The tools command has been introduced.

3.144.1 tools arping

Description

Command action is analogous to **tools ping** command, but operates at the link layer of the OSI model using the **ARP** protocol.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(tools)> arping <address> source-interface <source-interface> [ count <count> ] [ wait-time <wait-time> ]
```

Arguments

Argument	Value	Description
address	<i>IP-address</i>	IP-address of the respondent.
source-interface	<i>Interface name</i>	Name of source-interface.
count	<i>Integer</i>	Quantity of requests. If not specified, the command will run until interrupted by the user.
wait-time	<i>Integer</i>	The maximum response time, in milliseconds.

Example

```
(tools)> arping 192.168.15.51 source-interface Home count 4 >
wait-time 3000
Starting the ARP ping to "192.168.15.51"...
ARPING 192.168.15.51 from 192.168.15.1 br0.
Unicast reply from 192.168.15.51 [9c:b7:0d:ce:51:6a] 1.884 ms.
Unicast reply from 192.168.15.51 [9c:b7:0d:ce:51:6a] 1.831 ms.
Sent 4 probes, received 2 responses.
Process terminated.
```

History

Version	Description
2.00	The tools arping command has been introduced.

3.144.2 tools ping

Description

Send Echo-Request requests of ICMP protocol to specified network node and register received Echo-Reply responses. The time between sending request and receiving the response Round Trip Time (RTT) allows you to define double ended delays on the route and frequency of packet losses, that is, indirectly

determine loading on the channels of data transmission and intermediate devices.

Total absence of ICMP-replies can also mean that the remote node (or any of the intermediate routers) blocks ICMP Echo-Reply or ignores ICMP Echo-Request.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(tools)> ping <host> [ count <count> ] [ size <packetsize> ]
```

Arguments

Argument	Value	Description
host	<i>String</i>	Domain name or host IP-address.
count	<i>Integer</i>	Quantity of ICMP Echo requests. If not specified, the command will run until interrupted by the user.
packetsize	<i>Integer</i>	Size of the ICMP Echo-Request data field in bytes. By default — 56, which together with the 8-byte header specifies the size of the ICMP-pack — 64 bytes.

Example

```
(tools)> ping 192.168.1.33 count 3 size 100
Sending ICMP ECHO request to 192.168.1.33
PING 192.168.1.33 (192.168.1.33) 72 (100) bytes of data.
100 bytes from 192.168.1.33: icmp_req=1, ttl=128, time=2.35 ms.
100 bytes from 192.168.1.33: icmp_req=2, ttl=128, time=1.07 ms.
100 bytes from 192.168.1.33: icmp_req=3, ttl=128, time=1.06 ms.
--- 192.168.1.33 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss,
0 duplicate(s), time 2002.65 ms.
Round-trip min/avg/max = 1.06/1.49/2.35 ms.
Process terminated.
```

History

Version	Description
2.00	The tools ping command has been introduced.

3.144.3 tools ping6

Description

Send Echo-Request requests of ICMPv6 protocol to specified network node and register received Echo-Reply responses. The time between sending request and receiving the response Round Trip Time (RTT) allows you to define double ended delays on the route and frequency of packet losses, that is, indirectly determine loading on the channels of data transmission and intermediate devices.

Total absence of ICMP-replies can also mean that the remote node (or any of the intermediate routers) blocks ICMP Echo-Reply or ignores ICMP Echo-Request.

Prefix no

No

Change settings

No

Multiple input

No

Synopsis

```
(tools)> ping6 <host> [ count <count> ] [ size <packetsize> ]
```

Arguments

Argument	Value	Description
host	<i>String</i>	Domain name or host IPv6-address.
count	<i>Integer</i>	Quantity of ICMPv6 Echo requests. If not specified, the command will run until interrupted by the user.
packetsize	<i>Integer</i>	Size of the ICMPv6 Echo-Request data field in bytes. By default — 56, which together with the 8-byte header specifies the size of the ICMPv6-pack — 64 bytes.

Example

```
(tools)> ping6 fd4b:f12b:5d59:0:1108:4407:b772:20cd count 3 size ▶
100
Sending ICMPv6 ECHO request to ▶
fd4b:f12b:5d59:0:1108:4407:b772:20cd
PING fd4b:f12b:5d59:0:1108:4407:b772:20cd ▶
(fd4b:f12b:5d59:0:1108:4407:b772:20cd) 52 (60) bytes of data.
60 bytes from fd4b:f12b:5d59:0:1108:4407:b772:20cd ▶
(fd4b:f12b:5d59:0:1108:4407:b772:20cd): icmp_req=1, ttl=64, ▶
time=7.18 ms.
60 bytes from fd4b:f12b:5d59:0:1108:4407:b772:20cd ▶
(fd4b:f12b:5d59:0:1108:4407:b772:20cd): icmp_req=2, ttl=64, ▶
time=8.42 ms.
60 bytes from fd4b:f12b:5d59:0:1108:4407:b772:20cd ▶
(fd4b:f12b:5d59:0:1108:4407:b772:20cd): icmp_req=3, ttl=64, ▶
time=1.51 ms.
--- fd4b:f12b:5d59:0:1108:4407:b772:20cd ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss,
0 duplicate(s), time 2002.61 ms.
Round-trip min/avg/max = 1.51/5.70/8.42 ms.
Process terminated.
```

History

Version	Description
2.00	The tools ping6 command has been introduced.

3.144.4 tools traceroute

Description Show the route to a network host.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(tools)> traceroute <host> [count <count>] [interval <interval>]
    [wait-time <wait-time>] [packet-size <packet-size>]
    [max-ttl <max-ttl>] [port <port>] [source-address <source-address>]
    [source-interface <source-interface>] [type <type>] [tos <tos>]
```

Arguments	Argument	Value	Description
	host	<i>String</i>	Name of the target host.
	count	<i>Integer</i>	Number of probe packets per hop. Default value — 3. Value must be in the range [1;10].
	interval	<i>Integer</i>	Time in seconds between sending packets. Default value — 0. Value must be in the range [0;15].
	wait-time	<i>Integer</i>	Time to wait for a response to a probe (in seconds). Default value — 1. Value must be in the range [1;15].
	packet-size	<i>Integer</i>	Size of packet according to the protocol type. For tcp type default packet size is 52. Range of values [52]. For udp and icmp types default packet size is 60. Range of values [28;65535].
	max-ttl	<i>Integer</i>	Maximum number of hops (max time-to-live value) traceroute will probe. Default value — 30. Value must be in the range [1;255].
	port	<i>Integer</i>	Destination port. For tcp type default port is 80. For udp type default port is 33434. For icmp type default port is 1.
	source-address	<i>String</i>	Address of the outgoing interface.
	source-interface	<i>String</i>	Interface to be used as the source interface in outgoing probe packets.
	type	tcp	<i>TCP</i> protocol.
		udp	<i>UDP</i> protocol. Used by default.

Argument	Value	Description
	icmp	<i>ICMP</i> protocol.
tos	<i>Integer</i>	Type Of Service. Default value — 0. Value must be in the range [0;255]

Example

```
(tools)> traceroute google.com count 5 interval 5
starting traceroute to google.com...
traceroute to google.com (64.233.161.113), 30 hops maximum, 60 >
byte packets.
  1  192.168.233.1 (192.168.233.1)  2.742 ms  2.406 ms  2.460 ms >
  2.191 ms  2.957 ms
  2  10.77.140.1 (10.77.140.1)  3.301 ms  3.847 ms  3.839 ms
process terminated
```

History

Version	Description
2.00	The tools traceroute command has been introduced.

3.145 torrent

Description Access to a group of commands to configure BitTorrent parameters.

Prefix no No

Change settings No

Multiple input No

Group entry (config-torrent)

Synopsis (config)> **torrent**

History

Version	Description
2.00	The torrent command has been introduced.

3.145.1 torrent directory

Description Specify a folder for downloads. If the folder is not found, the command tries to create it.

Command with **no** prefix removes the setting.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-torrent)> directory <directory>
(config-torrent)> no directory
```

Arguments

Argument	Value	Description
directory	<i>String</i>	Path to the folder with filesystem defining. Filesystems — temp:, system:, flash:, sys:, proc:, usb:.

Example

```
(config-torrent)> directory ▶
46E243F4E243E6B1:/components/transmission/
(config-torrent)> no directory
```

History

Version	Description
2.00	The torrent directory command has been introduced.

3.145.2 torrent peer-port

Description Set peer port. By default, 51413 value is used.

Prefix no No

Change settings Yes

Multiple input No

Synopsis

```
(config-torrent)> peer-port <port>
```

Arguments

Argument	Value	Description
port	<i>Integer</i>	Incoming TCP listen port. Can take values from 1024 to 65535.

Example

```
(config-torrent)> peer-port 11122
Torrent::Client: Peer port changed to 11122.
```

History

Version	Description
2.00	The torrent peer-port command has been introduced.

3.145.3 torrent policy

Description Define the IP Policy for BitTorrent client.

Command with **no** prefix removes the defined IP Policy profile for BitTorrent client.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(config-torrent)> policy <policy>
```

```
(config-torrent)> no policy
```

Arguments

Argument	Value	Description
policy	<i>Policy name</i>	Name of IP Policy profile.

Example

```
(config-torrent)> policy PolicyNaN  
Torrent::Client: Policy PolicyNaN applied.
```

```
(config-torrent)> no policy  
Torrent::Client: Policy cleared.
```

History

Version	Description
3.01	The torrent policy command has been introduced.

3.145.4 torrent reset

Description Reset settings of BitTorrent client.

Prefix no No

Change settings No

Multiple input No

Synopsis

```
(config-torrent)> reset
```

Example

```
(config-torrent)> reset  
Torrent::Client: Reset performed.
```

History

Version	Description
2.10	The torrent reset command has been introduced.

3.145.5 torrent rpc-port

Description Set **RPC** port. By default, 8090 value is used.

Prefix no	No									
Change settings	Yes									
Multiple input	No									
Synopsis	(config-torrent)> rpc-port <port> [public]									
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>port</td><td><i>Integer</i></td><td>Webadmin listen port. Can take values from 1024 to 65535.</td></tr> <tr> <td>public</td><td><i>Keyword</i></td><td>Access to BitTorrent-client managing by public interfaces.</td></tr> </tbody> </table>	Argument	Value	Description	port	<i>Integer</i>	Webadmin listen port. Can take values from 1024 to 65535.	public	<i>Keyword</i>	Access to BitTorrent-client managing by public interfaces.
Argument	Value	Description								
port	<i>Integer</i>	Webadmin listen port. Can take values from 1024 to 65535.								
public	<i>Keyword</i>	Access to BitTorrent-client managing by public interfaces.								
Example	<pre>(config-torrent)> rpc-port 9945 Torrent::Client: RPC port changed to 9945 (private).</pre> <pre>(config-torrent)> rpc-port 9945 public Torrent::Client: RPC port changed to 9945 (public).</pre>									
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.00</td><td>The torrent rpc-port command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.00	The torrent rpc-port command has been introduced.					
Version	Description									
2.00	The torrent rpc-port command has been introduced.									

3.146 udpxy

Description	Access to a group of commands to configure <i>udpxy</i> parameters.				
Prefix no	No				
Change settings	No				
Multiple input	No				
Group entry	(<i>udpxy</i>)				
Synopsis	(config)> udpxy				
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.03</td><td>The udpxy command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.03	The udpxy command has been introduced.
Version	Description				
2.03	The udpxy command has been introduced.				

3.146.1 udpxy buffer-size

Description	Set <i>udpxy</i> buffer size. By default, 2048 value is used. Command with no prefix resets buffer size to default.
--------------------	---

Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(udpxy)> buffer-size <size> (udpxy)> no buffer-size</pre>						
Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>size</td><td><i>Integer</i></td><td>Buffer size in bytes. Can take values from 1 to 1048576.</td></tr></tbody></table>	Argument	Value	Description	size	<i>Integer</i>	Buffer size in bytes. Can take values from 1 to 1048576.
Argument	Value	Description					
size	<i>Integer</i>	Buffer size in bytes. Can take values from 1 to 1048576.					
Example	<pre>(udpxy)> buffer-size 500 Udpxy::Manager: a buffer size set to 500 bytes.</pre>						
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.04</td><td>The udpxy buffer-size command has been introduced.</td></tr></tbody></table>	Version	Description	2.04	The udpxy buffer-size command has been introduced.		
Version	Description						
2.04	The udpxy buffer-size command has been introduced.						

3.146.2 udpxy buffer-timeout

Description	Set <i>udpxy</i> timeout to hold data in the buffer. By default, 1 value is used. Command with no prefix resets timeout to default.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(udpxy)> buffer-timeout <timeout> (udpxy)> no buffer-timeout</pre>						
Arguments	<table border="1"><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>timeout</td><td><i>Integer</i></td><td>Timeout value in seconds. Can take values from -1 to 60. -1 — unlimited timeout.</td></tr></tbody></table>	Argument	Value	Description	timeout	<i>Integer</i>	Timeout value in seconds. Can take values from -1 to 60. -1 — unlimited timeout.
Argument	Value	Description					
timeout	<i>Integer</i>	Timeout value in seconds. Can take values from -1 to 60. -1 — unlimited timeout.					
Example	<pre>(udpxy)> buffer-timeout 10 Udpxy::Manager: a hold data timeout set to 10 sec.</pre>						
History	<table border="1"><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.04</td><td>The udpxy buffer-timeout command has been introduced.</td></tr></tbody></table>	Version	Description	2.04	The udpxy buffer-timeout command has been introduced.		
Version	Description						
2.04	The udpxy buffer-timeout command has been introduced.						

3.146.3 udpxy interface

Description Bind `udpxy` to the specified interface. By default, current default gateway is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(udpxy)>	interface < <i>interface</i> >
(udpxy)>	no interface

Arguments	Argument	Value	Description
	interface	<i>Interface name</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(udpxy)> interface [Tab]
Usage template:
    interface {interface}

Choose:
    GigabitEthernet1
    ISP
WifiMaster0/AccessPoint2
WifiMaster1/AccessPoint1
WifiMaster0/AccessPoint3
WifiMaster0/AccessPoint0
    AccessPoint
```

```
(udpxy)> interface ISP
Udpxy::Manager: bound to Dsl0.
```

History

Version	Description
2.02	The udpxy interface command has been introduced.

3.146.4 udpuy port

Description Specify port for HTTP requests. By default, 4022 value is used.

Command with **no** prefix resets setting to default.

Prefix no Yes

Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(udpxy)> port <port> (udpxy)> no port</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>port</td><td><i>Integer</i></td><td>Port number. Can take values from 0 to 65535.</td></tr> </tbody> </table>	Argument	Value	Description	port	<i>Integer</i>	Port number. Can take values from 0 to 65535.
Argument	Value	Description					
port	<i>Integer</i>	Port number. Can take values from 0 to 65535.					
Example	<pre>(udpxy)> port 2323 Udpxy::Manager: a port set to 2323.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.03</td><td>The udpxy port command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.03	The udpxy port command has been introduced.		
Version	Description						
2.03	The udpxy port command has been introduced.						

3.146.5 udpxy renew-interval

Description	Set renew interval of subscription to the multicast channel. By default, 0 value is used, ie the subscription is not renewed.						
	Command with no prefix resets setting to default.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(udpxy)> renew-interval <renew-interval> (udpxy)> no renew-interval</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>renew-interval</td><td><i>Integer</i></td><td>Renew interval of subscription in seconds. Can take values from 0 to 3600.</td></tr> </tbody> </table>	Argument	Value	Description	renew-interval	<i>Integer</i>	Renew interval of subscription in seconds. Can take values from 0 to 3600.
Argument	Value	Description					
renew-interval	<i>Integer</i>	Renew interval of subscription in seconds. Can take values from 0 to 3600.					
Example	<pre>(udpxy)> renew-interval 120 Udpxy::Manager: a renew subscription interval value set to 120 ► sec.</pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.03</td><td>The udpxy renew-interval command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.03	The udpxy renew-interval command has been introduced.		
Version	Description						
2.03	The udpxy renew-interval command has been introduced.						

3.146.6 udpxy timeout

Description	Set connection timeout. By default, 5 value is used. Command with no prefix resets setting to default.							
Prefix no	Yes							
Change settings	Yes							
Multiple input	No							
Synopsis	<pre>(udpxy)> timeout <timeout> (udpxy)> no timeout</pre>							
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>timeout</td> <td><i>Integer</i></td> <td>Timeout in seconds. Can take values from 5 to 60.</td> </tr> </tbody> </table>		Argument	Value	Description	timeout	<i>Integer</i>	Timeout in seconds. Can take values from 5 to 60.
Argument	Value	Description						
timeout	<i>Integer</i>	Timeout in seconds. Can take values from 5 to 60.						
Example	<pre>(udpxy)> timeout 10 Udpxy::Manager: a stream timeout set to 10 sec.</pre>							
History	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2.03</td> <td>The udpxy timeout command has been introduced.</td> </tr> </tbody> </table>		Version	Description	2.03	The udpxy timeout command has been introduced.		
Version	Description							
2.03	The udpxy timeout command has been introduced.							

3.147 upnp forward

Description	Add UPnP forwarding rule. Command with no prefix removes rule from the list.							
Prefix no	Yes							
Change settings	Yes							
Multiple input	Yes							
Interface type	IP							
Synopsis	<pre>(config)> upnp forward <protocol> [interface] <address> <port> (config)> no upnp forward [<index> (<protocol> <address> <port>)]</pre>							
Arguments	<table border="1"> <thead> <tr> <th>Argument</th> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>protocol</td> <td>tcp</td> <td>Rule for TCP protocol will be added/deleted.</td> </tr> </tbody> </table>		Argument	Value	Description	protocol	tcp	Rule for TCP protocol will be added/deleted.
Argument	Value	Description						
protocol	tcp	Rule for TCP protocol will be added/deleted.						

Argument	Value	Description
	udp	Rule for <i>UDP</i> protocol will be added/deleted.
interface	<i>Interface name</i>	Rule for specified interface name will be added.
address	<i>IP-address</i>	Rule for specified IP-address will be added/deleted.
port	<i>Integer</i>	Rule for specified port will be added/deleted.
index	<i>Integer</i>	Rule with specified number in the list will be removed.

History

Version	Description
2.00	The upnp forward command has been introduced.

3.148 upnp lan

Description Set LAN interface where the *UPnP* service is running. The service works for one network segment only.

Command with **no** prefix removes setting.

Prefix no Yes

Change settings Yes

Multiple input No

Interface type IP

Synopsis

```
(config)> upnp lan <interface>
(config)> no upnp lan
```

Arguments

Argument	Value	Description
interface	<i>Interface name</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(config)> upnp lan [Tab]
Usage template:
    lan {interface}
Choose:
```

```
GigabitEthernet1
ISP
WifiMaster0/AccessPoint2
WifiMaster1/AccessPoint1
WifiMaster0/AccessPoint3
WifiMaster0/AccessPoint0
AccessPoint
WifiMaster1/AccessPoint2
WifiMaster0/AccessPoint1
GuestWiFi
```

```
(config)> upnp lan PPTP0
using LAN interface: PPTP0.
```

History

Version	Description
2.00	The upnp lan command has been introduced.

3.149 upnp redirect

Description	Add UPnP port translation rule. Command with no prefix removes rule from the list. If you use no arguments, the entire list of rules will be removed.
Prefix no	Yes
Change settings	Yes
Multiple input	Yes
Interface type	IP
Synopsis	<pre>(config)> upnp redirect <protocol> <interface> <port> <to-address> [to-port] (config)> no upnp redirect [and forward [<index> (<protocol> <port>)]]</pre>

Arguments

Argument	Value	Description
protocol	tcp	Rule for TCP protocol will be added/deleted.
	udp	Rule for UDP protocol will be added/deleted.
interface	<i>Interface name</i>	Rule for specified interface name will be added.
port	<i>Integer</i>	Rule for specified port will be added/deleted.
to-address	<i>IP-address</i>	Rule for specified destination address will be added.

Argument	Value	Description
to-port	<i>Integer</i>	Rule for specified destination port will be added.
and forward	<i>Keyword</i>	Lists of forwarding and redirecting rules will be cleared.
index	<i>Integer</i>	Rule with specified number in the list will be removed.

History	Version	Description
	2.00	The upnp redirect command has been introduced.

3.150 user

Description Access to a group of commands to configure user account parameters. If specified user is not found, the command tries to create it.

Note: Account with reserved name **admin** can not be removed. In addition, the **admin** user can not lose the access right to command line.

Command with **no** prefix removes user account.

Prefix no	Yes
Change settings	Yes
Multiple input	Yes
Group entry	(config-user)
Synopsis	<pre> (config)> user <name> (config)> no user <name></pre>

Arguments	Argument	Value	Description
	name	<i>String</i>	The user name.

History	Version	Description
	2.00	The user command has been introduced.

3.150.1 user home

Description Set home directory for user.

Command with **no** prefix resets the setting.

Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(config-user)> home <directory> (config-user)> no home</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>directory</td><td>String</td><td>Path to the home directory for FTP-server, SFTP-server and WeDAV-server.</td></tr> </tbody> </table>	Argument	Value	Description	directory	String	Path to the home directory for FTP-server, SFTP-server and WeDAV-server.
Argument	Value	Description					
directory	String	Path to the home directory for FTP-server, SFTP-server and WeDAV-server.					
Example	<pre>(config-user)> home files(ssd:/) Core::Authenticator: "test" user root directory set to ▶ "files(ssd:/)". (config-user)> no home (config-user)></pre>						
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>3.04</td><td>The user home command has been introduced.</td></tr> </tbody> </table>	Version	Description	3.04	The user home command has been introduced.		
Version	Description						
3.04	The user home command has been introduced.						

3.150.2 user password

Description	Set the user password. The password is stored as MD5-hash, computed from the " <i>user:realm:password</i> " string. <i>realm</i> is the device model name from startup-config.txt file. The command takes open string or hash-function value as argument. Saved password is used for user authentication. Command with no prefix removes the password so that the user can access to the device unauthenticated.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(config-user)> password (md5 <hash> <password>) (config-user)> no password</pre>						
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>hash</td><td>String</td><td>MD5-hash value.</td></tr> </tbody> </table>	Argument	Value	Description	hash	String	MD5-hash value.
Argument	Value	Description					
hash	String	MD5-hash value.					

Argument	Value	Description
password	<i>String</i>	Value of the password in open form, from which the hash value is calculated automatically.

Example

```
(config-user)> password 1111
Core::Authenticator: Password set has been changed for user ▶
"test".
```

History

Version	Description
2.00	The user password command has been introduced.

3.150.3 user tag

Description

Assign a special tag to the user account, which presence is checked at the time of user authorization as well as performing any action in the system. Set of permitted tag values depends on the system functionality. The full list is shown in the table below.

Several different tags can be assigned to one account by entering the command several times. Each tag can be viewed as granting or revoking certain permissions.

Command with **no** prefix removes the specified tag.

Note: admin account cannot be tagged readonly or untagged cli or ssh.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

<pre>(config-user)> tag <tag></pre>
<pre>(config-user)> no tag [<tag>]</pre>

Arguments

Argument	Value	Description
tag	cli	Access to the command line (TELNET and SSH).
	readonly	Restrict commands that change the settings.
	http-proxy	Access to the HTTP proxy.
	http	Access to the Web-interface.
	afp	Access to USB drives via Apple File Protocol.

Argument	Value	Description
	printers	Access to USB printers via SMB/CIFS.
	cifs	Connection to the Windows files and printers service.
	vpn-dlna	Access to the DLNA for PPTP, L2TP/IPSec, SSTP tunnels.
	ftp	Connection to an integrated FTP-server.
	ipsec-xauth	Connection to an integrated IPsec/XAuth-server.
	ipsec-l2tp	Connection to an integrated L2TP/IPSec-server.
	opt	Access to services managed by OptWare.
	sftp	Access to SFTP file server.
	sstp	Connection to an integrated SSTP-server.
	torrent	Access to the BitTorrent client GUI.
	vpn	Connection to an integrated PPTP-server.
	webdav	Access to WebDAV file server.

Example

```
(config-user)> tag cli
Core::Authenticator: User "admin" tagged with "cli".
```

```
(config-user)> tag readonly
Core::Authenticator: User "my" tagged with "readonly".
```

```
(config-user)> tag http-proxy
Core::Authenticator: User "admin" tagged with "http-proxy".
```

```
(config-user)> tag http
Core::Authenticator: User "admin" tagged with "http".
```

```
(config-user)> tag afp
Core::Authenticator: User "test" tagged with "afp".
```

```
(config-user)> tag printers
Core::Authenticator: User "admin" tagged with "printers".
```

```
(config-user)> tag cifs
Core::Authenticator: User "admin" tagged with "cifs".
```

```
(config-user)> tag vpn-dlna
Core::Authenticator: User "enpa" tagged with "vpn-dlna".
```

```
(config-user)> tag ftp
Core::Authenticator: User "admin" tagged with "ftp".
```

```
(config-user)> tag ipsec-xauth
Core::Authenticator: User "admin" tagged with "ipsec-xauth".
```

```
(config-user)> tag ipsec-l2tp
Core::Authenticator: User "admin" tagged with "ipsec-l2tp".
```

```
(config-user)> tag opt
Core::Authenticator: User "admin" tagged with "opt".
```

```
(config-user)> tag sftp
Core::Authenticator: User "test" tagged with "sftp".
```

```
(config-user)> tag sstp
Core::Authenticator: User "admin" tagged with "sstp".
```

```
(config-user)> tag torrent
Core::Authenticator: User "admin" tagged with "torrent".
```

```
(config-user)> tag vpn
Core::Authenticator: User "admin" tagged with "vpn".
```

```
(config-user)> tag webdav
Core::Authenticator: User "test" tagged with "webdav".
```

```
(config-user)> no tag readonly
Core::Authenticator: User "admin": "readonly" tag deleted.
```

History

Version	Description
2.00	The user tag command has been introduced.
2.04	The vpn tag has been added.
2.06	The opt , ipsec-xauth tags have been added.
2.10	The http-proxy tag has been added.
2.11	The ipsec-l2tp tag has been added.
2.12	The sstp tag has been added.
3.04	The vpn-dlna sftp and webdav tags have been added.

3.151 ussd send

Description Send **USSD** request to the mobile operator.

Prefix no No

Change settings No

Multiple input No

Interface type Usb

Synopsis (config)> **ussd <interface> send <request>**

Arguments

Argument	Value	Description
interface	<i>Interface name</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.
request	<i>String</i>	USSD command.

Example

```
(config)> ussd UsbQmi0 send *100#
request: *100#
response: Your number: +79953332211
Available: 10 dol
4.01 / 5 GB
```

History

Version	Description
3.05	The ussd send command has been introduced.

3.152 vpn-server

Description Access to a group of commands to configure VPN-server parameters.

Prefix no No

Change settings No

Multiple input No

Group entry (vpn-server)

Synopsis

(config)>	vpn-server
-----------	-------------------

History

Version	Description
2.04	The vpn-server command has been introduced.

3.152.1 vpn-server dhcp route

Description Assign a route which is transmitted in DHCP INFORM messages to the VPN-server clients.

Command with **no** prefix cancels the specified route. If you use no arguments, the entire list of routes will be cleared.

Prefix no Yes

Change settings Yes

Multiple input Yes

Synopsis

```
(vpn-server)> dhcp route <address> <mask>
(vpn-server)> no dhcp route [ <address> <mask> ]
```

Arguments

Argument	Value	Description
address	<i>IP-address</i>	Network client address.
mask	<i>IP-mask</i>	Network client mask. There are two ways to enter the mask: the canonical form (for example, 255.255.255.0) and the form of prefix bit length (for example, /24).

Example

```
(vpn-server)> dhcp route 192.168.2.0/24
VpnServer::Manager: Added DHCP INFORM route to ▶
192.168.2.0/255.255.255.0.
```

```
(vpn-server)> no dhcp route
VpnServer::Manager: Cleared DHCP INFORM routes.
```

History

Version	Description
2.12	The vpn-server dhcp route command has been introduced.

3.152.2 vpn-server interface

Description Bind VPN-server to the specified interface.

Command with **no** prefix unbinds the interface.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(vpn-server)> interface <interface>
(vpn-server)> no interface
```

Arguments

Argument	Value	Description
interface	<i>Interface name</i>	Full interface name or an alias. You can see the list of available interfaces with help of interface [Tab] command.

Example

```
(vpn-server)> interface [Tab]
```

```
Usage template:
    interface {interface}
```

```
Choose:
    GigabitEthernet1
        ISP
    WifiMaster0/AccessPoint2
    WifiMaster1/AccessPoint1
    WifiMaster0/AccessPoint3
    WifiMaster0/AccessPoint0
        AccessPoint
```

```
(vpn-server)> interface GigabitEthernet0/Vlan1
VpnServer::Manager: Bound to GigabitEthernet0/Vlan1
```

```
(vpn-server)> no interface
VpnServer::Manager: Reset interface binding.
```

History	Version	Description
	2.04	The vpn-server interface command has been introduced.

3.152.3 vpn-server ipv6cp

Description Enable IPv6 support. DHCP IPv6 pools are created for each VPN-server. By default, the setting is disabled.

Command with **no** prefix disables IPv6 support.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(vpn-server)> ipv6cp
(vpn-server)> no ipv6cp
```

Example

```
(vpn-server)> ipv6cp
VpnServer::Manager: IPv6 control protocol enabled.
```

```
(vpn-server)> no ipv6cp
VpnServer::Manager: IPv6 control protocol disabled.
```

History	Version	Description
	3.00	The vpn-server ipv6cp command has been introduced.

3.152.4 vpn-server lcp echo

Description Specify the testing rules of the PPTP connections with *LCP* echo tools.

Command with **no** prefix disables *LCP* echo.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(vpn-server)>	lcp echo <interval> <count> [adaptive]
(vpn-server)>	no lcp echo

Arguments

Argument	Value	Description
interval	<i>Integer</i>	Interval between sending <i>LCP</i> echo, in seconds. If within the specified time interval there is no <i>LCP</i> echo request from the remote location, the same request will be sent there asking for response <i>LCP</i> reply.
count	<i>Integer</i>	The number of consecutive requests <i>LCP</i> echo sent, for which no response <i>LCP</i> reply was received. If count of <i>LCP</i> echo requests goes unanswered, the connection is terminated.
adaptive	<i>Keyword</i>	Pppd will send LCP echo-request frames only if no traffic was received from the peer since the last echo-request was sent.

Example

(vpn-server)>	lcp echo 5 3
	LCP echo parameters updated.

History

Version	Description
2.06	The vpn-server lcp echo command has been introduced.

3.152.5 vpn-server lockout-policy

Description Set VPN-server bruteforce detection parameters. By default, feature is enabled.

Command with **no** prefix disables bruteforce detection.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

(vpn-server)>	vpn-server lockout-policy <threshold> [<duration> [<observation-window>]]
(vpn-server)>	no vpn-server lockout-policy

Arguments

Argument	Value	Description
threshold	<i>Integer</i>	The number of failed attempts to log in. By default, 5 value is used.
duration	<i>Integer</i>	An authorization ban duration for the specified IP in minutes. By default, 15 value is used.
observation-window	<i>Integer</i>	Duration of suspicious activity observation in minutes. By default, 3 value is used.

Example

```
(vpn-server)> lockout-policy 10 30 2
VpnServer::Manager: Bruteforce detection is reconfigured.

(vpn-server)> no lockout-policy
VpnServer::Manager: Bruteforce detection is disabled.
```

History

Version	Description
3.01	The vpn-server lockout-policy command has been introduced.

3.152.6 vpn-server mppe

Description

Set mode for **MPPE** encryption. 40-bit key is used by default.

Command with **no** prefix disables selected mode.

Prefix no

Yes

Change settings

Yes

Multiple input

Yes

Synopsis

```
(vpn-server)> mppe <mode>
(vpn-server)> no mppe <mode>
```

Arguments

Argument	Value	Description
mode	40	Length of the encryption key is 40 bits.
	128	Length of the encryption key is 128 bits.

Example

```
(vpn-server)> mppe 40
VpnServer::Manager: Set encryption 40.
```

History

Version	Description
2.05	The vpn-server mppe command has been introduced.

3.152.7 vpn-server mppe-optional

Description	Enable MPPE encryption.				
	Command with no prefix disables encryption.				
Prefix no	Yes				
Change settings	Yes				
Multiple input	No				
Synopsis	<pre>(vpn-server)> mppe-optional</pre> <pre>(vpn-server)> no mppe-optional</pre>				
Example	<pre>(vpn-server)> mppe-optional VpnServer::Manager: Unencrypted connections enabled.</pre>				
History	<table><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>2.04</td><td>The vpn-server mppe-optional command has been introduced.</td></tr></tbody></table>	Version	Description	2.04	The vpn-server mppe-optional command has been introduced.
Version	Description				
2.04	The vpn-server mppe-optional command has been introduced.				

3.152.8 vpn-server mru

Description	Set MRU value to be transmitted to PPTP-server. By default, 1350 value is used.						
	Command with no prefix resets value to default.						
Prefix no	Yes						
Change settings	Yes						
Multiple input	No						
Synopsis	<pre>(vpn-server)> mru <value></pre> <pre>(vpn-server)> no mru</pre>						
Arguments	<table><thead><tr><th>Argument</th><th>Value</th><th>Description</th></tr></thead><tbody><tr><td>value</td><td><i>Integer</i></td><td>MRU value. Can take values from 128 to 1500 inclusively.</td></tr></tbody></table>	Argument	Value	Description	value	<i>Integer</i>	MRU value. Can take values from 128 to 1500 inclusively.
Argument	Value	Description					
value	<i>Integer</i>	MRU value. Can take values from 128 to 1500 inclusively.					
Example	<pre>(vpn-server)> mru 200 VpnServer::Manager: mru set to 200.</pre>						

History

Version	Description
2.04	The vpn-server mru command has been introduced.

3.152.9 vpn-server mtu

Description Set **MTU** value to be transmitted to PPTP-server. By default, 1350 value is used.

Command with **no** prefix resets value to default.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(vpn-server)> mtu <value>
(vpn-server)> no mtu
```

Arguments

Argument	Value	Description
value	<i>Integer</i>	MTU value. Can take values from 128 to 1500 inclusively.

Example

```
(vpn-server)> mtu 200
VpnServer::Manager: mtu set to 200.
```

History

Version	Description
2.04	The vpn-server mtu command has been introduced.

3.152.10 vpn-server multi-login

Description Allow connection to VPN-server for multiple users from one account.

Command with **no** prefix disables this feature.

Prefix no Yes

Change settings Yes

Multiple input No

Synopsis

```
(vpn-server)> multi-login
(vpn-server)> no multi-login
```

Example

```
(vpn-server)> multi-login
VpnServer::Manager: multi login enabled.
```

History

Version	Description
2.04	The vpn-server multi-login command has been introduced.

3.152.11 vpn-server pool-range

Description Assign a pool of addresses for the clients that connect to the VPN-server.Command with **no** prefix removes a pool.**Prefix no** Yes**Change settings** Yes**Multiple input** No**Synopsis**(vpn-server)> **pool-range <begin> [<size>]**(vpn-server)> **no pool-range****Arguments**

Argument	Value	Description
begin	<i>IP-address</i>	Start address of pool.
size	<i>Integer</i>	Pool size. Can take values in the range from 1 to 64 inclusively. If the size is not specified, it is determined automatically depending on the device.

Example

```
(vpn-server)> pool-range 172.168.1.22 20
VpnServer::Manager: Configured pool range 172.168.1.22 to ▶
172.168.1.41.
```

```
(vpn-server)> no pool-range
VpnServer::Manager: Reset pool range.
```

History

Version	Description
2.04	The vpn-server pool-range command has been introduced.

3.152.12 vpn-server static-ip

Description Bind IP-address to the user. User account must have vpn tag.Command with **no** prefix removes binding.**Prefix no** Yes**Change settings** Yes

Multiple input	Yes									
Synopsis	<pre>(vpn-server)> static-ip <name> <address> (vpn-server)> no static-ip <name></pre>									
Arguments	<table border="1"> <thead> <tr> <th>Argument</th><th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>name</td><td><i>String</i></td><td>Username.</td></tr> <tr> <td>address</td><td><i>IP-address</i></td><td>IP-address to bind.</td></tr> </tbody> </table>	Argument	Value	Description	name	<i>String</i>	Username.	address	<i>IP-address</i>	IP-address to bind.
Argument	Value	Description								
name	<i>String</i>	Username.								
address	<i>IP-address</i>	IP-address to bind.								
Example	<pre>(vpn-server)> static-ip test 172.16.1.35 VpnServer::Manager: Static IP 172.16.1.35 assigned to user "test". (vpn-server)> static-ip test VpnServer::Manager: Static IP address removed for user "test".</pre>									
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.04</td><td>The vpn-server static-ip command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.04	The vpn-server static-ip command has been introduced.					
Version	Description									
2.04	The vpn-server static-ip command has been introduced.									

3.153 yandexdns

Description	Access to a group of commands to configure <i>Yandex.DNS</i> profiles.				
Prefix no	No				
Change settings	No				
Multiple input	No				
Group entry	(yandexdns)				
Synopsis	<pre>(config)> yandexdns</pre>				
History	<table border="1"> <thead> <tr> <th>Version</th><th>Description</th></tr> </thead> <tbody> <tr> <td>2.01</td><td>The yandexdns command has been introduced.</td></tr> </tbody> </table>	Version	Description	2.01	The yandexdns command has been introduced.
Version	Description				
2.01	The yandexdns command has been introduced.				

3.153.1 yandexdns assign

Description	Assign types to the hosts. By default safe type is used for all hosts. default type can be assigned to a single host. Command with no prefix resets setting to default.
Prefix no	Yes
Change settings	Yes

Multiple input

Yes

Synopsis

```
(yandexdns)> assign [<host>] <type>  
(yandexdns)> no assign [<host>]
```

Arguments

Argument	Value	Description
host	MAC-address	Host to which type of filtering is applied. If not specified, the type is applied to all hosts.
type	default	No filtering used.
	safe	Protection against malicious and phishing websites.
	family	Access denied to malicious and phishing websites, as well as to resources for adults.

History

Version	Description
2.01	The yandexdns assign command has been introduced.

3.153.2 yandexdns check-availability

DescriptionCheck availability of *Yandex.DNS* service.**Prefix no**

No

Change settings

No

Multiple input

No

Synopsis

```
(yandexdns)> check-availability
```

Example

```
(yandexdns)> check-availability  
available
```

History

Version	Description
2.04	The yandexdns check-availability command has been introduced.

3.153.3 yandexdns enable

DescriptionEnable *Yandex.DNS* service.Command with **no** prefix disables the service.**Prefix no**

Yes

Change settings Yes

Multiple input No

Synopsis

```
(yandexdns)> enable
(yandexdns)> no enable
```

Example

```
(yandexdns)> enable
YandexDns::Client: Yandex DNS is enabled.
```

History	Version	Description
	2.01	The yandexdns enable command has been introduced.

Glossary

Address and Control Field Compression	<i>LCP</i> configuration option that provides a method to negotiate the compression of the Data Link Layer Address and Control fields.
Address Resolution Protocol	is a protocol for mapping an Internet Protocol address (IP address) to a physical machine address that is recognized in the local network. For example, in IP Version 4, the most common level of IP in use today, an address is 32 bits long. In an Ethernet local area network, however, addresses for attached devices are 48 bits long. (The physical machine address is also known as a Media Access Control or MAC address.) A table, usually called the ARP cache, is used to maintain a correlation between each MAC address and its corresponding IP address. ARP provides the protocol rules for making this correlation and providing address conversion in both directions.
AdGuard DNS	service of AdGuard company to protect home network. Provides three protection modes: <ul style="list-style-type: none"> • default mode: no blocked sites • standard mode: blocking advertising, tracking and phishing; • family mode: blocking advertising, tracking, phishing and adult sites, providing secure search in the browser.
Airtime Fairness	it is a technology intended to increase the overall performance of the wireless network by solving a problem with slow clients. With a high activity of a slow device, the Wi-Fi network bandwidth is reduced. So that fast clients don't have to wait for their data transfer queues, Airtime Fairness technology limits the session of communication with the client device not by the number of packets, but by the time of their transmission.
Apple Filing Protocol	is a proprietary network protocol, and part of the Apple File Service (AFS), that offers file services for macOS and the classic Mac OS.
Asynchronous Transfer Mode	is a telecommunications concept defined by ANSI and ITU (formerly CCITT) standards for carriage of a complete range of user traffic, including voice, data, and video signals, and is designed to unify telecommunication and computer networks. It uses asynchronous time-division multiplexing, and it encodes data into small, fixed-sized cells. This differs from approaches such as the Internet Protocol or Ethernet that use variable sized packets or frames. ATM provides data link layer services that run over a wide range of OSI physical Layer links.

ATM adaptation layer	<p>isolates higher-layer protocols from the details of the ATM processes by converting higher-layer information into ATM cells and vice versa.</p> <p>The AAL is divided into two sublayers:</p> <ul style="list-style-type: none">• Convergence sublayer (CS) — takes the common part convergence sublayer (CPCS) frame, divides it into 53-byte cells, and sends these cells to the destination for reassembly• Segmentation and reassembly sublayer — segments data frames into ATM cells at the transmitter and reassembles them into their original format at the receiver
Authenticated Encryption with Associated Data	<p>this form of encryption which simultaneously assure the confidentiality and authenticity of data. AEAD is a variant of AE that allows a recipient to check the integrity of both the encrypted and unencrypted information in a message.</p>
Automatic Certificate Management Environment	<p>is a communications protocol for automating interactions between certificate authorities and their users' web servers, allowing the automated deployment of public key infrastructure at very low cost. It was designed by the Internet Security Research Group (ISRG) for their Let's Encrypt service.</p>
Band Steering	<p>is a feature that encourages dual-band capable wireless clients to connect to the less crowded 5GHz network, and leave the 2.4GHz network available for those clients who support 2.4GHz only; thus, Wi-Fi performance can be improved for all clients.</p>
Challenge-Handshake Authentication Protocol	<p>widely used algorithm for authentication, which provides the transfer of indirect information about user password. CHAP provides better security than Password Authentication Protocol.</p>
Change of Authorization	<p>is a provides a mechanism for changing RADIUS authentication and authorization session attributes. Allows you to set up an active client session.</p>
Cloudflare DNS	<p>is a service of Cloudflare company to protect home network. Provides three protection modes:</p> <ul style="list-style-type: none">• default mode: no blocked sites;• standard mode: secure dns resolving, no blocking;• malware mode: blocking malware;• family mode: blocking malware and adult sites.
Command Line Interface	<p>is a user interface to a computer's operating system or an application in which the user responds to a visual prompt by typing in a command on a specified line, receives a response back from the system, and then enters another command, and so forth.</p>

Common Applications Kept Enhanced	is a shaping-capable queue discipline which uses both AQM and FQ. It combines COBALT, which is an AQM algorithm combining Codel and BLUE, a shaper which operates in deficit mode, and a variant of DRR++ for flow isolation. 8-way set-associative hashing is used to virtually eliminate hash collisions. Priority queuing is available through a simplified diffserv implementation. CAKE uses a deficit-mode shaper, which does not exhibit the initial burst typical of token-bucket shapers. It will automatically burst precisely as much as required to maintain the configured throughput.
Common Internet File System	is a protocol that lets programs make requests for files and services on remote computers on the Internet. CIFS uses the client/server programming model. A client program makes a request of a server program (usually in another computer) for access to a file or to pass a message to a program that runs in the server computer. The server takes the requested action and returns a response.
Compression Control Protocol	is used for establishing and configuring data compression algorithms over PPP .
Dead Peer Detection	is a method that network devices use to verify the current existence and availability of other peer devices.
Device Privacy Notice	is a Keenetic device privacy notice on data processing.
DHCP	is a network protocol that is used to configure network devices so that they can communicate on an IP network. A DHCP client uses the DHCP protocol to acquire configuration information, such as an IP address, a default route, and one or more DNS server addresses from a DHCP server. The DHCP client then uses this information to configure its host. Once the configuration process is complete, the host is able to communicate on the Internet.
DHCP-server	manages a pool of IP addresses and information about client configuration parameters such as default gateway, domain name, the name servers, other servers such as time servers, and so forth. On receiving a valid request, the server assigns the computer an IP address, a lease (length of time the allocation is valid), and other IP configuration parameters, such as the subnet mask and the default gateway. Depending on implementation, the DHCP server may have three methods of allocating IP-addresses:
	<ul style="list-style-type: none"> • <i>dynamic allocation</i>: A network administrator assigns a range of IP addresses to DHCP, and each client computer on the LAN is configured to request an IP address from the DHCP server during network initialization. The request-and-grant process uses a lease concept with a controllable time period, allowing the DHCP server to reclaim (and then reallocate) IP addresses that are not renewed. • <i>automatic allocation</i>: The DHCP server permanently a free IP address to a requesting client from the range defined by the administrator. This is like dynamic allocation, but the DHCP server keeps a table of past IP address assignments, so that it can preferentially assign to a client the same IP address that the client previously had.

- *static allocation*: The DHCP server allocates an IP address based on a table with MAC address/IP address pairs, which are manually filled in (perhaps by a network administrator). Only requesting clients with a MAC address listed in this table will be allocated an IP address. This feature (which is not supported by all DHCP servers) is variously called Static DHCP Assignment (by DD-WRT), fixed-address (by the dhcpcd documentation), Address Reservation (by Netgear), DHCP reservation or Static DHCP (by Cisco/Linksys), and IP reservation or MAC/IP binding (by various other router manufacturers).

Diffie-Hellman

is that part of the [IKE](#) protocol used for exchanging the material from which the symmetrical keys are built. The Diffie-Hellman algorithm builds an encryption key known as a "shared secret" from the private key of one party and the public key of the other. Since the [IPsec](#) symmetrical keys are derived from this DH key shared between the peers, at no point are symmetric keys actually exchanged.

DLNA

standard that allows compatible devices to transfer media content (images, music, videos) over the home network and display it in real time. This technology is to connect home computers, mobile phones, notebooks and home electronics in a single digital network. DLNA-certified devices can be configured and combined in a home network automatically.

Domain Name System

is a hierarchical distributed naming system for computers, services, or any resource connected to the Internet or a private network. It associates various information with domain names assigned to each of the participating entities. A Domain Name Service resolves queries for these names into IP addresses for the purpose of locating computer services and devices worldwide. By providing a worldwide, distributed keyword-based redirection service, the Domain Name System is an essential component of the functionality of the Internet.

DNS over HTTPS

is a domain name system, computer distributed system for obtaining information about domains using secure data transfer between internet nodes resolution via the HTTPS protocol. The method is to increase user privacy and security by preventing eavesdropping and manipulation of DNS data by man-in-the-middle attacks. The standard is described in [RFC 8484](#)¹.

DNS over TLS

is a domain name system, computer distributed system for obtaining information about domains using secure data transfer between internet nodes. The standard is described in [RFC 7858](#)² and [RFC 8310](#)³.

DNS rebinding

is a method of manipulating resolution of domain names. In this attack, a malicious web page causes visitors to run a client-side script that attacks machines elsewhere on the network. This attack can be used to breach a private network by causing the victim's web browser to access computers at private IP addresses and return the results to the attacker.

¹ <https://tools.ietf.org/html/rfc8484>

² <https://tools.ietf.org/html/rfc7858>

³ <https://tools.ietf.org/html/rfc8310>

Energy-Efficient Ethernet	also Green Ethernet is a set of enhancements to the twisted-pair and backplane Ethernet family of computer networking standards that reduce power consumption during periods of low data activity. The intention is to reduce power consumption by 50% or more, while retaining full compatibility with existing equipment.
Encapsulating Security Payload	is a member of the <i>IPsec</i> protocol suite. In IPsec it provides origin authenticity, integrity, and confidentiality protection of packets.
End-user license agreement	is a legal contract between a software application author or publisher and the user of that application.
Fast Transition	is a new concept of roaming where the initial handshake with the new AP is done even before the client roams to the target AP.
Fair Queuing Controlled Delay	is queuing discipline that combines Fair Queueing with the CoDel AQM scheme. FQ_Codel uses a stochastic model to classify incoming packets into different flows and is used to provide a fair share of the bandwidth to all the flows using the queue. Each such flow is managed by the CoDel queuing discipline.
Fully Qualified Domain Name	is a domain name that specifies its exact location in the tree hierarchy of the <i>Domain Name System</i> . It specifies all domain levels, including the top-level domain and the root zone. A fully qualified domain name is distinguished by its lack of ambiguity: it can be interpreted only in one way.
Full Cone NAT	also Static NAT, one to one NAT, port forwarding is the only type of NAT where the port is permanently open and allows inbound connections from any external host. A full cone NAT maps a public IP address and port to a LAN IP and port. Any external host can send data to the LAN IP through the mapped NAT IP and port. If it tries to send data through a different port it will fail. Static NAT is required when a network device on a private network must be accessible from the Internet.
Generic Routing Encapsulation	is a tunneling protocol developed by Cisco Systems that can encapsulate a wide variety of network layer protocols inside virtual point-to-point links over an Internet Protocol network.
Hash Message Authentication Code	is a specific construction for calculating a message authentication code (MAC) involving a cryptographic hash function in combination with a secret cryptographic key. As with any MAC, it may be used to simultaneously verify both the data integrity and the authentication of a message. Any cryptographic hash function, such as MD5 or SHA-1, may be used in the calculation of an HMAC; the resulting MAC algorithm is termed HMAC-MD5 or HMAC-SHA1 accordingly. The cryptographic strength of the HMAC depends upon the cryptographic strength of the underlying hash function, the size of its hash output, and on the size and quality of the key.

Idempotence	is the property of certain operations in computer science, that they can be applied multiple times without changing the result beyond the initial application.
Inter-Access Point Protocol	is a standard IEEE 802.11F protocol exchange of service information for data transfer between access points. The protocol is responsible for combining the wireless network, secure data exchange between the current access point and the new access point in the specified period.
Internet Control Message Protocol	is a message control and error-reporting protocol between a host server and a gateway to the Internet. ICMP uses Internet Protocol (IP) datagrams, but the messages are processed by the IP software and are not directly apparent to the application user.
Internet Group Management Protocol	is an Internet protocol that provides a way for an Internet computer to report its multicast group membership to adjacent routers. Multicasting allows one computer on the Internet to send content to multiple other computers. Multicasting can be used for streaming media to an audience that has "tuned in" by setting up a multicast group membership.
Internet Key Exchange	is a standard protocol IPsec, used to ensure the safety of interaction in virtual private networks. IKE purpose is to establish a secure authenticated communication channel by using the Diffie-Hellman key exchange algorithm to generate a shared secret key to encrypt further IPsec communications.
Internet Protocol	is the principal communications protocol in the Internet. The first major version of IP, Internet Protocol Version 4 (IPv4), is the dominant protocol of the Internet. Its successor is Internet Protocol Version 6 (IPv6).
Internet Protocol Control Protocol	is a network control protocol for establishing and configuring Internet Protocol over a Point-to-Point Protocol (PPP) link. IPCP uses the same packet exchange mechanism as the Link Control Protocol. IPCP packets may not be exchanged until PPP has reached the Network-Layer Protocol phase, and any IPCP packets received before this phase is reached should be silently discarded.
Internet Protocol Security	commonly called IPsec, is a protocol suite for secure Internet Protocol (IP) communications by authenticating and encrypting each IP packet of a communication session. IPsec includes protocols for establishing mutual authentication between agents at the beginning of the session and negotiation of cryptographic keys to be used during the session. IPsec can be used in protecting data flows between a pair of hosts (host-to-host), between a pair of security gateways (network-to-network), or between a security gateway and a host (network-to-host). Internet Protocol security (IPsec) uses cryptographic security services to protect communications over Internet Protocol (IP) networks. IPsec supports network-level peer authentication, data origin authentication, data integrity, data confidentiality (encryption), and replay protection.
IPsec Passthrough	is technology that allows VPN-traffic to pass through NAT.

IPsec Security Association	is fundamental to IPsec. An SA is a relationship between two or more entities that describes how the entities will use security services to communicate securely. Each IPsec connection can provide encryption, integrity, authenticity, or all three. When the security service is determined, the two IPsec peers must determine exactly which algorithms to use (for example, DES or 3DES for encryption, MD5 or SHA for integrity). After deciding on the algorithms, the two devices must share session keys. The Security Association is the method that IPsec uses to track all the particulars concerning a given IPsec communication session.
IP in IP	is an IP tunneling protocol that encapsulates one IP packet in another IP packet.
IPv6CP	is responsible for configuring, enabling, and disabling the IPv6 protocol modules on both ends of the <i>Point-to-Point</i> (PPP) link. IPv6CP uses the same packet exchange mechanism as the <i>Link Control Protocol</i> . IPv6CP packets may not be exchanged until PPP has reached the Network-Layer Protocol phase. IPv6CP packets received before this phase is reached should be silently discarded.
Layer 2 Tunneling Protocol	is a tunneling protocol used to support virtual private networks (VPNs) or as part of the delivery of services by ISPs. It does not provide any encryption or confidentiality by itself. Rather, it relies on an encryption protocol that it passes within the tunnel to provide privacy.
Link Aggregation	is a method of combining (aggregating) multiple network connections in parallel in order to increase throughput beyond what a single connection could sustain, and to provide redundancy in case one of the links should fail.
Link Control Protocol	establishes, configures, and tests data-link Internet connections in the <i>Point-to-Point Protocol</i> (PPP). Before establishing communications over a point-to-point link, each end of the PPP link must send out LCP packets. The LCP packet either accepts or rejects the identity of its linked peer, agrees up on packet size limits, and looks for common misconfiguration errors. LCP packets are divided into three classes:
	<ul style="list-style-type: none"> • Link configuration packets used to establish and configure a link • Link termination packets used to terminate a link • Link maintenance packets used to manage and debug a link
Link Layer Discovery Protocol	is a vendor-neutral link layer protocol in the Internet Protocol Suite used by network devices for advertising their identity, capabilities, and neighbors on an IEEE 802 local area network, principally wired Ethernet. Information gathered with LLDP is stored in the device as a management information database (MIB) and can be queried with the Simple Network Management Protocol (SNMP).

Logical Link Control	in this method, multiple protocol types can be carried across a single connection with the type of encapsulated packet identified by a standard LLC/SNAP header. LLC encapsulation is provided to support routed and bridged protocols. In this encapsulation format, PDUs from multiple protocols can be carried over the same virtual connection. The type of protocol is indicated in the packet's SNAP header.
Master Browser	is a tool that provides information about, and typically a way to access, SMB/CIFS files and printer shares. It is responsible for the browse host list within its respective subnet and portion of the domain on its subnet. Is used to host information of other Windows computers within the same Windows domain or TCP/IP network.
Maximum Receive Unit	is the maximum size (in bytes) of the frame, which can be received at the data link layer of communication protocol.
Maximum Segment Size	is a parameter of the options field of the TCP header that specifies the largest amount of data, specified in bytes, that a computer or communications device can receive in a single TCP segment. It does not count the TCP header or the IP header.
Maximum Transmission Unit	is the largest size packet or frame, specified in octets (eight-bit bytes), that can be sent in a packet- or frame-based network such as the Internet. The Internet's Transmission Control Protocol (TCP) uses the MTU to determine the maximum size of each packet in any transmission. Most computer operating systems provide a default MTU value that is suitable for most users. In general, Internet users should follow the advice of their Internet service provider (ISP) about whether to change the default value and what to change it to.
Microsoft Point-to-Point Encryption	encrypts data in Point-to-Point Protocol based dial-up connections or Point-to-Point Tunneling Protocol (PPTP) connections. 128-bit key (strong), 56-bit key, and 40-bit key (standard) MPPE encryption schemes are supported. MPPE provides data security for the PPTP connection that is between the VPN client and the VPN server.
Modular Wi-Fi System	a system that allows several Keenetic devices to be combined into a single Internet space distributed over an area. One of the devices is defined as the controller, the others as the members.
Multicast DNS	is a way of using familiar DNS programming interfaces, packet formats and operating semantics, in a small network where no conventional DNS server has been installed. The mDNS protocol uses IP multicast UDP packets, and is implemented by the Apple Bonjour and open source Avahi software packages.
Network Access Control List	rules that are applied to IP interfaces that are available on a router, each with a list of hosts or networks that are permitted or denied to use the service. Access control lists can be configured to control both inbound and outbound traffic.
Network Flow	network protocol for network traffic accounting, uses UDP or SCTP protocols to send traffic data to the collector. Collector is an application that runs on a server and collects statistics received from sensors. A

	sensor is a device that collects traffic statistics and sends it to a collector. The sensor can be a Cisco third-level router or switch.
Network Time Protocol	is a protocol that is used to synchronize computer clock times in a network of computers. Developed by David Mills at the University of Delaware, NTP is now an Internet standard. In common with similar protocols, NTP uses Coordinated Universal Time (UTC) to synchronize computer clock times to a millisecond, and sometimes to a fraction of a millisecond.
Network Traffic Classification Engine	also DPI, Deep Deep Packet Inspection is a technology for accumulating statistics and inspecting network packets based on their contents. Deep Packet Inspection analyzes not only packet headers, but also the full content of traffic at OSI layers 2 and above. Deep Packet Inspection can determine which network application has generated or received data, collecting detailed connection statistics for each device and application individually. With quality of service Deep Packet Inspection controls the transmission speed of individual packets by raising or lowering it. The Traffic Classification Engine component operates completely independently and does not make any calls to external services.
Open Package	lightweight package management system. It is intended for use on embedded Linux devices and is used in this capacity in the OpenWrt ⁴ and Entware ⁵ projects. Opkg packages use the .ipk extension.
Opportunistic Wireless Encryption	is an extension of the IEEE 802.11 standard, similar encryption method Simultaneous Authentication of Equals (SAE). This encryption method provides users with better protection when connected to an open Wi-Fi network.
Password Authentication Protocol	is an authentication protocol that uses a password. PAP is used by Point-to-Point Protocol to validate users before allowing them access to the remote network. PAP transmits unencrypted ASCII passwords over the network and is therefore considered insecure.
Protected Extensible Authentication Protocol	is a protocol that encapsulates the Extensible Authentication Protocol (EAP) within an encrypted and authenticated Transport Layer Security (TLS) tunnel. The purpose was to correct deficiencies in EAP; EAP assumed a protected communication channel, such as that provided by physical security, so facilities for protection of the EAP conversation were not provided.
Perfect Forward Secrecy	is a property of secure communication protocols: a secure communication protocol is said to have forward secrecy if compromise of long-term keys does not compromise past session keys. PFS protects past sessions against future compromises of secret keys or passwords.

⁴ <https://www.openwrt.org/>⁵ <https://github.com/Entware/Entware>

Permanent Virtual Circuit	is a networking technology that allows sharing of physical paths among multiple virtual circuits by establishing long-term logical connections and bandwidth allocations within a frame relay or ATM network, which handles management of network traffic.
Ping Check	performs ICMP and TCP based tests to verify if the internet connection is working fine. Test results may be used to switch between primary and backup connections.
Point-to-Point Protocol	is a protocol used to establish a direct connection between two nodes. It can provide connection authentication, transmission encryption, and compression. PPP is used over many types of physical networks including serial cable, phone line, cellular telephone, specialized radio links, and fiber optic links. After the link has been established, additional network (layer 3) configuration may take place. Most commonly, the Internet Protocol Control Protocol (IPCP) is used.
Public Land Mobile Network	is a combination of wireless communication services offered by a specific operator in a specific country. PLMN typically consists of several cellular technologies like GSM/2G, UMTS/3G, LTE/4G, offered by a operator cellular network.
Preamble	<p>it is the first part of the Physical Layer Convergence Protocol/Procedure (PLCP) Protocol Data Unit (PDU). A header is the remaining part of the data packets and has more information identifying the modulation scheme, transmission rate, and length of time to transmit the whole data frame.</p> <p>The Preamble type in IEEE 802.11 based wireless communication defines the length of the CRC (Cyclic Redundancy Check) block for communication between the Access Point and roaming wireless adapters.</p> <p>Long preamble:</p> <ul style="list-style-type: none">• PLCP with long preamble is transmitted at 1 Mbps regardless of transmit rate of data frames• Total long preamble transfer time is a constant at 192 usec• Compatible with legacy IEEE 802.11 systems running at 1 and 2 Mbps <p>Short preamble:</p> <ul style="list-style-type: none">• Preamble is transmitted at 1 Mbps and header at 2 Mbps• Total short preamble transfer time is a constant at 96 usec• Not compatible with legacy IEEE 802.11 systems operating at 1 and 2 Mbps
Protected Management Frames	IEEE 802.11w is the Protected Management Frames standard for the IEEE 802.11 family of standards. This functionality is necessary to improve security by ensuring data confidentiality in control frames.

Protocol Field Compression	is a method to negotiate the compression of the <i>PPP</i> Protocol field. By default, all implementations MUST transmit packets with two octet PPP Protocol fields.
Pseudo-Random Function	is similar to an integrity algorithm, but instead of being used to authenticate messages, it is only used to provide randomness for purposes such as keying material. PRFs are primarily used with an authenticated encryption algorithm type such as AES-GCM.
Radio Resource Management	is the system level management of co-channel interference, radio resources, and other radio transmission characteristics in wireless communication systems. RRM includes control parameters such as transmit power, user allocation, beamforming, data rates, handover criteria, modulation scheme, coding scheme errors.
Remote Authentication in Dial-In User Service	is a protocol to implement authentication, authorization, and resource collection. It is used for charging the used resources by a specific user. Used to authenticate users on open Wi-Fi wireless networks.
Remote Procedure Call	is a protocol that one program can use to request a service from a program located in another computer in a network without having to understand network details. (A procedure call is also sometimes known as a function call or a subroutine call.) RPC uses the client/server model. The requesting program is a client and the service-providing program is the server. Like a regular or local procedure call, an RPC is a synchronous operation requiring the requesting program to be suspended until the results of the remote procedure are returned.
Restricted NAT	also Dynamic NAT
	works in the same way as a <i>Full Cone NAT</i> but applies additional restrictions based on an IP address. The internal client must first have sent packets to IP address (X) before it can receive packets from X. In terms of restrictions the only requirement is that packets come in on the mapped port and from an IP address that the internal client has sent packets to.
Secure Socket Tunneling Protocol	is a type of VPN tunnel that utilizes an SSL 3.0 channel to send PPP or L2TP traffic. SSL allows for transmission and data encryption, as well as traffic integrity checking. Due to this, SSTP can pass through most firewalls and proxy servers by using the SSL channel over TCP port 443.
Service Set Identifier	is a sequence of characters that uniquely names a wireless local area network (WLAN). An SSID is sometimes referred to as a "network name". This name allows stations to connect to the desired network when multiple independent networks operate in the same physical area.
Shared key	is a mode by which a computer can gain access to a wireless network that uses the Wired Equivalent Privacy protocol. With Shared Key, a computer equipped with a wireless modem can fully access any WEP network and exchange encrypted or unencrypted data.
Short Message Service	is a text messaging service component of most telephone, Internet, and mobile device systems. It uses standardized communication protocols to enable mobile devices to exchange short text messages.

Simple Network Management Protocol	is an Internet-standard protocol for collecting and organizing information about managed devices on IP networks and for modifying that information to change device behavior. Devices that typically support SNMP include routers, switches, servers, workstations, printers, modem racks and more.
SSH File Transfer Protocol	is a application layer protocol for transferring files over a reliable and secure connection over TCP port 22.
Transmission Control Protocol	is a core protocol of the <i>Internet Protocol</i> suite. TCP provides reliable, ordered, and error-checked delivery of a stream of octets between applications running on hosts communicating over an IP network.
Universal Access Method	is a method that allows a subscriber to access a wireless Wi-Fi network. The Internet browser will open a login page where the user should fill in his credentials before he can access. UAM uses the RADIUS client and the RADIUS server for authorization.
User Datagram Protocol	is a core protocol of the <i>Internet Protocol</i> suite. UDP uses a simple connectionless transmission model with a minimum of protocol mechanism. It has no handshaking dialogues, and thus exposes the user's program to any unreliability of the underlying network protocol. There is no guarantee of delivery, ordering, or duplicate protection. Time-sensitive applications often use UDP because dropping packets is preferable to waiting for delayed packets, which may not be an option in a real-time system.
udpxy	is a UDP-to-HTTP multicast traffic relay daemon: it forwards UDP traffic from a given multicast subscription to the requesting HTTP client.
Universal Plug and Play	is a standard that uses Internet and Web protocols to enable devices such as PCs, peripherals, intelligent appliances, and wireless devices to be plugged into a network and automatically know about each other. With UPnP, when a user plugs a device into the network, the device will configure itself, acquire a TCP/IP address, and use a discovery protocol based on the HTTP to announce its presence on the network to other devices.
Unstructured Supplementary Service Data	is a communications protocol used by cellular telephones to communicate with the mobile network operator's computers. USSD is commonly used by prepaid cellular phones to query the available balance.
VCI&VPI	Virtual path identifier (VPI) and virtual channel identifier (VCI). VPI identifies a virtual path leg on an ATM interface. VPI and VCI together identify a virtual channel leg on an ATM interface. Concatenating such legs through switches forms a virtual connection across a network. VPIs and VCIs are not addresses, such as MAC addresses used in LAN switching. VPIs and VCIs are explicitly assigned at each segment of a connection and, as such, have only local significance across a particular link. They are remapped, as appropriate, at each switching point. Using the VCI/VPI identifier, the ATM layer can multiplex (interleave), demultiplex, and switch cells from multiple connections.

Virtual LAN	is a local area network with a definition that maps workstations on some other basis than geographic location (for example, by department, type of user, or primary application). The virtual LAN controller can change or add workstations and manage loadbalancing and bandwidth allocation more easily than with a physical picture of the LAN.
Web Distributed Authoring and Versioning	is a extension of the Hypertext Transfer Protocol (HTTP) that allows clients to perform remote Web content authoring operations. Supports web server authentication and SSL encryption for HTTPS using the default TCP port 443.
Web Proxy Auto-Discovery Protocol	is a method used by clients to locate the URL of a configuration file using DHCP and/or DNS discovery methods. Once detection and download of the configuration file is complete, it can be executed to determine the proxy for a specified URL.
WireGuard	is a free and open-source software application and virtual private network (VPN) protocol to create secure point-to-point connections in routed configurations. WireGuard protocol uses modern cryptography options Curve25519 for key exchange, ChaCha20 for encryption, and Poly1305 for data authentication, SipHash for hashtable keys, and BLAKE2s for hashing. Supports layer 3 for both protocols IPv4 and IPv6.
Wi-Fi Multimedia	previously known as Wireless Multimedia Extensions (WME), is a subset of the 802.11e wireless LAN (WLAN) specification that enhances quality of service (QoS) on a network by prioritizing data packets according to four access categories (AC). Ranging from highest priority to lowest, these categories are: voice (AC_VO), video (AC_VI), best effort (AC_BE), and background (AC_BK). WMM also features a Power Save certification that helps small devices on a network conserve battery life. Power Save allows small devices, such as phones and PDAs, to transmit data while in a low-power "dozing" status. The certification gives software developers and hardware manufacturers a way to fine-tune battery use in the ever-increasing number of small devices that have Wi-Fi capabilities.
Wi-Fi Protected Access	Wi-Fi Protected Access II (WPA2), and Wi-Fi Protected Access 3 (WPA3) are three security protocols and security certification programs developed by the Wi-Fi Alliance to secure wireless computer networks. The Alliance defined these in response to serious weaknesses researchers had found in the previous system, WEP. WPA advantages are enhanced data security and tightened access control for wireless networks. Important characteristic is the compatibility between multiple wireless devices at the hardware level as well as at software level. WPA3 uses 128-bit encryption in WPA3-Personal mode (192-bit in WPA3-Enterprise). The WPA3 standard also replaces the Pre-Shared Key exchange with Simultaneous Authentication of Equals as defined in IEEE 802.11-2016 resulting in a more secure initial key exchange in personal mode.

	<p>WPA Enterprise is a protocol-based authentication mode IEEE 802.1X using an external authentication server RADIUS and local client Suplicant.</p>
Wi-Fi Protected Setup	<p>provides an industry-wide mechanism to set up and configure networks for home and small office (SOHO) environments. Wi-Fi Protected Setup enables typical users who possess little understanding of traditional Wi-Fi configuration and security settings to easily configure new wireless networks, to add new devices and to enable security.</p>
Wired Equivalent Privacy	<p>is a security algorithm for IEEE 802.11 wireless networks. WEP, recognizable by the key of 10 or 26 hexadecimal digits, is widely in use and is often the first security choice presented to users by router configuration tools. In 2004, with the ratification of the full 802.11i standard (i.e. WPA2), the IEEE declared that both WEP-40 and WEP-104 have been deprecated.</p>
Extended Authentication	<p>or XAUTH, provides an additional level of authentication by allowing the IPsec gateway to request extended authentication from remote users, thus forcing remote users to respond with their credentials before being allowed access to the VPN.</p>
Yandex.DNS	<p>service of Yandex company to protect home network. Provides three filtering modes:</p> <ul style="list-style-type: none">• no filtering: resources are not blocked• safe mode: stops malicious and phishing websites• family mode: stops malicious and phishing websites, as well as resources for adults

Interface Hierarchy

Figure A.1. Core interfaces

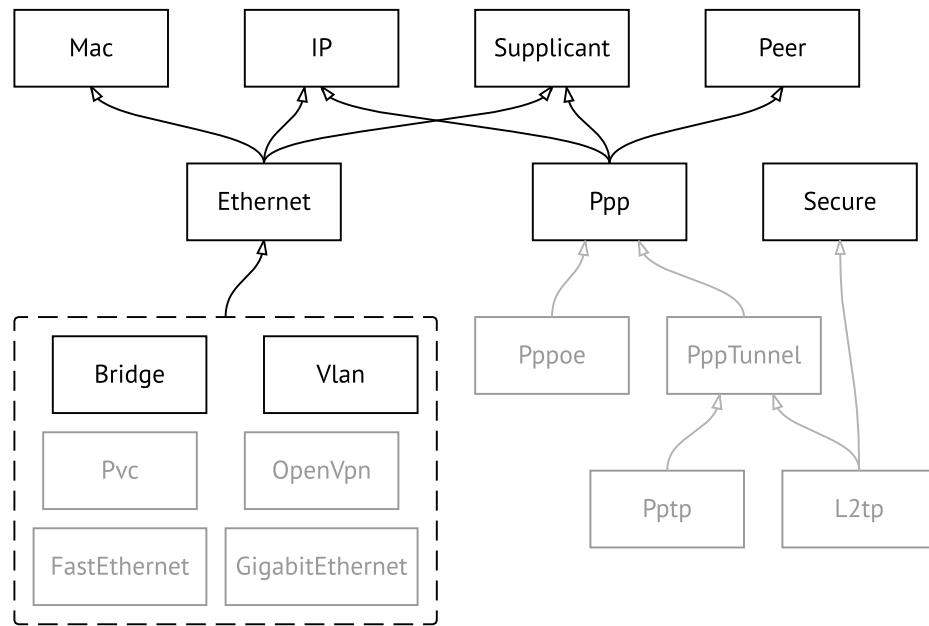


Figure A.2. Tunnel interfaces

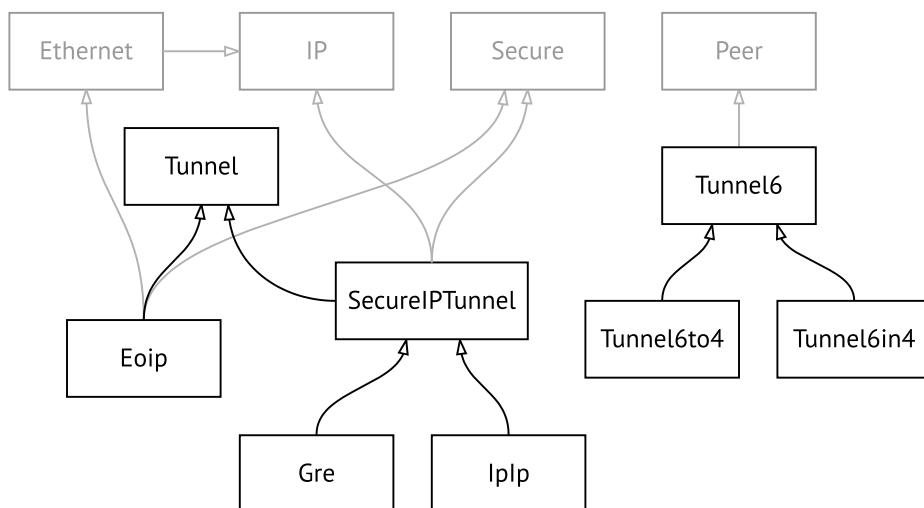


Figure A.3. USB interfaces


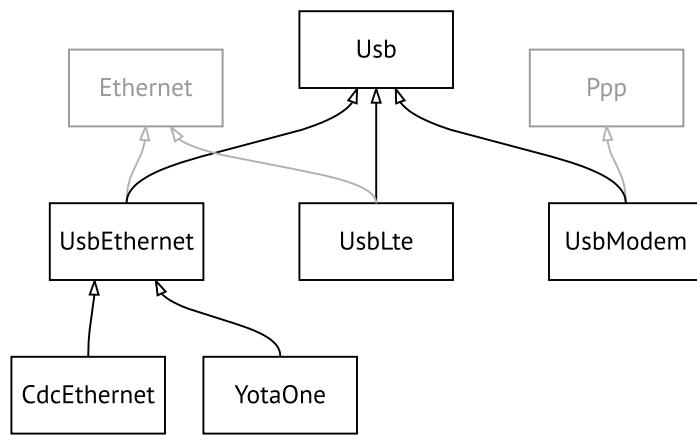


Figure A.4. Wi-Fi interfaces

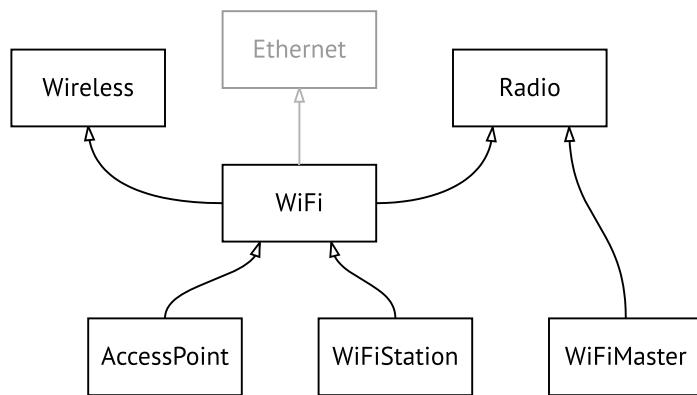

HTTP API

B.1 REST Core Interface

Peak DSL HTTP API lets you develop a custom application, that will access Peak DSL settings using simple HTTP methods, such as GET and POST.

The base URL for all operations is /rci, that simply stands for REST Core Interface. It replaces the [XML Core Interface](#), which is now deprecated but continues to be functional.

B.1.1 Resource Location

RCI is based on the Peak DSL command tree. Device settings are mapped to RCI resources in such a way that every “a b c” command corresponds to the /rci/a/b/c URL.

As a result, hereby [Command Reference](#) gives you a complete picture of all RCI resources and their parameters. The words “command” and “resource” are used interchangeably in this manual.

Parameters are listed in the Arguments table of each command. They can be passed as part of the request using HTTP query: /rci/a/b/c?parameter=value. Unless otherwise specified for a certain command, query parameters are optional. Multiple parameters should be separated by ampersand (&) characters.

Parameters can also be passed in the POST request body, as described in [Section B.1.3 on page 644](#).

B.1.2 Methods

Method semantics depend on the type of resource. There are three types of resources in RCI:

- Settings
- Actions
- Background processes

B.1.2.1 Settings

Settings are device configuration elements. You can view, modify, or delete settings using standard HTTP methods.

GET Retrieve settings.

- POST Create or modify settings.
- DELETE Delete settings (reset to default).

B.1.2.2 Actions

Actions are commands that do not modify settings. Actions run instantly as opposed to background processes, see also [Section B.1.2.3 on page 644](#)

- GET Mapped to POST for /rci/show. Not applicable to other actions.
- POST Execute a command and return its output.
- DELETE Not applicable.

B.1.2.3 Background processes

Background processes are instances that can be created and polled for updates. Such processes are bound to a particular session, and cannot be accessed from anywhere else.

- GET Retrieve updates from existing process. Returns 404 if there is no such process.
- POST Create a background process.
- DELETE Terminate a background process.

B.1.3 Data Format

HTTP POST requests must be submitted in a free-form JSON,¹ that is interpreted as a batch of parameters and nested settings, depending on the data type. Conversely, HTTP GET returns JSON data that was previously POSTed to the specified resource.

The primary data type is Object. This is unordered collection of key-value pairs, enclosed in curly brackets {}. Each key must be unique within an object.

Objects can be put one into another, or be combined in arrays as detailed in [Section B.1.3.2 on page 645](#) and [Section B.1.3.3 on page 645](#)

B.1.3.1 Parameters

String, boolean and number values of an object are interpreted as parameters of the resource being addressed.

```
{  
    "parameter": value  
}
```

Example B.1. Set hotspot policy

Set policy “permit” for the Home network. Refer to [Section 3.46.8 on page 315](#) to see how “interface” and “access” parameters are mentioned in the Arguments table.

¹In compliance with RFC 7159.

```
POST /rcl/ip/hotspot/policy HTTP/1.1
Host: 192.168.1.1
Content-length: 48
Content-type: application/json

{
  "interface": "Home",
  "access": "permit"
}
```

B.1.3.2 Nested resources

Object and array values of a parent object are interpreted as nested resources.

```
{
  "command": {
    "parameter": value
  }
}
```

In particular, empty object denotes a command with no parameters.

```
{
  "command": {}
}
```

Using this rule, you can address multiple resources at a time. RCI engine will process your request from top to bottom, recursing over the JSON structure. Parameters of a parent resource apply to all nested resources within the nearest surrounding scope.

Example B.2. Create and enable a PPP interface

Call “interface” to create a new PPPoE connection, as described in [Section 3.31 on page 136](#), and enable it with “interface up”. The “name” parameter applies to both “interface” and “up”.

```
POST /rcl HTTP/1.1
Host: 192.168.1.1
Content-length: 39
Content-type: application/json

{"interface": {"name": "PPPoE1", "up": {}}}
```

B.1.3.3 Arrays

Arrays can be used to operate on a specific resource multiple times. The important thing is that arrays preserve the order of their elements, in contrast to object members.

```
{
  "command": [
    {"parameter1": value1},
    {"parameter2": value2}
  ]
}
```

B.1.3.4 Response structure

The structure of POST output strictly corresponds to input. RCI reproduces input arrays and nested objects, and replaces input parameters with output data. This approach lets you locate any part of the response using a resource name.

Example B.3. Show version and interface Home

Run two different "show" commands in a certain order.

```
POST /rci/show HTTP/1.1
Host: 192.168.1.1
Content-length: 46
Content-type: application/json

[{"version":{}}, {"interface":{"name":"Home"}]}
```

Response is an array of two elements, in accordance with the request.

```
[{
  {
    "version": {
      "release": "2.12.A.1.0-1",
      "arch": "mips",
      "ndm": {
        "exact": "0-cbf8590",
        "cdate": "15 Jan 2018"
      },
      "bsp": {
        "exact": "0-06ee10b",
        "cdate": "15 Jan 2018"
      },
      "ndw": {
        "version": "0.2.1",
        "features": "wifi_button,single_usb_port,dual_image",
        "components": "base,cloudcontrol,..."
      },
      "manufacturer": "Keenetic Ltd.",
      "vendor": "Keenetic",
      "series": "KN",
      "model": "4G (KN-1210)",
      "hw_version": "10128000",
      "hw_id": "KN-1210",
      "device": "4G",
      "class": "Internet Center"
    }
  },
  {
    "interface": {
      "id": "Bridge0",
      "index": 0,
      "type": "Bridge",
      "description": "Home network",
      "interface-name": "Home",
    }
  }
]
```

```

    "link": "up",
    "connected": "yes",
    "state": "up",
    "mtu": 1500,
    "tx-queue": 1000,
    "address": "192.168.1.1",
    "mask": "255.255.255.0",
    "uptime": 2621,
    "global": false,
    "security-level": "private",
    "mac": "50:ff:20:00:00:08",
    "auth-type": "none"
  }
}
]

```

B.2 XML Core Interface

Warning: XML Core Interface is deprecated and is maintained for backward compatibility.

Peak DSL provides an HTTP XML API. The API is implemented as /ci resource that accepts POST XML requests and returns XML after the user agent has been authenticated.

If Peak DSL is reset to factory defaults, authentication is not required.

Example B.4. XML API call

Execute the “**show interface**” command for the WAN interface named ISP. This interface exists by default in Peak DSL.

```

POST /ci HTTP/1.1
Host: 192.168.1.1
Connection: keep-alive
Content-Length: 177
Origin: http://192.168.1.1
User-Agent: Mozilla/5.0 (Windows NT 6.1; WOW64)
Content-Type: application/xml
Referer: http://192.168.1.1/

<packet ref="/">
  <request id="1" ref="former.ifaces[load]">
    <command name="show interface">
      <name>ISP</name>
    </command>
  </request>
</packet>

```

The device responds with the current status of ISP:

```

HTTP/1.0 200 OK
Server: Ag [47]
Set-Cookie: _authorized=*[; path=/

```

```
Content-type: text/xml
Content-Length: 760

<packet>
    <response id="1">
        <interface name="ISP">
            <mac>ec:43:f6:d3:22:d9</mac>
            <id>Dsl0</id>
            <index>2</index>
            <type>VLAN</type>
            <description>Broadband connection</description>
            <link>down</link>
            <connected>no</connected>
            <state>up</state>
            <mtu>1500</mtu>
            <tx-queue>1000</tx-queue>
            <global>yes</global>
            <defaultgw>no</defaultgw>
            <priority>700</priority>
            <security-level>public</security-level>
            <auth-type>none</auth-type>
        </interface>
        <message code="268370345" ident="Network::Interface::Base"
source="">done</message>
    </response>
</packet>
```

The `<request>` element is always sent from the user agent to the device. The device always responds with a `<response>`. The `id` attribute can be used to establish one-to-one correspondence between them.

Figure B.1. Request Element

```
<request id="identifier">
    <!-- request content -->
</request>
```

Figure B.2. Response Element

```
<response id="identifier">
    <!-- response content -->
</response>
```

There are two basic types of XML requests:

Command Request	Execute a specific command on the device. Available commands are described in Chapter 3 on page 35
Configuration Request	Get parameters that have been configured by a specific command.

B.2.1 Command Request

Command request can be used to execute a specific command on the device.

Figure B.3. Command Request

```
<request id="identifier">
    <command name="command">
        <no/>
        <argument>value</argument>
        ...
    </command>
</request>
```

command Space separated name of the command. Available commands are listed in [Chapter 3 on page 35](#).

argument Name of the argument. Available arguments for each command are listed in [Chapter 3 on page 35](#). Some commands do not require any arguments.

value Value of the argument.

no Optional element that is used to negate the action of the command. It has the same effect as the prefix no, see [Section 2.3 on page 31](#).

B.2.2 Configuration Request

Configuration request can be used to get configured parameters. Web interface uses this kind of request to fill out the HTML forms.

Figure B.4. Configuration Request

```
<request id="identifier">
    <config name="command" />
</request>
```

B.2.3 Request Packet

Multiple requests can be arranged in packets to optimize the performance.

Figure B.5. Request Packet

```
<packet>
    <request id="1">
        <!-- request content -->
    </request>
    <request id="2">
        <!-- request content -->
    </request>
    ...
</packet>
```

Response elements are returned as a packet. Response identifiers are used to bind response elements to requests. If there is no response, an empty `<response/>` element is returned.

Figure B.6. Response Packet

```
<packet>
  <response id="1">
    <!-- response content -->
  </response>
  <response id="2"/>
    <!-- no response for id=2 -->
  ...
</packet>
```

SNMP MIB

Management Information Bases (MIBs) are read-only.

The following MIBs are supported:

C.1 SNMPv2-MIB

OID: 1.3.6.1.2.1.1

The following data elements are supported:

- SNMPv2-MIB::sysDescr
- SNMPv2-MIB::sysUpTime
- SNMPv2-MIB::sysContact
- SNMPv2-MIB::sysName
- SNMPv2-MIB::sysLocation
- SNMPv2-MIB::sysServices

C.2 IF-MIB

OID: 1.3.6.1.2.1.2 and 1.3.6.1.2.1.31

The following data elements are supported:

Basical	OID: 1.3.6.1.2.1.2
	<ul style="list-style-type: none">• IF-MIB::ifNumber• IF-MIB::ifIndex• IF-MIB::ifDescr• IF-MIB::ifType• IF-MIB::ifMtu• IF-MIB::ifSpeed• IF-MIB::ifPhysAddress• IF-MIB::ifAdminStatus

- IF-MIB::ifOperStatus
- IF-MIB::ifLastChange
- IF-MIB::ifInOctets
- IF-MIB::ifInUcastPkts
- IF-MIB::ifInDiscards
- IF-MIB::ifInErrors
- IF-MIB::ifOutOctets
- IF-MIB::ifOutUcastPkts
- IF-MIB::ifOutDiscards
- IF-MIB::ifOutErrors

Advanced

OID 1.3.6.1.2.1.31

- IF-MIB::ifName
- IF-MIB::ifInMulticastPkts
- IF-MIB::ifInBroadcastPkts
- IF-MIB::ifOutMulticastPkts
- IF-MIB::ifOutBroadcastPkts
- IF-MIB::ifHCInOctets
- IF-MIB::ifHCInUcastPkts
- IF-MIB::ifHCInMulticastPkts
- IF-MIB::ifHCInBroadcastPkts
- IF-MIB::ifHCOutOctets
- IF-MIB::ifHCOutUcastPkts
- IF-MIB::ifHCOutMulticastPkts
- IF-MIB::ifHCOutBroadcastPkts
- IF-MIB::ifLinkUpDownTrapEnable
- IF-MIB::ifHighSpeed
- IF-MIB::ifPromiscuousMode
- IF-MIB::ifConnectorPresent
- IF-MIB::ifAlias

- IF-MIB::ifCounterDiscontinuityTime

Main chipset	Switch	Device	Description
MT7621/RT63368	MT7530	Keenetic Giga III	64-bit per port octet counters. 32-bit per port packet counters. Separate per port broadcast, multicast and unicast packet counters.
	RTL8370M	Keenetic Ultra II Keenetic LTE	
MT7620	RTL8367B	Keenetic Viva	
		Keeentic Extra	
	Integrated	Keenetic 4G III	32-bit per port octet counters & 16-bit per port packet counters. Last counter overflow event time set in IF-MIB::ifCounterDiscontinuityTime.
		Keenetic Lite II	
		Keenetic Lite III	
		Keenetic Omni	
		Keenetic Omni II	
MT7628	Integrated	Keenetic Start II	16-bit per port packet counters only. Last counter overflow event time set in IF-MIB::ifCounterDiscontinuityTime.
		Keenetic Lite III rev.B	
		Keenetic 4G III rev.B	
		Keenetic Air	
		Keenetic Extra II	

C.3 IP-MIB

OID: 1.3.6.1.2.1.49

The following data elements are supported:

- TCP-MIB::tcpRtoAlgorithm
- TCP-MIB::tcpRtoMin
- TCP-MIB::tcpRtoMax
- TCP-MIB::tcpMaxConn
- TCP-MIB::tcpActiveOpens
- TCP-MIB::tcpPassiveOpens
- TCP-MIB::tcpAttemptFails

- TCP-MIB::tcpEstabResets
- TCP-MIB::tcpCurrEstab
- TCP-MIB::tcpInSegs
- TCP-MIB::tcpOutSegs
- TCP-MIB::tcpRetransSegs
- TCP-MIB::tcpInErrs
- TCP-MIB::tcpOutRsts

C.4 UDP-MIB

OID: 1.3.6.1.2.1.50

The following data elements are supported:

- UDP-MIB::udpInDatagrams
- UDP-MIB::udpNoPorts
- UDP-MIB::udpInErrors
- UDP-MIB::udpOutDatagrams
- UDP-MIB::udpHCInDatagrams
- UDP-MIB::udpHCOutDatagrams

C.5 HOST-RESOURCES-MIB

OID: 1.3.6.1.2.1.25

The following data elements are supported:

- HOST-RESOURCES-MIB::hrSystemUptime

C.6 UCD-SNMP-MIB

OID 1.3.6.1.4.1.2021

The following data elements are supported:

RAM info	<ul style="list-style-type: none">• UCD-SNMP-MIB::memTotalReal• UCD-SNMP-MIB::memAvailReal• UCD-SNMP-MIB::memShared• UCD-SNMP-MIB::memBuffer
-----------------	---

- UCD-SNMP-MIB::memCached
- USB-storage info**
- UCD-SNMP-MIB::dskIndex
 - UCD-SNMP-MIB::dskPath
 - UCD-SNMP-MIB::dskTotal
 - UCD-SNMP-MIB::dskAvail
 - UCD-SNMP-MIB::dskUsed
 - UCD-SNMP-MIB::dskPercent
 - UCD-SNMP-MIB::dskPercentNode
- System load info**
- UCD-SNMP-MIB::laIndex
 - UCD-SNMP-MIB::laNames
 - UCD-SNMP-MIB::laLoad
 - UCD-SNMP-MIB::laConfig
 - UCD-SNMP-MIB::laLoadInt
 - UCD-SNMP-MIB::ssCpuRawUser
 - UCD-SNMP-MIB::ssCpuRawNice
 - UCD-SNMP-MIB::ssCpuRawSystem
 - UCD-SNMP-MIB::ssCpuRawIdle
 - UCD-SNMP-MIB::ssRawInterrupts
 - UCD-SNMP-MIB::ssRawContexts

IPsec Encryption Levels

The encryption level defines a set of *IKE* and *IPsec SA* algorithms.

Below a complete list of algorithms is displayed for each level in order of decreasing priority, as well as a set of commands **crypto ike proposal** to setup this profile manually.

In the list of algorithms is indicated:

- encryption with key length
- hash function for *HMAC* forming
- *PFS* mode (NO if disabled)

D.1 weak

Protocol	Encryption	Proposal
IKEv1	AES-128-CBC/SHA1/MODP1024	encryption aes-128-cbc
	AES-128-CBC/SHA1/MODP768	encryption 3des
	AES-128-CBC/MD5/MODP1024	encryption des
	AES-128-CBC/MD5/MODP768	integrity sha1
	3DES-CBC/SHA1/MODP1024	integrity md5
	3DES-CBC/SHA1/MODP768	dh-group 2
	3DES-CBC/MD5/MODP1024	dh-group 1
	3DES-CBC/MD5/MODP768	
	DES-CBC/SHA1/MODP1024	
	DES-CBC/SHA1/MODP768	
IKEv2	DES-CBC/MD5/MODP1024	
	DES-CBC/MD5/MODP768	
	AES-128-CBC/SHA1/MODP1024	encryption aes-128-cbc
	AES-128-CBC/SHA1/MODP768	encryption 3des
	AES-128-CBC/MD5/MODP1024	encryption des
	AES-128-CBC/MD5/MODP768	integrity sha1

Protocol	Encryption	Proposal
	3DES-CBC/SHA1/MODP1024	integrity md5
	3DES-CBC/SHA1/MODP768	dh-group 2
	3DES-CBC/MD5/MODP1024	dh-group 1
	3DES-CBC/MD5/MODP768	
	DES-CBC/SHA1/MODP1024	
	DES-CBC/SHA1/MODP768	
	DES-CBC/MD5/MODP1024	
	DES-CBC/MD5/MODP768	
IPsec SA	DES/MD5	cypher esp-des
	AES-128-CBC/SHA1	cypher esp-3des
	3DES-CBC/SHA1	cypher esp-aes-128
	DES/SHA1	hmac esp-md5-hmac
	AES-128-CBC/MD5	hmac esp-sha1-hmac
	3DES-CBC/MD5	

D.2 weak-pfs

Protocol	Encryption	Proposal
IKEv1	AES-128-CBC/SHA1/MODP1024	encryption aes-128-cbc
	AES-128-CBC/SHA1/MODP768	encryption 3des
	AES-128-CBC/MD5/MODP1024	encryption des
	AES-128-CBC/MD5/MODP768	integrity sha1
	3DES-CBC/SHA1/MODP1024	integrity md5
	3DES-CBC/SHA1/MODP768	dh-group 2
	3DES-CBC/MD5/MODP1024	dh-group 1
	3DES-CBC/MD5/MODP768	
	DES-CBC/SHA1/MODP1024	
	DES-CBC/SHA1/MODP768	
	DES-CBC/MD5/MODP1024	
	DES-CBC/MD5/MODP768	

Protocol	Encryption	Proposal
IKEv2	AES-128-CBC/SHA1/MODP1024	encryption aes-128-cbc
	AES-128-CBC/SHA1/MODP768	encryption 3des
	AES-128-CBC/MD5/MODP1024	encryption des
	AES-128-CBC/MD5/MODP768	integrity sha1
	3DES-CBC/SHA1/MODP1024	integrity md5
	3DES-CBC/SHA1/MODP768	dh-group 2
	3DES-CBC/MD5/MODP1024	dh-group 1
	3DES-CBC/MD5/MODP768	
	DES-CBC/SHA1/MODP1024	
	DES-CBC/SHA1/MODP768	
	DES-CBC/MD5/MODP1024	
	DES-CBC/MD5/MODP768	
IPsec SA	DES/MD5/MODP1024	cypher esp-des
	AES-128-CBC/SHA1	cypher esp-3des
	3DES-CBC/SHA1	cypher esp-aes-128
	DES/SHA1	hmac esp-md5-hmac
	AES-128-CBC/MD5	hmac esp-sha1-hmac
	3DES-CBC/MD5	dh-group 2
	AES-128-CBC/SHA1/MODP1024	dh-group 1
	3DES-CBC/SHA1/MODP1024	
	DES-CBC/SHA1/MODP1024	
	AES-128-CBC/SHA1/MODP768	
	3DES-CBC/SHA1/MODP768	
	DES-CBC/SHA1/MODP768	
	AES-128-CBC/MD5/MODP1024	
	3DES-CBC/MD5/MODP1024	
	AES-128-CBC/MD5/MODP768	
	3DES-CBC/MD5/MODP768	
	DES-CBC/MD5/MODP768	

D.3 normal

Protocol	Encryption	Proposal
IKEv1	AES-256-CBC/SHA1/MODP1536	encryption aes-256-cbc
	AES-256-CBC/SHA1/ECP384	encryption aes-128-cbc
	AES-256-CBC/SHA1/MODP2048	encryption 3des
	AES-256-CBC/SHA1/MODP1024	integrity sha1
	AES-128-CBC/SHA1/MODP1536	integrity sha256
	AES-128-CBC/SHA1/ECP256	dh-group 5
	AES-128-CBC/SHA1/MODP1024	dh-group 20
	3DES-CBC/SHA1/MODP2048	dh-group 14
	3DES-CBC/SHA1/MODP1536	dh-group 2
	3DES-CBC/SHA1/MODP1024	dh-group 26
	AES-256-CBC/SHA256/MODP1024	
	AES-128-CBC/SHA256/MODP1024	
	3DES-CBC/SHA256/MODP1024	
IKEv2	AES-256-CBC/SHA256/MODP1024	encryption aes-256-cbc
	AES-128-CBC/SHA256/MODP1024	encryption aes-128-cbc
	3DES-CBC/SHA256/MODP1024	encryption 3des
	AES-256-CBC/SHA1/MODP1024	integrity sha256
	AES-256-CBC/SHA1/ECP384	integrity sha1
	AES-256-CBC/SHA1/MODP2048	dh-group 2
	AES-128-CBC/SHA1/MODP1024	dh-group 20
	AES-128-CBC/SHA1/ECP256	dh-group 14
	AES-256-CBC/SHA256/MODP2048	dh-group 5
	3DES-CBC/SHA1/MODP2048	dh-group 26
	3DES-CBC/SHA1/MODP1536	
	3DES-CBC/SHA1/MODP1024	
IPsec SA	AES-128-CBC/SHA1	cypher esp-aes-128
	AES-256-CBC/SHA1	cypher esp-aes-256

Protocol	Encryption	Proposal
	3DES-CBC/SHA1	cypher esp-3des
	AES-128-CBC/SHA256	hmac esp-sha1-hmac
	AES-256-CBC/SHA256	hmac esp-sha256-hmac
	3DES-CBC/SHA256	

D.4 normal-pfs

Protocol	Encryption	Proposal
IKEv1	AES-256-CBC/SHA1/MODP1536	encryption aes-256-cbc
	AES-256-CBC/SHA1/ECP384	encryption aes-128-cbc
	AES-256-CBC/SHA1/MODP2048	encryption 3des
	AES-256-CBC/SHA1/MODP1024	integrity sha1
	AES-128-CBC/SHA1/MODP1536	integrity sha256
	AES-128-CBC/SHA1/ECP256	dh-group 5
	AES-128-CBC/SHA1/MODP1024	dh-group 20
	3DES-CBC/SHA1/MODP2048	dh-group 14
	3DES-CBC/SHA1/MODP1536	dh-group 2
	3DES-CBC/SHA1/MODP1024	dh-group 26
	AES-256-CBC/SHA256/MODP1024	
	AES-128-CBC/SHA256/MODP1024	
	3DES-CBC/SHA256/MODP1024	
IKEv2	AES-256-CBC/SHA256/MODP1024	encryption aes-256-cbc
	AES-128-CBC/SHA256/MODP1024	encryption aes-128-cbc
	3DES-CBC/SHA256/MODP1024	encryption 3des
	AES-256-CBC/SHA1/MODP1024	integrity sha256
	AES-256-CBC/SHA1/ECP384	integrity sha1
	AES-256-CBC/SHA1/MODP2048	dh-group 2
	AES-128-CBC/SHA1/MODP1024	dh-group 20
	AES-128-CBC/SHA1/ECP256	dh-group 14
	AES-256-CBC/SHA256/MODP2048	dh-group 5

Protocol	Encryption	Proposal
	3DES-CBC/SHA1/MODP2048	dh-group 26
	3DES-CBC/SHA1/MODP1536	
	3DES-CBC/SHA1/MODP1024	
IPsec SA	AES-128-CBC/SHA1/MODP1024	esp-aes-128
	AES-128-CBC/SHA1	cypher esp-aes-256
	AES-256-CBC/SHA1	cypher esp-3des
	3DES-CBC/SHA1	hmac esp-sha1-hmac
	AES-256-CBC/SHA1/MODP1536	hmac esp-sha256-hmac
	AES-128-CBC/SHA1/MODP1536	dh-group 2
	3DES-CBC/SHA1/MODP1536	dh-group 14
	AES-256-CBC/SHA1/MODP1024	
	3DES-CBC/SHA1/MODP1024	

D.5 normal-3des

Protocol	Encryption	Proposal
IKEv1	AES-256-CBC/SHA1/MODP1536	encryption aes-256-cbc
	AES-256-CBC/SHA1/ECP384	encryption aes-128-cbc
	AES-256-CBC/SHA1/MODP2048	encryption 3des
	AES-256-CBC/SHA1/MODP1024	integrity sha1
	AES-128-CBC/SHA1/MODP1536	integrity sha256
	AES-128-CBC/SHA1/ECP256	dh-group 5
	AES-128-CBC/SHA1/MODP1024	dh-group 20
	3DES-CBC/SHA1/MODP2048	dh-group 14
	3DES-CBC/SHA1/MODP1536	dh-group 2
	3DES-CBC/SHA1/MODP1024	dh-group 26
	AES-256-CBC/SHA256/MODP1024	
	AES-128-CBC/SHA256/MODP1024	
	3DES-CBC/SHA256/MODP1024	
IKEv2	AES-256-CBC/SHA256/MODP1024	encryption aes-256-cbc

Protocol	Encryption	Proposal
	AES-128-CBC/SHA256/MODP1024	encryption aes-128-cbc
	3DES-CBC/SHA256/MODP1024	encryption 3des
	AES-256-CBC/SHA1/MODP1024	integrity sha256
	AES-256-CBC/SHA1/ECP384	integrity sha1
	AES-256-CBC/SHA1/MODP2048	dh-group 2
	AES-128-CBC/SHA1/MODP1024	dh-group 20
	AES-128-CBC/SHA1/ECP256	dh-group 14
	AES-256-CBC/SHA256/MODP2048	dh-group 5
	3DES-CBC/SHA1/MODP2048	dh-group 26
	3DES-CBC/SHA1/MODP1536	
	3DES-CBC/SHA1/MODP1024	
IPsec SA	3DES-CBC/SHA1	cypher esp-3des
	AES-256-CBC/SHA1	cypher esp-aes-256
	AES-128-CBC/SHA1	cypher esp-aes-128
	3DES-CBC/SHA256	hmac esp-sha1-hmac
	AES-256-CBC/SHA256	hmac esp-sha256-hmac
	AES-128-CBC/SHA256	

D.6 normal-3des-pfs

Protocol	Encryption	Proposal
IKEv1	AES-256-CBC/SHA1/MODP1536	encryption aes-256-cbc
	AES-256-CBC/SHA1/ECP384	encryption aes-128-cbc
	AES-256-CBC/SHA1/MODP2048	encryption 3des
	AES-256-CBC/SHA1/MODP1024	integrity sha1
	AES-128-CBC/SHA1/MODP1536	integrity sha256
	AES-128-CBC/SHA1/ECP256	dh-group 5
	AES-128-CBC/SHA1/MODP1024	dh-group 20
	3DES-CBC/SHA1/MODP2048	dh-group 14
	3DES-CBC/SHA1/MODP1536	dh-group 2

Protocol	Encryption	Proposal
	3DES-CBC/SHA1/MODP1024	dh-group 26
	AES-256-CBC/SHA256/MODP1024	
	AES-128-CBC/SHA256/MODP1024	
	3DES-CBC/SHA256/MODP1024	
IKEv2	AES-256-CBC/SHA256/MODP1024	encryption aes-256-cbc
	AES-128-CBC/SHA256/MODP1024	encryption aes-128-cbc
	3DES-CBC/SHA256/MODP1024	encryption 3des
	AES-256-CBC/SHA1/MODP1024	integrity sha256
	AES-256-CBC/SHA1/ECP384	integrity sha1
	AES-256-CBC/SHA1/MODP2048	dh-group 2
	AES-128-CBC/SHA1/MODP1024	dh-group 20
	AES-128-CBC/SHA1/ECP256	dh-group 14
	AES-256-CBC/SHA256/MODP2048	dh-group 5
	3DES-CBC/SHA1/MODP2048	dh-group 26
	3DES-CBC/SHA1/MODP1536	
	3DES-CBC/SHA1/MODP1024	
IPsec SA	3DES-CBC/SHA1/MODP1024	cypher esp-3des
	3DES-CBC/SHA1	cypher esp-aes-256
	AES-256-CBC/SHA1	cypher esp-aes-128
	AES-128-CBC/SHA1	hmac esp-sha1-hmac
	AES-256-CBC/SHA1/MODP1536	hmac esp-sha256-hmac
	AES-128-CBC/SHA1/MODP1536	dh-group 2
	3DES-CBC/SHA1/MODP1536	dh-group 14
	AES-256-CBC/SHA1/MODP1024	
	AES-128-CBC/SHA1/MODP1024	

D.7 high

Protocol	Encryption	Proposal
IKEv1	AES-256-CBC/SHA256/MODP1024	encryption aes-256-cbc

Protocol	Encryption	Proposal
	AES-256-CBC/SHA256/ECP384	encryption aes-128-cbc
	AES-256-CBC/SHA256/MODP1536	integrity sha256
	AES-256-CBC/SHA1/MODP2048	integrity sha1
	AES-256-CBC/SHA1/ECP384	dh-group 2
	AES-256-CBC/SHA1/MODP1536	dh-group 20
	AES-128-CBC/SHA1/MODP2048	dh-group 5
	AES-128-CBC/SHA1/ECP256	dh-group 14
	AES-128-CBC/SHA1/MODP1536	dh-group 26
IKEv2	AES-256-CBC/SHA256/MODP1024	encryption aes-256-cbc
	AES-256-CBC/SHA256/ECP384	encryption aes-128-cbc
	AES-256-CBC/SHA256/MODP1536	integrity sha256
	AES-256-CBC/SHA1/MODP2048	integrity sha1
	AES-256-CBC/SHA1/ECP384	dh-group 2
	AES-256-CBC/SHA1/MODP1536	dh-group 20
	AES-128-CBC/SHA1/MODP2048	dh-group 5
	AES-128-CBC/SHA1/ECP256	dh-group 14
	AES-128-CBC/SHA1/MODP1536	dh-group 26
IPsec SA	AES-256-CBC/SHA256	cypher esp-aes-256
	AES-128-CBC/SHA256	cypher esp-aes-128
		hmac esp-hmac-sha256

D.8 strong

Protocol	Encryption	Proposal
IKEv1	AES-256-CBC/SHA1/MODP2048	encryption aes-256-cbc
	AES-256-CBC/SHA1/ECP384	encryption aes-128-cbc
	AES-256-CBC/SHA1/MODP1536	integrity sha1
	AES-128-CBC/SHA1/MODP2048	dh-group 14
	AES-128-CBC/SHA1/ECP256	dh-group 20
	AES-128-CBC/SHA1/MODP1536	dh-group 5

Protocol	Encryption	Proposal
		dh-group 26
IKEv2	AES-256-CBC/SHA1/MODP2048	encryption aes-256-cbc
	AES-256-CBC/SHA1/ECP384	encryption aes-128-cbc
	AES-256-CBC/SHA1/MODP1536	integrity sha1
	AES-128-CBC/SHA1/MODP2048	dh-group 14
	AES-128-CBC/SHA1/ECP256	dh-group 20
	AES-128-CBC/SHA1/MODP1536	dh-group 5 dh-group 26
IPsec SA	AES-256-CBC/SHA1/MODP1536	cypher esp-aes-256
	AES-256-CBC/SHA1/MODP2048	cypher esp-aes-128
	AES-128-CBC/SHA1/MODP2048	hmac esp-sha1-hmac
	AES-128-CBC/SHA1/MODP1536	dh-group 5 dh-group 14

D.9 strong-aead

Protocol	Encryption	Proposal
IKEv1	AES-256-GCM-16/PRF-SHA384/ECP384	aead encryption aes-256-gcm-16 prf sha384 dh-group 20
IKEv2	AES-256-GCM-16/PRF-SHA384/ECP384	aead encryption aes-256-gcm-16 prf sha384 dh-group 20
IPsec SA	AES-256-GCM-16 CHACHA20POLY1305	aead cypher aes-256-gcm-16

D.10 strong-aead-pfs

Protocol	Encryption	Proposal
IKEv1	AES-256-GCM-16/PRF-SHA384/ECP384	aead

Protocol	Encryption	Proposal
		encryption aes-256-gcm-16 prf sha384 dh-group 20
IKEv2	AES-256-GCM-16/PRF-SHA384/ECP384	aead encryption aes-256-gcm-16 prf sha384 dh-group 20
IPsec SA	AES-256-GCM-16/ECP384 CHACHA20POLY1305-ECP384	aead cypher aes-256-gcm-16 dh-group 20

