

Data Sheet

ENGLISH

Mechanical Micrometer Heads


Maxi Style



Accuracy conforms to DIN 863 Resolution: Metric 0.01mm, Inch 0.0001" Micro fine graduations for accurate reading Non-glare satin chrome barrel and sleeve Supplied with adjustment tool

Packed Weight and Dimensions

RS Code	Manufacturers Code	Description	Weight g	W mm	H mm	L mm
7857878	50-180-025	Maxi Micrometer Head 0-25mm	117	28	35	115

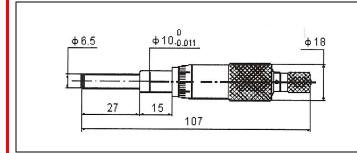

RS Code	Range	Grad	Spindle	Ratchet	Accy.
	mm/in	mm/in	End	Stop	mm
7857878	0 - 25	0.01	Flat/TC	Yes	0.003mm


Midi Style



Accuracy conforms to DIN 863 Resolution: Metric 0.01mm, Inch 0.0001" Micro fine graduations for accurate reading Non-glare satin chrome barrel and sleeve Supplied with adjustment tool

Packed Weight and Dimensions

I	RS Code	Manufacturers Code	Description	Weight g	W mm	H mm	L mm
	7857875	50-182-013	Midi Micrometer Head 0-13mm	49	20	20	90

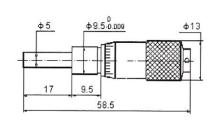

RS Code	Range	Grad	Spindle	Ratchet	Accy.
	mm/in	mm/in	End	Stop	mm
7857875	0 - 13	0.01	Flat	No	0.004mm
			Steel		

RS, Professionally Approved Products, gives you professional quality parts across all products categories. Our range has been testified by engineers as giving comparable quality to that of the leading brands without paying a premium price.



ENGLISH


Mini Style



Accuracy conforms to DIN 863 Resolution: Metric 0.01mm, Inch 0.0001" Micro fine graduations for accurate reading Non-glare satin chrome barrel and sleeve Supplied with adjustment tool

Packed Weight and Dimensions

RS Code	Code	Description	Weight g	W	H mm	L mm
				mm		
7857866	50-184-006	Mini Micrometer Head 0-6.5mm	17	15	15	70



RS Code	Range	Grad	Spindle	Ratchet	Accy.
	mm/in	mm/in	End	Stop	mm
7857866	0 - 6.5	0.01	Flat	No	0.005mm
			Steel		

Instructions and Care

Check all new and in use micrometers for correct zero setting prior to use

Clean micrometer spindle and measuring anvils with soft cloth or paper to remove any oil or particles which may affect the measurements

Ensure that the micrometer is thermally stabilised with the temperature where it is to be used

Ensure that the spindle lock is off

Advance the spindle towards the fixed anvil. Use the ratchet stop (if fitted) to finally close the 2 anvils together.

Rotate the ratchet stop 1 ½ to 2 revolutions to exert a constant measuring force

In the closed position the zero position on the thimble should coincide with the horizontal line on the sleeve

If the two lines do not coincide, small adjustments can be made by using the "C" spanner provided

Insert the "C" spanner into the hole at the back of the sleeve and gently turn the sleeve in the direction required to achieve line up

The micrometer is now set and ready for use

Clean micrometers and check zero position regularly during use to ensure their continued accuracy

After use always clean and replace the micrometer in its box