

FEATURES

- 3 Year Warranty
- Universal Input 90~264Vac
- 100% Full Load Burn-in Test
- Cooling by Free Air Convection
- All Round
 Protections:
 Short Circuit,
 Over Voltage,
 Over Current,
 Over
 Temperature
- LED Indicator for DC Power On
- LED Indicator for DC Low

RS PRO Din rail power supply 480W 90-264V 0-20A, 24V

RS Stock No.: 221-1856




RS Professionally Approved Products bring to you professional quality parts across all product categories. Our product range has been tested by engineers and provides a comparable quality to the leading brands without paying a premium price.





General Specifications

| Nominal Input | Output Voltage | Output Current | Ripple (Max.) | Effic | iency | Certificate |
|------------------|-------------------|-------------------|------------------|-------|-------|-------------|
| Voltage | | | | Min | Мур | |
| 100-240Vac | 24V | 20A | 1%VomVp- | 93% | 94% | CE、UKCA |
| | | | g | | | |

Mechanical Specifications

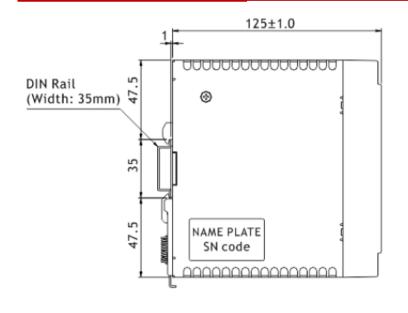


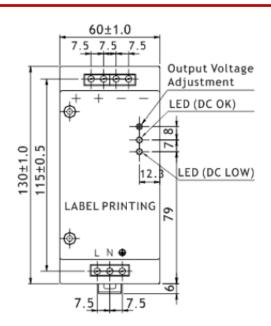

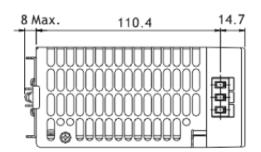

Unit: mm Tolerance: ±1.0



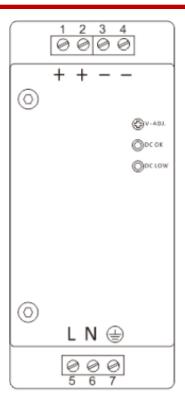

| Marking | No. | Assignment | |
|----------|-----|--------------------------------------|--|
| + | 1 | DC(+) Output Terminal | |
| + | 2 | | |
| _ | 3 | DC() Output Torminal | |
| - | 4 | DC(-) Output Terminal | |
| L | 5 | AC(L) Input Terminal | |
| N | 6 | AC(N) Input Terminal | |
| (| 7 | AC Grounding Terminal | |
| V-ADJ. | / | DC Output voltage adjustment trimmer | |
| DC OK | / | DC Output OK indication LED(Green) | |
| DC LOW | / | DC Output Low indication LED(Red) | |

Electrical Specifications

| PARAMETER | CONDITIONS | MIN TYP MAX | UNITS | |
|-----------------|---|-------------|-------|--|
| | | | | |
| Input voltage | | 90 | Vac | |
| | | 264 | | |
| Input frequency | | 47 | Hz | |
| | | 63 | | |
| Input current | Full load. Vin=115Vac | 5 | Α | |
| | Full load. Vin=230Vac | 2.5 | Α | |
| | Cold start. Vin=115Vac | 40 | Α | |
| | cold start. Vin=230Vac | 80 | Α | |
| | This product is built in inrush limiting circuit to protect the circuit from surge current damages when the power is turned on. Malfunction can occur by repeating the input voltage on and off rapidly. Therefore sufficient interval should be given between turning on | | | |
| Inrush current | and off the power 2. To avoid connecting the switch or full more consideration should be given who current | | | |



| Power factor(PF) | Full load. Vin=115Vac Full load. Vin=230vac | 0.99 0.97 | |
|----------------------------|--|--------------|----|
| Stand-by power consumption | Vin=230Vac | 5 | W |
| Surge voltage | L-N | 2 | KV |

| <u>OUTPUT</u> | | | |
|-------------------------|------------|-------------|-------|
| PARAMETER | CONDITIONS | MIN TYP MAX | UNITS |
| Output voltage accuracy | | 2 | % |

| Output wells as | IS480-24 | 22-27 | V |
|------------------------------------|--|---|--------------------------------|
| Output voltage adjustment range | Output voltage can be adjusted within all resistance inside of the power supply. We range, the power supply will be in failure protection mode. To avoid the case that rated voltage output current should be un | hen output voltage exe or get into over volta the output voltage is | ceeds the ge higher than |
| Minimum load | | 0 | % |
| Line regulation | Vin from 100Vac to 240Vac | 2 | % |
| Load regulation | Vout from min to max | 3 | % |
| Turn-on delay time | Full load, Vin=115Vac | 3600 | ms |
| Hold up time | Full load. Vin=115Vac | 20 | ms |

Environment

| PARAMETER | CONDITIONS | MIN TYP MAX | UNITS |
|-------------------------------|---|-------------|-------|
| Ambient operating temperature | startup at rated voltage | -25 +70 | ℃ |
| Operating relative humidity | Non condensing | 20 95 | % |
| Storage temperature | Humidity 5~95% RH | -40 +85 | °C |
| MTBF | Full load, 220Vac input. 25℃ ambient temperature | 230 | Khrs |
| DC-OK led | LED(Green) DC OK LED tight will be ON when property operate | | |



| DC-Low led | LED(Red) DC Low LED Light wilt be ON: (1) when output voltage is below 85%(±2.53) from the rated output voltage (2) when get over voltage, over current, over temperature and short circuit fault |
|------------------|---|
| Colling | Free air convection |
| Mounting method | Vertical |
| Dimension(W*H*D) | 60.0*130.0*125.0(2.36*5.12*4.92inch) |
| Weight | 1000g |
| Packing | 11pcs/12.5kg/0.7cuft/carton Carton size 620*260*175mm (L*W*H) |

Safety/MEC

| Isolation voltage | I/P-O/P:3Kvac, I/P-FG: 1.5KVac, O/P-FG: 0.5KVac |
|-----------------------|---|
| Insulation resistance | 100MΩ Max. /500VDC |
| safety | Design refer to UL60950-1, EN60950-1 |
| EMC | EN55032:2015 EN61000-3-2:2014(IEC61000-3-2:2014) |
| | EN61000-3-3:2013(IEc61000-3-3:2013) |
| | EN55024:2010+A1:2015 |


NOTE: Unless otherwise specified, all the above parameters are measured at ambient temperature of 25 $^{\circ}$ C and $^{\circ}$ C unless otherwise specified, all the above parameters are measured at ambient temperature of 25 $^{\circ}$ C and $^{\circ}$ C unless otherwise specified, all the above parameters are measured at ambient temperature of 25 $^{\circ}$ C and $^{\circ}$ C an

Protection Category

| Short circuit | Hiccup mode, it will recover automatically after fault condition is removed |
|---------------|---|
| Over voltage | IS480-24: over voltage protection value 32V |
| | (1) When output voltage exceeds above over voltage protection value or reversal voltage occurs, the protection will be started and the output voltage will be cut off in order to protect the power supply (2) The power supply will recover after the power is turned on again |
| Over current | IS480-24: over current protection value 30A |
| | (1) When output voltage exceeds above over current protection value, the protection will be started and the output voltage will be cut off in order to protect the power supply (2) The power supply will recover automatically after the fault condition is removed |
| Over | Over temperature protection value:110±10° C |
| temperature | (1) When the ambient temperature exceeds above over temperature protection value, the protection will be started and go into hiccup mode;(2) The power supply will recover automatically after the fault condition is |




Block Diagram

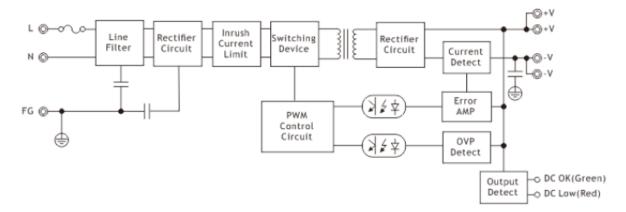

Application Note

1. Series Operation

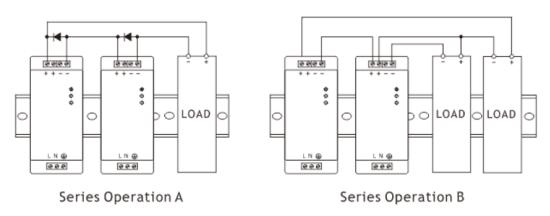


Note:


- 1. Series operation can be connected as shown in above;
- 2. Load current should be less than the current value of the product with the lowest output current specified at the product specification with the power supply at series connection.




2. Parallel Operation

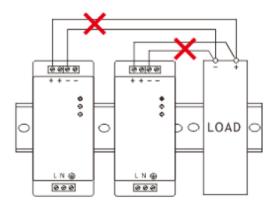

Parallel Operation A (Unable to use)

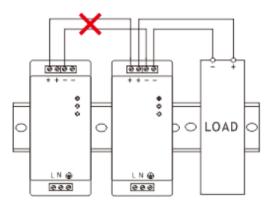



Parallel Operation B (Unable to use)

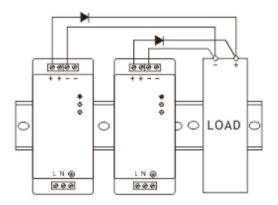

Parallel Operation C (Backup)

Electrical Curve

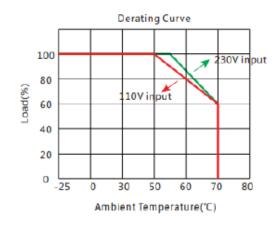

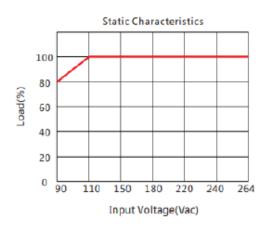




Assembly Diagrams Accessories

Application Note

3. Mounting Method


(1) How to fix

Firstly hang A part on the top of Rail as shown in below, then push the power supply into B direction to fix it.

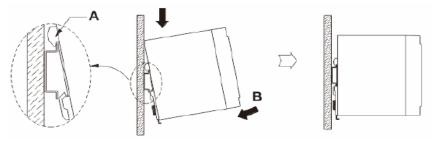

(2) How to remove


Remove the power supply to D direction, pulling C part by using tools, such as a screwdriver, to downward direction.

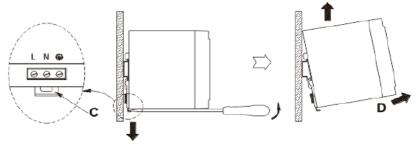

3. Mounting Method

(3) Mounting Spacing

Mounting method should be considered with airflow. Leave enough space between the units when several units are mounted together. Forced air cooling makes protection against heat better.

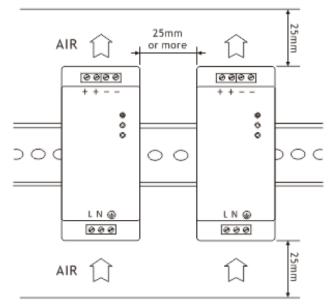



4. Cautions

- (1) Please confirm if the capacity of the product is suitable for your intended application be fore putting it in use
 - (2) Only the rated input voltage specified on the product should be used
- (3) Only the wires with rated capacity should be connected to this product, as allowable voltage and current is varied according to each type of wire;
- (4) Ground terminal of the power supply must be grounded before use to prevent electric shock or electromaganetic interference;
- (5) Be cautions to keep the product clean as foreign matter near the input e output terminal or inside if the product could cause series damages
- (6) If a fuse installed in the product blows off, the product should experience damages not only to the fuse but also to other parts as well. therefore, the product is to be required for maintenance work from customer service department as well as replacement of the fuse
- (7) Due to constant leakage current flows within the product, extra caution should be made if multiple number of products are used connecting to each other as total leakage current c ould be amounted beyond the capacity;
- 8) Be sure to avoid any physical contact with the product since some of the parts inside of the product are being functioned at high voltage, which could cause serious electric shock;
- (9) For the purpose of safety as well as reliability of the product, please avoid using the product at the following sites A place near water or fire A place with high room temperature and poor ventilation A place with a presence of foreign subject or dust A place near volatile or flammable compounds A place with high humidity A place vulnerable for vibration or shock
 - (10) Do not inspect or repair the product while the power is applied
- (11) Unauthorized modification should be avoided in order to prevent series injury or physic al loss due to any malfunction;
 - (12) In case of power outage while in operation, be sure to turn off the power supply.