

Installation Guide

Auxiliary Power Supplies for the M4350 Series Fully Managed Switches APS600Wv3, APS1200Wv2, and APS2000Wv2



Package contents

- Auxiliary power supply
- Power cord (varies by region)
- Product flyer

Overview

The APS600Wv3, APS1200Wv2, and APS2000Wv2 auxiliary power supplies (APS) are supported in the following M4350 series switch models:

- M4350-24X8F8V (SKU: XSM4340V)
- M4350-36X4V (SKU: XSM4340CV)
- M4350-32F8V (SKU: XSM4340FV)
- M4350-16V4C (SKU: VSM4320C)
- M4350-40X4C (SKU: XSM4344C)
- M4350-24M4X4V (SKU: MSM4332)
- M4350-24F4X (SKU: MSM4328F)
- M4350-40F4C (SKU: XSM4344FC)

Each APS has an LED that indicates the power supply status, as described in the following table.

LED	Status
Solid green	DC output is present and voltage is good.
Off	Loss of AC power occurred or AC power is not present.
Blinking green	AC power is present but DC output is for standby only.
Blinking amber	Warnings for abnormal events, like high operating temperature, high output current, slow fan, high output power.
Solid amber	A power supply failure occurred and the APS will be shut down.

Install an APS

In models with more than one power supply bay, you can install an additional APS.

1. Pull out the cover plate from the power module bay in which you want to insert the additional APS.
2. Insert the APS into the power module bay, and gently push the APS into the bay.



CAUTION: When inserting the APS, do not use unnecessary force. Doing so can damage the connectors on the back of the APS and on the midplane.

3. Connect the end of the power cord to the power receptacle on the APS.
4. Plug the AC power cord into a power source such as a wall socket or power strip.


Replace an APS

In models with more than one APS, the APSs are hot-pluggable.

1. If your switch functions with a single APS only, disconnect the power cord from the APS and let the switch power down.
If your switch functions with more than one APS, you do not need to power down the switch and you can perform a hot swap.
2. Remove the APS from the power module bay by doing the following:
 - a. Position the extraction handle perpendicular to the APS.
 - b. Insert your left index finger into the extraction handle.
 - c. Use your left thumb to move the orange release latch to the left and keep it in the release position.
 - d. Pull the extraction handle.

We recommend that you use your right hand to support the APS.

3. Insert the replacement APS into the power module bay, and gently push the APS into the bay until the latch locks.

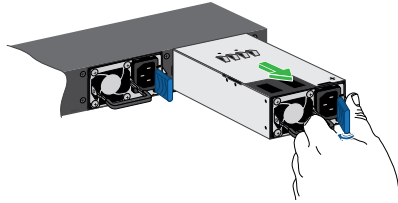

CAUTION: When inserting the APS, do not use unnecessary force. Doing so can damage the connectors on the back of the APS and on the midplane.

4. Connect the end of the power cord to the power receptacle on the APS.
When you apply power, the LED on the APS lights. The LED on the switch for the power supply bay also lights. If these LEDs do not light, make sure that the power cord is plugged in and that the power source is good.

Technical specifications

Feature	APS Model	Specifications
AC input	APS600Wv3	100-120VAC, 8.5A, 50-60 Hz 200-240VAC, 4.5A, 50-60 Hz
	APS1200Wv2	100-120VAC, 12A, 50-60 Hz 200-240VAC, 10A, 50-60 Hz
	APS2000Wv2	100-120VAC, 12A, 50-60 Hz 200-240VAC, 10A, 50-60 Hz

Feature	APS Model	Specifications
DC output	APS600Wv3	+54.5VDC, 11.01A @ 90-132 VAC +54.5VDC, 11.01A @ 180-200VAC +54.5VDC, 11.01A @ 200-264VAC
	APS1200Wv2	+54.5VDC, 18.69A @ 90-132 VAC +54.5VDC, 22.43A @ 180-264 VAC
	APS2000Wv2	+54.5VDC, 18.69A, @ 90-132 VAC +54.5VDC, 33.64A, @ 180-198 VAC +54.5VDC, 37.38A, @ 198-264 VAC
Dimensions (H x W x D)	All models	1.6 x 2.9 x 7.3 in (40 x 73.5 x 185 mm)
Operating temperature	APS600Wv3	32°F to 131°F (0°C to 55°C)
	APS1200Wv2	32°F to 131°F (0°C to 55°C)
	APS2000Wv2	32°F to 122°F (0°C to 50°C)
Operating relative humidity	All models	5% to 85% relative humidity
Operating altitude level	All models	Up to 16,404 feet (5,000 m)
Storage temperature	APS600Wv3	-40°F to 176°F (-40°C to 80°C)
	APS1200Wv2	-40°F to 185°F (-40°C to 85°C)
	APS2000Wv2	-40°F to 176°F (-40°C to 80°C)
Storage altitude level	All models	Up to 49,859 feet (15,200 m)
MTBF	All models	Minimum MTBF at continuous operation of 250,000 hours, input voltage of 230VAC, inlet temperature of 104°F (40°C), and output load of 80%, as calculated by Bellcore Telcordia SR-332-Issue 2
Compliance - Safety	All models	CSA, CE, KC, RCM, CCC/CQC, BIS, BSMI
Compliance - EMC	All models	FCC, ICES-003, CE, VCCI, KC, RCM CCC/CQC, BSMI

Warranty

Visit the NETGEAR warranty page to view the warranty information for your new NETGEAR device:

Australia:

www.netgear.com/au/about/warranty/

China:

www.netgear.com/cn/about/warranty/

Japan:

www.netgear.com/jp/about/warranty/



All other countries: Visit www.netgear.com/about/warranty/ or scan the QR code and click the flag to select your country.

Support and Community

Visit netgear.com/support to get your questions answered and access the latest downloads.

You can also check out our NETGEAR Community for helpful advice at community.netgear.com.

Regulatory and Legal

Si ce produit est vendu au Canada, vous pouvez accéder à ce document en français canadien à netgear.com/support/download/.

(If this product is sold in Canada, you can access this document in Canadian French at netgear.com/support/download/.)

For regulatory compliance information including the EU Declaration of Conformity, visit netgear.com/about/regulatory/.

See the regulatory compliance document before connecting the power supply.

For NETGEAR's Privacy Policy, visit netgear.com/about/privacy-policy.

Where permitted by law, by using this device, you are agreeing to NETGEAR's Terms and Conditions at netgear.com/about/terms-and-conditions. If you do not agree, return the device to your place of purchase within your return period.

This product is designed and warranted for indoor use only. Do not use this device outdoors. The PoE source is intended for intra building connection only.

December 2025

NETGEAR, Inc.

NETGEAR INTERNATIONAL LTD



201-33246-01

© NETGEAR, Inc., NETGEAR and the NETGEAR Logo are trademarks of NETGEAR, Inc. Any non-NETGEAR trademarks are used for reference purposes only.