


# MAVIC PRO

## User Manual V1.0

2016.09

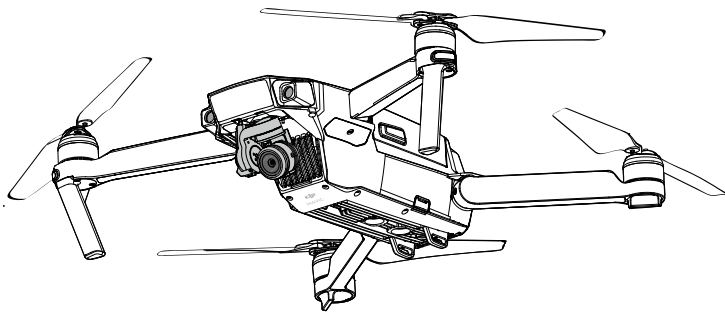

## Searching for Keywords

Search for keywords such as "battery" and "install" to find a topic. If you are using Adobe Acrobat Reader to read this document, press Ctrl+F on Windows or Command+F on Mac to begin a search.

## Navigating to a Topic

View a complete list of topics in the table of contents. Click on a topic to navigate to that section.

## Printing this Document


This document supports high resolution printing.

# Using this manual

## Legends

 Warning

 Important

 Hints and Tips

 Reference

## Read Before the First Flight

Read the following documents before using the MAVIC™ Pro:

1. *In the Box*
2. *Mavic Pro User Manual*
3. *Mavic Pro Quick Start Guide*
4. *Mavic Pro Disclaimer and Safety Guidelines*
5. *Mavic Pro Intelligent Flight Battery Safety Guidelines*

We recommend that you watch all tutorial videos on the official DJI™ website and read the Disclaimer before you fly. Prepare for your first flight by reviewing the Mavic Pro Quick Start Guide and refer to the User Manual for more details.

## Video Tutorials

Please watch the tutorial videos at the link below, which demonstrates how to use Mavic Pro safely:

<http://www.dji.com/mavic>



## Download the DJI GO App

Download and install the DJI GO app before using the aircraft. Scan the QR code to the right to download the latest version.

The Android version of the DJI GO app is compatible with Android 4.1.2 or later.  
The iOS version of the DJI GO app is compatible with iOS 8.0 or later.



# Contents

<b>Using this manual</b>	2
Legends	2
Read Before the First Flight	2
Video Tutorials	2
Download the DJI GO App	2
<b>Product Profile</b>	6
Introduction	6
Features Highlights	6
Preparing the Aircraft	6
Aircraft Diagram	8
Remote Controller Diagram	8
<b>Aircraft</b>	11
Flight Controller	11
Flight Mode	11
Flight Status Indicator	12
Return-to-Home (RTH)	13
TapFly	17
ActiveTrack	19
Forward and Downward Vision System	21
Detection Range	22
Calibrating Front Sensors	22
Flight Recorder	24
Attaching and Detaching the Propellers	24
Intelligent Flight Battery	25
<b>Remote Controller</b>	31
Remote Controller Profile	31
Using the Remote Controller	31
Linking the Remote Controller	36
<b>Camera and Gimbal</b>	39
Camera Profile	39
Gimbal	40

<b>DJI GO App</b>	42
Equipment	42
Using Mobile Device to Control Aircraft	45
Using Virtual Joysticks	45
Editor	46
SkyPixel	46
Me	46
<b>Flight</b>	48
Flight Environment Requirements	48
Flight Limits and No-Fly Zones	48
Preflight Checklist	51
Calibrating the Compass	52
Auto Takeoff and Auto Landing	53
Flight Test	54
Starting/Stopping the Motors	54
<b>Appendix</b>	57
Specifications	57
Aircraft Status Indicator Description	58
Firmwares Update	59
Intelligent Flight Mode	59
After-Sales Information	60
FCC Compliance	60

## Product Profile

---

This section introduces the Mavic Pro and lists the components of the aircraft and remote controller.

# Product Profile

## Introduction

The DJI Mavic is a portable aircraft with a revolutionary folding design. Its intuitive smart device powered controls, gimbal stabilized camera, Forward and Downward Vision System makes it easy for you to capture moments to share and amaze. It captures super sharp 4K video or 12.35 megapixel photos. Use TapFly and ActiveTrack modes to fly anywhere you can see on your device, or track a moving subject effortlessly. Maximum flight speed is up to 65 km/h with maximum flight time is around 27 minutes.

## Features Highlights

The Mavic Pro is a ultra-portable aircraft thanks to its revolutionary folding design.

**Camera and Gimbal:** With the Mavic Pro, you are shooting 4K video at up to 30 frames per second and capturing 12 megapixel photos that look crisper and cleaner than ever, all powered by the compact on-board gimbal.

**Flight Controller:** The next-generation flight controller has been updated to provide a safer, more reliable flight experience. The aircraft is able to automatically return to its home point when transmission signal is lost or battery level is low. Apart from being able to hover in door at low altitude, aircraft is also able to sense and avoid obstacles on its route, which brings safety enhancements. which brings safety enhancements.


**HD Video Downlink:** The low-latency long range HD downlink is powered by an enhanced version of DJI Lightbridge. Built into the Remote Controller is DJI's latest long-range transmission technology OCUSYNC™, making it possible to control your aircraft up to 4.3 mi (7 km) away.

## Preparing the Aircraft

All arms of the aircraft are folded on delivery. Follow the instruction below to unfold all the arms.

### Preparing Aircraft

Remove the gimbal cover and gimbal clamp from the camera.

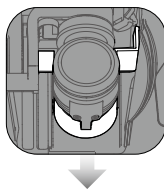


The gimbal cover is used to protect the gimbal. Remove it when necessary.


\* The maximum run-time is tested under laboratory environment, only for your reference.

### Attaching the Propellers:


Mount the propellers with black propeller rings to the motors with black dots. Mount the propellers with silver propeller rings to the motors without black dots. Press the propeller down onto the mounting plate and rotate in the lock direction until it is secured in its position.

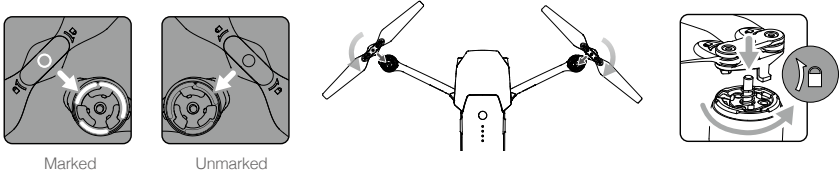

1. Unfold the front arms, follow by the rear arms of the aircraft as the figure shown.
2. Unfold all propeller blades.

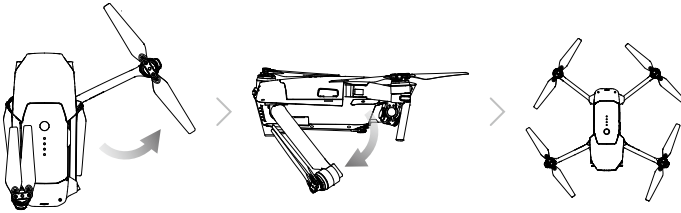

3. The Intelligent Flight Battery must be fully charged before using it for the first time.

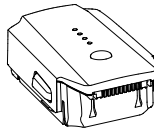


 Check that all the propellers are secure before each flight.

### Preparing the Remote Controller:


Unfold the mobile device clamps and the antennas.

1. Unfold the mobile device clamps, and insert the mobile device into secure position.
2. Choose an appropriate RC cable based on the type of mobile device.

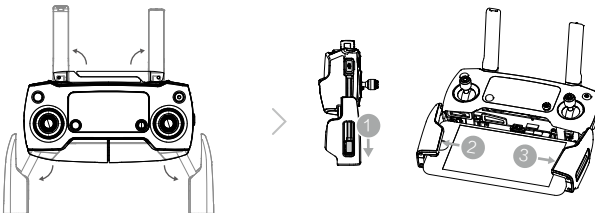


 Choose and purchase different type of RC cable from DJI Store.

## Aircraft Diagram

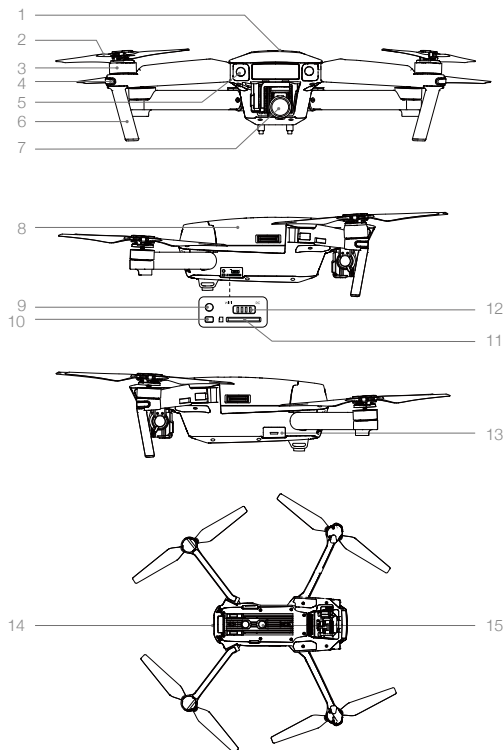

1. GPS
2. Propeller
3. Motor
4. Front LED Indicator
5. Forward Vision System
6. Antennas
7. Gimbal and Camera
8. Intelligent Flight Battery
9. Link Button
10. Linking Status Indicator
11. Camera Micro SD Card Slot
12. Control Mode Switch
13. Micro USB Port
14. Aircraft Status Indicators
15. Downward Vision System

## Remote Controller Diagram

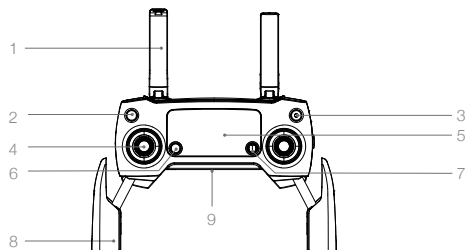

1. **Antennas**  
Relays aircraft control and video signal.
2. **Return Home (RTH) Button**  
Press and hold the button to initiate Return to Home (RTH). Press once again to cancel RTH.
3. **Power Button**  
Used to turn the remote controller on and off.
4. **Control Stick**  
Controls the orientation and movement of the aircraft.

**5. Status LED**

Displays the remote controller's system status.

**6. Pause Button**

Press once for emergency breaking.

**7. 5D Button**

Left: Zoom Out

Right: Zoom In

Up: OK

Down: Cancel

Press inward: Call out Intelligent Flight menu in DJI GO app.

**10. C1 Button**

Press once to focus at center.

**12. C2 Button**

Press once to playback.

**13. Camera Settings Dial**

Turn the dial to adjust camera settings.

(Only functions when the remote controller is connected to a mobile device running the DJI GO app)

**14. Video Recording Button**

Press to start recording video. Press again to stop recording.

**15. Shutter Button**


Press to take a photo. If burst mode is selected, the set number of photos will be taken with one press.

**8. Mobile Device Clamp**

Securely mounts your mobile device to the remote controller.

**9. USB Port**

Connect to mobile device for running the DJI GO app.

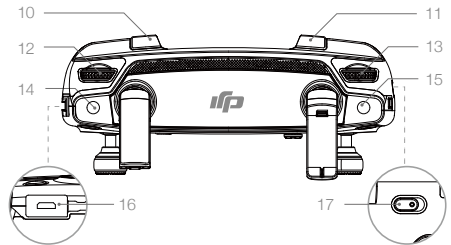**16. Power Port**

Connect to the Charger to charge the battery of the remote controller.

**17. Flight Mode Switch**

Switch between P-mode, S-mode.

# Aircraft

---

This section introduces the features of the Flight Controller, Forward and Downward Vision System, and the Intelligent Flight Battery

# Aircraft

## Flight Controller

The Mavic Pro aircraft comprise of a flight controller, video downlink, propulsion system and a Intelligent Flight Battery. This section introduces the features of the flight controller, video downlink and the rest of the component of the aircraft.



## Flight Mode

The following flight modes are available for Mavic Pro:

**P-mode (Positioning):** P-mode works best when the GPS signal is strong. The aircraft utilizes the GPS and Forward and Downward Vision System to automatically stabilize itself, navigate between obstacles or track a moving object. Advanced features such as Tap-Fly and ActiveTrack are enabled in this mode. Note that handling gain values are reduced in P-mode.


**S-mode(Sport):** The aircraft is using GPS for positioning. Handling gain values of the aircraft are also adjusted in order to enhance manoeuvrability and increase the maximum flight speed. Since Forward and Downward Vision System is disabled, the aircraft will not be able to sense and avoid obstacle in S-mode.

The aircraft will automatically switch to ATTI mode when the GPS signal is weak and lighting conditions are too dark for the Forward and Downward Vision System. The aircraft will only use its barometer for positioning to control the altitude.

- 
-  • **The Forward Vision System is disabled in S-mode (Sport), which means the aircraft will not be able to automatically avoid obstacles on its route.**
- The aircraft's maximum speed and braking distance are significantly increased in S-mode (Sport). A minimum braking distance of 20 meters is required in windless conditions.
  - The descending speed is significantly increased in S-mode(Sport). A minimum braking distance of 20 meters is required in windless conditions.
  - The aircraft's responsiveness is significantly increased in S-mode (Sport), which means a small stick movement on the remote controller will translate into a large travel distance of the aircraft. Be vigilant and maintain adequate maneuvering space during flight.
- 
-  • Use the Flight Controller mode switch to change the flight mode of the aircraft, refer to the "Flight Mode Switch" on Page 34 for more information. Use the Flight Controller mode switch to change the flight mode of the aircraft, refer to the "Flight Mode Switch" on Page 34 for more information.
-

## Flight Status Indicator

The Mavic Pro has Front LEDs and Aircraft Status Indicators. The positions of these LEDs are shown in the figure below:

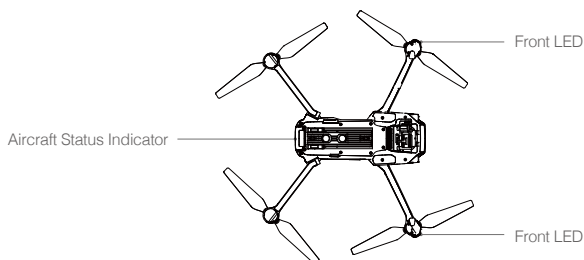

The Front LEDs show the orientation of the aircraft. The Front LEDs glow solid red when the aircraft is turned on to indicate the front (or nose) of the aircraft. The Aircraft Status Indicators communicate the system status of the flight controller. Refer to the table below for more information about the Aircraft Status Indicators.

### Aircraft Status Indicator Description

#### Normal




Red, Green and Yellow Flash Alternately	Turning On and Self Diagnostic Testing
Yellow Flashes Slowly	Warming Up
Green Flashes Slowly	Safe to Fly (P-mode or S-mode with GPS , Forward and Downward Vision System)
X2 Green Flashes Twice	Safe to Fly (P-mode or S-mode with GPS , Forward and Downward Vision System)
Yellow Flashes Slowly	Safe to Fly (No GPS and Forward and Downward Vision System)


#### Warning

Fast Yellow Flashing	Remote Controller's Signal Lost
Slow Red Flashing	Low Battery Warning
Fast Red Flashing	Critical Battery Warning
Red Flashing Alternately	IMU Error
Solid Red	Critical Error
Red and Yellow Flash Alternately	Compass Calibration Required
Rapid Green Blinking	Breaking

## Return-to-Home (RTH)

The Return-to-Home (RTH) function brings the aircraft back to the last recorded Home Point. There are three types of RTH procedures: Smart RTH, Low Battery RTH, and Failsafe RTH. This section describes these three scenarios in detail.


	GPS	Description
Home Point		If a strong GPS signal was acquired before takeoff, the Home Point is the location from which the aircraft was launched. The GPS signal strength is indicated by the GPS icon (  ). The aircraft status indicator will blink rapidly when the home point is recorded.



-  • Aircraft can sense and avoid obstacles when Forward Vision System is enabled and the lighting conditions is sufficient. The aircraft will automatically climb up to avoid obstacle and fly to the Home Point at the new altitude.

### Failsafe RTH

If the Home Point was successfully recorded and the compass is functioning normally, Failsafe RTH will be automatically activated if the remote controller signal is lost for more than three seconds. The Return-to-Home process may be interrupted and the operator may regain control of the aircraft if the remote controller signal connection is re-established.

#### Failsafe Illustration

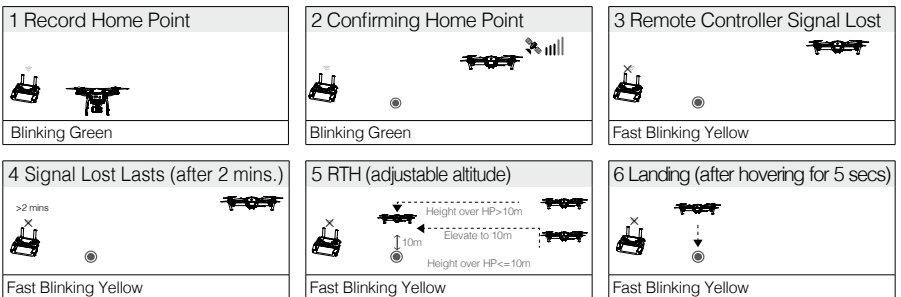

-  • Aircraft cannot return to the Home Point when GPS signal is weak (  displays grey) or unavailable.
- The aircraft cannot avoid obstruction during the Failsafe RTH when Forward Vision System is disabled, therefore, it is important to set an suitable Failsafe altitude before each flight. Launch the DJI GO app and enter "Camera" and select "MODE > Advanced Settings > Failsafe mode" to set the Failsafe altitude.
- User cannot control the aircraft while the aircraft is ascending to its failsafe altitude. However, user can press RTH button once to exit ascending and regain control.

## Smart RTH


Use the RTH button on the remote controller (refer to “[RTH button](#)” on page 34 for more information) or tap the RTH button in the DJI GO app and follow the on-screen instructions when GPS is available to initiate Smart RTH. The aircraft status indicator blinks to display the current status. The aircraft will sense and avoid obstacles on its flight path during Smart RTH. The aircraft may choose to navigate or hover in place to avoid collision. User can manually navigate the aircraft to avoid obstacles if the Forward Vision System is disabled when light condition is not ideal. In addition, user can also immediately exit from Smart RTH by using the Pause button on the remote controller or press the Stop icon on the DJI GO app.

## Low Battery RTH

The low battery level failsafe is triggered when the DJI Intelligent Flight Battery is depleted to a point that may affect the safe return of the aircraft. Users are advised to return home or land the aircraft immediately when prompted. The DJI GO app will display a notice when a low battery warning is triggered. The aircraft will automatically return to the Home Point if no action is taken after a ten-second countdown. The user can cancel the RTH procedure by pressing the RTH button on the remote controller. The thresholds for these warnings are automatically determined based on the aircraft’s current altitude and distance from the Home Point.

The aircraft will land automatically if the current battery level can only support the aircraft long enough to descend from its current altitude. The user can still use the remote controller to alter the aircraft’s orientation during the landing process.

The Battery Level Indicator is displayed in the DJI GO app, and is described below:

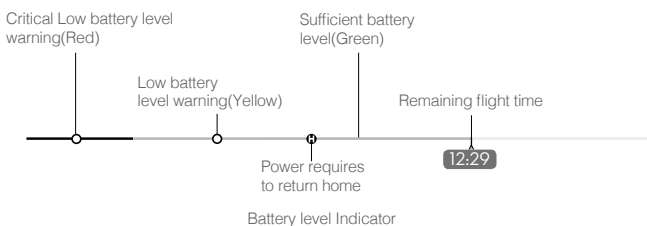

Battery Level Warning	Remark	Aircraft Status Indicator	DJI GO App	Flight Instructions
Low battery level warning	The battery power is low. Please land the aircraft.	Aircraft status indicator blinks RED slowly.	Tap “Go-home” to have the aircraft return to the Home point and land automatically, or “Cancel” to resume normal flight. If no action is taken, the aircraft will automatically go home and land after 10 seconds. Remote controller will sound an alarm.	Fly the aircraft back and land it as soon as possible, then stop the motors and replace the battery.

Critical Low battery level warning	The aircraft must land immediately.	Aircraft status indicator blinks RED quickly.	The DJI GO app display will flash red and the aircraft will start to descend. The remote controller will sound an alarm.	Allow the aircraft to descend and land automatically.
Estimated remaining flight time	Estimated remaining flight based on current battery level.	N/A	N/A	N/A



- When Critical battery level warning is triggered and the aircraft begins to land automatically, you may push the left stick upward to make the aircraft hover at its current altitude, giving you an opportunity to navigate to a more appropriate landing location.
- The colored zones and markers on the battery level indicator bar reflect the estimated remaining flight time. They are automatically adjusted according to the aircraft's current location and status.

### Precision Landing

The aircraft will automatically scan and attempt to match the terrain features underneath during RTH. As soon as the current terrain features are match with the home point terrain features, the aircraft will start landing immediately, in the attempt to achieve precision landing. The DJI GO app will prompt terrain feature matching failure, if the matching is failed.



- The performance of Precision Landing is subject to the following conditions:
  - a. Home point is recorded upon take off, and it will not be refreshed during the flight.
  - b. Aircraft must take off vertically and the take off altitude is greater than 7 meters.
  - c. Home point terrain feature remains largely unchanged.
  - d. Home point terrain with no distinctive feature will affect the performance.
  - e. Light condition cannot be too light nor too dark.
- The following actions are available during landing:
  - a. Pull throttle down to accelerate landing speed.
  - b. Push throttle elsewhere to abort the current landing.

## Failsafe Safety Notices




The aircraft cannot avoid obstruction during the Failsafe RTH when the Forward Vision System is disabled. Therefore, it is important to set a suitable Failsafe altitude before each flight. Launch the DJI GO app and enter "Camera" and select "MODE > Advanced Settings > Failsafe mode" to set the Failsafe altitude.



If Failsafe RTH (including Smart RTH, Lower Battery RTH) triggered and Forward Vision System is activated:

1. If aircraft's current altitude is greater than 10 meters (32 feet), the aircraft will return to the home point at the current altitude.
2. If aircraft's current altitude is lower than 10 meters (32 feet), the aircraft will first automatically ascend to 10 meters (32 feet) from the current altitude.

The aircraft will start landing immediately if the Forward Vision System is deactivated. Note that the Forward Vision System status is determined when Failsafe RTH is triggered.



Aircraft automatically descends and lands if RTH is triggered when the aircraft flies within a 5 meters (16 feet) radius of the Home Point. Aircraft will stop ascending and immediately return to the Home Point if you move the left stick if the aircraft reaches 5meters (16 feet) altitudes or beyond during Failsafe.



Aircraft cannot return to the Home Point when GPS signal is weak ( [ 📶 ] displays grey) or unavailable.




Press the Pause button once to allow the aircraft to exit from Failsafe. The aircraft will stop the current ascending process and hovers.

## Obstacle Avoidance During RTH

Aircraft can now sense and actively attempt to avoid obstacle during FailSafe RTH, provided that the light condition is ideal for the Forward Vision System. The details on how the aircraft will behave during obstacle avoid is listed below:

1. Aircraft decelerates when an obstacle is sensed at 65 feet (20 meters) ahead.
2. Aircraft stops and hover then start ascending vertically to avoid the obstacle. Eventually, the aircraft will stop climbing when it is at least 16 feet (5 meters) above the detected obstacle.
3. Failsafe RTH procedure resume, the aircraft will continue flying to the Home Point at the current altitude.

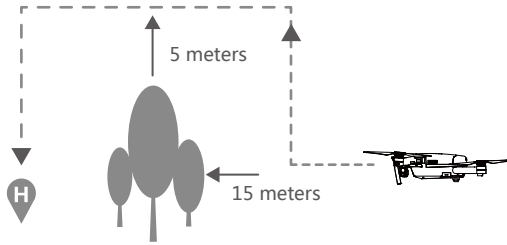

- ⚠ • To ensure the aircraft is heading towards the static direction, you cannot rotate the aircraft during FailSafe RTH while Forward Vision System is enabled.
- The aircraft cannot avoid the obstacle that is direct above the aircraft.

## TapFly


### Introduction


With the TapFly feature, user now can tap on the mobile device screen to guide the aircraft to fly toward the designated direction without using the remote controller. Aircraft can automatically avoid obstacle or initiate break and then hover automatically during the flight, provided that the lighting is not too dark ( $< 300$  lux) nor too bright ( $> 10,000$  lux).


### Using TapFly

Ensure the battery level is more than 50 % for the Intelligent Flight Battery. And the aircraft is in P-mode. Then follow the steps below to use TapFly:


Take off and ensure the aircraft is flying at least 9 feet (3 meters) above the ground.

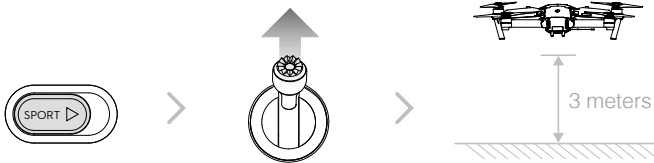

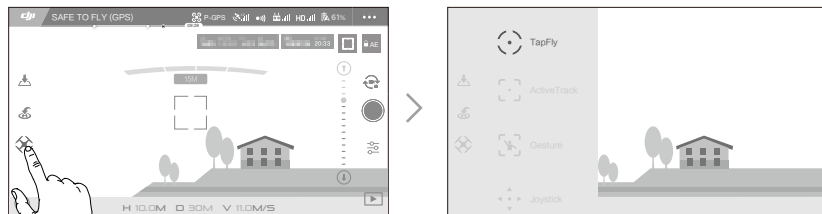

Launch DJI GO app and tap  at the bottom of the camera view, read and understand the prompt statements.

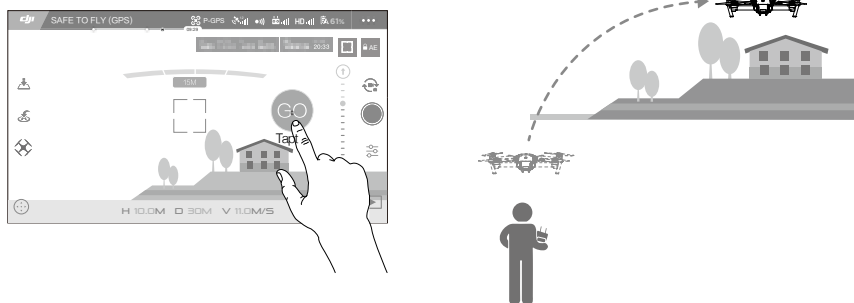


Tap once on the target direction and wait for  icon to appear. Tap again to confirm the selection and the aircraft will automatically fly towards the target direction.



-  • DO NOT guide the aircraft to fly towards people, animals, small and fine objects (e.g. tree branches and power lines) or transparent objects (e.g. glass or water surface).
- Watch for the obstacles that is on the flight path and stay clear of them.
  - There may be deviations between the expected and the actual flight path of Tapfly selection.
  - The selectable range for the target direction is limited. You cannot make TapFly selection that is close to the upper or lower edge of the screen.
  - TapFly mode may not work properly when the aircraft is flying over water surface or snow covered area.
  - Be extra cautions when flying in extremely dark (< 300 lux ) or bright (>10,000 lux) environments.

After confirmed with the TapFly selection, the aircraft will fly automatically towards the area marked by  icon. Note that you can still use the control stick to control the movement of the aircraft during the flight.

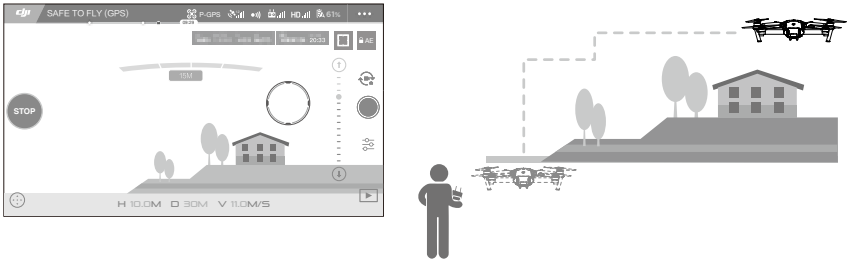


Note that the aircraft will also automatically adjust its speed when it senses there is obstacle at the front of the aircraft or it is flying too close to the ground. However, the user should not rely on this feature to navigate the aircraft between the obstacles. Meanwhile the FailSafe procedure will override the TapFly operation, given that if the GPS signal is weak; the aircraft will exit the autonomous flight from TapFly and fly back to the Home Point automatically.

### Exit TapFly

Use the following methods to exit TapFly:

1. Press once on the Intelligent Flight Pause button on the remote controller or pull back the pitch stick on the remote controller.
2. Tap "STOP" button on the screen.

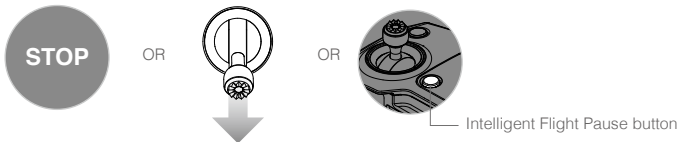

Aircraft will stop and hover after exit from TapFly. You may either tap a new target direction to proceed to the next flight or bring back the aircraft to the Home Point manually.


## ActiveTrack

ActiveTrack allows you to mark and track a moving object on your mobile device screen. The aircraft will automatically avoid obstacles in its flight path. No external tracking device is required during the whole tracking process.


### Using ActiveTrack

Ensure the Intelligent Flight Battery has more than 50% power and the aircraft is in either P-mode. Then follow the steps below to use ActiveTrack:


1. Take off and hover at least 9 feet (3 meters) above the ground.

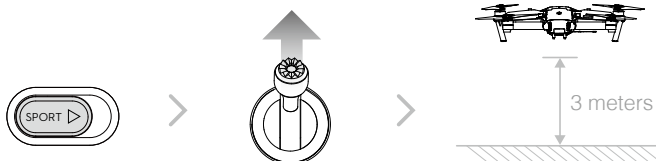

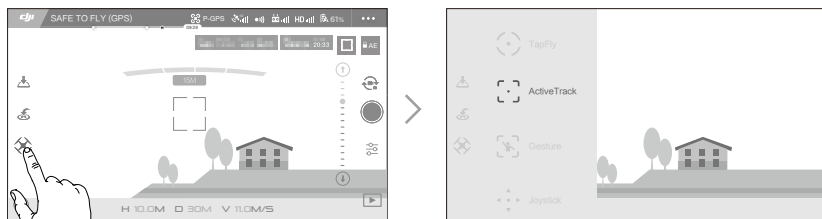


2. In the DJI GO app, tap  to bring up the flight modes and then select.

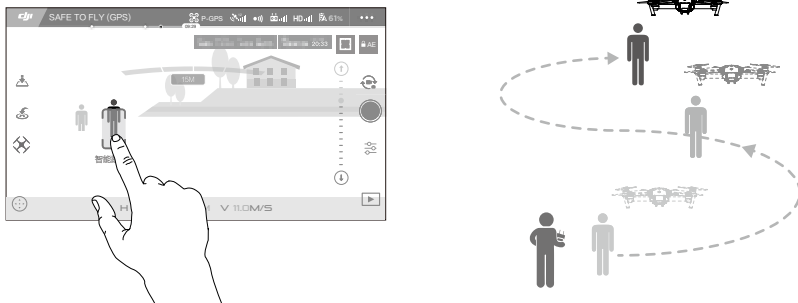

3. Drag a box around the object you want to track and tap it to confirm the selection. The box will turn green when tracking is in progress. If the box turns red, the object was not identified and you should try again.



ActiveTrack includes following sub functions:

Trace		This mode is identical to ActivTrack.
Profile		Aircraft moves in parallel with the subject in the frame.
Spotlight		Camera always focus on the subject in the frame.

- ⚠️ • DO NOT select an area containing people, animals, small, fine objects (e.g. tree branches and power lines) or transparent objects (e.g. glass or water surface).
  - Stay clear of obstacles near the flight path, particularly when the aircraft is flying backward.
  - Be extra vigilant when using ActiveTrack in any of the following situations:
    - a) The tracked subject is not moving on a level plane.
    - b) The tracked subject changes shape drastically while moving.
    - c) The tracked subject could be blocked or out of sight for a long time.
    - d) The tracked subject is moving on a snowy surface.
    - e) The lighting is extremely low (< 300 lux) or high (> 10,000 lux).
    - f) The tracked subject has a similar color or pattern as its surrounding environment.
  - You must follow local privacy laws and regulations when using ActiveTrack.
- 
- ☀️ • The aircraft will sense and avoid obstacles on its flight path.
  - If the aircraft loses track of the subject, because it is moving too fast or obscured, re-select the subject to resume tracking.
- 

### Exiting ActiveTrack

There are two ways to exit ActiveTrack:


1. Press the Intelligent Flight Pause button on the remote controller.
2. Pull the pitch stick backward.



After exiting ActiveTrack, the aircraft will stop and hover in place, at which point you may choose to start a new mission or bring the aircraft back to the Home Point.


## Forward and Downward Vision System

The Mavic Pro is equipped with an Forward and Downward Vision System that constantly scans for obstacles in front of it, allowing it to avoid collisions by going around, over or hovering. Downward Vision System uses ultrasound and image data to help the aircraft maintain its current position. With the help of Downward Vision System, your Mavic Pro can hover in place more precisely and fly indoors or in other environments where a GPS signal is not available. The main components of the Forward and Downward Vision System are located on the bottom of your Mavic Pro; they include [3] two ultrasonic sensors and [1] [2] four monocular sensors.

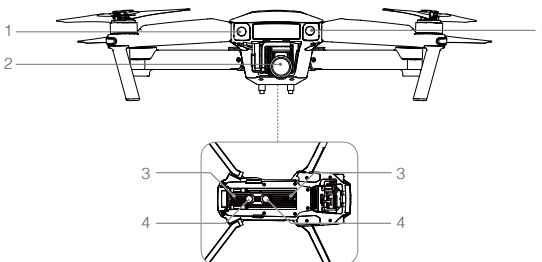

## Detection Range


The detection range of the Forward and Downward Vision System is depicted as follow. Note that the aircraft cannot sense and avoid the obstacles that are not within the detection range.

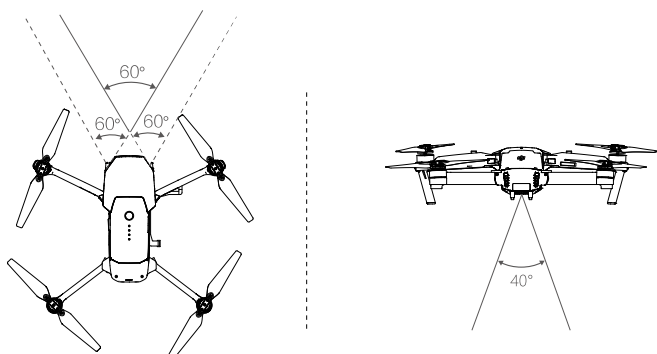

Aircraft


## Calibrating Front Sensors

Forward and Downward Vision Systems cameras that installed on landing gear are calibrated on delivery. However these camera are vulnerable to excessive impact, hence it will require calibration via DJI Assistant 2 or DJI GO app from time to time. Follow the steps below to calibrate the camera when the DJI GO app prompt you to do so.

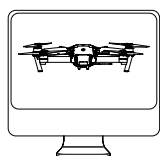


01

Point the aircraft toward the screen

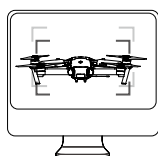

02

Align the boxes

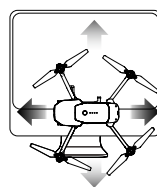


03

Pan and tilt the aircraft

### Using Downward Vision System

**Downward Vision System** is activated automatically when the aircraft is turned on. No further action is required. Downward Vision System is typically used in indoor environments, where GPS is unavailable. Using the sensors that are built into the Downward Vision System, the aircraft can hover precisely even without GPS.

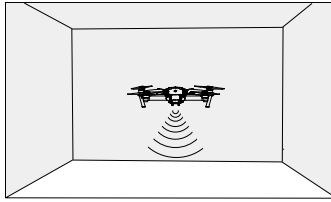


Follow the steps below to use Downward Vision System:

1. Toggle the flight mode switch to P-mode.
2. Place the aircraft on a flat surface. Note that the Downward Vision System cannot work properly on surfaces without clear pattern variations.
3. Turn on the aircraft. The aircraft status indicator will flash green two times, which indicates the Downward Vision System is ready. Gently push the left stick up to lift off and the aircraft will hover in place.



### Assisted Braking from Forward Vision System

Powered by the Forward Vision System, the aircraft will now be able to actively initiate breaks when obstacles are detected direct ahead of the aircraft. Note that Forward and Downward Vision System works best when light condition is ideal and the obstacle does not have feature-less pattern. In addition, the aircraft speed cannot exceed over 10 meter/second so that the aircraft can break and stop at the safe distance.

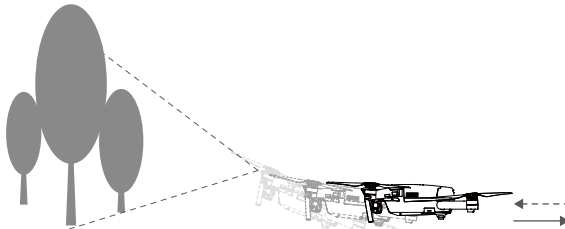

The performance of your Forward and Downward Vision System are affected by the surface over which it is flying. The ultrasonic sensors may not be able to accurately measure distances when operating above sound-absorbing materials. In addition, the camera may not function correctly in suboptimal environments. The aircraft will switch from P-mode to Atti mode automatically if neither GPS nor Forward and Downward Vision System are available. Operate the aircraft with great caution in the following situations:

- Flying over monochrome surfaces (e.g. pure black, pure white, pure red, pure green).
- Flying over a highly reflective surfaces.
- Flying at high speeds (over 10 m/s at 2 meters or over 5 m/s at 1 meter).
- Flying over water or transparent surfaces.
- Flying over moving surfaces or objects.
- Flying in an area where the lighting changes frequently or drastically.
- Flying over extremely dark (lux < 10) or bright (lux > 100,000) surfaces.
- Flying over surfaces that can absorb sound waves (e.g. thick carpet).
- Flying over surfaces without clear patterns or texture.
- Flying over surfaces with identical repeating patterns or textures (e.g. tiles with the same design).
- Flying over inclined surfaces that will deflect sound waves away from the aircraft.





- ☀️ • Keep the sensors clean at all times. Dirt or other debris may adversely affect the effectiveness of the sensors.
  - Downward Vision System is only effective when the aircraft is at altitudes of 0.3 to 10 meters.
  - The Forward and Downward Vision System may not function properly when the aircraft is flying over water.
  - The Forward and Downward Vision System may not be able to recognize pattern on the ground in low light conditions (less than 100 lux).
  - Do not use other ultrasonic devices with frequency of 40 KHz when Forward and Downward Vision System is in operation.
- 
- ⊘ • Keep the animals away from the aircraft when Downward Vision System is activated. The sonar sensor emits high frequency sounds that are only audible to some animals.

## Flight Recorder

Flight data is automatically recorded to the internal storage of the aircraft. This includes flight telemetry, aircraft status information, and other parameters. To access these data, connect the aircraft to the PC through the Micro USB port and launch the DJI GO app.


## Attaching and Detaching the Propellers

Use only DJI approved propellers with your Mavic Pro. The grey and black ring on the propeller indicate where they should be attached and in which direction they should spin.

Propellers	White Ring	No Ring
Figure		
Attach On	Motors with white marks	Motors without white marks
Legends	 Lock : Turn the propellers in the indicated direction to mount and tighten.  Unlock : Turn the propellers in the indicated direction to loosen and remove.	

### Attaching the Propellers

Attach the white ringed propellers to the mounting base with white marks. Press the propeller down onto the mounting plate and rotate in the lock direction until it is secured in its position. Attach the other pair propellers to the mounting based without silver marks. Unfold all the propellers blades.

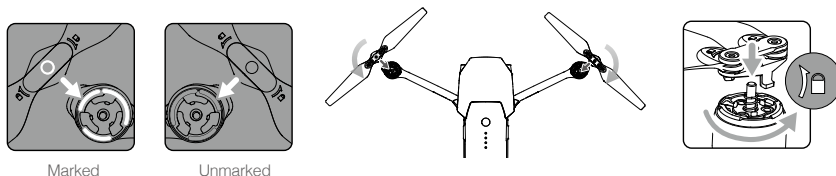

- 
- ⚠ • Be aware of the sharp edges of the propellers. Handle with care.
  - Use only the DJI approved propellers. Do not intermix the propellers types.
  - Stand clear of the motors and DO NOT touch the propellers when they are spinning.
- 

### Detaching the Propellers


Press down the propellers onto the motor mount, rotate the propeller according to the marked direction to unlock the propeller.

- 
- ⚠ • Check that the propellers and motors are installed correctly and firmly before every flight.
  - Ensure that all propellers are in good condition before each flight. DO NOT use aged, chipped, or broken propellers.
  - To avoid injury, STAND CLEAR of and DO NOT touch propellers or motors when they are spinning.
  - ONLY use original DJI propellers for a better and safer flight experience.
- 


## Intelligent Flight Battery

### Introduction

The DJI Intelligent Flight Battery has a capacity of 3830 mAh, a voltage of 13.05 V, and a smart charge/discharge functionality. With its power energy compact battery cell, it provides tremendous power source for the aircraft. It should only be charged using an appropriate charger that has been approved by DJI.

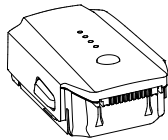

Intelligent Flight Battery

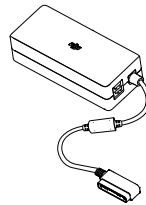

Charger

- 
- ⚠ The Intelligent Flight Battery must be fully charged before using it for the first time. Refer to [“Charging the Intelligent Flight Battery”](#) for more information.
- 

- 💡 Be aware that the output power of the supplied Mavic Pro charger is 100W.
- 

### DJI Intelligent Flight Battery Functions

1. Battery Level Display: The LED indicators display the current battery level.
2. Battery Life Display: The LEDs display the current battery power cycle.
3. Auto-Discharging Function: To prevent swelling, the battery automatically discharges to below 65% of total power when it is idle for more than ten days. It takes around two days to discharge the battery to 65%. It is normal to feel moderate heat being emitted from the battery during the discharge process. Discharge thresholds can be set in the DJI GO app.
4. Balanced Charging: Automatically balances the voltage of each battery cell when charging.
5. Overcharge Protection: Charging automatically stops when the battery is fully charged.
6. Temperature Detection: The battery will only charge when the temperature is between 5°C (41°F) and 40°C (104°F).


7. Over Current Protection: The battery stops charging when high amperage (more than 8.5 A) is detected.
8. Over Discharge Protection: To prevent over-discharge damage, discharging automatically stops.
9. Short Circuit Protection: Automatically cuts the power supply when a short circuit is detected.
10. Battery Cell Damage Protection: The DJI GO app displays a warning message when a damaged battery cell is detected.
11. Sleep Mode: To save power, the battery will cut off power supply and enters sleep mode after 20 minutes of inactivity.
12. Communication: Information pertaining to the battery's voltage, capacity, current, etc. is transmitted to the aircraft's main controller.

---

 Refer to *Mavic Pro Intelligent Flight Battery Safety Guidelines* before use. Users take full responsibility for all operations and usage.

---

## Using the Battery

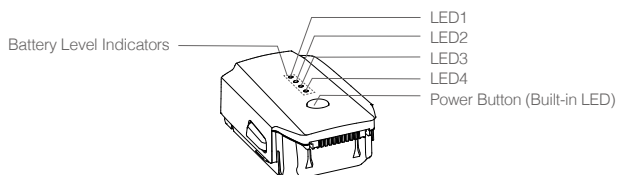


### Turning ON/OFF





































**Turning On:** Press the Power Button once, then press again and hold for 2 seconds to turn on. The Power LED will turn red and the remote controller system status screen will display the current battery level.

**Turning Off:** Press the Power Button once, then press again and hold for 2 seconds to turn off. The battery power LED will flash when powering off the aircraft to allow for video recording to be stopped, if the recording was not stopped prior to powering off.

---


 The Battery Level Indicators will also show the current battery level during charging and discharging. The indicators are defined below.

-  : LED is on.       : LED is flashing.  
 : LED is off.
-

Battery Level				
LED1	LED2	LED3	LED4	Battery Level
				87.5%~100%
				75%~87.5%
				62.5%~75%
				50%~62.5%
				37.5%~50%
				25%~37.5%
				12.5%~25%
				0%~12.5%
				=0%

### Low Temperature Notice:

1. Battery capacity is significantly reduced when flying in low temperature (< 0°C) environments.
2. It is not recommended that the battery be used in extremely low temperature (< -10°C) environments. Battery voltage should reach the appropriate level when operating environment with temperatures between -10°C and 5°C.
3. End the flight as soon as the DJI GO app displays the "Low Battery Level Warning" in low temperature environments.
4. Keep the battery indoors to warm it before flying in low temperature environments.
5. To ensure optimal performance of the battery, keep the battery temperature above 20°C.
6. The charger will stop charging the battery if the battery cell's temperature is not within the operating range (0°C ~ 40°C).

 In cold environments, insert the battery into the battery compartment and allow the aircraft for approximately 1-2 minutes to warm up before taking off.

### Checking the Battery Level

The Battery Level Indicators display how much power remains. When the battery is turned off, press the Power Button once. The Battery Level Indicators will light up to display the current battery level. See below for details.

### Battery life

Battery life refers to how many more times the battery can be discharged and recharged before it must be replaced. When the battery is turned off, press and hold the Power Button for 5 seconds to check the battery life. The Battery Level Indicators will light up and/or blink for two seconds, as shown below:

Battery Life				
LED1	LED2	LED3	LED4	Battery Life
□	□	□	□	90%~100%
□	□	□	▤	80%~90%
□	□	□	□	70%~80%
□	□	▤	□	60%~70%
□	□	□	□	50%~60%
□	▤	□	□	40%~50%
□	□	□	□	30%~40%
▤	□	□	□	20%~30%
□	□	□	□	below 20%


⚠ When battery life reaches 0%, it can no longer be used.

📖 For more information about the battery, launch the DJI GO app and check the information that is listed under the battery tab.

### Charging the Intelligent Flight Battery

1. Connect the Battery Charger to a power source (100-240 V 50-60 Hz).
2. Connect the one end of the Battery Charger to the supplied Charging Hub to start charging.
3. The Battery Level Indicator will display the current battery level as it is charging.
4. The Intelligent Flight Battery is fully charged when the Battery Level Indicators are all off. The Battery Level Indicators will turn off when charging is complete. Detach the batteries from the Charging Hub.
5. Allow its temperature to drop to room temperature before storing it for an extended period.
6. The charger will stop charging the battery if the battery cell's temperature is not within the operating range (5°C to 40°C).

⚠ Always turn off the battery before inserting it or removing it from the Mavic Pro. Never insert or remove a battery when it is turned on.

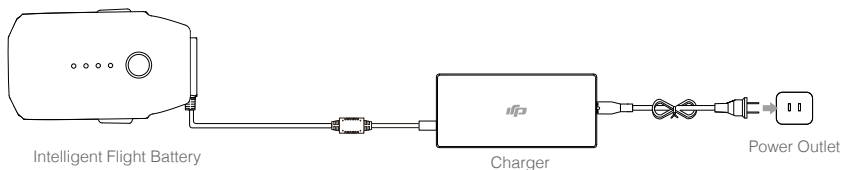

## Battery Level Indicators While Charging

LED1	LED2	LED3	LED4	Battery Level
				0%~25%
				25%~50%
				50%~75%
				75%~100%
				Fully Charged

## Battery Protection LED Display

The table below shows battery protection mechanisms and corresponding LED patterns.

## Battery Level Indicators while Charging

LED1	LED2	LED3	LED4	Blinking Pattern	Battery Protection Item
				LED2 blinks twice per second	Over current detected
				LED2 blinks three times per second	Short circuit detected
				LED3 blinks twice per second	Over charge detected
				LED3 blinks three times per second	Over-voltage charger detected
				LED4 blinks twice per second	Charging temperature is too low
				LED4 blinks three times per second	Charging temperature is too high

After these issues are resolved, press the Power Button to turn off the Battery Level Indicator. Unplug the Intelligent Flight Battery from the charger and plug it back in to resume charging. Note that you do not need to unplug and plug in the charger in the event of a room temperature error; the charger will resume charging when the temperature is within the allowable range.



DJI does not take any responsibility for damage caused by third-party chargers.



**How to discharge the Intelligent Flight Battery before transport the batteries for long trip:**


**Slow :** Place the Intelligent Flight Battery into the Mavic Pro's Battery Compartment and turn it on. Leave it on until there is less than 8% of power left, or until the battery can no longer be turned on. Launch the DJI GO app to check battery levels.

**Rapid :** Fly the Mavic Pro outdoors until there is less than 8% of power left, or until the battery can no longer be turned on.

# Remote Controller

---

This section describes the features of the remote controller and includes instructions for controlling the aircraft and the camera.

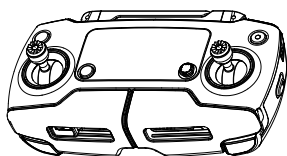

# Remote Controller

## Remote Controller Profile

The Mavic Pro remote controller is a multi-function wireless communication device that integrates the video downlink system and aircraft remote control system. The video downlink and aircraft remote control system operate at 2.4 GHz. The remote controller features a number of camera control functions, such as taking and previewing photos and videos, as well as controlling gimbal motion. The battery level is displayed via LCD Screen of the remote controller.



- **Compliance Version:** The remote controller is compliant with local compliance and regulations.
- **Operating Mode:** Control can be set to Mode 1 or Mode 2, or to a custom mode.
- **Mode 1:** The right stick serves as the throttle.
- **Mode 2:** The left stick serves as the throttle.




To prevent transmission interference, do not operate more than three aircrafts in the same area.

## Using the Remote Controller

### Turning the Remote Controller On and Off


The Mavic Pro remote controller is powered by a 2S rechargeable battery that has a capacity of 6000 mAh. The battery level is indicated via the Battery Level LEDs on the front panel. Follow the steps below to turn on your remote controller:

1. When the remote controller is turned off, press the Power Button once. The LCD Screen will display the current battery level.
2. Press and hold the Power Button to turn on the remote controller.
3. The remote controller will beep when it is turned on.
4. Repeat Step 2 to turn off the remote controller.

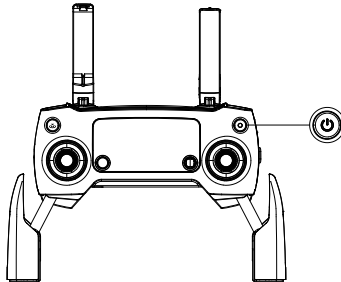


### Charging the Remote Controller

Charge the remote controller using the included charger. Refer to the figure on next page below for more details.

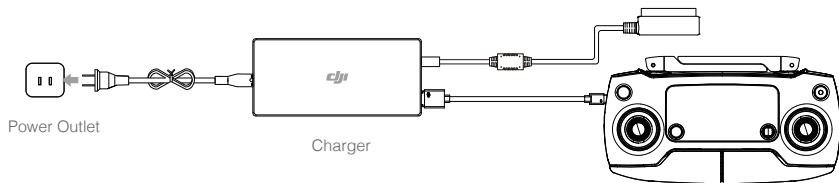

## Controlling the Camera

Shoot videos/pictures, view recorded images, and adjust camera settings via the Shutter Button, Camera Settings Dial, Playback Button, and Video Recording Button on the remote controller.

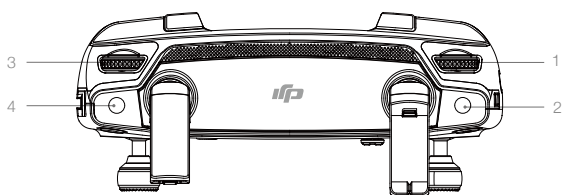

### 1. Camera Settings Dial

Turn the dial to adjust camera settings such as ISO, shutter speed, and aperture without letting go of the remote controller.

### 2. Shutter Button

Press to take a photo. If burst mode is activated, multiple photos will be taken with a single press.

### 3. Video Recording Button

Press once to start recording video, then press again to stop recording.

### 4. Gimbal Dial

Use this dial to control the tilt of the gimbal.


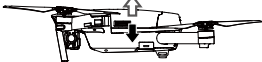

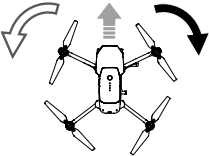

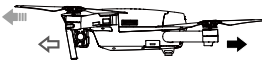

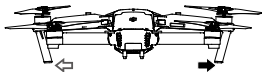

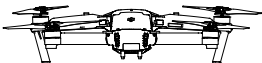
## Controlling Aircraft

This section explains how to control the orientation of the aircraft through the remote controller. The Remote Control is set to Mode 2 by default.



Stick Neutral/Mid-Point: Control sticks are in the center position.

Moving the Control Stick: The control stick is pushed away from the center position.

Remote Controller (Mode 2)	Aircraft (← Indicates Nose Direction)	Remarks
		<p>Moving the left stick up and down changes the aircraft's elevation.</p> <p>Push the stick up to ascend and down to descend. When both sticks are centered, the Mavic Pro will hover in place.</p> <p>The more the stick is pushed away from the center position, the faster the Mavic Pro will change elevation. Always push the stick gently to prevent sudden and unexpected elevation changes.</p>
		<p>Moving the left stick to the left or right controls the rudder and rotation of the aircraft.</p> <p>Push the stick left to rotate the aircraft counter-clockwise, push the stick right to rotate the aircraft clockwise. If the stick is centered, the Mavic Pro will maintain its current orientation.</p> <p>The more the stick is pushed away from the center position, the faster the Mavic Pro will rotate.</p>
		<p>Moving the right stick up and down changes the aircraft's forward and backward pitch.</p> <p>Push the stick up to fly forward and down to fly backward. Mavic Pro will hover in place if the stick is centered.</p> <p>Push the stick further away from the center position for a larger pitch angle (maximum 30°) and faster flight.</p>
		<p>Moving the right stick control left and right changes the aircraft's left and right pitch.</p> <p>Push left to fly left and right to fly right. The Mavic Pro will hover in place if the stick is centered.</p>
		<p>Press the Intelligent Flight Pause button once to exit from the ActiveTrack, TapFly and Intelligent Navigation flight mode. The aircraft will hover at the current position.</p>



### Adjusting Controller Sticks


Hold and twist the controller sticks clockwise or counter clockwise to adjust the length of the controller sticks. A proper length of controller sticks can improve the controlling accuracy.

### Flight Mode Switch

Toggle the switch to select the desired flight mode.

You may choose between; P-mode, S-mode.

Position	Flight Mode
	P-mode
	S-mode

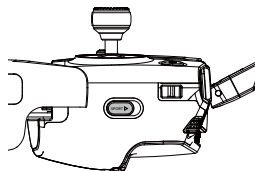


**P-mode (Positioning):** P-mode works best when the GPS signal is strong. The aircraft utilizes the GPS and Forward Vision System to automatically stabilize itself, navigate between obstacles or track a moving object. Advanced features such as TapFly and ActiveTrack are enabled in this mode.

**S-mode (Sport):** The handling gain values of the aircraft are adjusted in order to enhance the maneuverability of the aircraft in S-mode. The maximum flight speed of the aircraft is increased to 20 m/s in this mode. Note that Forward Vision System is disabled in this mode.


### RTH Button

Press and hold the RTH button to start the Return-to-Home (RTH) procedure. The aircraft will then return to the last recorded Home Point. Press this button again to cancel the RTH procedure and regain control of the aircraft.

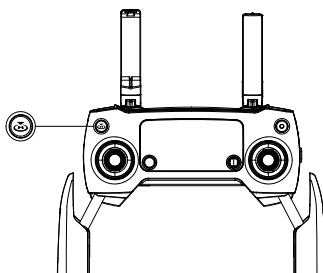


## Connecting Your Mobile Device

Tilt the mobile device clamp to the desired position and then place your mobile device into the cradle. Adjust the clamp down to secure the mobile device. To connect your mobile device to the remote controller using a USB cable, plug one end of the cable into your mobile device and the other end into the USB port on the back of the remote controller.

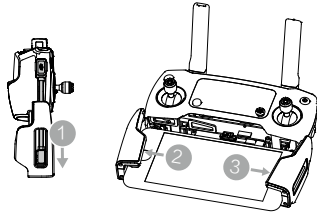

## Optimal Transmission Range


The transmission signal between the aircraft and the remote controller is most reliable within the area that is depicted in the image below:

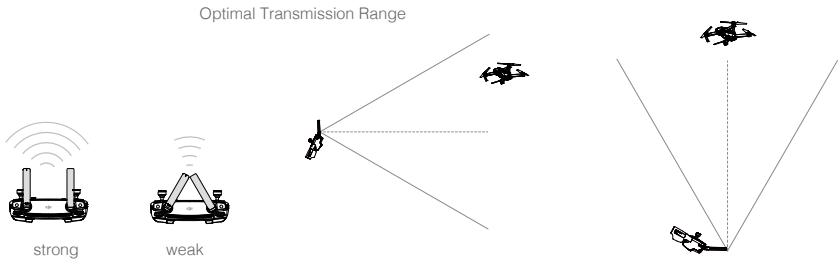

Ensure that the aircraft is flying within the optimal transmission zone. To achieve the best transmission performance, maintain the appropriate relationship between the operator and the aircraft.

## LCD Screen

LCD Screen displays various system statuses such as flight telemetries, battery level in real time. Refer to the figure below for the meaning of each icons in the LCD Screen.

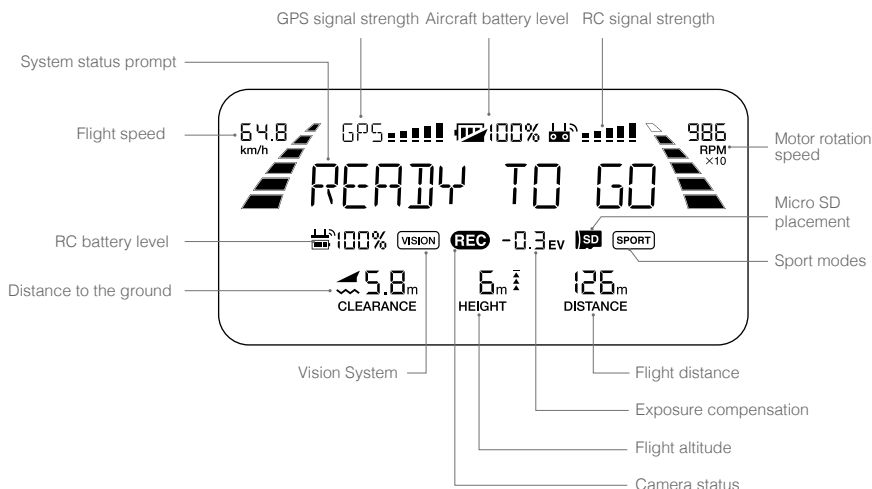


Remote Controller

## Linking the Remote Controller


The remote controller is linked to your aircraft before delivery. Linking is only required when using a new remote controller for the first time. Follow these steps to link a new remote controller:

1. Turn on the remote controller and connect to the mobile device. Launch the DJI GO app.
2. Turn on the Intelligent Flight Battery.
3. Enter "Camera" and tap on and then tap "Linking RC" button as shown below.

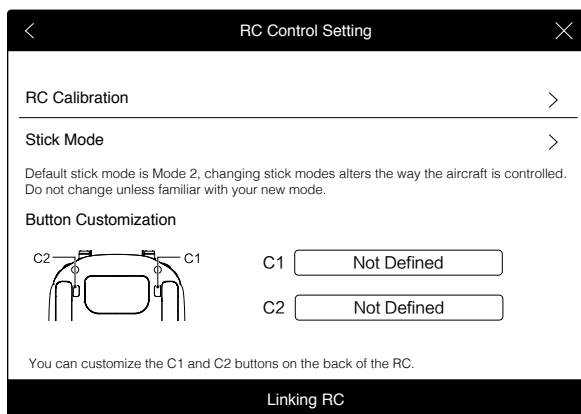


- ⚠ • Toggle the Control Mode switch to RC mode before linking.

- The remote controller is ready to link. The Remote Controller Status Indicator blinks blue and a beep is emitted.

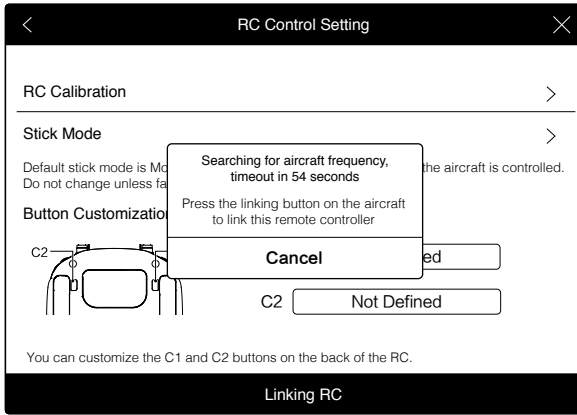

- Locate the linking button on the side of the aircraft, as shown in the figure below. Press the link button to start linking. The Remote Controller Status Indicator LED will display a solid green once the remote controller is successfully linked to the aircraft.

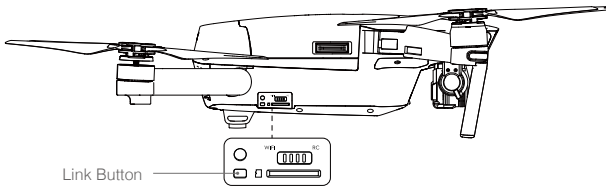

- The remote controller will un-link itself from an aircraft if a new remote controller is linked to the same aircraft.

## Camera and Gimbal

---

This section provides the technical specifications of the camera and explains the gimbal's operation modes.


# Camera and Gimbal

## Camera Profile

The on-board camera uses the 1/2.3 inch CMOS sensor to capture video (up to 4096x2160p at 24fps or 4K at up to 30 fps with the Mavic Pro and 12 megapixel stills). You may choose to record the video in either MOV or MP4 format. Available picture shooting modes include burst, continuous, and time-lapse mode. A live preview of what the camera sees can be monitored on the connected mobile device via the DJI GO app.

### Camera Micro SD Card Slot

To store your photos and videos, insert the Micro SD card into the slot, as shown below, before turning on the Mavic Pro. The Mavic Pro comes with a 16 GB Micro SD card and supports Micro SD cards up to 64 GB. A UHS-1 Micro SD card is recommended due to their fast read and write speeds allowing you to save high-resolution video data.

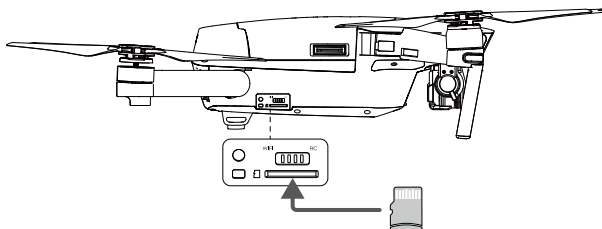

---

⊘ Do not remove the Micro SD card from the Mavic Pro when it is turned on.


---

☀ To ensure the stability of the camera system, single video recordings are capped at 30 minutes.

---

### Camera Data Port

Turn on the Mavic Pro and connect a USB cable to the Camera Data Port to download photos and videos to your computer.

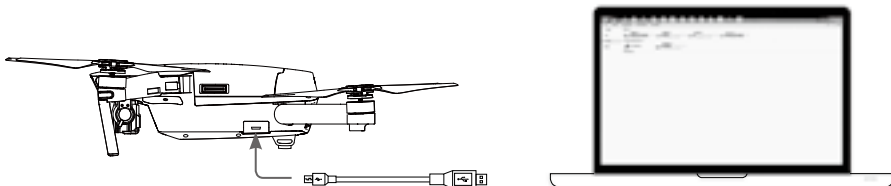

---

⚠ The aircraft must be turned on before attempting to access the files on the Micro SD card.

---


## Camera Operation

Use the Shutter and Video Recording buttons on the remote controller to shoot the images or videos through the DJI GO app. For more information about how to use these buttons, refer to “Controlling the Camera Page 32”.

### Gimbal

#### Gimbal Profile

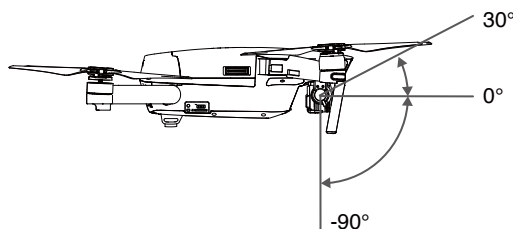


The 3-axis gimbal provides a steady platform for the attached camera, allowing you to capture clear, stable images and video. The gimbal can tilt the camera within a 120° range.



Use the gimbal dial on the remote controller to control the tilt movement of the camera.

#### Gimbal Operation Modes

Two gimbal operation modes are available. Switch between the different operation modes on the camera settings page of the DJI GO app. Note that your mobile device must be connected to the remote controller for changes to take effect. Refer to the table below for details:

	<b>Follow Mode</b>	The angle between gimbal's orientation and aircraft's nose remains constant at all times.
	<b>FPV Mode</b>	The gimbal will synchronize with the movement of the aircraft to provide a first-person perspective flying experience.
	<ul style="list-style-type: none"> <li>• A gimbal motor error may occur in these situations:                             <ol style="list-style-type: none"> <li>(1) the aircraft is placed on uneven ground or the gimbal's motion is obstructed</li> <li>(2) the gimbal has been subjected to an excessive external force, such as a collision. Please take off from flat, open ground and protect the gimbal at all times.</li> </ol> </li> <li>• Flying in heavy fog or clouds may make the gimbal wet, leading to temporary failure. The gimbal will recover full functionality after it dries.</li> <li>• It is normal for the gimbal to produce short pulse of beeping tone upon initialization.</li> </ul>	


## DJI GO app

---

This section introduces the four main functions of the DJI GO app.

# DJI GO App


The DJI GO app is a mobile application designed specifically for DJI equipment. Use this app to control the gimbal, camera, and other aircraft functions. The app features Equipment, Editor, Explorer and Me sections, which are used for configuring your aircraft , editing and sharing your photos and videos with others.

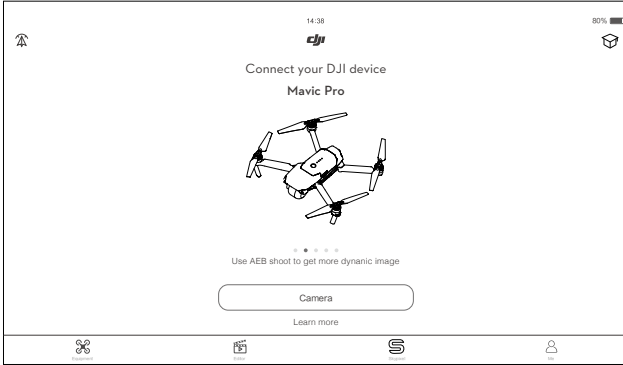

## Equipment

Enter Camera view by tapping on the Equipment icon from the main GUI.


### Camera View

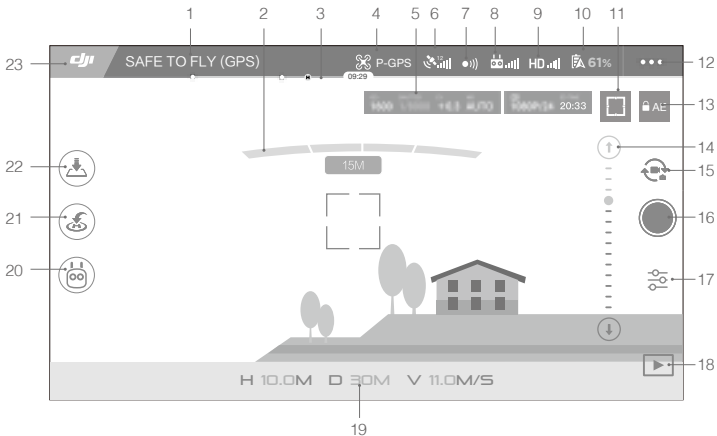


## 1. System Status

 : This icon indicates aircraft flight status and various warning messages.

## 2. Forward Vision System Status

 : Red bars are displayed when approaching obstacles. Orange bars are displayed when obstacles are away from the aircraft.

## 3. Battery Level Indicator

 : The battery level indicator provides a dynamic display of the battery level. The colored zones on the battery level indicator represent the power levels needed to carry out different functions.

## 4. Flight Mode

 : The text next to this icon indicates the current flight mode.

Tap to configure the MC (Main Controller) Settings. These settings allow you to modify flight limits and set the gain values.

## 5. Camera Parameters



Displaying camera settings parameters and capacity of the Micro SD card.

## 6. GPS Signal Strength

 : Shows the current GPS signal strength. White bars indicate adequate GPS strength.

## 7. Forward Vision System Status

 : Tap into this button to enable or disable features provided by the Forward Vision System.

## 8. Remote Controller Signal

 : This icon shows the strength of remote controller's signal.

## 9. HD Video Link Signal Strength

 : This icon shows the strength of the HD video downlink connection between the aircraft and the remote controller.

## 10. Battery Level


 **61%** : This icon shows the current battery level.

Tap to view the battery information menu, set the various battery warning thresholds, and view the battery warning history.


## 11. Focus/Metering Button

 : Tap to switch between focus and metering mode. Tap to select object for focusing or metering.


## 12. General Settings

 : Tap to enter general setting menu for setting metrics, enabling live stream and display flight routes and so on.

13. Auto Exposure Lock

 AE : Tap to lock the exposure value.


14. Gimbal Slider

 : Slide up or down to adjust the pitch of the gimbal camera.

15. Photo/Video Button

 : Tap to switch between photo and video recording mode.


16. Shoot / Record Button

 : Tap to start shooting photos or recording video clips.

17. Camera Settings

 : Tap to set ISO, shutter and auto exposure values of the camera.

18. Playback

 : Tap to enter the playback page. You can preview photos and videos as soon as they are captured.

19. Flight Telemetry

**H 10.0M    D 30M    V 11.0M/S**

Distance: distance between the aircraft and the Home Point.

Height: height from the ground.

Vertical speed: aircraft vertical speed.


Flight distance:

Distance between the aircraft the remote controller.


20. Intelligent Flight Mode

 : Icon is solid when Intelligent Flight Mode is in use.

21. Smart RTH

 : Initiate RTH home procedure. Tap to have the aircraft return to the last recorded home point.

22. Auto Takeoff/Landing

 : Tap to initiate auto takeoff or landing.


23. Back


 : Tap this icon to return to the main menu.

## Using Mobile Device to Control Aircraft

Apart from using the included remote controller, you may use the WiFi connection on the mobile device to control the aircraft. Follow the instructions below to learn how to control the aircraft via WiFi connection.

1. Power off the aircraft, then toggle the Control Mode Switch to the "WiFi" position.

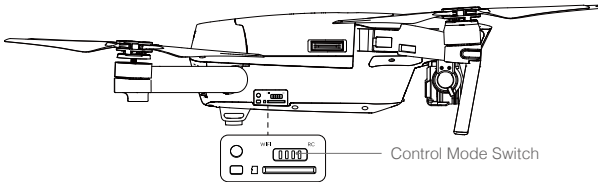


2. Power on the aircraft.
3. Enable the WiFi network on the mobile device, wait for 30 seconds and select "Mavic\_XXX" from the network list. Input the default connection password printed on the arms of the aircraft.
4. Launch the DJI GO app and enter "Camera View" from the main menu. If you are able to see video feed from the gimbal camera, that indicates the mobile devices is connected to the aircraft successfully.
5. Tap  icon to take off the aircraft automatically. Tap on the screen and use the Virtual Joysticks to navigate the aircraft.




- Select 2.4G or 5G WiFi transmission frequency from the mobile device.
- Press and hold the linking button for more than 5 seconds to reset the WiFi password to "12341234".
- Launch DJI GO app and tap on the QR scanner to scanner the QR code on the arms of the aircraft to connect the mobile device to the aircraft upon first use.

## Using Virtual Joysticks

Ensure the mobile device has been connected to the aircraft before using the Virtual Joysticks. The illustrations below is based on Mode 2 (left stick as throttle). Launch the DJI GO app and tap on the screen from "Camera View".

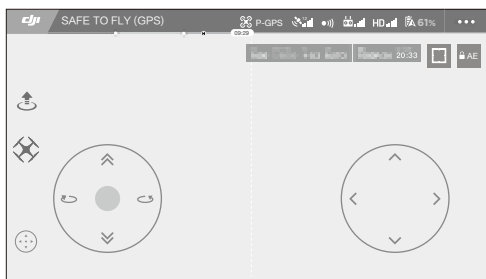


Virtual Joysticks GUI

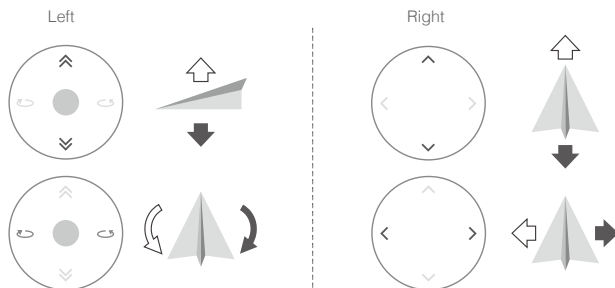

Move the aircraft upwards, downwards or rotate to the left or right by press on the controlling area on the left plane.

Move the aircraft forwards, backwards or rotate to the left or right by press on the controlling area on the right plane.

 The area beyond the white cycle is also responsive to the handling commands.

## Editor

An intelligent video editor is built into the DJI GO app. After recording several video clips and downloading them to your mobile device, go to Editor on the home screen. You can then select a template and a specified number of clips which are automatically combined to create a short film that can be shared immediately.

## SkyPixel

Find out about our latest events, featured products and trending Skypixel uploads in the Explore page.

## Me

If you already have a DJI account, you will be able to participate in forum discussions, earn Credits in the DJI Store, and share your artwork with the community.

# Flight

---

This section describes safe flight practices and flight restrictions.

# Flight

Once pre-flight preparation is complete, it is recommended that you use the flight simulator in the DJI GO app to hone your flight skills and practice flying safely. Ensure that all flights are carried out in an open area.

## Flight Environment Requirements

1. Do not use the aircraft in severe weather conditions. These include wind speeds exceeding 10 m/s , snow, rain and fog.
2. Only fly in open areas. Tall structures and large metal structures may affect the accuracy of the on-board compass and GPS system.
3. Avoid obstacles, crowds, high voltage power lines, trees, and bodies of water.
4. Minimize interference by avoiding areas with high levels of electromagnetism, including base stations and radio transmission towers.
5. Aircraft and battery performance is subject to environmental factors such as air density and temperature. Be very careful when flying at altitudes greater than 19, 685 feet (6000 meters) above sea level, as the performance of the battery and aircraft may be affected.
6. The Mavic Pro cannot operate within the polar areas.


## Flight Limits and No-Fly Zones

All unmanned aerial vehicle (UAV) operators should abide by all regulations set forth by government and regulatory agencies including the ICAO and the FAA. For safety reasons, flights are limited by default, which helps users operate this product safely and legally. Flight limitations include height limits, distance limits, and No-Fly Zones.


When operating in P-mode, height limits, distance limits, and No-Fly Zones function concurrently to manage flight safety. In A-mode, only height limits are in effect, which by default prevent the aircraft altitude from exceeding 1640 feet (500 m) .


### Maximum flight altitude & Radius Limits

Maximum flight altitude and radius limits may be changed in the DJI GO app. Be aware that the maximum flight altitude cannot exceed 1640 feet (500 meters). In accordance with these settings, your Mavic Pro will fly in a restricted cylinder, as shown below:

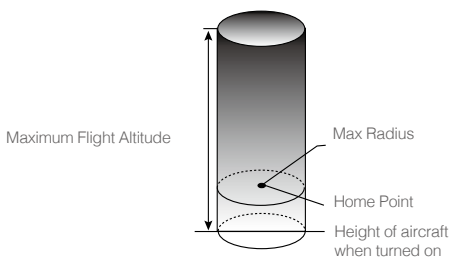

GPS Signal Strong  ..... Blinking Green

	Flight Limits	DJI GO app	Aircraft Status Indicator
Maximum Flight Altitude	Aircraft's altitude cannot exceed the specified value.	Warning: Height limit reached.	None.
Max Radius	Flight distance must be within the max radius.	Warning: Distance limit reached.	Rapid red flashing  ..... when close to the max radius limit.

GPS Signal Weak  ..... Blinking Yellow

	Flight Limits	DJI GO app	Aircraft Status Indicator
Maximum Flight Altitude	Height is restricted to 26 feet (8 meters) when the GPS signal is weak and Downward Vision System is activated. Height is restricted to 164 feet (50 meters) when the GPS signal is weak and Downward Vision System is inactivated.	Warning: Height limit reached.	None.
Max Radius	No limits		




- If the aircraft flies out of the limit, you can still control the aircraft, but you cannot fly it any farther.
- If the aircraft flies out of the max radius it will fly back within range automatically when GPS signal is strong.

## No-Fly Zones

All No-Fly Zones are listed on the DJI official website at <http://www.dji.com/flysafe/no-fly>. No-Fly Zones are divided into Airports and Restricted Areas. Airports include major airports and flying fields where manned aircraft operate at low altitudes. Restricted Areas include border lines between countries or sensitive institute. The details of the No-Fly Zones are explained as follow:


### Airport



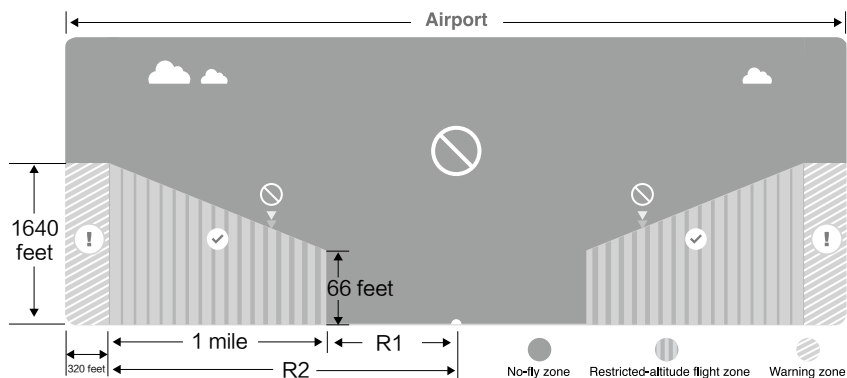



- (1) Airport No-Fly Zone are comprised of Take-off Restricted zones and Restricted Altitude Zones. Each zone features circles of various sizes.
- (2) R1 miles (value of the R1 depends on the size and shape of the airport) around the airport is a Take-off restricted zone, inside of which take off is prevented.
- (3) From R1 mile to R1 + 1 mile around the airport the flight altitude is limited to a 15 degree inclination. Starting at 65 feet (20 meters) from the edge of airport and radiating outward. The flight altitude is limited to 1640 feet (500 meters) at R1+1 mile
- (4) When the aircraft enters within 320 feet (100 meters) of No-Fly Zones, a warning message will appear on the DJI GO app.

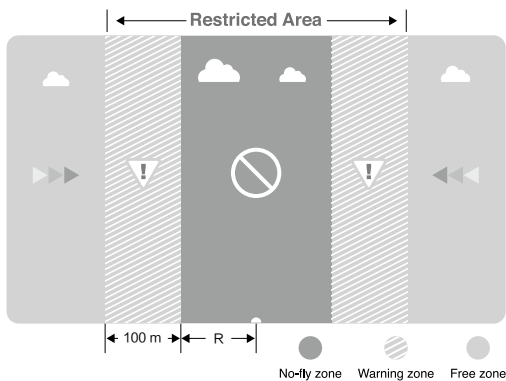



### Restricted Area

- (1) Restricted Areas does not have flight altitude restrictions.
- (2) R miles around the designated restriction area is a Take-off Restricted area. Aircraft cannot take off within this zone. The value of R varies based on the definition of the restricted areas.
- (3) A "warning zone" has been set around the Restricted Area. When the aircraft approaches within 0.062 miles (100 m) of this zone, a warning message will appear on the DJI GO app.



GPS Signal Strong  .....Blinking Green			
Zone	Restriction	DJI GO app Prompt	Aircraft Status Indicator
No-fly Zone 	Motors will not start.	Warning: You are in a No-fly zone. Take off prohibited.	 ..... Red flashing
	If the aircraft enters the restricted area in A-mode, but is switched to P-mode, the aircraft will automatically descend, land, and stop its motors.	Warning: You are in a no-fly zone. Automatic landing has begun.	
Restricted-altitude flight zone 	If the aircraft enters the restricted area in A-mode, but is switched to P-mode, it will descend to an appropriate altitude and hover 15 feet below the altitude limit.	R1: Warning: You are in a restricted zone. Descending to safe altitude. R2: Warning: You are in a restricted zone. Maximum flight altitude is restricted to between 20m and 500m. Fly cautiously.	
Warning zone 	No flight restriction applies, but there will be a warning .	Warning: You are approaching a restricted zone, Fly cautiously.	
Free zone 	No restrictions.	None.	

 Semi-automatic descent: All stick commands are available except the left stick command during the descent and landing process. Motors will stop automatically after landing.

-  • When flying in a safety zone, the aircraft's status indicator will blink red rapidly and continue for 3 seconds, then switch to indicate current flying status and continue for 5 seconds at which point it will switch back to blinking red.
- For safety reasons, please do not fly close to airports, highways, railway stations, railway lines, city centers, or other sensitive areas. Fly the aircraft only within your line of sight.

## Preflight Checklist

1. Remote controller, Intelligent Flight Battery, and mobile device are fully charged.
2. Propellers are mounted correctly and firmly.
3. Micro SD card has been inserted, if necessary.
4. Gimbal is functioning normally.
5. Motors can start and are functioning normally.
6. The DJI GO app is successfully connected to the aircraft.
7. Ensure that the sensors for the Forward and Downward Vision System are clean.

## Calibrating the Compass


Only calibrate the compass when the DJI GO app or the status indicator prompt you to do so. Observe the following rules when calibrating your compass:

- ☀️: • DO NOT calibrate your compass where there is a chance of strong magnetic interference, such as magnetite, parking structures, and steel reinforcements underground.
- DO NOT carry ferromagnetic materials with you during calibration such as cellular phones.
- The DJI GO app will prompt you to resolve the compass issue if the compass is affected by strong interference after calibration is complete. Follow the prompted instructions to resolve the compass issue.

### Calibration Procedures

Choose an open area to carry out the following procedures.

1. Ensure that the compass is calibrated. If you did not calibrate the compass as part of your pre-flight preparations, or if you have moved to a new location since the last calibration, tap the Aircraft Status Bar in the app and select "Calibrate", then follow the on-screen instructions.
2. Hold the aircraft horizontally and rotate 360 degrees. The Aircraft Status Indicators will display a solid green light.

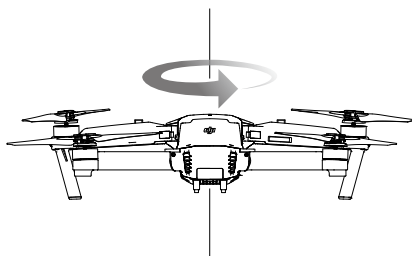

3. Hold the aircraft vertically, with nose pointing downward, and rotate it 360 degrees around the center axis. Recalibrate the compass if the Aircraft Status Indicator glows solid red.



4. Re-calibrate the aircraft if the aircraft status indicators blink red.



- If the Aircraft Status Indicator blinks red and yellow after the calibration procedure, move your aircraft to a different location and try again.



- Calibrate the compass before each flight. Launch the DJI GO app and follow the on-screen instructions to calibrate the compass. DO NOT calibrate the compass near metal objects such as a metal bridge, cars, scaffolding.
  - If the aircraft status indicators is blinking red and yellow alternately after placing the aircraft on the ground, the compass has detected magnetic interference. Change your location.
- 


### When to Recalibrate

1. When compass data is abnormal and the Aircraft Status Indicator is blinking green and yellow.
2. When flying in a new location or in a location that is different from the most recent flight.
3. When the mechanical or physical structure of the Mavic Pro has been changed.
4. When severe drifting occurs in flight, i.e. Mavic Pro does not fly in straight line.

## Auto Takeoff and Auto Landing

### Auto Takeoff

Use auto takeoff only if the Aircraft Status Indicators are blinking green. Follow the steps below to use the auto takeoff feature:


1. Launch the DJI GO app, and enter "Camera" page.
2. Ensure the aircraft is in P- mode.
3. Complete all steps on the pre-flight checklist.
4. Tap "", and confirm that conditions are safe for flight. Slide the icon to confirm and takeoff.
5. Aircraft takes off and hovers at (1.2 meters) above ground.



- Aircraft Status Indicator blinks rapidly when it is using the Vision Position System for stabilization. The aircraft will automatically hover below 3 meters. It is recommended to wait until there is sufficient GPS lock before using the Auto Take-off feature.
- 

### Auto-Landing


Use auto-landing only if the Aircraft Status Indicators are blinking green. Follow the steps below to use the auto-landing feature:

1. Ensure the aircraft is in P- mode.
2. Check the landing area condition before tapping "", to begin landing. Then follow the on-screen instructions.

## Starting/Stopping the Motors

### Starting the Motors

A Combination Stick Command (CSC) is used to start the motors. Push both sticks to the bottom inner or outer corners to start the motors. Once the motors have started spinning, release both sticks simultaneously.




### Stopping the Motors

There are two methods to stop the motors.

Method 1: When Mavic Pro has landed, push the left stick down ①, then conduct the same CSC that was used to start the motors, as described above ②. Motors will stop immediately. Release both sticks once motors stop.

Method 2: When the aircraft has landed, push and hold the left stick down. The motors will stop after three seconds.

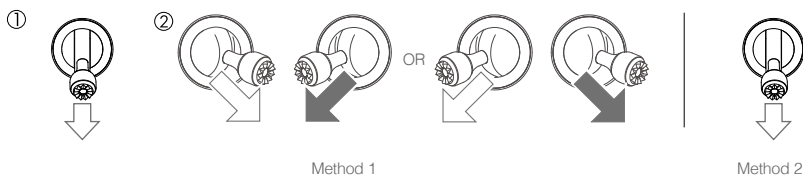

Method 1

Method 2

## Flight Test

### Takeoff/Landing Procedures

1. Place the aircraft in an open, flat area with the battery level indicators facing towards you.
2. Turn on the remote controller and your mobile device, then turn on the Intelligent Flight Battery.
3. Launch the DJI GO app and enter the Camera page.
4. Wait until the Aircraft Indicators blink green. This means the Home Point is recorded and it is now safe to fly. If they flash yellow, the Home Point has not been recorded.
5. Push the left stick up slowly to take off or use Auto Takeoff.
6. Shoot photos and videos using the DJI GO app.
7. To land, hover over a level surface and gently pull down on the left stick to descend.
8. After landing, execute the CSC command or hold the left stick at its lowest position until the motors stop.
9. Turn off the Intelligent Flight Battery first, then the Remote Controller.



- When the Aircraft Status Indicators blink yellow rapidly during flight, the aircraft has entered Failsafe mode.
- A low battery level warning is indicated by the Aircraft Status Indicators blinking red slowly or rapidly during flight.
- Watch our video tutorials for more flight information.

## Video Suggestions and Tips

1. Go through the full pre-flight checklist before each flight.
2. Select the desired gimbal operation mode in the DJI GO app.
3. Only shoot video when flying in P-mode.
4. Always fly in good weather and avoid flying in rain or heavy wind.
5. Choose the camera settings that suit your needs. Settings include photo format and exposure compensation.
6. Perform flight tests to establish flight routes and preview scenes.
7. Push the control sticks gently to keep the aircraft's movement smooth and stable.

# Appendix

---

# Appendix

## Specifications

### Aircraft

Weight	1.62 lbs (734 g)
Weight (including gimbal cover)	1.64 lbs (743 g)
Max Ascent Speed	16.4 ft/s (5 m/s) in Sport Mode
Max Descent Speed	9.8 ft/s (3 m/s)
Max Speed	40.4 mph (65 kph) in Sport Mode without wind
Max Service Ceiling Above Sea Level	16404 feet (5000 m)
Max Flight Time	Max flight time: 27 minutes (at 7 m/s cruising speed, 0% battery left) Max indoors hovering time: 25 minutes (0% battery left) Avg. flight time: 21 minutes (general flight, 15% battery left)
Max Hovering Time	24 minutes (0 wind)
Max Flight Distance	8 mi (13 km, 0 wind)
Operating Temperature	32° to 104° F (0° to 40° C)
Satellite Positioning Systems	GPS/GLONASS

### Gimbal

Controllable Range	Pitch: -90° to +30°, Roll: 0° or 90° (Horizontally and vertically)
--------------------	--

### Forward Vision System

Sensing Range	Precision measurement range: 2 ft (0.7 m) to 49 ft (15 m) Detectable range: 49 ft (15 m) to 98 ft (30 m)
Operating Environment	Surfaces with clear patterns and adequate lighting (lux > 15)

### Downward Vision System

Velocity Range	≤ 22.4 mph (36 kph) at 6.6 ft (2 m) above ground
Altitude Range	1 - 43 feet (0.3 - 13 m)
Operating Range	1 - 43 feet (0.3 - 13 m)
Operating Environment	Surfaces with a clear patterns and adequate lighting (lux > 15)

### Camera

Sensor	1/2.3" CMOS Effective pixels: 12.35 Megapixels (Total pixels: 12.71 M)
Lens	78.8° FOV, 28 mm (35 mm format equivalent) f/2.2 TV distortion < 1.5% Focus from 0.5 m to ∞
ISO Range	100 - 3200 (video), 100 - 1600 (photo)
Electronic Shutter Speed	8 s to 1/8000 s
Max Image Size	4000x3000 Single shot Burst shooting: 3/5/7 frames
Still Photography Modes	Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV Bias Interval

Video Recording Modes	C4K: 4096×2160 24p, 4K: 3840×2160 24/25/30p 2.7K: 2704×1520 24/25/30p FHD: 1920×1080 24/25/30/48/50/60/96p HD: 1280×720 24/25/30/48/50/60/120/180p
Video Storage Bitrate	60 Mbps
Supported File Systems	FAT32 (≤ 32 GB), exFAT (> 32GB)
Photo	JPEG, DNG
Video	MP4, MOV (MPEG-4 AVC/H.264)
Supported SD Cards	Micro SD™. Max capacity: 64GB Class 10 or UHS-1 rating required.

### Remote Controller




Operating Frequency	2.400 GHz to 2.4835 GHz
Max Transmission Distance	FCC Compliant: 4.3 mi (7 km); CE Compliant: 2.5 mi (4 km) Unobstructed and free of interference.
Operating Temperature	32° to 104° F (0° to 40° C)
Battery	2970 mAh
Transmitter Power ( EIRP )	FCC: ≤ 26 dBm; CE: ≤ 20 dBm
Operating Voltage	950 mA @ 3.7 V
Supported Mobile Device Size	Thickness supported: 6.5 - 8.5 mm, Max length: 160 mm Supported USB port types: Lightning, Micro USB (Type-B), USB Type-C™









### Charger

Voltage	13.05 V
Rated Power	50 W
<b>Intelligent Flight Battery</b>	
Capacity	3830 mAh
Voltage	11.4 V
Battery Type	LiPo 3S
Energy	43.6 Wh
Net Weight	Approx. 0.5 lbs (240 g)
Operating Temperature	41° to 104° F (5° to 40° C)
Max. Charging Power	100 W

## Aircraft Status Indicator Description

### Normal


 ..... Red, Green and Yellow Flash Alternately	Turning on and Self-Diagnostics
 ..... Yellow Flashes Slowly	Aircraft Warming Up
 ..... Green Flashes Slowly	Safe to Fly (P-mode with GPS and Forward and Downward Vision System)

 X2 ..... Green Flashes Twice	Safe to Fly (P-mode with Forward and Downward Vision System but without GPS)
 ..... Yellow Flashes Slowly	Safe to Fly (A-mode but No GPS and Forward and Downward Vision System)
<b>Warning</b>	
 ..... Fast Yellow Flashing	Remote Controller Signal Lost
 ..... Slow Red Flashing	Low Battery Warning
 ..... Fast Red Flashing	Critical Battery Warning
 ..... Red Flashing Alternatively	IMU Error
 — Solid Red	Critical Error
 ..... Red and Yellow Flash Alternatively	Compass Calibration Required

## Firmwares Update

Use DJI Assistant 2 or DJI GO app to update aircraft and remote controller. Follow the instructions below to update the firmware through DJI Assistant 2:


1. Connect the aircraft to a computer with a USB cable.
2. Launch DJI Assistant 2 and login with your DJI account.
3. Select "Mavic Pro" and click on the "Firmware Updates" on the left panel.
4. Select the firmware version that you wish to update.
5. Wait for the firmware to be downloaded and firmware update will start automatically.
6. Reboot the aircraft after the firmware update is complete.

-  • The firmware update will take around 15 minutes. It is normal that the gimbal go limp, aircraft status indicator blinks abnormally and the aircraft reboots. Please wait patiently until the update is complete.
- There will be no sound prompts during the update.
- Ensure the computer has access to the Internet.
- Ensure the battery level is adequate for the Intelligent Flight Battery.
- Do not disconnect the aircraft from the computer during firmware update.

## Intelligent Flight Mode

Intelligent Flight mode includes Course Lock, Home Lock, Point of Interest (POI), Follow Me and Waypoints features to assist users to create professional shoots during the flight. Course Lock and Home Point lock helps to lock the orientation of aircraft so that the user can focus more on other operations. Point of Interest, Follow Me and Waypoints mode enable aircraft to fly automatically according to the pre-set flight maneuvers.

Course Lock	Lock the current nose direction as the aircraft's forward direction. The aircraft will move in the locked directions regardless of its orientation (yaw angle).
Home Lock	Pull the pitch stick backward to move the aircraft toward its recorded Home Point.
Point of Interest	The aircraft will orbit around the subject automatically to allow the operator can be more focus on framing their shoot on the subject in Point of Interest.
Follow Me	A virtual tether is created between the aircraft and the mobile device so that the aircraft can track your movement as you move. Note that Follow Me performance is subject to the GPS accuracy on the mobile device.
Waypoints	Record a flight path, then the aircraft will fly along the same path repeatedly while you control the camera and orientation. The flight path can be saved and re-apply in the future.

Enable Multiple Flight Mode by launching the DJI GO app > Camera View >  > Advanced Settings > Multiple Flight Mode before using the Intelligent Flight Mode for the first time.

## After-Sales Information

Visit the following pages to learn more about After-sales policy and warranty information:

1. After-sales Policy: <http://www.dji.com/service>
2. Refund Policy: <http://www.dji.com/service/refund-return>
3. Paid Repair Service: <http://www.dji.com/service/repair-service>
4. Warranty Service: <http://www.dji.com/service/warranty-service>

## FCC Compliance

### FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Compliance Information

### FCC Warning Message

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator&

your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### IC RSS warning

This device complies with Industry Canada licence-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent ariel est conforme aux CNR d'Industrie Canada licenciables aux aereils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'areil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'areil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### IC Radiation Exposure Statement:

This equipment complies with IC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### KCC Warning Message

“해당 무선설비는 운용 중 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없습니다.”  
 “해당 무선설비는 운용 중 전파혼신 가능성이 있음”

### NCC Warning Message

低功率電波輻射性電機管理辦法

第十二條經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

DJI Support  
<http://www.dji.com/support>

This content is subject to change.

**Download the latest version from**  
<http://www.dji.com/mavic>



If you have any questions about this document, please contact  
STORE.DJI.BG by sending a message to [sales@dji.bg](mailto:sales@dji.bg)