

M-300 user's manual




Caution:

- 1. Thank you for purchasing the M-series WTGS. Please refer to the manual before installation;**
- 2. The installation should be done by the experienced technicians. Please refer to the manual strictly;**
- 3. Do not open the generator or controller without instructions while doing the maintenance.**
- 4. Please install the system under no-wind weather.**
- 5. The series are street lighting wind generators and do not recommend for family power generation.**


1. Technical Parameter

Model	M-300
Rated Voltage (DCV)	12
Rated output (W)	90
Start-up wind speed (M/S)	1
Survival wind speed (M/S)	35
Rotor diameter (M)	0.82
Blade No.	6
Blade material	Reinforced fiber glass
Controller	Built-in
Protection mode	Short circuit
Lifetime (years)	15-20
Packing form	carton
Protection grade	IP65
Net Weight(KG)	10.0

2. Power Curve

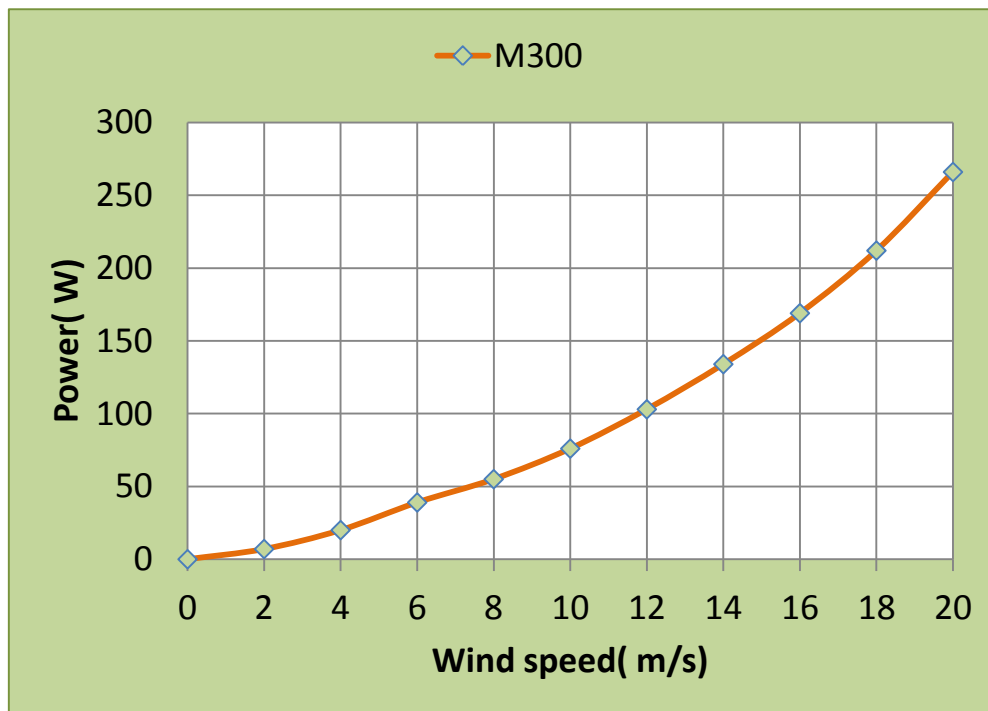


3. Structure

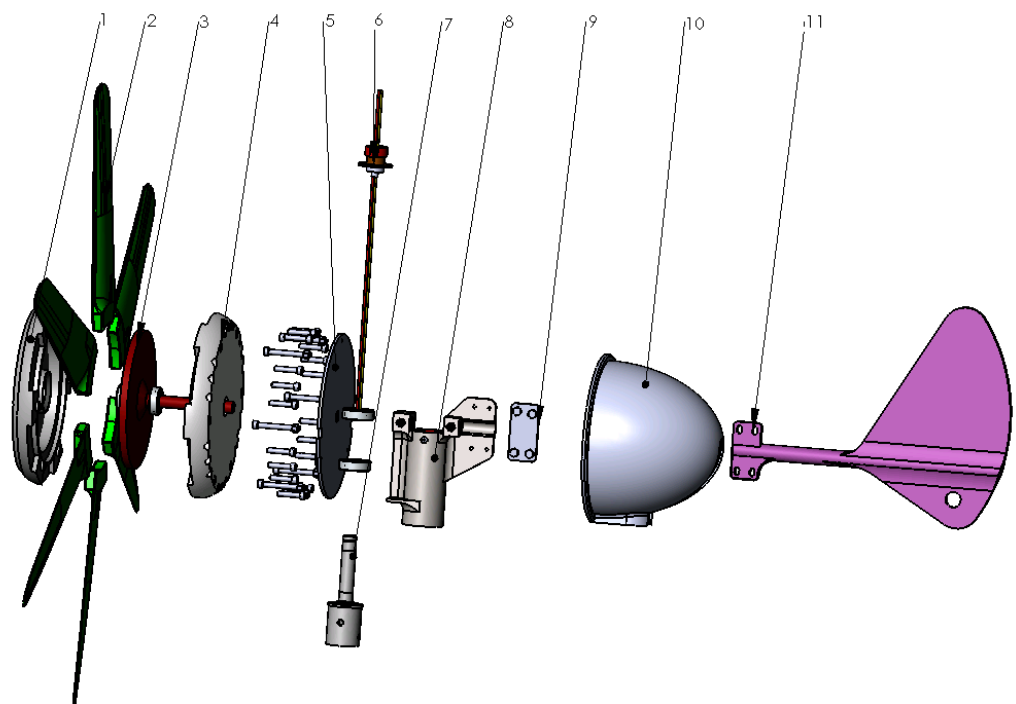


No.	Description	No.	Description
1	Front cover	7	Gyro support
2	Blades	8	Gyro
3	Stator	9	Pressing plate
4	Back cover	10	Back nose cone
5	Clamp	11	Tail vane
6	Slip ring		

4. Installation


- λ Connect the cables with the terminal from generator. Please pay attention to the positive and negative. The cable will be elicited from the tower .

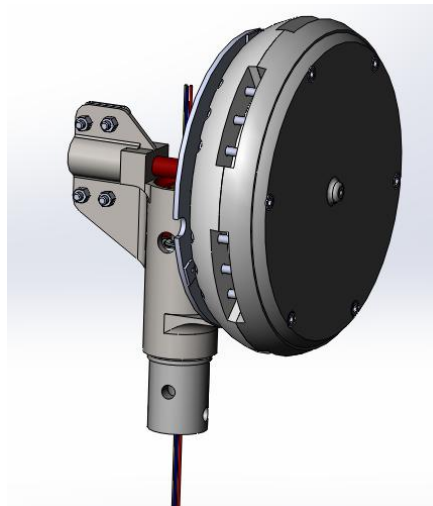


- λ Connect the small pole and tower with 4pcs of nuts (M 10*16).

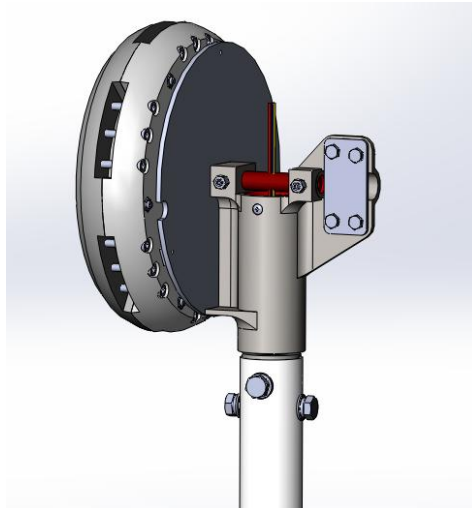


λ Install the blades to the generator with 18pcs of bolts (M6*28).

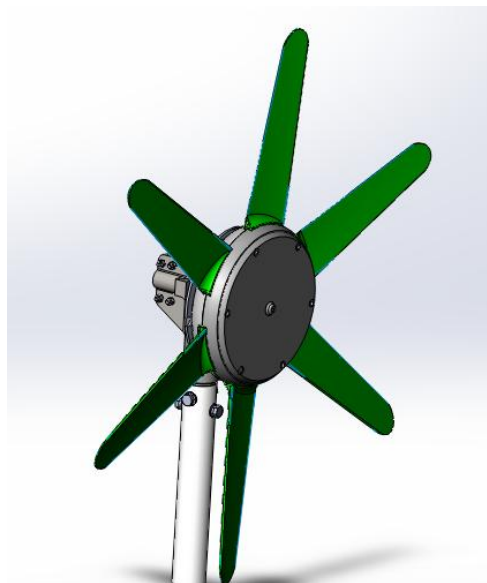


λ Fasten the tail rod, rod plate and gyator with 4pcs of screws (M6*30).

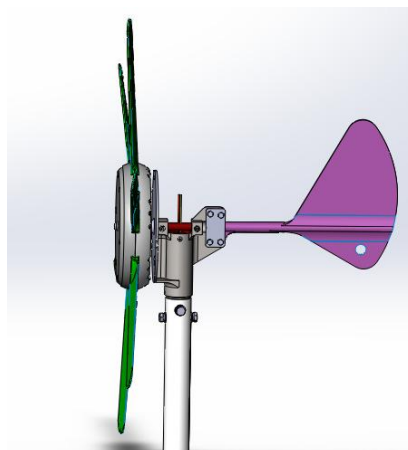

- λ Fasten the gyration front cover to the back cover via 3pcs of bolts (M5*10).

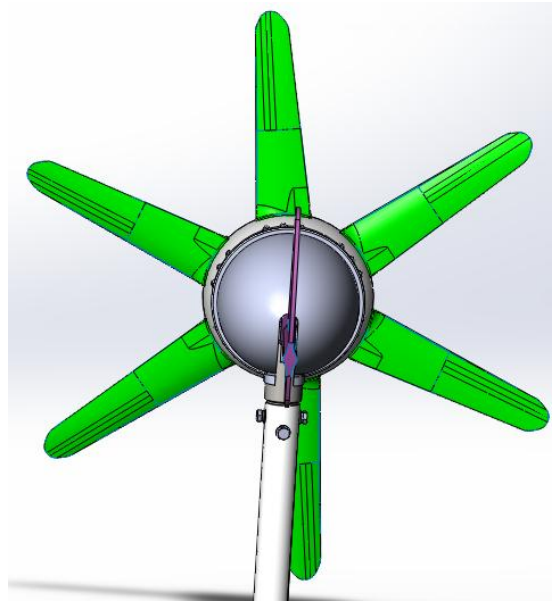


- λ Connect the cable elicited from generator to the battery. (Note: red for positive and black for negative)

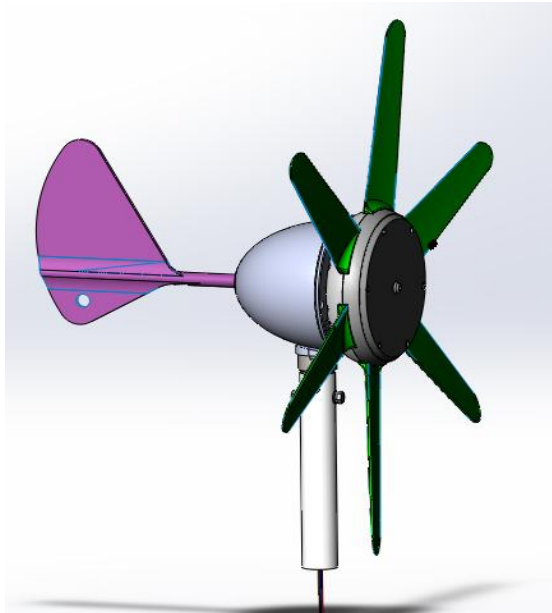

3. Special note:

Connection diagram between wind generator and pole

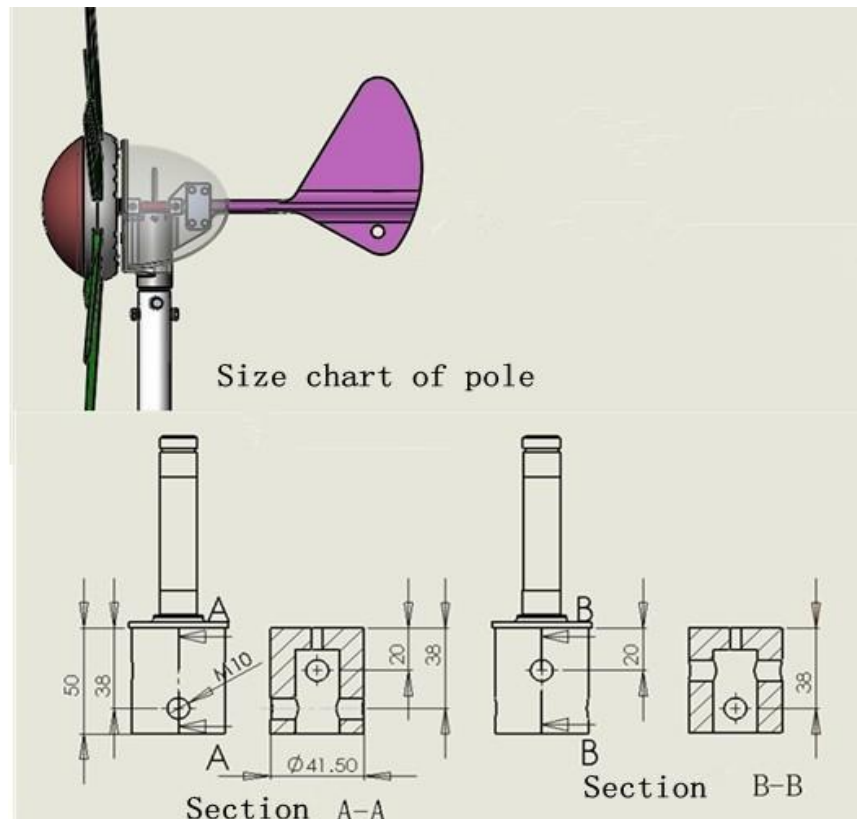

1. Connect small pole and pipe(48*2.5mm diameter).
2. Drill 2pcs of symmetrical screw holes(12mm diameter) above a distance of 20mm at the upper end of pipe.
3. Clockwise 90° in the hole above the distance of 20mm, and drill 2pcs of symmetrical screw holes(12mm diameter) above a distance of 38mm at the upper end of pipe.
4. Fasten the pipe between wind generator and tower with 4pcs screws(M10).

Note: The joints between wind generator and pole need a torque of 80nm. Fix with locking grain rubber in suitable condition.