

NUMI

rigid spc

TECHNICAL DATA NUMI SPC

Material: 4mm SPC with a 1mm EVA (0.3mm Wear Layer)

Dimensions: 180 x 1220mm
10 pcs/box, 2.20sqm/box, 60 boxes pallet

Weight per Box: 18.66kg

Weight per Pallet: 1119.60kg

TEST ITEM	TEST METHOD	REQUIREMENT	TEST RESULT	VERDICT
SIZE	ASTM F2055-10	Length: 1800±2.36mm Width:228±0.30mm	Length: 1800mm Width:228mm	PASS
THICKNESS	ASTM F386-11	8.0±0.26mm	Average:8.1mm Min:8.0mm Max:8.2mm	PASS
SQUARENESS	ASTM F2055-10	≤ 0.25mm	Deviation range: 0.00mm ~ +0.06mm	PASS
RESIDUAL INDENTATION	ASTM F1914-07	Average value: ≤ 8% Maximum value: ≤ 10%	Average:0.6% Min:0.4% Max:0.7%	PASS
DIMENSION STABILITY	ASTM F2199-09	≤ 0.51mm/305mm	Length Direction:-0.01% Width Direction:-0.02%	PASS
RESISTANCE TO CHEMICALS	ASTM 925-13	No more than a slight change in surface dulling, surface attack or staining	Rating 0: No change	PASS
RESISTANCE TO HEAT	ASTM F1514-03	Average ΔE*ab ≤ 8.0	Average ΔE*ab: 0.66	PASS
RESISTANCE TO LIGHT	ASTM F1515-15	Average ΔE*ab ≤ 8.0	Average ΔE*ab: 1.7	PASS

TEST ITEM	TEST METHOD	TEST RESULT
THICKNESS OF WEAR LAYER	ASTM F410-08	0.3mm
ABRASION RESISTANCE	ASTM D4060-14	Weight loss: 108mg Abrasion index: 21.6 (1000mg/cycle)
PEEL STRENGTH	ASTM D903-98	0.34 kg/mm
STATIC COEFFICIENT OF FRICTION	ASTM C1028-07	Dry condition: 0.87 Wet condition: 0.79
CASTOR CHAIR RESISTANCE	NALFA/ANSI LF-11	No visible damage after 25000 revolutions
STATIC LOAD	ASTM F970-17	Applied load:250lb Residual indetation: 0.13mm
RESISTANCE TO IMPACT	ASTM F1265-03a	≤ 5%



NUMI

rigid spc

NUMI SPC: INSTALLATION & MAINTENANCE

Before you start installation of this flooring product, please thoroughly read these Owner/ Purchaser/Installer Responsibilities and Installation Instructions:

By starting the installation of your floor installation, you are agreeing that you have read and understand all Owner/Purchaser/Installer requirements and responsibilities and are aware that deviating from the instructions and recommendations in this installation guide may result in voiding the product's warranty.

- It is the sole responsibility of the Owner/Purchaser/Installer, prior to installation, to verify that the area/environment planned for installation is suitable for the flooring and meets all local building codes and that all subflooring is dry, sound, flat and clean and meets or exceeds all industry standards; as well as the recommendations listed herein. The manufacturer and distributor accept no responsibility for product failure extending from or related to failure to meet job area/environment and subflooring requirements.
- The Owner/Purchaser/Installer assumes full responsibility for the final inspection of this product. Inspection should be done prior to installation and should include: colour, factory finish, milling and/or locking system damages. If the product is not acceptable, DO NOT install it. Contact your supplier immediately for assistance. This flooring warranty DOES NOT cover materials with visible defects after they are installed.
- This product may be installed over radiant heating systems. The Hydronic or Embedded radiant heating system needs to be operational and working for one week prior to install date to reduce any residual moisture. Should the Radiant heating system be in use at the time of installation it is necessary to lower the temperature to 18°C for a minimum of three days prior to the installation date, during the entire installation, and for 24 hours following upon completion of the installation. The temperature can then be gradually increased in 3° increments. Temperature must never exceed 29°C. It is the responsibility of the purchaser to confirm the suitability of the radiant heating system for use with this product. Any damage to the floor caused by the radiant heating system will not be covered by the product warranty.

Should the radiant heating system be an aftermarket system, it is recommended you confirm with the manufacturer of that system that Luxury Modular Flooring (considered resilient) can be installed over their system. Any problems associated with aftermarket radiant heating systems are not the responsibility of this manufacturer.

WARNING

For installation over, old resilient floor coverings or when considering removing existing resilient floors, please be advised that these products may possibly contain asbestos fibers or crystalline silica. Please follow all recommended Resilient Floor Covering Institute (RFCI) work practices as www.rfci.com

Installation tool and accessory requirements:

NUMI

rigid spec

Before starting to install your floor, ensure you have all the necessary and correct tools, equipment and accessories, including:

- Work gloves
- Hammer
- Straight edge or ruler
- Safety glasses
- 10mm spacers or shims
- Saw (miter, chop, hand, circular or jig type)
- Broom and dust pan
- Tape measure
- Pencil
- Tapping block
- Chalk-line & chalk (string-line)
- Utility knife & sharp blades

Before you start the installation of your flooring you must do the following:

- When calculating flooring square meter requirements, allow for 10% for waste, cuts, future needs and replacements. If installing a diagonal, formal or other special pattern or smaller rooms, allow for 15% to 20% additional materials.
- This floor may be installed virtually anywhere in your home. It requires an installation environment with a stable year-round temperature between 15° to 32°C. Temperature fluctuations outside this range need to be kept to a minimum to avoid excessive expansion/contraction.
- This floor does not require acclimation prior to installation as long as it has been stored within the following temperature range: 15° to 32°C a minimum of 3 days prior to installation.

Preparation of your subfloor:

- Floating installations may be made over most subfloors including: Concrete, plywood, OSB, ceramic/porcelain tile, smooth stone, marble, granite, and a single layer of non-cushioned resilient flooring. If you are installing over an existing floor, the existing floors must be securely attached (nailed or glued) to the subfloor and be smooth, flat and level. When installing over an existing nailed down hardwood flooring, the new flooring must be installed 90° to the old flooring. DO not install over any floating floor.
- Wooden subfloors: Must be a minimum of 19mm CDX Plywood, OSB, or APA approved plywood. Sand down high areas and fill low areas with a Portland based patching compound. To avoid squeaking, nail or screw the floor every 150mm. Repair or replace any damaged sheathing.
- Concrete: Most concrete subfloors (slabs) are not flat and must be levelled before installation. In all cases, verify the subfloor using a 3m long straightedge to locate high and low areas. High and low areas exceeding 3mm in a 3m radius must be corrected and all grout lines, cracks, holes etc., wider or deeper than 4mm need to be filled. Corrections should be made using a Portland based self-levelling compound. Voids and bumps in the subfloor may prevent your floor's locking system from locking securely and may damage or weaken the locking system.
- Sweep or vacuum your subfloor immediately prior to installation ensuring the floor is clean and acceptable for installation. Verify your subfloor is dry and clean. Moisture not to exceed maximum of 3%, (Tramex CME4).

Check to ensure your subfloor is completely smooth. Nail and screw heads must be countersunk. Sand any protrusions including joints/seams between subfloor sheets. Check your subfloor structure. Damaged subfloor panels require repairing or replacing.

- NOTE: Avoid installation over subfloors with excessive flex or deflection. The installation of the flooring will not reduce any flex or deflections in the subfloor. Excessive subfloor deflection may damage the locking system and cause it to fail.
- The flooring may be installed over existing ceramic tiles. If tiles are uneven, skim coat the floor with a floor levelling compound and fill or repair any damaged or cracked tiles.



NUMI

rigid spc

INSTALLATION INSTRUCTIONS

Do not install this product over extra pads, doing so will damage the locking system and void the product warranty.

Wall jamb & doorway preparation:


Remove all trim, baseboards and quarter rounds. (Hint) Identify them on their reverse side for reinstallation.

It is recommended to undercut doorjamb so the material slides easily under them. A 10mm expansion space is necessary here as well. If the door casings are metal the 10mm expansion space can be filled using a silicone. Please note the expansion gap must be maintained under the doorjamb. No acrylic sealants to be used under skirting.

Basement area installations:

While the product is a waterproof flooring it is recommended that concrete slabs be tested for moisture vapour emissions with either a Calcium Chloride or an In Situ Relative Humidity test. Corrective measures must be taken if the level of moisture emission exceeds 8 lbs. Calcium Chloride or 85% Relative Humidity. Excessive moisture in the substrates can migrate up possibly causing mould and mildew issues if left unattended. A Moisture barrier at 100mic DPC is required.

Figure 1: T-Moldings

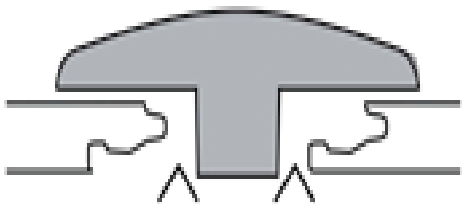

IMPORTANT general tips for installing the floors:

- Squeaks are caused when the subfloor separates from the joist or moves. This happens when there are temperature and humidity changes or when construction “settles”. When the subfloor moves up and down on a pulled nail or incompletely set screw, it causes the subfloor to squeak. “It is highly recommended” you carefully inspect your subfloor for any missing nails or screws and service them as needed.
- Mixing panels from a minimum of 3 different boxes during installation will help to assure an even distribution of any minor colour variations, slight variances in texture and gloss levels. Hint: Try dry laying out your panels prior to final assembly to confirm this is an acceptable layout. The flooring design variation should also be distributed evenly throughout your room to ensure that the flooring with a similar design is not adjacent to one another. Never line end joints allowing four corners to come together. End joints must have a minimum stagger of 150mm apart. Refer to figure 2.



GLOBAL STREAM
IMPORT EXPORT
Imported and distributed by

CREATED BY
COMO
True Quality is an Experience
www.globalstream.co.za

FIND US ON
SOCIAL MEDIA

SCAN ME
TO VISIT OUR
WEBSITE
www.globalstream.co.za

NUMI

rigid spec


- Verify locking profile is free of any contamination including: debris, grit, milling chaff or other material; remove any contamination before installing. Also verify that the locking profile was not damaged during shipping or handling. Panels with imperfections or damage can often be trimmed to eliminate the condition, allowing the panel to be used as a starter or finish section.
- Do not tap directly on the ends or the sides of the floor. When using a tapping block, only tap on the long sides of the floor to ensure rows fit tightly. If you need to remove a plank or tile, carefully lift the plank or tile you wish to remove, as well as the previously installed plank or tile and slide it out laterally so not to damage the locking mechanism.
- Room and product temperatures must be between 15°C and 32°C when installing the flooring.

Getting started:


- Establish your starting line for the first row by measuring the width of the room. Add 10mm to this number and mark the floor at each end of your starting wall, approximately 150mm away from the corners. Snap a line along the wall where you wish to start. This will ensure your first row is straight, even if your wall isn't.
- Check to make sure there will be approximately 10mm between the edge of your first row of planks or tiles and the wall. This space allows for slight expansion of the floor and will be covered by the baseboard / quarter-round. If there is too much space in any place along the wall, you will have to move your chalk line in. If there is too little space at any point along the wall, however, you may have to trim some of the planks or tiles in the first row.
- In this application the flooring is being installed tongue into groove. Layout first row of planks or tiles, the side with the narrow tongue (male) should be facing the wall. Lock the ends of the planks or tiles together by inserting the next plank into previous plank or tile at a +/- 20° angle. First plank should start 10mm from the wall. Cut the last plank to finish 10mm from opposite wall. Refer to Step 1 of Figure 3 on the next page.
- We recommend you use temporary 10mm shims to keep the floor away from the walls, as the floor will shift during installation due to it being a floating floor. Place the shims every 600-900mm along the starting wall, plus at the end of each of the starting rows so planks or tiles do not shift when clicked into place.
- Installing 1st row: carefully inserting the ends of one plank into the next, cutting the last plank so there is a 10mm gap once locked into place. Complete the entire length of the 1st row; if the waste from the piece is 150mm or longer, it may be used to start the next row.
- Important note: Mark your cut on the last plank or tile and use a saw or sharp utility knife to cut it. If you need to remove and replace any planks or tiles during installation, carefully lift and slide out the planks or tiles to avoid damaging the end locking profile.
- When installing 2nd and subsequent rows: When possible, start the next row using the leftover cut piece of the last piece of the previous row. Place a 10mm shim between the wall and the end of the first plank in the 2nd row. Start the 2nd row by installing the first plank or tile into the previous row securely. Insert the end of the 2nd plank or tile into the end of the 1st plank or tile at a +/- 20° angle, there should be a slight gap of 4mm on the long side of the boards from the 1st row. Lower the plank or tile to lock the ends together. Next, gently lift the 2nd plank or tile of the 2nd row at +/- 15° and gently push/slide and lower the tongue (male) into the groove of the 1st row. Before moving onto the 3rd plank or tile, check that both the end and side of the 2nd plank or tile and fully closed and tight. Refer to Figure 3.
- NOTE: The 100% correct installation of the 1st and 2nd rows is very important. Once these 2 rows are fully installed, verify that all of the ends of the planks or tiles are perfectly aligned and that all of the long seams and 100% fully closed. Correct any alignment issues or small gaps

Before continuing the installation:

- Continue installing the remaining planks of the 3rd and subsequent rows in the same manner, cutting the last plank so there is a 10mm gap once locked into place.

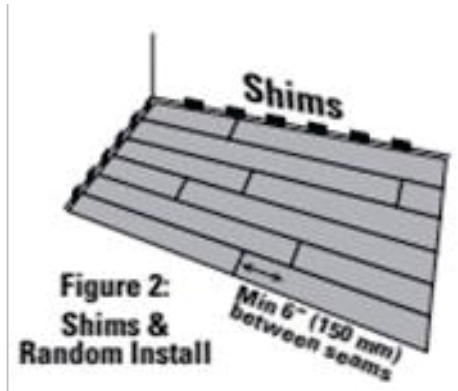

- To achieve a random stagger, it may be possible to use the last cut piece from each row to start the next row. Install each row completely.
- To avoid having the end seams lining up and patterns forming, trim the left end of the starting plank or tile so that the first end seam does not align with the previous 6 rows. This will give your floor a more attractive appearance. Refer to figure 2.
- Inspect the floor and verify the floor is perfectly straight and that all sides and ends of planks or tiles are fully clicked together and all seams /joints are fully closed and locked together. Lift and reinstall any areas where planks or tiles are not fully clicked and locked together. Also verify you are satisfied with each plank's appearance, condition and quality.
- Continue to install the floor in sections of 5 complete rows. After each 5 rows, again inspect the floor as outlined above.
- Before installing last row, again verify the entire floor for any gaps, errors or shifting. Ensure there is a minimum 10mm gap around the entire floor's perimeter; this includes all walls, door jambs, posts, heating ducts, plumbing, cabinets, stairways, railings and any other vertical surface or obstruction.
- For installation surfaces with more than 8m in width and 8m in length, and for considerably angled rooms, expansion joints are required.
- Measure and cut the last planks or tiles to fit so that there is a minimum 10mm gap along the last wall.
- Remove all temporary shims, sweep & vacuum immediately. Follow the instructions for care and maintenance as recommended in this guide. If there is other construction planned, cover the floor with adequate protection to avoid incidental damage.

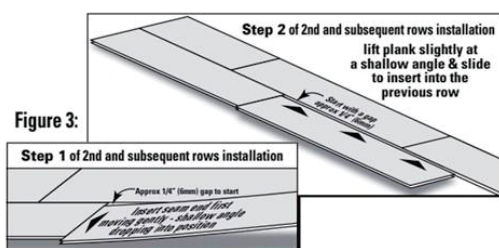

NUMI

rigid spec

Maintenance of your floor:

- Regular vacuuming and periodic cleaning of your floor will protect its beauty and lasting finish. More frequent attention is recommended in high traffic areas, as well as near exterior and garage entrances. For a thorough cleaning, use specially formulated vinyl and hardwood flooring cleaning products and a micro-ber mop available at most hardware and flooring retailers. Use as per manufacturer's recommendations.
- Do not use cleaning products which contain surfactants, or which leave a residue. Use of these products will leave a dull film on your floor and may void product warranty. Before using any cleaning product, test it first on a small, less visible area of the floor.
- Place small non-slip mats or rugs at all exterior or garage entrances to the home to protect the floor from dirty shoes, boots, etc. This will remove loose dirt and debris from shoes. Clean rugs and mats on a regular basis. Note: Rugs, mats, and area rugs containing latex and dyes may cause permanent staining. For nonslip area rugs, consult a reputable floor covering vendor.
- Do not use polishing products. The use of these products may leave a dull residue and may void your warranty.
- Do not use abrasive products, bathroom cleaning products, ammonia-based products, wax based polishes/cleaners, acrylic finishes, acidic or vinegar-based solutions, oil soaps, detergents, chlorine-based products, bleach, solvents or any type of polishes. The use of these products may permanently damage the finish of your floor and may void the warranty.
- Keep your pet's nails trimmed, especially larger dogs, as their nails may scratch the floor. Note that pet nails from medium to larger sized dogs may leave minor marks on the surface of this floor. This is normal and not considered a defect.
- Clean spills immediately to prevent them from running between the cracks. Small spills should be cleaned up with a lightly dampened cloth.
- Do not roll or slide furniture or appliances with castors across the floor. Castors can damage the floor's finish. Carefully and safely lift and move the object into place. To minimize possible wear and damage, felted furniture leg coasters are recommended under furniture legs. Install felt floor protectors under furniture legs to avoid scuffing or scratching. Clean or replace protectors on a regular basis to remove built up soil that may have become embedded. Chairs with casters will damage the flooring and void the warranty. It is necessary to place hard surface chair mats under any chair with casters.
- Worn high heels will most likely damage your flooring. Damage resulting from any footwear is specifically excluded from this warranty.

Important facts:

- Do not install this floor over any type of soft underlay like foam, carpet or other soft, rough, uneven or non- at surfaces.
- Direct exposure to sunlight from large windows and patio doors can cause the surface of the floor to exceed the product installation temperature limitations, it may be necessary to install blinds, drapes or UV protective film. Rapid temperature change (heat from direct sunlight) may cause floor to temporarily expand in these areas.
- The floors are designed for indoor use only and are not approved for any type of exterior use; installation outdoors will void product warranty.



True Quality is an Experience

Como RIVER - Residential Lifetime | Limited Light Commercial 5/10 Years
Como MOUNTAIN - Residential Lifetime | Limited Commercial 5/10 Years
Como FIRE - Residential Lifetime | Limited Commercial 5/10 Years
Como MINERAL - Residential Lifetime | Limited Commercial 5/10 Years
Como DESERT - Residential Lifetime | Limited Commercial 5/10 Years
Como NUMI SPC - Residential Lifetime | Limited Light Commercial 5/10 Years
Como VOLCANO SPC - Residential Lifetime | Limited Light Commercial 5/10 Years
Como STONE SPC - Residential Lifetime | Limited Light Commercial 5/10 Years
Como ROYAL SPC - Residential Lifetime | Limited Light Commercial 5/10 Years

IMPORTANT NOTE:

Our Como flooring products come with a Lifetime Structural (Residential) Warranty/Lifetime Residential Finish Manufacturer Warranty/ 5-10 Year Limited Commercial Finish Warranty. The warranty is not transferable and applies to the original purchaser of the product only, and the warranty also guarantees that the surface will not peel off or wear-through for the duration of the installation. Once the product is installed this confirms acceptance of the product, failure to follow Pre-Installation and installation guidelines will void the manufacturer's warranty. The warranty does not cover damage from improper care, use, installation or maintenance, including excessive water damage, denting, scratching, fading, staining or telegraphing. Please review our warranty coverage information for specifics terms and conditions on our product.

Please retain a copy of your invoice as proof of purchase and warranty.

Residential

Residential Areas are areas of use defined as domestic home environments with light to moderate foot traffic, light point loads and lack of rolling traffic.

Light Commercial

Light Commercial Areas are areas of use defined as environments with light to moderate foot traffic, light point loads and lack of rolling traffic. Light commercial areas also include those with no heavy chemicals, acids, greases or other such contaminants.

Commercial

Commercial Areas are areas of use with floors subjected to moderate static and dynamic loads, caster use, moderate point loads and moderate to heavy traffic. Portable furnishings with casters, rests and wheels that concentrate the weight of the appliance/equipment are very damaging to resilient flooring. This does not include environments with heavy chemicals, acids, greases (including food and cooking) or other such contaminants

Products

Como warrants all its floor products to be free from manufacturing defects for lifetime residential and five (5) years light/commercial from the date of purchase. The light/commercial warranty is extendable to ten (10) years should it be registered with Como and the recommended Como installation and maintenance systems be followed.

Workmanship

Como does not warrant installers workmanship. Workmanship errors should be addressed to the contractor who installed the floor. Como floors should be professionally installed by contractors or





True Quality is an Experience

installers who have demonstrated expertise in installing this format of flooring. Contractor or installer should carefully inspect the product(s) before installation for any visual manufacturing, colour or dimension defects. We accept no responsibility where a product with visible defects has been installed.

How to claim on this warranty

Should you observe defects during the warranty period, please contact your installer / retailer for advice. If you wish to make a claim, please ask them to initiate your formal claims process by completing our online claim form. Responses will be provided within a maximum of 72hrs after submission. Once submission has been reviewed we may request further information or require a site visit for final determination if cause is unclear, this may involve removing samples for technical analysis. Terms (prior to installation)

Any uncut pieces that appear to have defects should be returned to the original place of purchase; those pieces that do not meet our specifications will be replaced.

Installation in accordance with Como Installation and maintenance instructions:

Within One (1) Year of purchase: If a defect covered by this warranty is reported to Como in writing within one (1) year of purchase, Como will replace/repair at its discretion the defective product including reasonable labour charges for installation. Como will replace it with similar quality first grade material or repair the defect. The replaced or repaired material is warranted for the time then remaining under the original warranty.

Within Two (2) Years of purchase: If a defect covered by this warranty is reported to Como in writing within two (2) years of purchase, Como will replace/repair at its discretion the defective product and pay 50% of a reasonable labour charge for installation. Como will replace it with similar quality first grade material or repair the defect. The replaced or repaired material is warranted for the time then remaining under the original warranty.

After Two (2) Years of purchase: If a defect covered by this warranty is reported to Como in writing after two (2) years but within ten (10) years of purchase, Como will replace or repair at its discretion the defective material only (excluding cost of installation).

Otherwise:

Within five (5) years of purchase: Installation is not according to Como installation instructions, if a defect covered by this warranty is reported to Como in writing within five (5) years of purchase, Como will replace or repair at its discretion defective material only (excluding cost of installation).

Como will not pay labour costs to replace or repair material with defects that were apparent before or at time of installation.

Conditions (This warranty does not apply for the following conditions)

- Any person other than yourself as the ultimate purchaser of the flooring at the time of the installation. This warranty is not transferable.
- Como flooring products with obvious defects or of inferior quality that would reasonably have been identified by examinations before the sale which were drawn to the purchaser's attention before the sale.
- Improper shipment, delivery or storage



 **GLOBAL STREAM**
IMPORT EXPORT
Imported and distributed by

  
FIND US ON
SOCIAL MEDIA



**SCAN ME
TO VISIT OUR
WEBSITE**
www.globalstream.co.za

como

True Quality is an Experience

- *Product not installed in accordance with applicable local government or building construction codes or standards (SANS 10070), or contrary to Como installation instructions for the particular product. Concerns relating to quality of installation should be addressed to the contractor or retailer that installed the product.*
- *Failure of Como flooring product due to structural or general defects in the building, deficiencies related to subfloor/floor joist assemblies, subfloor/substrate preparation materials and fastener's including but not limited to, uneven subfloor surfaces, unevenness or movement of the subfloor/substrate, deflection or voids in the subfloor/substrate or flooring laid in an inappropriate location. Flooring not cleaned in accordance with Como's recommended cleaning or maintenance procedures or where you otherwise fail to take reasonable steps to prevent the flooring from becoming of unacceptable quality.*
- *Normal wear and tear. Changes in colour due to exposure to sunlight, age and reactive products stored thereon.*
- *Exposure to abnormally corrosive conditions, excessive heat, moisture or dampness, acids, alkalis, animal urine, pebbles, sand, or other abrasives or hydrostatic pressure.*
- *Floors damaged or adhesive breakdown caused by subfloors/substrate moisture or water damage.*
- *Improper usage / misuse / abuse over and above normal wear and tear or improper loading including burns, cuts, tears, scratches from high heels, spiked shoes, pets, rolling loads, or chairs or other furniture not using suitable and properly maintained floor protectors.*
- *Improper maintenance, dulled by soaps, detergents, harsh chemicals, dressings, one-step cleaners or wax.*
- *Minor difference in colour or pattern between samples or photographs and the actual material.*
- *Acts of God/force majeure, acts of terrorism, damage caused by vermin, insect infestation, fire, flood or any other act or circumstance beyond Como's reasonable control.*

There is no warrant beyond this expressed warranty. All other warranties, including warranties of merchantability or fitness for a particular purpose, are excluded. Como excludes any liability for the lost profits or any other indirect, special or consequential damages. The remedies contained herein are the only remedies available for breach of this warranty.



 **GLOBAL STREAM**
IMPORT EXPORT
Imported and distributed by

  
FIND US ON
SOCIAL MEDIA



**SCAN ME
TO VISIT OUR
WEBSITE**
www.globalstream.co.za

SPC Cleaning Instructions

Cleaning & Maintenance Post Installation:

- Floors should only be swept or vacuumed and not wet cleaned until adhesive has fully cured - Refer adhesive manufacturers advisory.
- Do not place heavy items on floor until adhesive has fully cured. Protective non-staining wide bearing casters or felt pads should be placed underneath all furniture and floor protector mats should be used at major work zones.
- Place walk-off mats at all external entrances to reduce grit and particle transfer onto vinyl floors. Note: rubber based products can stain.
- Provide responsible cleaning person/s with correct tools and methods for daily vinyl floor care: Micro-fibre broom, vacuum, brush, vinyl floor cleaning solution.
- Secure a few spare planks in a safe and flat location in case damaged planks needs to be replaced in years to come.

Daily, Weekly Cleaning Programme

- Sweep or vacuum daily to remove dust and grit from the surface.
- When required complete a wet clean using your micro-fibre broom, dedicated vinyl floor cleaner and a bucket of room temperature water to rinse.

With a slightly damp micro-fibre broom, brush the floor from one corner to the next regularly checking the broom for uplifted dirt. As soon as dirt is transferred to the brooms cleaning pad, it is time to rinse. DO NOT CONTINUE to brush the floor with a dirty pad as this will just move the dirt from one side to the next causing streaks and a grey build-up of dirt around the peripheral of the room.

DO NOT USE EXCESSIVE WATER as this can result in a floor failure. DO NOT USE any harsh / abrasive cleaners, chemicals, dish washing liquid or waxes as these will negatively impact your vinyl floor and possibly ruin the surface.

- Maintain pet nails to minimise surface scratching.
- Rugs should be moved around from time to time to prevent fade patterns occurring.
- Clean floor protectors and casters regularly to prevent capture of sand particles and other such debris that can cause scratching.

como

True Quality is an Experience

General Care & Maintenance

- Sweep or vacuum daily using soft bristle attachments.
- Clean up spills and excessive liquids immediately.
- Damp mop as needed and use cleaners recommended for non-wax vinyl floors.
- Protect floor from constant direct sunlight.
- Use proper floor protection devices such as felt protectors under furniture and a mat at entrance way
- Make sure pets have nails clipped regularly.
- Do not use abrasive cleaners, bleach or wax to maintain floor.
- Do not drag or slide heavy objects across the floor

Suggested Tools For The Job



Microfiber Dust Broom

The perfect broom to clean most hard surface floors applying minimal moisture and relying on the unique cleaning attributes of the microfiber. Easy manoeuvrability under low lying furniture with its swivel head. The perfect support tool in cleaning and maintaining hard surface floors.



Karcher Hard Floor Cleaner FC5

Premium residential Floor Cleaner FC 5 you can mop effortlessly without the hassle of vacuuming in advance: It has a convenient two-in-one function, wet and dry dirt can be mopped and suctioned in a single step. The rotating and automatically dampened microfiber rollers always remain fresh and ready to use, because the self-cleaning function continuously suctions the water-dirt mixture from the rollers as it is taken up from the floor. The FC 5 can be used on any hard floor made of wood, stone or plastic.



Karcher BR 30/4 C Professional Compact Scrubber Drier

For residential or smaller commercial areas this unit is manoeuvrable like an upright-vacuum. Compared to a mop it has much more cleaning effort due to 10-times more contact pressure to the floor. The machine is drying forward and backwards. Unit has options for various types of roller brushes especially effective in cleaning floor types with deep grooves or wire-brush textures.

